

15. Front Accessory Power Supply Socket

A: WIRING DIAGRAM

Refer to "Front Accessory Power Supply Socket System" in the wiring diagram. <Ref. to WI-148, WIRING DIAGRAM, Front Accessory Power Supply Socket System.>


B: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the center panel assembly.

CAUTION:

Do not put your finger on the fin of the air vent grille. Doing so may damage the fin.

- (1) Attach the protective tape (a) to the meter visor.

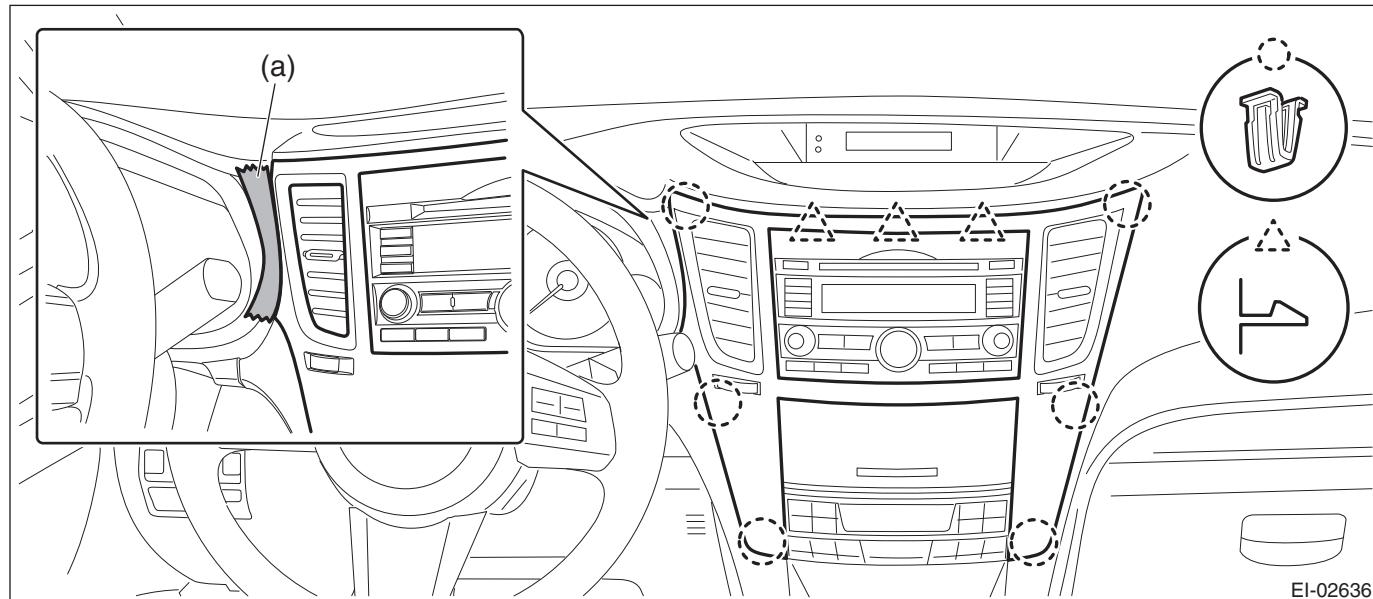


- (2) Insert a finger into the air vent grille and release the left and right clips at the top of the center panel. (A), (B)
- (3) Insert a finger into the air vent grille and release the left and right clips at the center of the center panel. (C), (D)

Front Accessory Power Supply Socket


ENTERTAINMENT

(4) Release the clips at the bottom of the center panel and remove the center panel assembly.

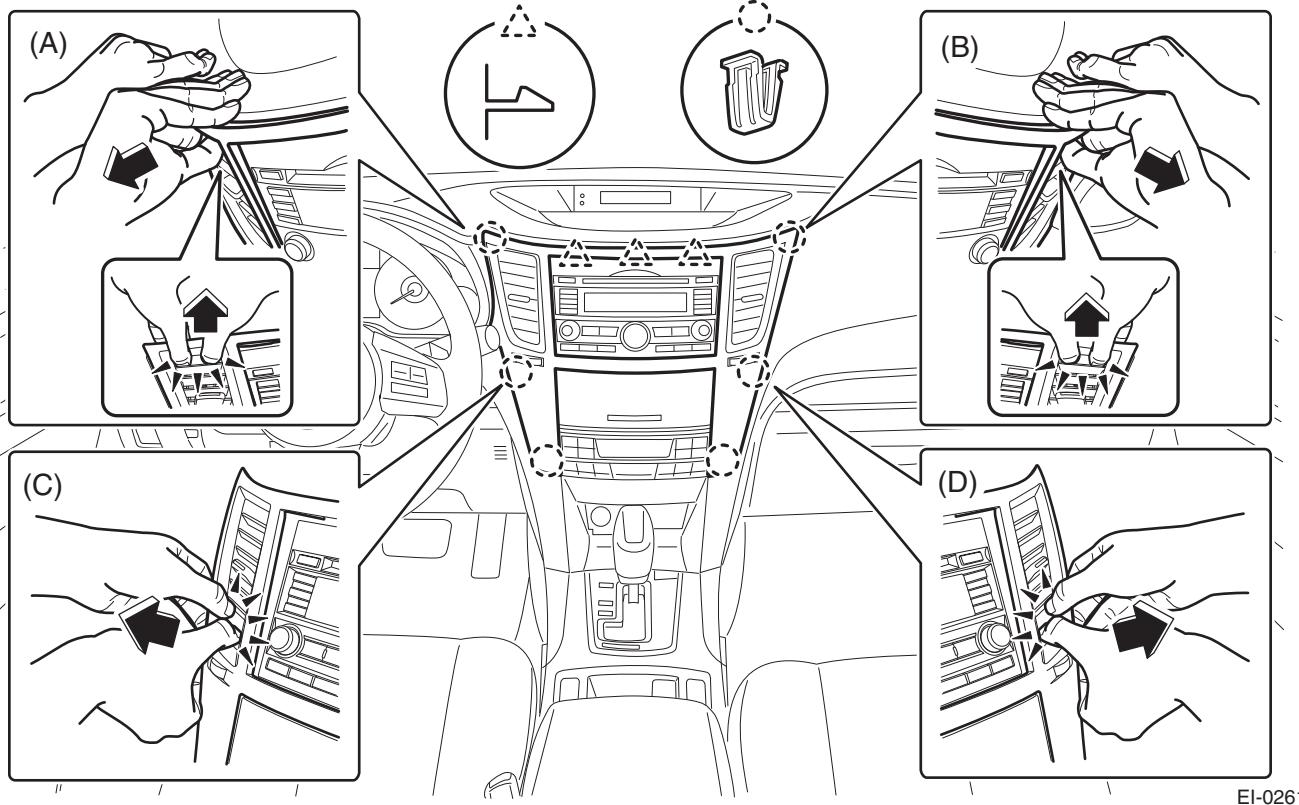

3) Remove the audio assembly.

- (1) Remove the left and right screws, and partially pull the audio out from center console.
- (2) Disconnect the connectors, and remove the audio assembly.

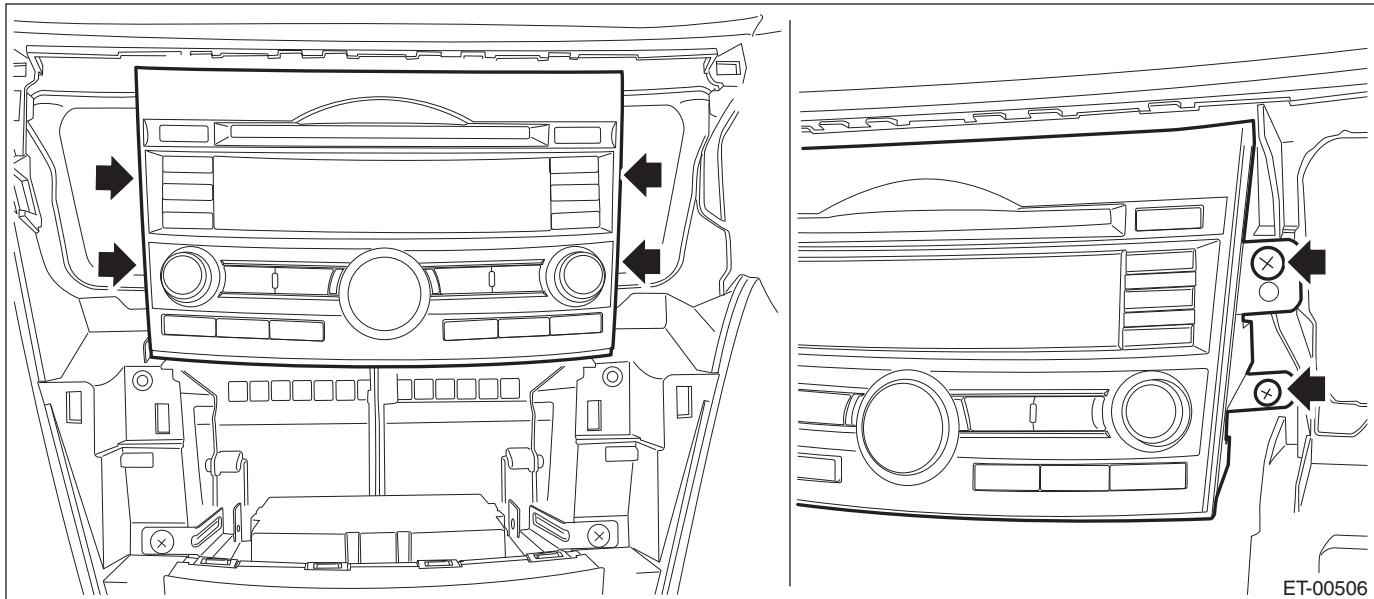


4) Remove the navigation assembly. (model with navigation)

- (1) Remove the left and right screws.

Front Accessory Power Supply Socket


ENTERTAINMENT

(2) Disconnect the connectors, and remove the navigation assembly.

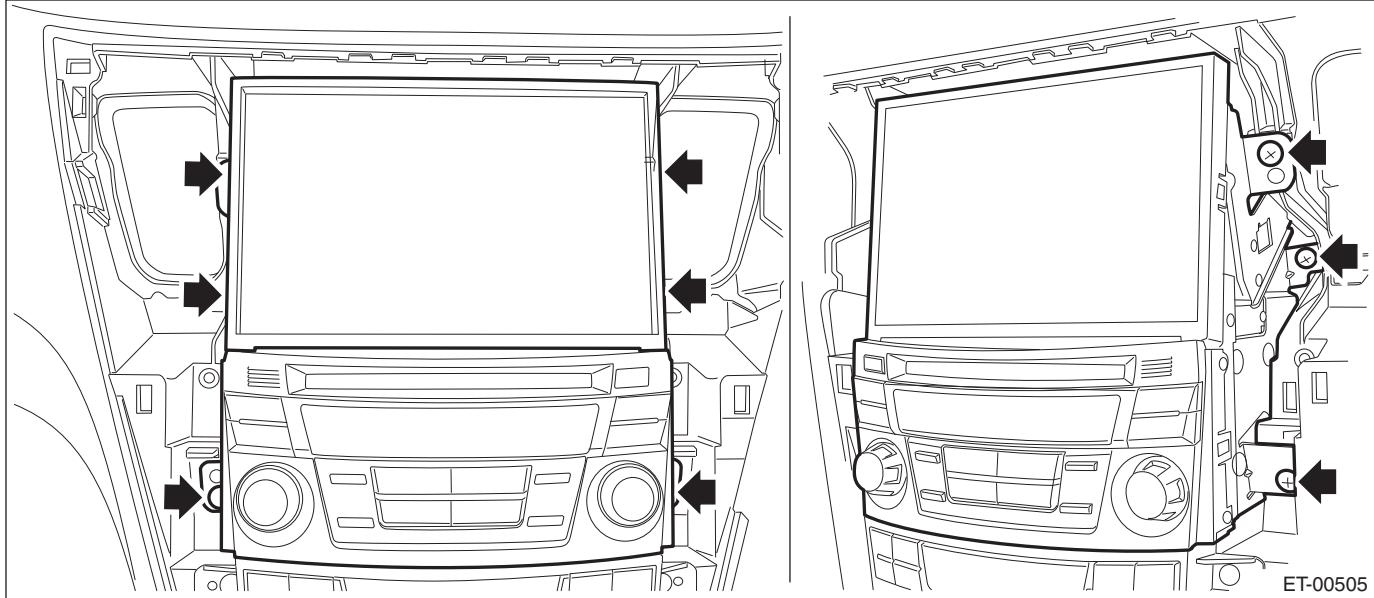

5) Remove the control panel assembly.

(1) Remove the screws, and pull out the control panel assembly toward you.
(2) Disconnect the connector, and remove the control panel assembly.

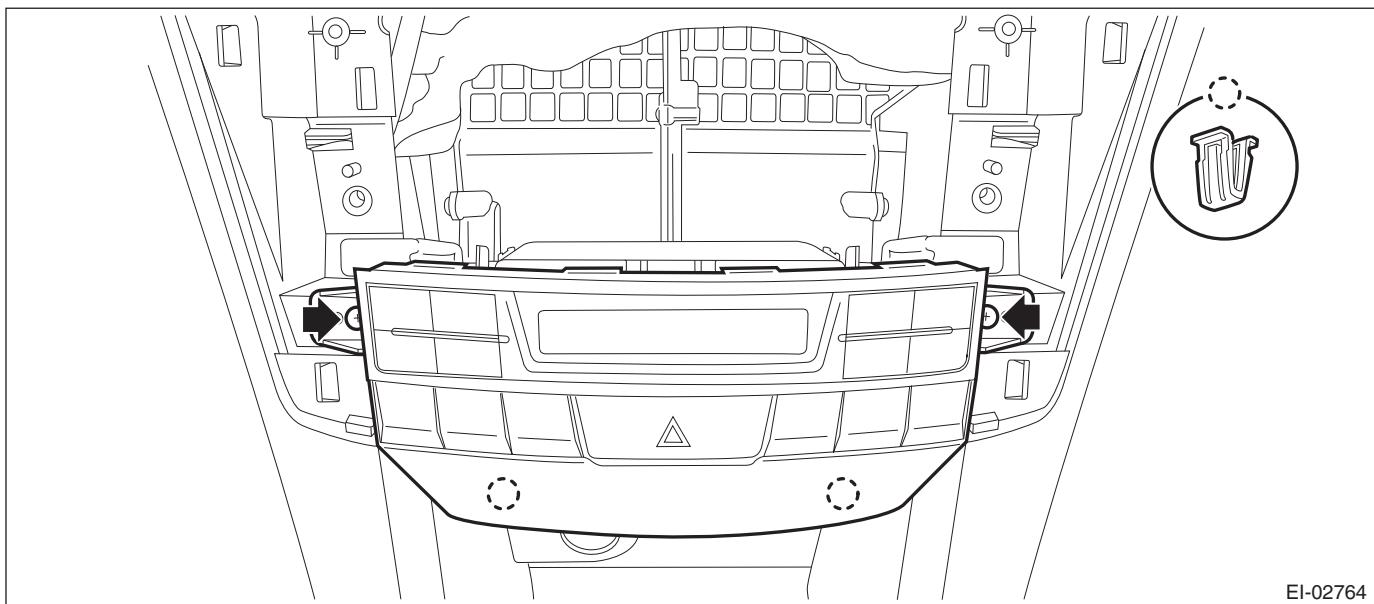


6) Remove the front accessory power supply socket.

(1) Disconnect the connector and turn the securing cover to remove it.

Front Accessory Power Supply Socket

ENTERTAINMENT

(2) Pull the accessory power supply socket out to remove.

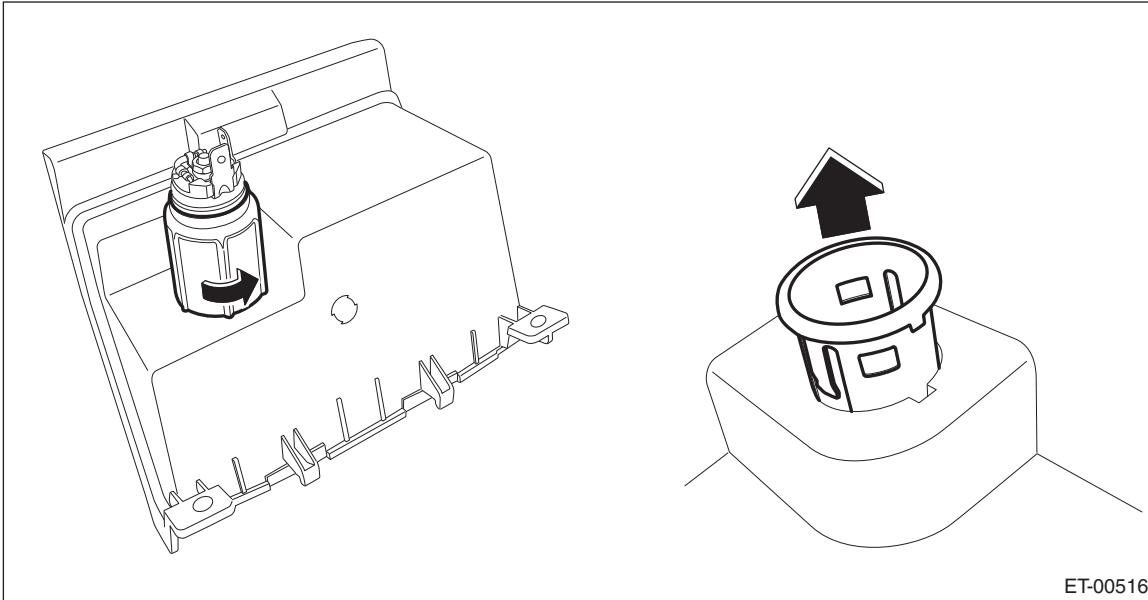

C: INSTALLATION

Install each part in the reverse order of removal.