

1. Basic Diagnostic Procedure

A: BASIC PROCEDURES

1. GENERAL DESCRIPTION

The most important purpose of diagnostics is to quickly determine which part is malfunctioning, to save time and labor.

2. IDENTIFICATION OF TROUBLE SYMPTOM

Determine what the problem is based on the symptom.

3. PROBABLE CAUSE OF TROUBLE

Look at the wiring diagram and check the system's circuit. Then check the switch, relay, fuse, ground, etc.

4. LOCATION AND REPAIR OF TROUBLE

- 1) Using the diagnostics, narrow down the causes.
- 2) If necessary, use a voltmeter, ohmmeter, etc.
- 3) Before replacing certain component parts (switch, relay, etc.), check the power supply, ground, for open wiring harness, poor connectors, etc. If no problem is encountered, check the component parts.


5. SYSTEM OPERATION CHECK

After repairing, ensure that the system operates properly.

B: BASIC INSPECTION

1. VOLTAGE MEASUREMENT

- 1) Using a voltmeter, connect the negative lead to a good ground point or negative battery terminal and the positive lead to the connector or component terminal.
- 2) Contact the positive lead of the voltmeter on connector (A). The voltmeter will indicate a voltage.
- 3) Shift the positive lead to connector (B). The voltmeter will indicate no voltage.

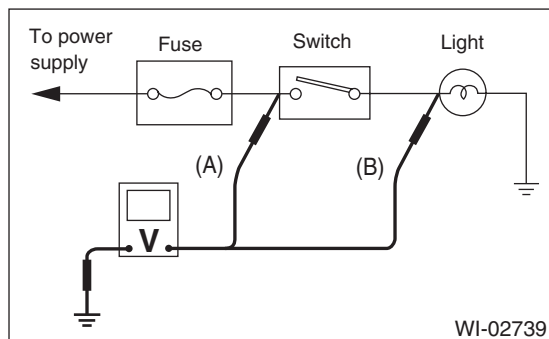


- 4) With the test set-up held as it is, turn the switch to ON. The voltmeter will indicate a voltage and, at the same time, the light will illuminate.

- 5) The circuit is in good order. If a problem such as a light failing to illuminate occurs, use the procedures outlined above to track down the malfunction.

2. CIRCUIT CONTINUITY CHECKS

- 1) Disconnect the battery terminal or connector so there is no voltage between the check points. Contact the two leads of an ohmmeter to each of the check points. If the circuit has diodes, reverse the two leads and check again.
- 2) Use an ohmmeter to check for diode continuity. When contacting the negative lead to the diode positive side and the positive lead to the negative side, there should be continuity. When contacting the two leads in reverse, there should be no continuity.

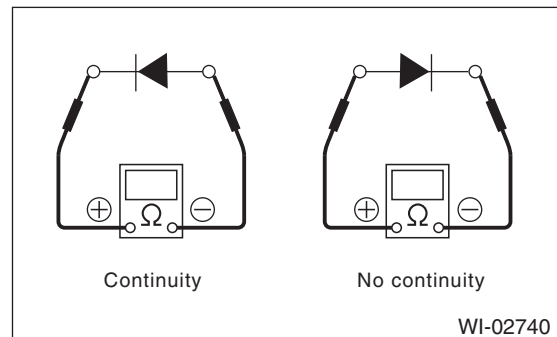

- 3) The symbol "○ — ○" indicates that continuity exists between two points or terminals. For example, when a switch position is at "3", continuity exists among terminals 1, 3 and 6, as shown in the table below.

Terminal	1	2	3	4	5	6
Switch Position						
OFF						
1	○ — ○				○ — ○	
2	○ — ○			○ — ○		○ — ○
3	○ — ○		○ — ○			○ — ○
4	○ — ○	○ — ○				○ — ○

WI-02741


Basic Diagnostic Procedure

WIRING SYSTEM

3. HOW TO DETERMINE AN OPEN CIRCUIT


1) WITH VOLTMETER:

An open circuit is determined by measuring the voltage between respective connectors and ground using a voltmeter, starting with the connector closest to the power supply. The power supply must be turned ON so that current flows in the circuit. If voltage is not present between a particular connector and ground, the circuit between that connector and the previous connector is open.

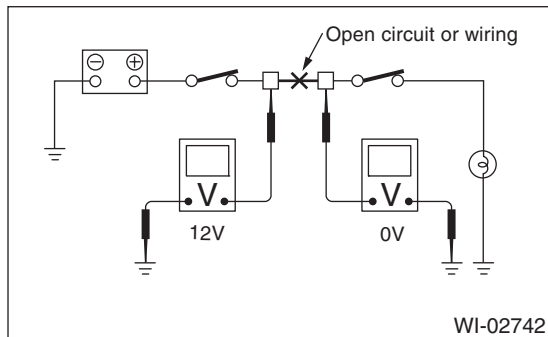

2) WITH OHMMETER:


Disconnect all connectors affected, and check continuity in the wiring between adjacent connectors. When the ohmmeter indicates "infinite", the wiring is open.

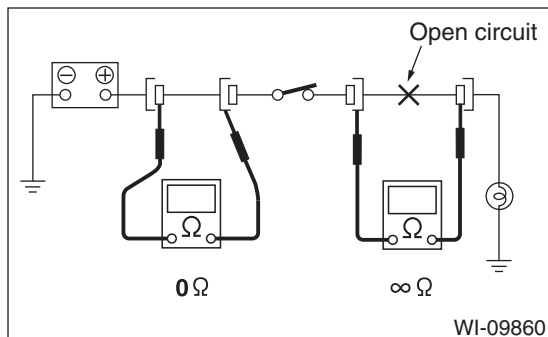

4. HOW TO DETERMINE A SHORT CIRCUIT


1) WITH TEST LIGHT:

Connect a test light (rated at approx. 3 watts) in place of the blown fuse and allow current to flow through the circuit. Disconnect one connector at a time from the circuit. Starting with the one located farthest from the power supply. If the test light goes out when a connector is disconnected, the wiring between that connector and the next connector (farther from the power supply) is shorted.

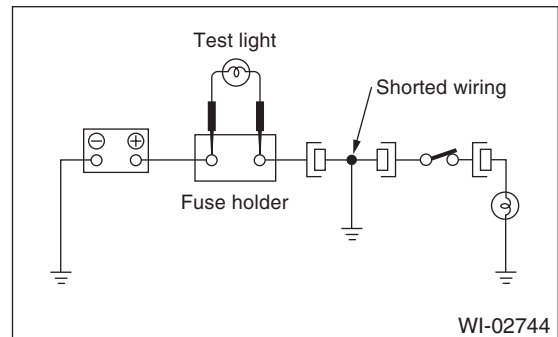

2) WITH OHMMETER:

Disconnect all affected connectors, and check continuity between each connector and ground. When the ohmmeter indicates continuity between a particular connector and a ground, that connector is shorted.

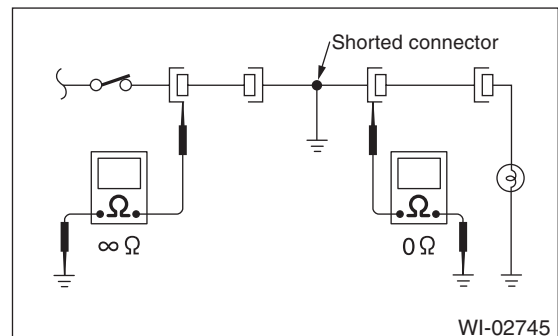


C: HOW TO READ WIRING DIAGRAMS

1. WIRING DIAGRAM

The wiring diagram of each system is illustrated so that you can understand the path through which the electric current flows from the battery.

Sketches and codes are used in the diagrams. They should read as follows:

- Each connector and its terminal position are indicated by a sketch of the connector in a disconnected state which is viewed from the front.

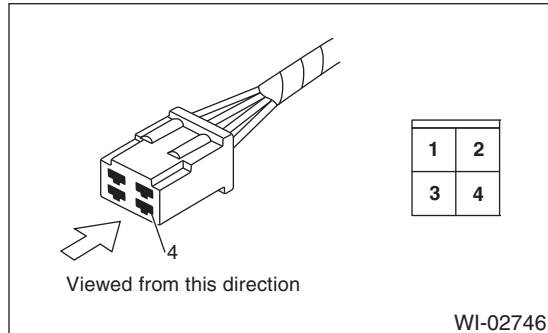

- The number of poles or pins, presence of a lock are indicated in the sketch of each connector. In the sketch, the highest pole number refers to the number of poles which the connector has. For example, the sketch of the connector shown in figure indicates the connector has 9 poles.


Connector used in vehicle	Connector shown in wiring diagram		
	Sketch	Symbol	Number of poles
	Double frames Indicates a lock is included. Indicates the number of poles.		Numbered in order from upper right to lower left.
	Indicates a lock is included. Single frame		Numbered in order from upper left to lower right.

WI-02747

Basic Diagnostic Procedure

WIRING SYSTEM

- When one set of connectors is viewed from the front side, the pole numbers of one connector are symmetrical to those of the other. When these two connectors are connected as a unit, the poles which have the same number are joined.

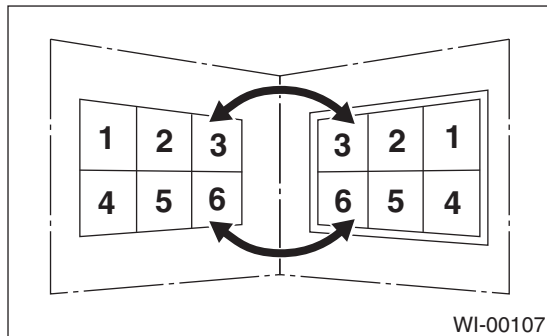


• WIRING DIAGRAM:

The connectors are numbered along with the number of poles, external colors, and mating connections in the accompanying list.


- The sketch of each connector in the wiring diagram usually shows the (A) side of the connector. The relationship between the wire color, terminal number and connector is described in the figure.

NOTE:

A wire which runs in one direction from a connector terminal sometimes may have a different color from that which runs in the other direction from that terminal.

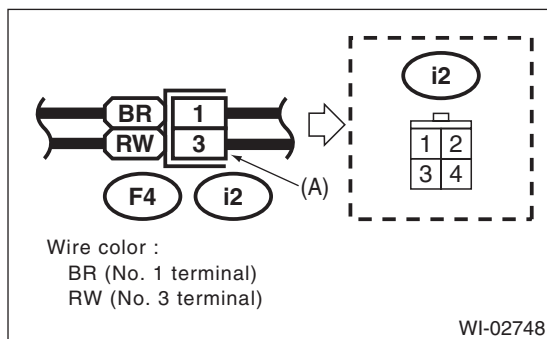


- In the wiring diagram, connectors which have no terminal number refer to one-pole types. Sketches of these connectors are omitted intentionally.

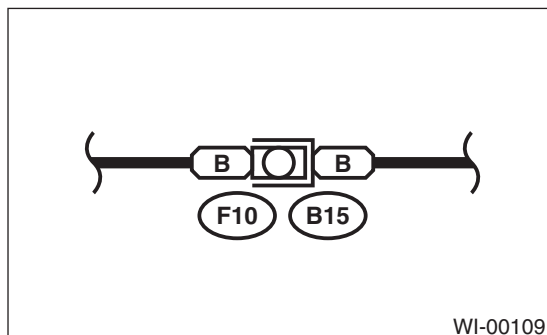


- The following color codes are used to indicate the colors of the wires.

Color code	Color
L	Blue
B	Black
Y	Yellow
G	Green
R	Red
W	White
Br	Brown
Lg	Light green
Gr	Gray
P	Pink
Or	Orange
Sb	Light blue
V	Violet
SA	Sealed (Inner)
SB	Sealed (Outer)

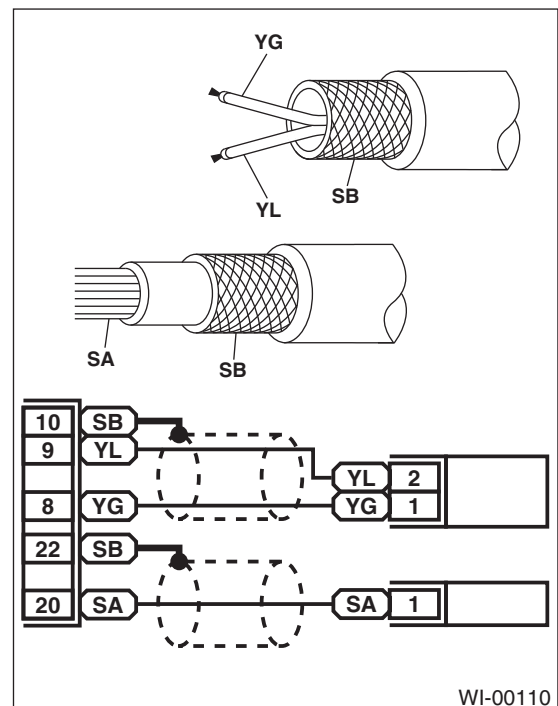

- The wire color code, which consists of two letters (or three letters including Br or Lg), indicates the standard color (base color of the wire covering) by its first letter and the stripe marking by its second letter.

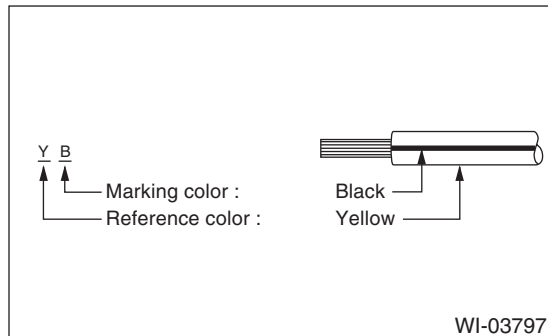

- The table lists the nominal sectional areas and allowable currents of the wires.

CAUTION:


When replacing or repairing a wire, be sure to use the same size and type of the wire which was originally used.

NOTE:

- The allowable current in the table indicates the tolerable amperage of each wire at an ambient temperature of 40°C (104°F).
- The allowable current changes with ambient temperature. Also, it changes if a bundle of more than two wires is used.

Nominal sectional area mm ²	No. of strands/ strand diameter	Outside diameter of wiring mm	Allowable current Amps/ 40°C (104°F)
0.3	7/0.26	1.8	7
0.5	7/0.32	2.2 (or 2.0)	12
0.75	30/0.18	2.6 (or 2.4)	16
0.85	11/0.32	2.4 (or 2.2)	16
1.25	16/0.32	2.7 (or 2.5)	21
2	26/0.32	3.1 (or 2.9)	28
3	41/0.32	3.8 (or 3.6)	38
5	65/0.32	4.6 (or 4.4)	51
8	50/0.45	5.5	67


- Each unit is either directly grounded to the body or indirectly grounds through a harness ground terminal. Different symbols are used in the wiring diagram to identify the two grounding systems.

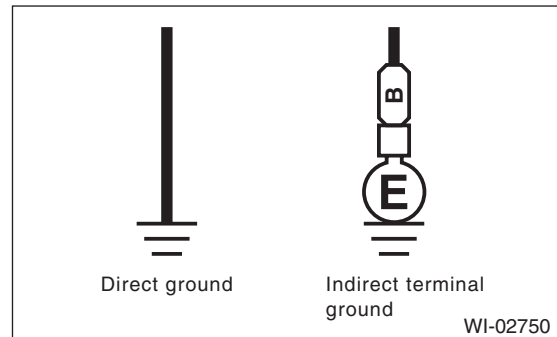

- The ground points shown in the wiring diagram refer to the following:

NOTE:

All wiring harnesses are provided with a ground point which should be securely connected.

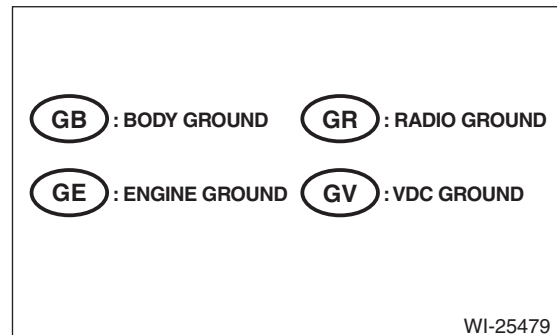


Basic Diagnostic Procedure

WIRING SYSTEM

- Relays are classified as normally-open or normally-closed.

The normally-closed relay has one or more contacts. The wiring diagram shows the relay mode when the energizing circuit is OFF.

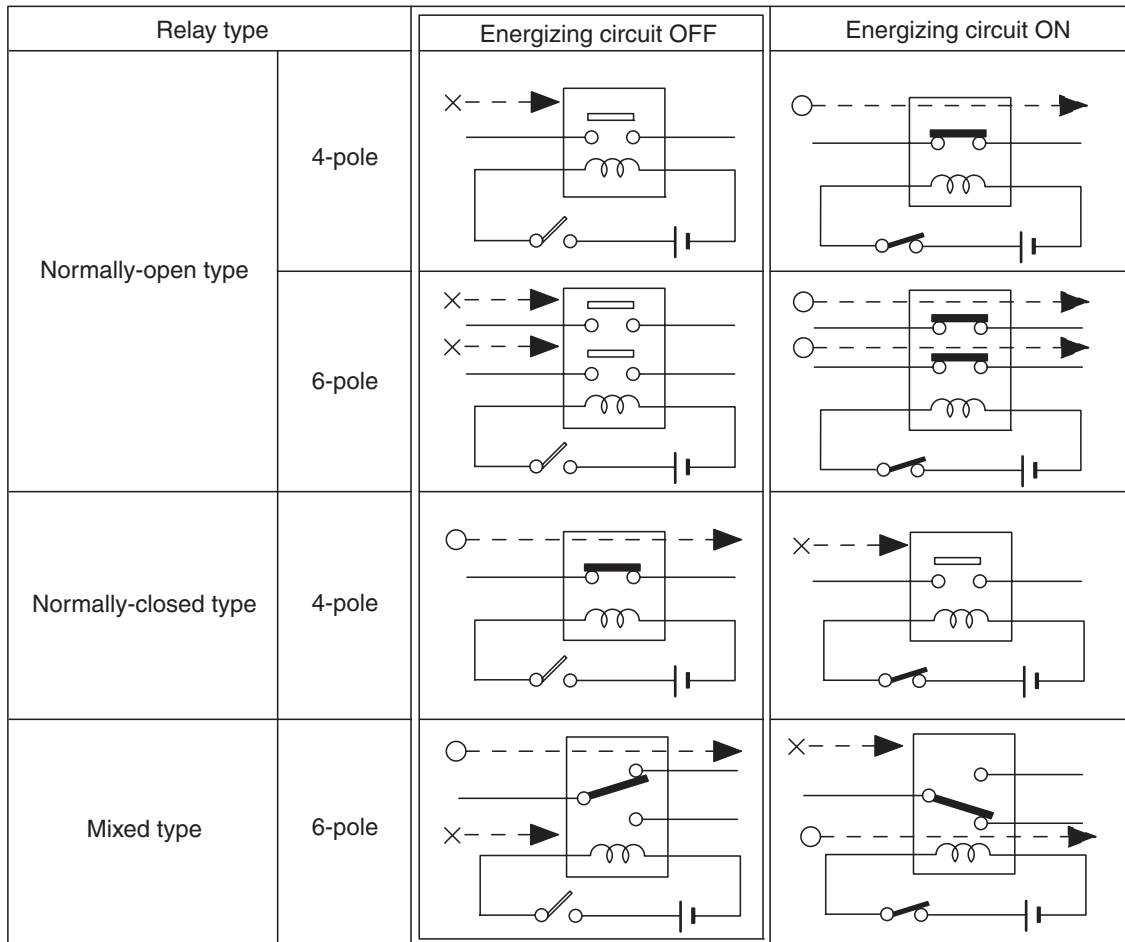


Key to symbols:

- —▶ : Current flows.
 × —▶ : Current does not flow.

WI-16724

- Each connector number shown in the wiring diagram corresponds to that in the wiring harness. The location of each connector in the actual vehicle is determined by reading the first character of the connector (for example, a “F” for F8, “i” for i16, etc.) and the type of wiring harness. The first character of each connector number corresponds to the area or system of the vehicle.

Symbol	Wiring harness and cord
F	Front wiring harness
B	Bulkhead wiring harness
E	Engine wiring harness
T	Transmission cord
D	Door cord LH & RH, Rear gate cord Rear door cord LH & RH
i	Instrument panel wiring harness
R	Rear wiring harness, Fuel tank cord, Roof cord, Rear gate cord,
AB	Airbag wiring harness

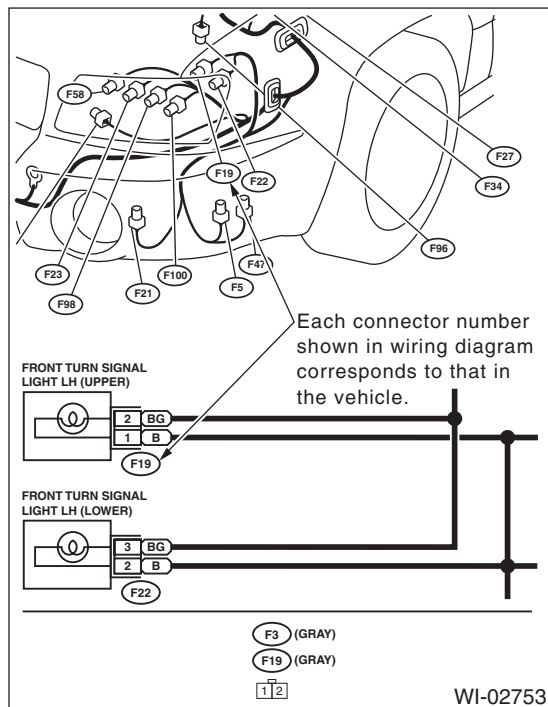

1. RELAY

A symbol used to indicate a relay.

2. CONNECTOR 1

The sketch of the connector indicates the one-pole types.

3. WIRING CONNECTION

Some wiring diagrams are indicated in foldouts for convenience. Wiring destinations are indicated where necessary by corresponding symbols. (When two pages are needed for clear indication)

4. FUSE NO. & RATING

The "FUSE No. & RATING" corresponds with that used in the fuse box (main fuse box, fuse and joint box).

5. CONNECTOR 2

- Each connector is indicated by a symbol.
- Each terminal number is indicated in the corresponding wiring diagram in an abbreviated form.
- For example, terminal number "G4" refers to No. 4 terminal of connector (G: F41) shown in the connector sketch.

6. CONNECTOR SKETCH

- Each connector sketch clearly identifies the shape and color of a connector as well as terminal locations. Non-colored connectors are indicated in white or natural color.
- When more than two types of connector number are indicated in a connector sketch, it means that the same type connectors are used.

7. GROUND

Each grounding point can be located easily by referring to the corresponding wiring harness.

8. DIODE


A symbol is used to indicate a diode.

9. WIRE TRACING ON EXTENDED WIRING DIAGRAMS

For a wiring diagram extending over at least two pages, a symbol (consisting of the same characters with arrows), facilitates wire tracing from one page to the next.

A ↔ A, B ↔ B

10. SYMBOLS OF WIRE CONNECTION AND CROSSING

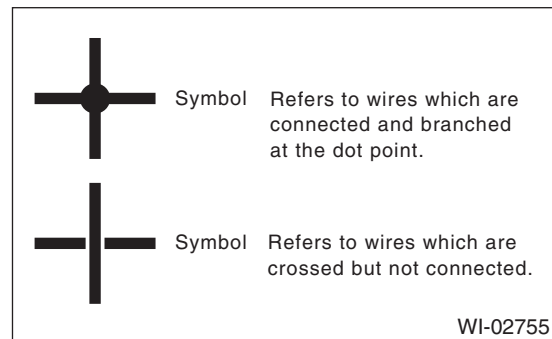

11. POWER SUPPLY CIRCUIT

A symbol is used to indicate the power supply in each wiring diagram.

"MB — 5", "MB — 6", etc., which are used as power-supply symbols throughout the text, correspond with those shown in the "DC POWER SUPPLY CIRCUIT" in the wiring diagram.


Accordingly, using the "DC POWER SUPPLY CIRCUIT" and wiring diagrams permits service personnel to understand the entire electrical arrangement of a system.

12. CLASSIFICATION BY SPECIFICATION

When the wiring diagram differ according to vehicle specifications, the specification difference is described by using abbreviations.

13. TWISTED PAIR LINE

Twisted pair lines are indicated in the following manner in the wiring diagrams.




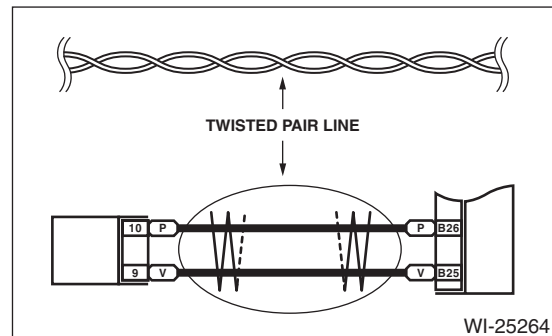


Basic Diagnostic Procedure

WIRING SYSTEM

E: CONNECTOR SYMBOL IN WIRING HARNESS

  A number of connector symbols are used in each wiring diagram to easily identify the wiring harness connectors.

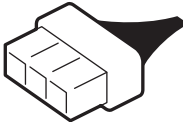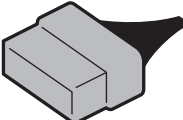Standard type: Female		
Pole: From 1 to 8	Pole: From 9 to 20	Pole: More than 21
		
		
Standard type: Male		
		
		

Water proof type: Female		
Pole: From 1 to 8	Pole: From 9 to 20	Pole: More than 21
		
		
Water proof type: Male		
		
		

WI-02756

F: ABBREVIATION IN WIRING DIAGRAMS

Abbr.	Full name
A/B	Airbag
A/C	Air Conditioner
A/F	Air/Fuel (Air fuel ratio sensor)
ABS	Anti-lock Brake System
ACC	Accessory
ALT	Generator
ASSY	Assembly
AT	Automatic Transmission
ATF	Automatic Transmission Fluid
AWD	All Wheel Drive
B, BAT	Battery
CAN	Communication Area Network
CM	Control module
CVT	Continuously Variable Transmission
D	Drive Range
DN	Down
E	Ground
ECO	Economy
ECM	Engine Control Module
EEPROM	Electrically Erasable Programmable Read-Only Memory
EGR	Exhaust Gas Recirculation
EPB	Electronic Parking Brake
F/B	Fuse & Relay Box
FL	Front Left
FR	Front Right
G	Gravity (G sensor)
H/L	Headlight
HI	High
I/F	Interface
IG	Ignition
ILLUMI	Illumination
INT	Intermittent
J/C	Joint connector
LCD	Liquid Crystal Display
L, LH	Left Hand
LO	Low
M	Motor
M/B	Main Fuse Box
MIST	Wiper for mist (one touch)
MT	Manual Transmission
N	Neutral Range
NA	Natural Aspiration
OP	Optional Parts or Open
P	Parking Range
PASS	Passing
R	Reverse Range
R, RH	Right Hand

Abbr.	Full name
RL	Rear Left
RR	Rear Right
SBF	Slow Blow Fuse
ST	Starter
SW	Switch
TCM	Transmission Control Module
TPMS	Tire Pressure Monitor System
UP	Up
VDC	Vehicle Dynamics Control
VFD	Vacuum Fluorescent Display
WASH	Washer


2. Working Precautions

A: PRECAUTIONS WHEN WORKING WITH THE PARTS MOUNTED ON THE VEHICLE


- 1) When working under a vehicle which is jacked-up, always be sure to use rigid rack.
- 2) The parking brake must always be applied during working. Also, in automatic transmission vehicles, keep the select lever set to the P (Parking) range.
- 3) Be sure the workshop is properly ventilated when running the engine. Further, be careful not to touch the belt or fan while the engine is operating.
- 4) Be careful not to touch hot metal parts, especially the radiator and exhaust system immediately after the engine has been turned off.

B: PRECAUTIONS IN TROUBLE DIAGNOSIS AND REPAIR OF ELECTRIC PARTS

- 1) The battery cable must be disconnected from the battery's (-) terminal, and the ignition switch must be set to the OFF position, unless otherwise required by the diagnostics.
- 2) Securely fasten the wiring harness with clamps and clips so that the harness does not interfere with the body end parts or edges and bolts or screws.
- 3) When installing parts, be careful not to catch them on the wiring harness.
- 4) When disconnecting a connector, do not pull the wires, but pull while holding the connector body.

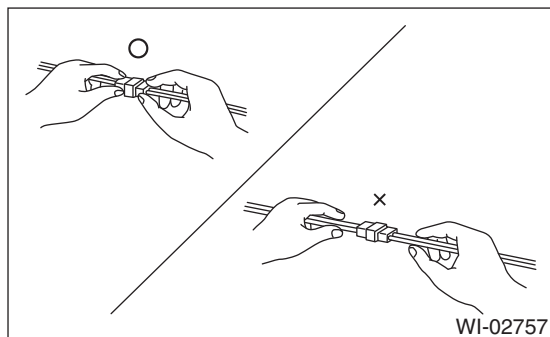


- 5) Some connectors are provided with a lock. One type of such a connector is disconnected by pushing the lock, and the other, by moving the lock up. In either type the lock shape must be identified before attempting to disconnect the connector. To connect, insert the connector until it snaps and confirm that it is connected securely.

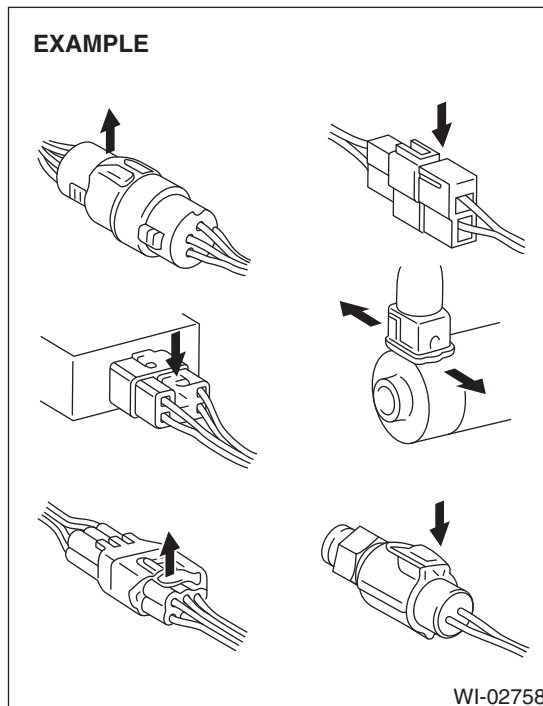

- 6) When checking continuity between connector terminals, or measuring voltage across the terminal and ground, always contact tester probe(s) on terminals from the wiring connection side. If the probe is too thick to gain access to the terminal, use "mini" test leads.

To check water-proof connectors (which are not measurable from the wiring side), contact test probes on the terminal side. Be careful not to bend or damage the terminals.

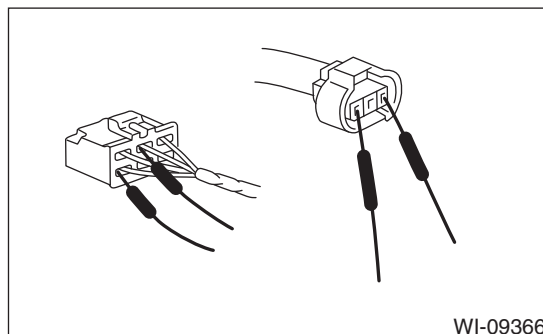


- 7) Sensors, relays, electrical unit, etc., are sensitive to strong impacts. Handle them with care so that they are not dropped or mishandled.

3. Power Supply Circuit

A: WIRING DIAGRAM

- Engine room side

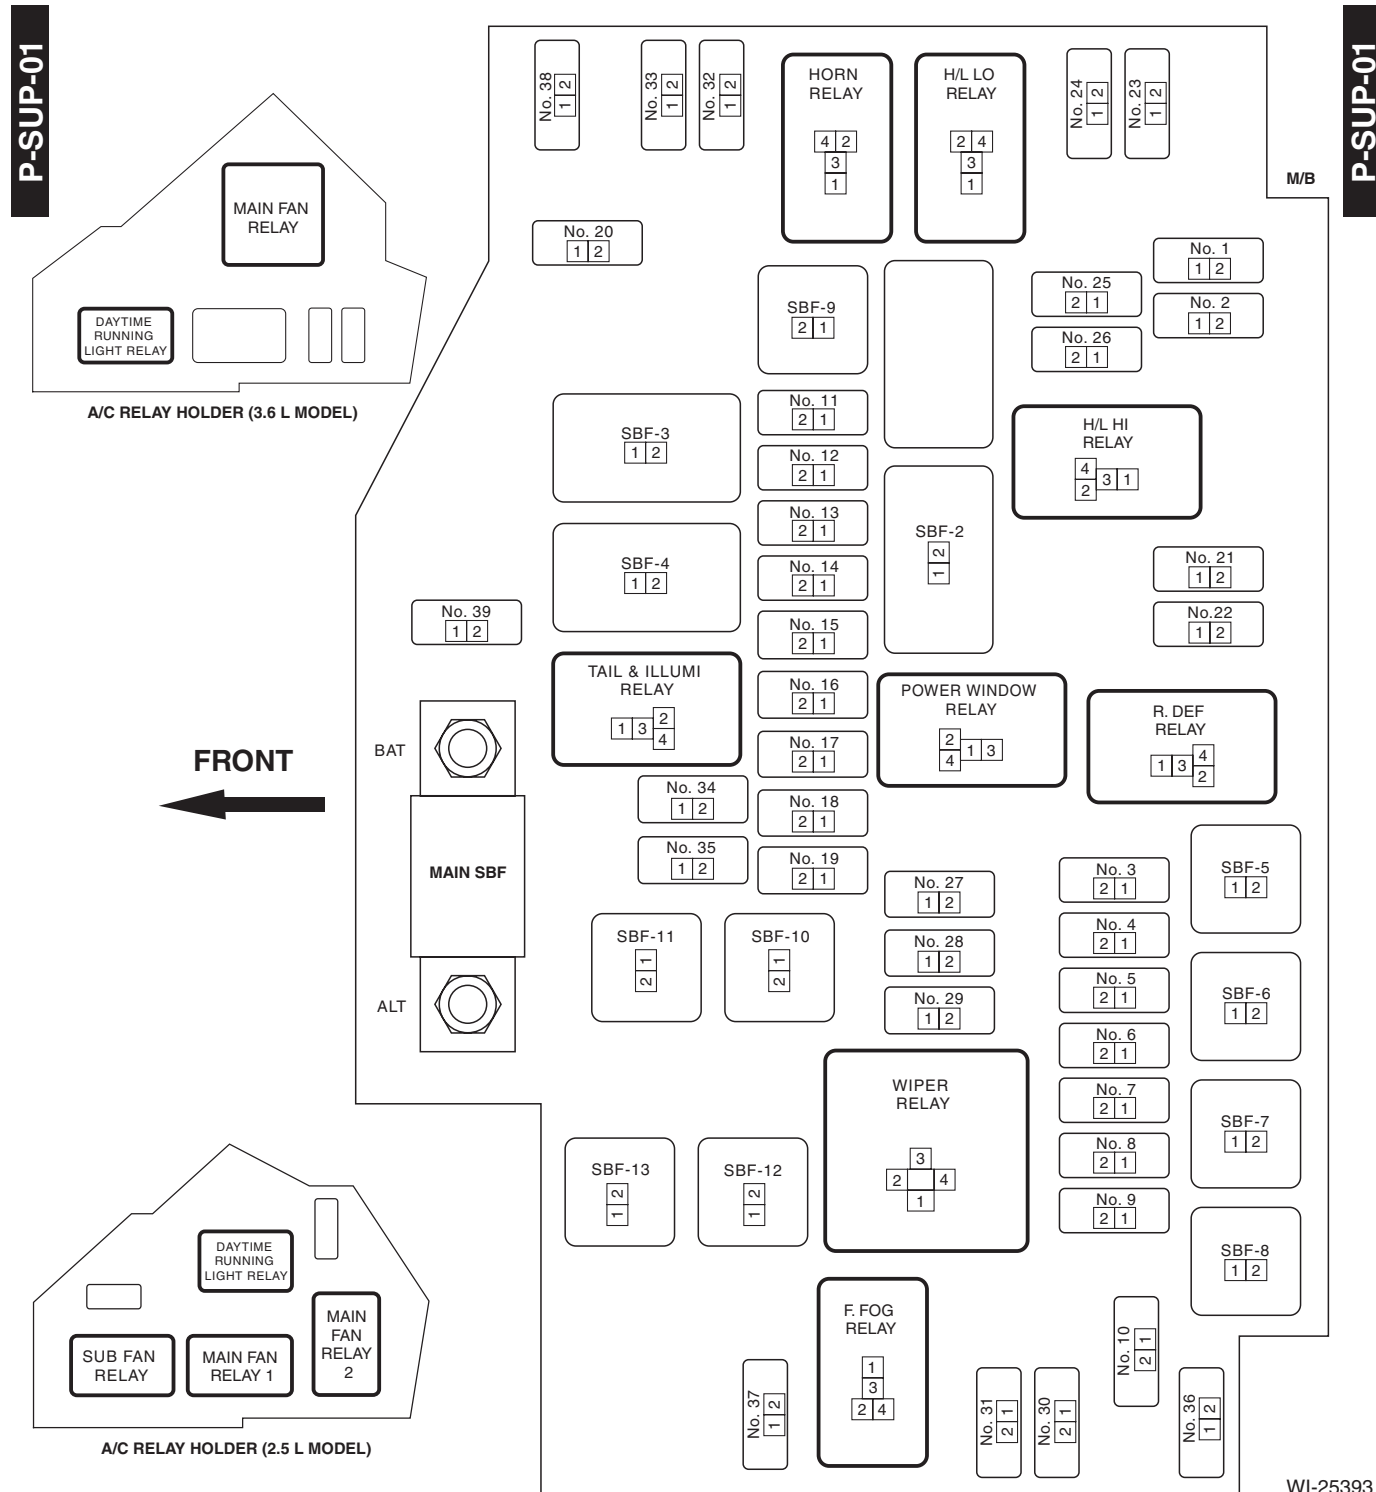


Power Supply Circuit

WIRING SYSTEM

- Passenger room side

P-SUP-02




P-SUP-02

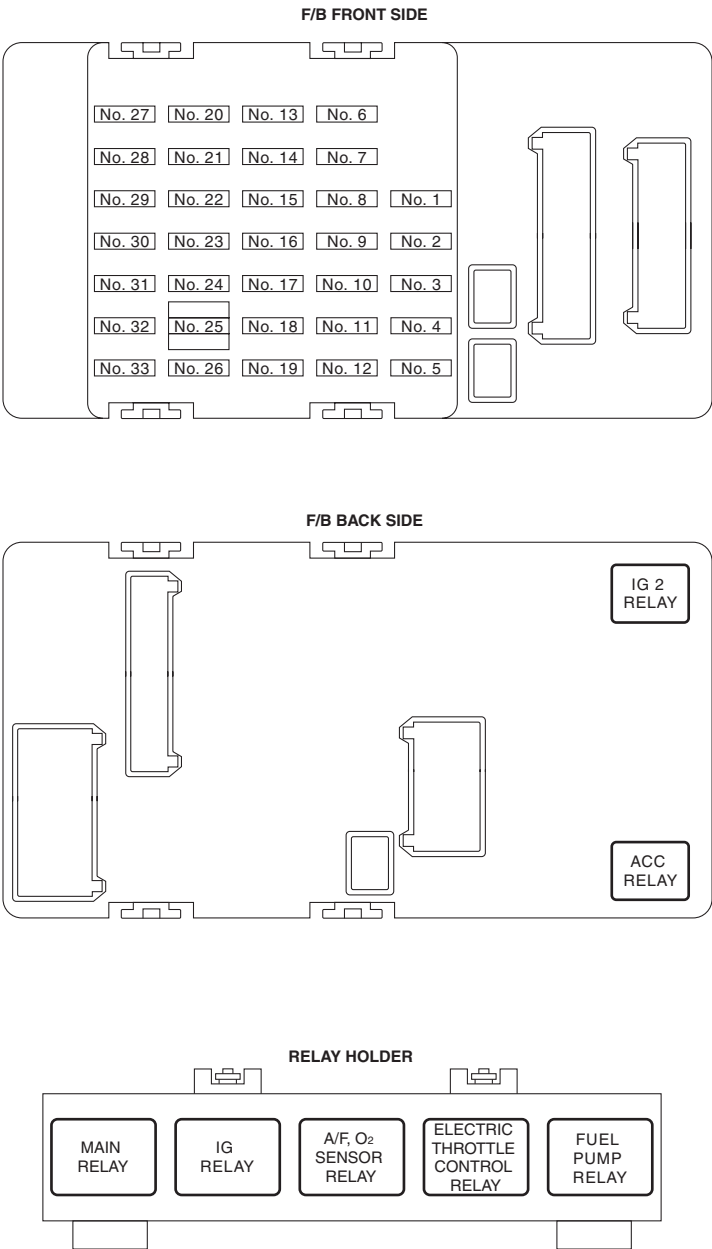

WI-24813

Power Supply Circuit

  
WIRING SYSTEM

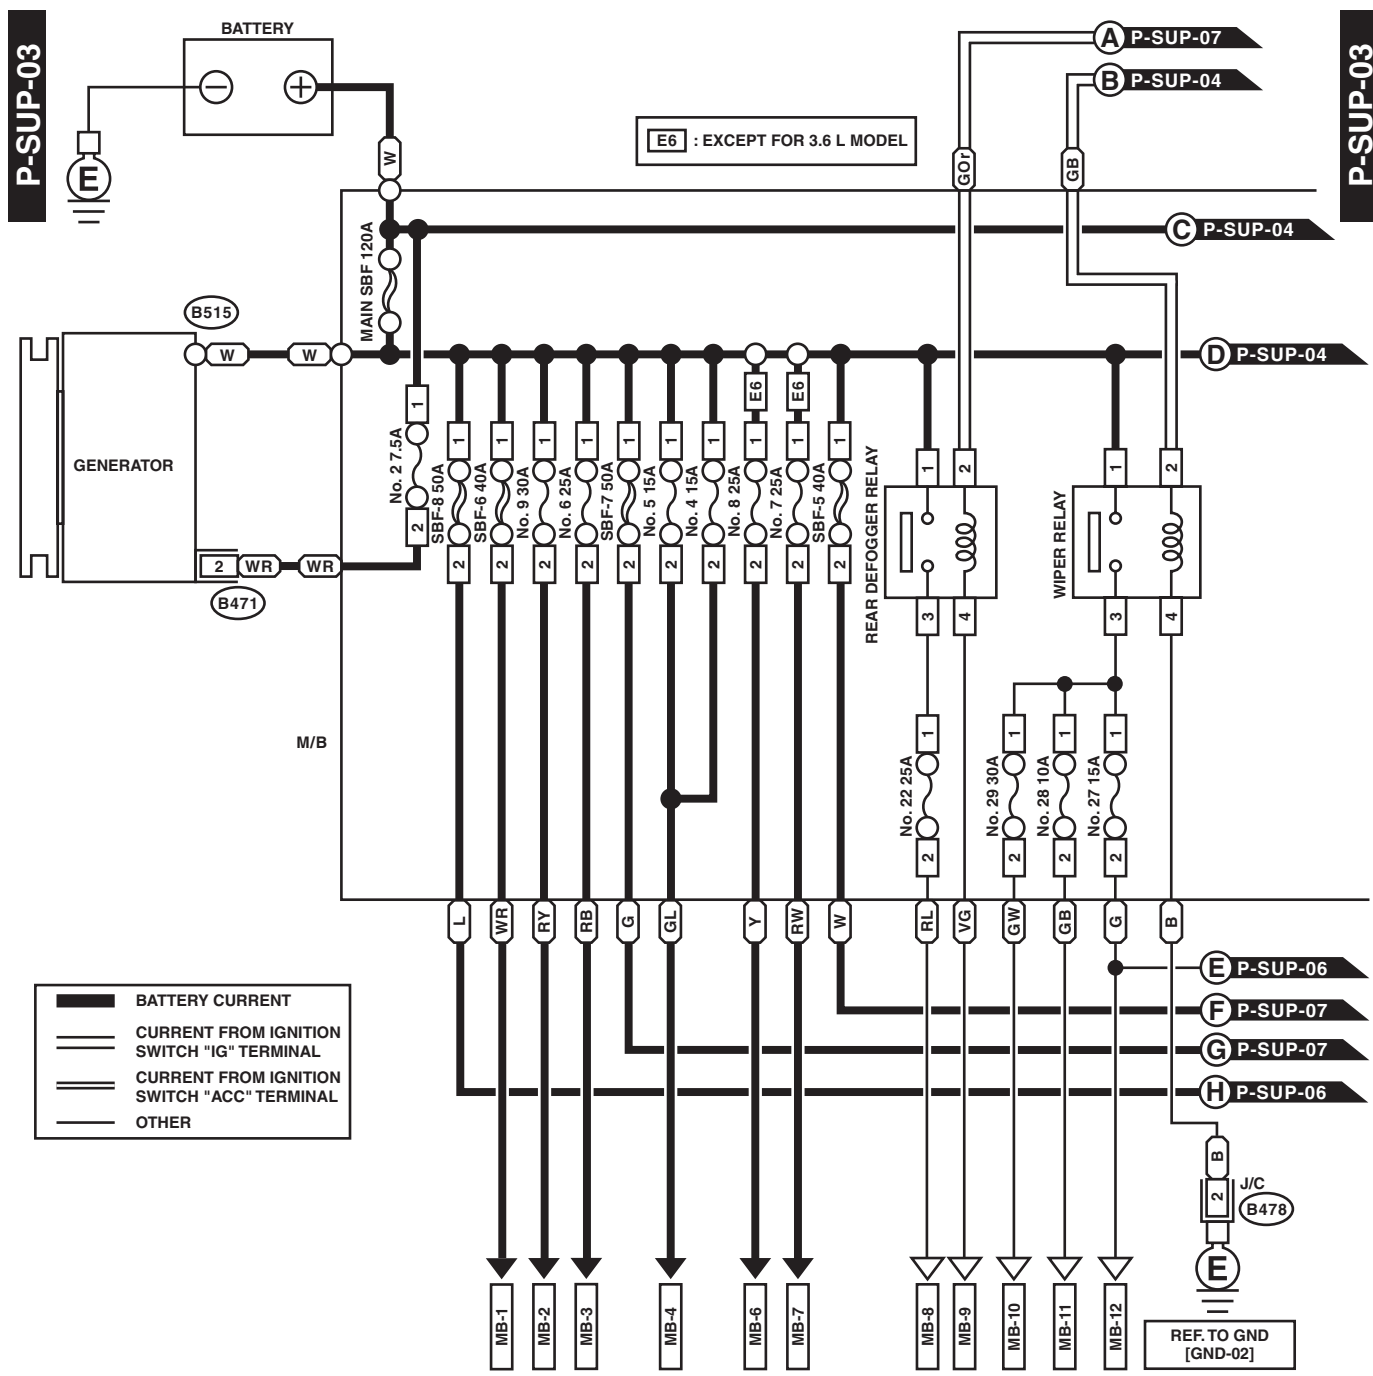

WI-25394

Power Supply Circuit


WIRING SYSTEM

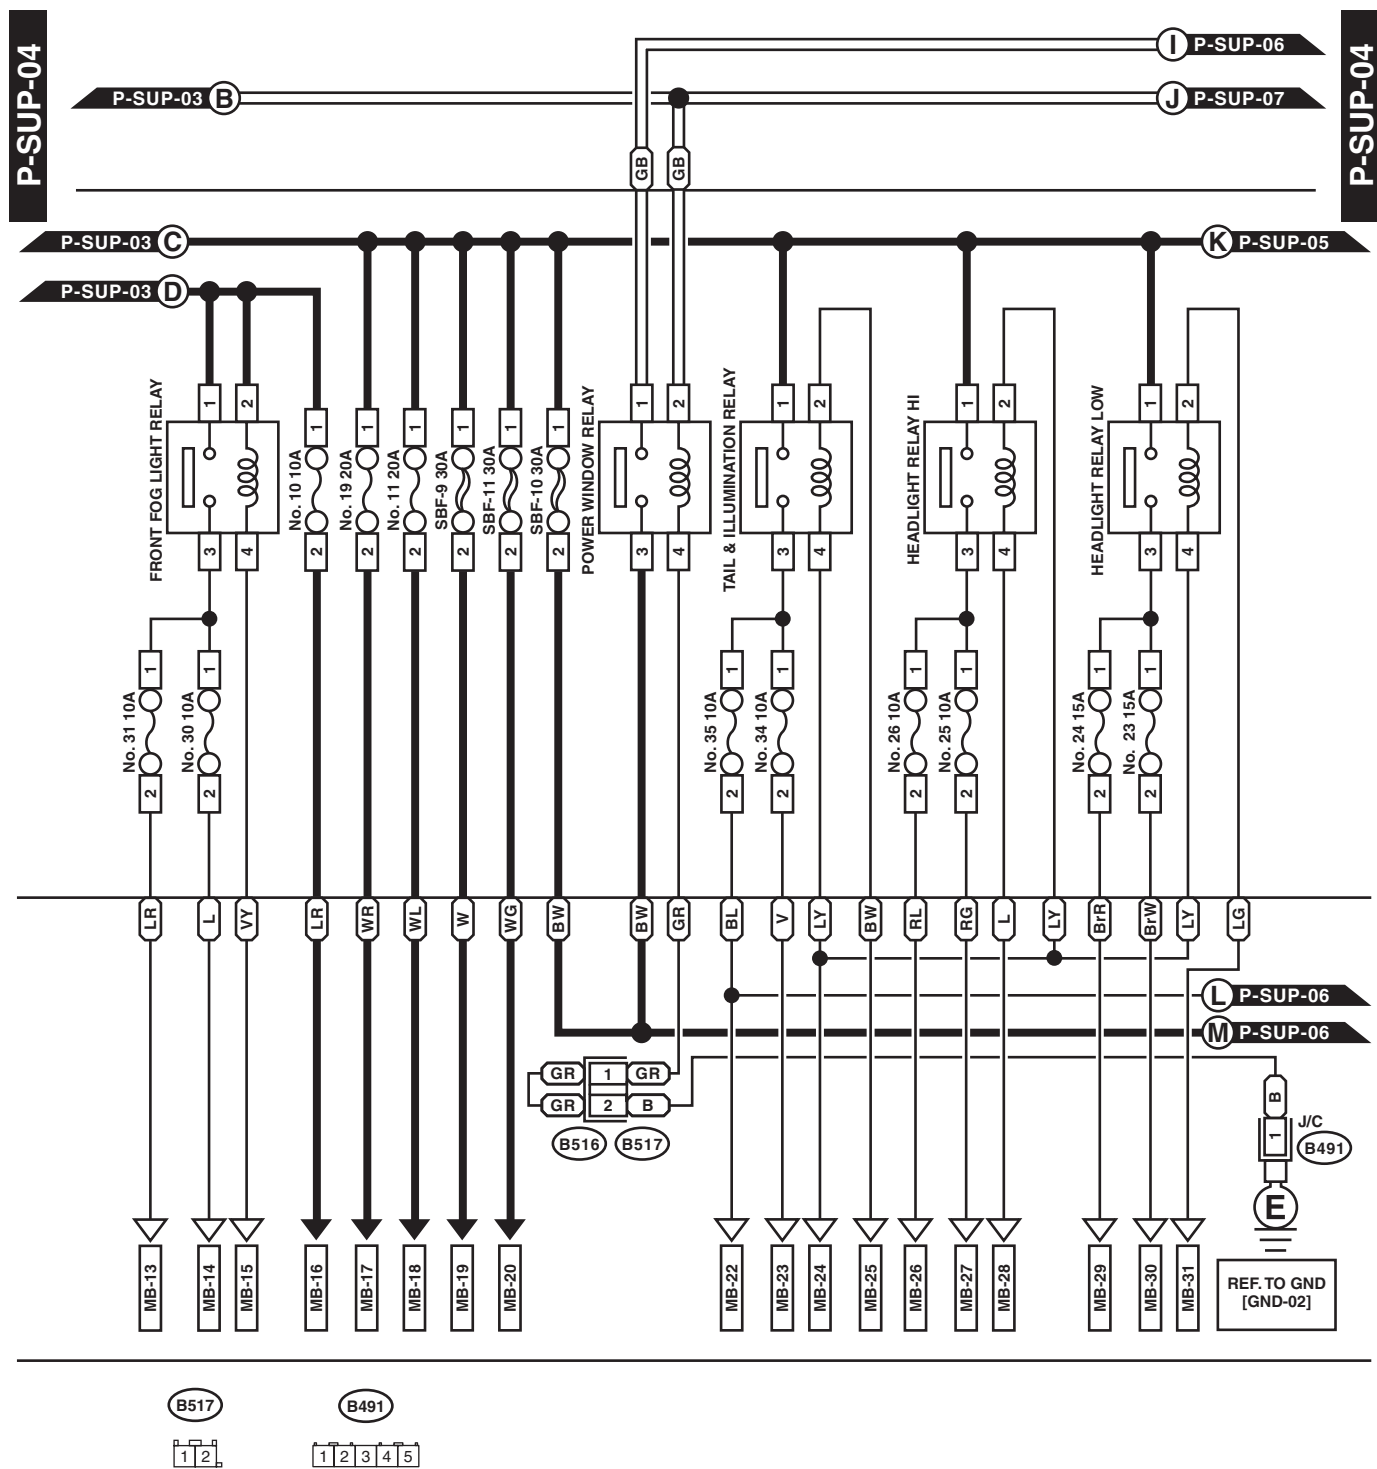

WI-25395

Power Supply Circuit


WIRING SYSTEM

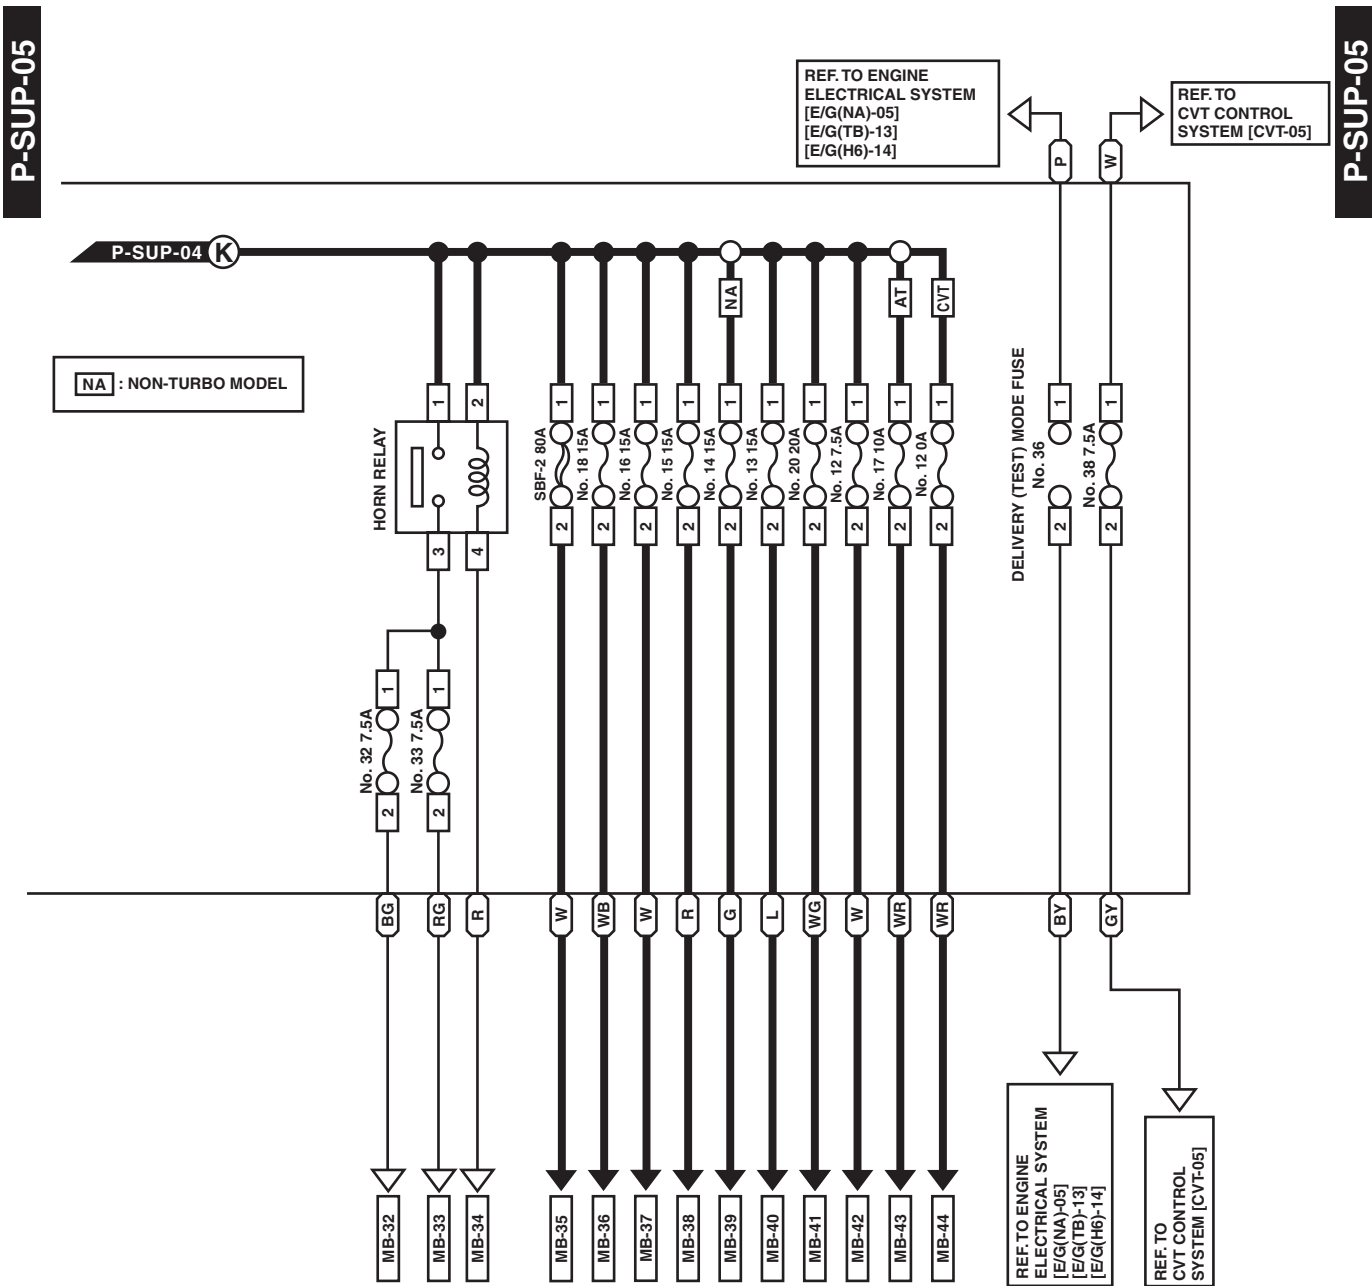

WI-25396

Power Supply Circuit

WIRING SYSTEM

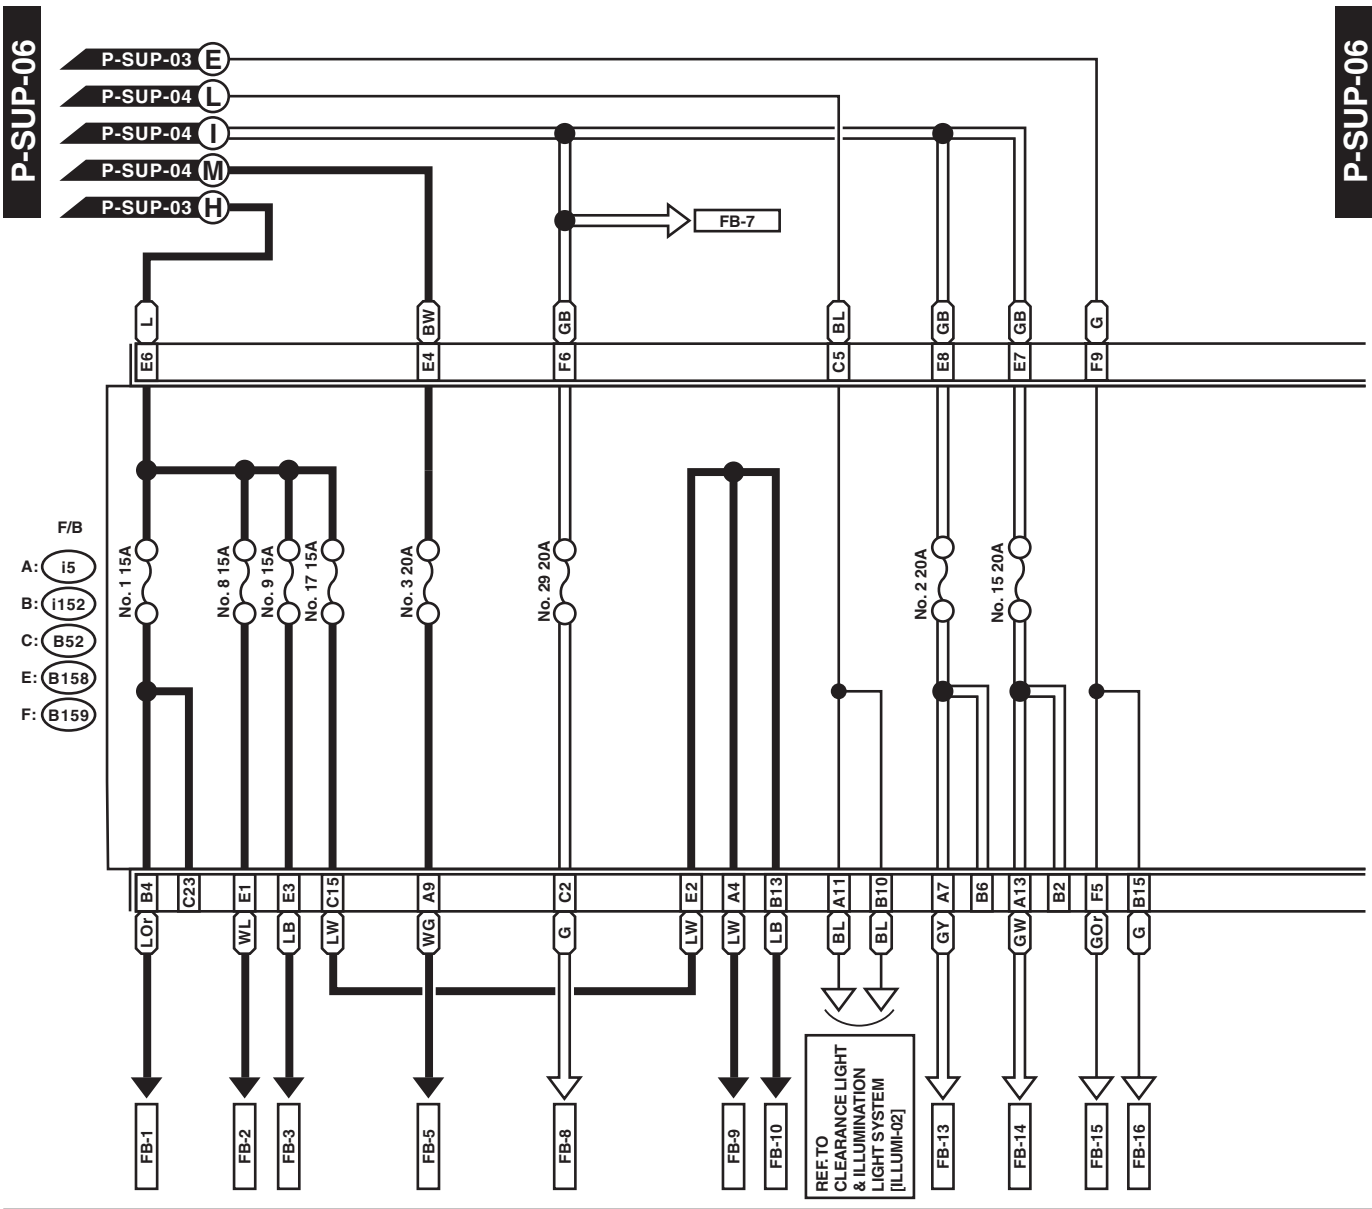

E: B158

1	2	3	4
5	6	7	8

F: B159 (BROWN)

1	2	3	4
5	6	7	8

A: i5

1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18
19	20	21	22	23	24	25	26	27

B: i152

1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18
19	20	21	22	23	24	25	26	27


C: B52

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31	32	33

WI-25397

Power Supply Circuit

WIRING SYSTEM

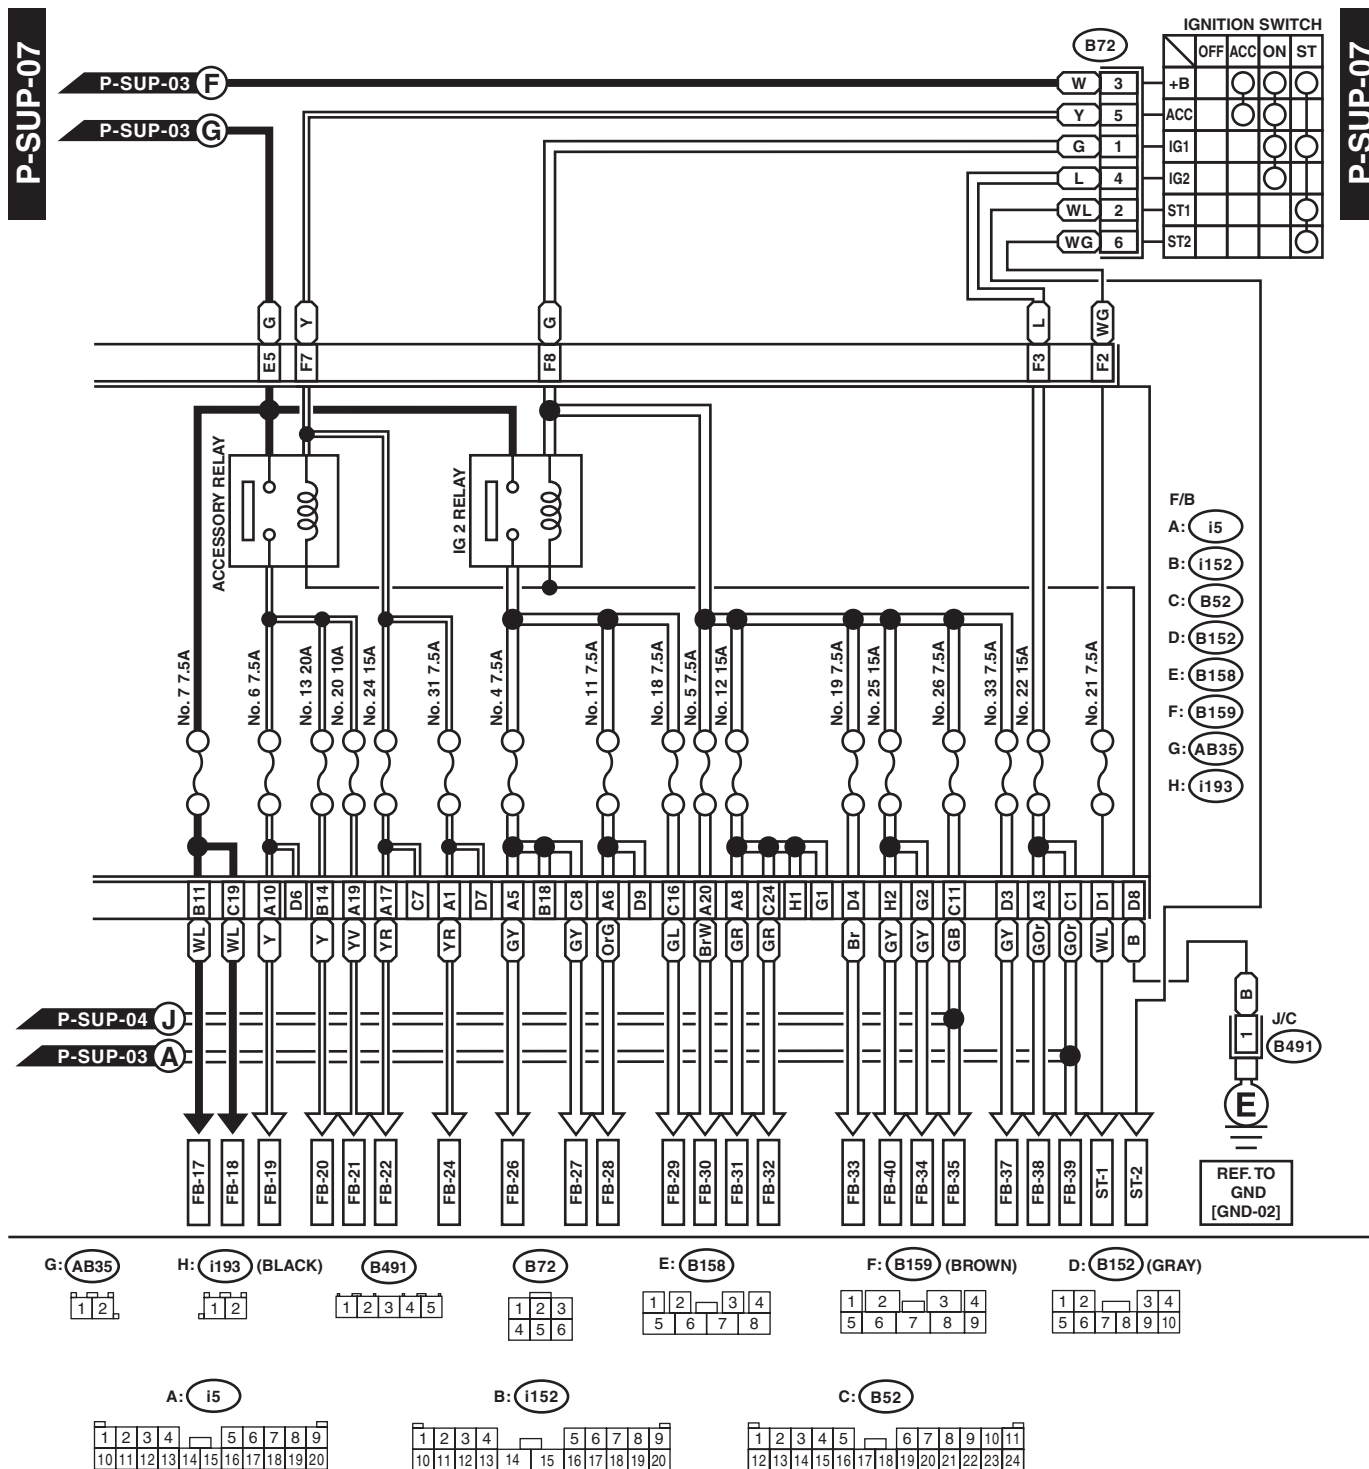

WI-25398

Power Supply Circuit

WIRING SYSTEM

No.	Load
MB-1	VDC CM
MB-2	VDC CM
MB-3	Audio
	Navigation unit
	Audio amplifier (McIntosh)
MB-4	Blower motor relay
MB-6	Main fan relay 1
MB-7	Sub fan relay
MB-8	Mirror heater relay
	Rear defogger
MB-9	Body integrated unit
MB-10	Front wiper motor
	Combination Switch (Wiper)
MB-11	Front washer motor
MB-12	Rear washer motor
MB-13	Front fog light RH
MB-14	Front fog light LH
MB-15	Body integrated unit
MB-16	Body integrated unit
	Clock
	Audio
	Navigation unit
	Luggage room light
	Door step light LH
	Door step light RH
	Trunk room light
	Spot map light
	Room light
	Vanity mirror light LH
	Vanity mirror light RH
	Keyless entry CM
	Puddle light LH
	Puddle light RH
MB-17	Body integrated unit
MB-18	Sunroof motor assembly
MB-19	EPB CM
MB-20	Power seat LH
	Power seat RH
MB-22	Front combination light LH (clearance light)
	Front combination light RH (clearance light)
	F/B

No.	Load
MB-23	Satellite switch illumination
	AT select lever illumination
	Illumination control switch
	Remote control mirror switch
	Lower cover switch
	Glove box light
	Hill hold switch
	Audio
	Navigation unit
	Seat heater switch (power seat)
	Shower light
	A/C control panel
	EPB control switch
MB-24	Body integrated unit
MB-25	Body integrated unit
MB-26	Front combination light RH (headlight)
MB-27	Front combination light LH (headlight)
MB-28	Body integrated unit
MB-29	Front combination light RH (headlight)
MB-30	Front combination light LH (headlight)
MB-31	Body integrated unit
MB-32	Horn
MB-33	Horn
MB-34	Body integrated unit
	Horn switch
MB-35	Main fan relay
MB-36	Body integrated unit
	Key warning switch
	Turn signal and hazard unit
MB-37	Main relay
MB-38	A/F, oxygen sensor relay
MB-39	IG relay
MB-40	Electronic throttle control relay
MB-41	Fuel pump relay
MB-42	ECM
	Data link connector
MB-43	TCM
MB-44	Self shut relay
	TCM
ST-1	Inhibitor relay
	Starter relay

Power Supply Circuit

WIRING SYSTEM

No.	Load
ST-2	Starter relay
FB-1	Trailer connector
FB-2	Stop light & brake switch
	Stop light register
FB-3	Seat heater relay
FB-5	Power window main switch
FB-7	Power window circuit breaker
FB-8	Front power window sub switch
FB-9	Wiper deicer relay
FB-10	Mirror heater relay
FB-13	Rear power window sub switch LH
FB-14	Rear power window sub switch RH
FB-15	Body integrated unit
FB-16	Rear wiper motor
FB-17	Combination meter
	Body integrated unit
	Impact sensor
	EPB control switch
	A/C CM
	TPMS CM
FB-18	Security CM
FB-19	Remote control mirror switch
	Seat heater relay
	Rearview mirror
FB-20	Rear accessory power supply socket
FB-21	Front accessory power supply socket
FB-22	Audio
	Navigation unit
FB-24	Body integrated unit
	A/C control panel
	A/C CM
FB-26	Impact sensor
	Wiper deicer relay
	A/C control panel
	Navigation unit
	Sunroof motor assembly
	TPMS CM
FB-27	ECM
	Data link connector
	Stop light & brake switch
	Clutch switch

No.	Load
FB-28	Turn signal and hazard unit
FB-29	Inhibitor switch
	Back-up light switch
	Back-up light relay
FB-30	Combination meter
	Clock
FB-31	A/C CM
	Body integrated unit
FB-32	TCM
	ECM
	Fuel pump relay
	Ignition coil No. 1 (turbo model)
	Ignition coil No. 2 (turbo model)
	Ignition coil No. 3 (turbo model)
FB-33	Hill hold switch
	EPB CM
FB-34	Airbag CM
FB-35	Main fan relay 1 (Except for 3.6 L model)
	Main fan relay 2 (Except for 3.6 L model)
	Main fan relay (3.6 L model)
FB-37	VDC CM
	Steering angle sensor
FB-38	Blower motor relay
	Intake door actuator
FB-39	Sub fan relay
FB-40	Occupant detection control module



Ground Circuit

WIRING SYSTEM



4. Ground Circuit

A: WIRING DIAGRAM

1. CHASSIS GROUND

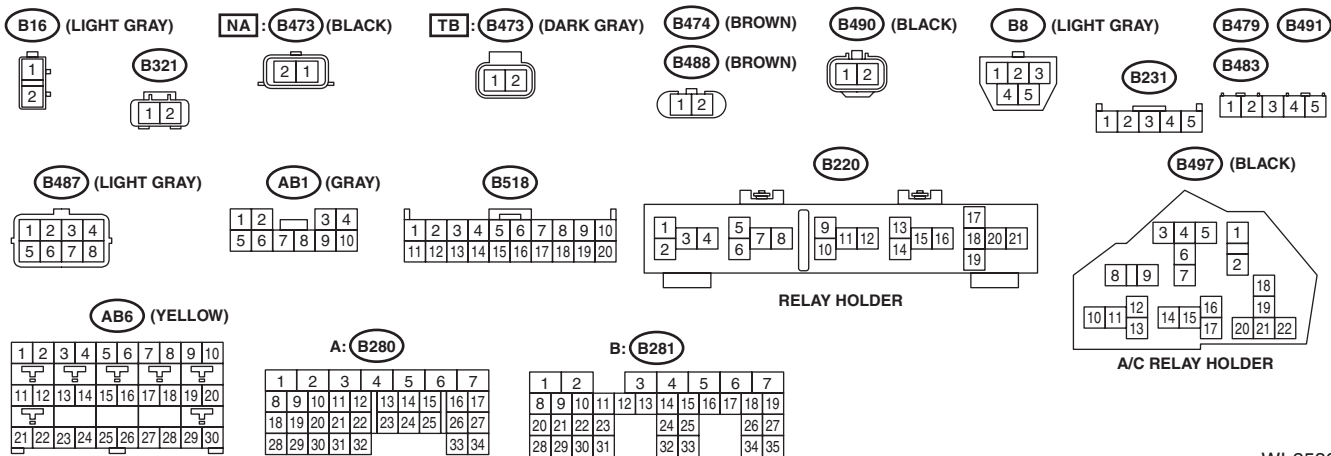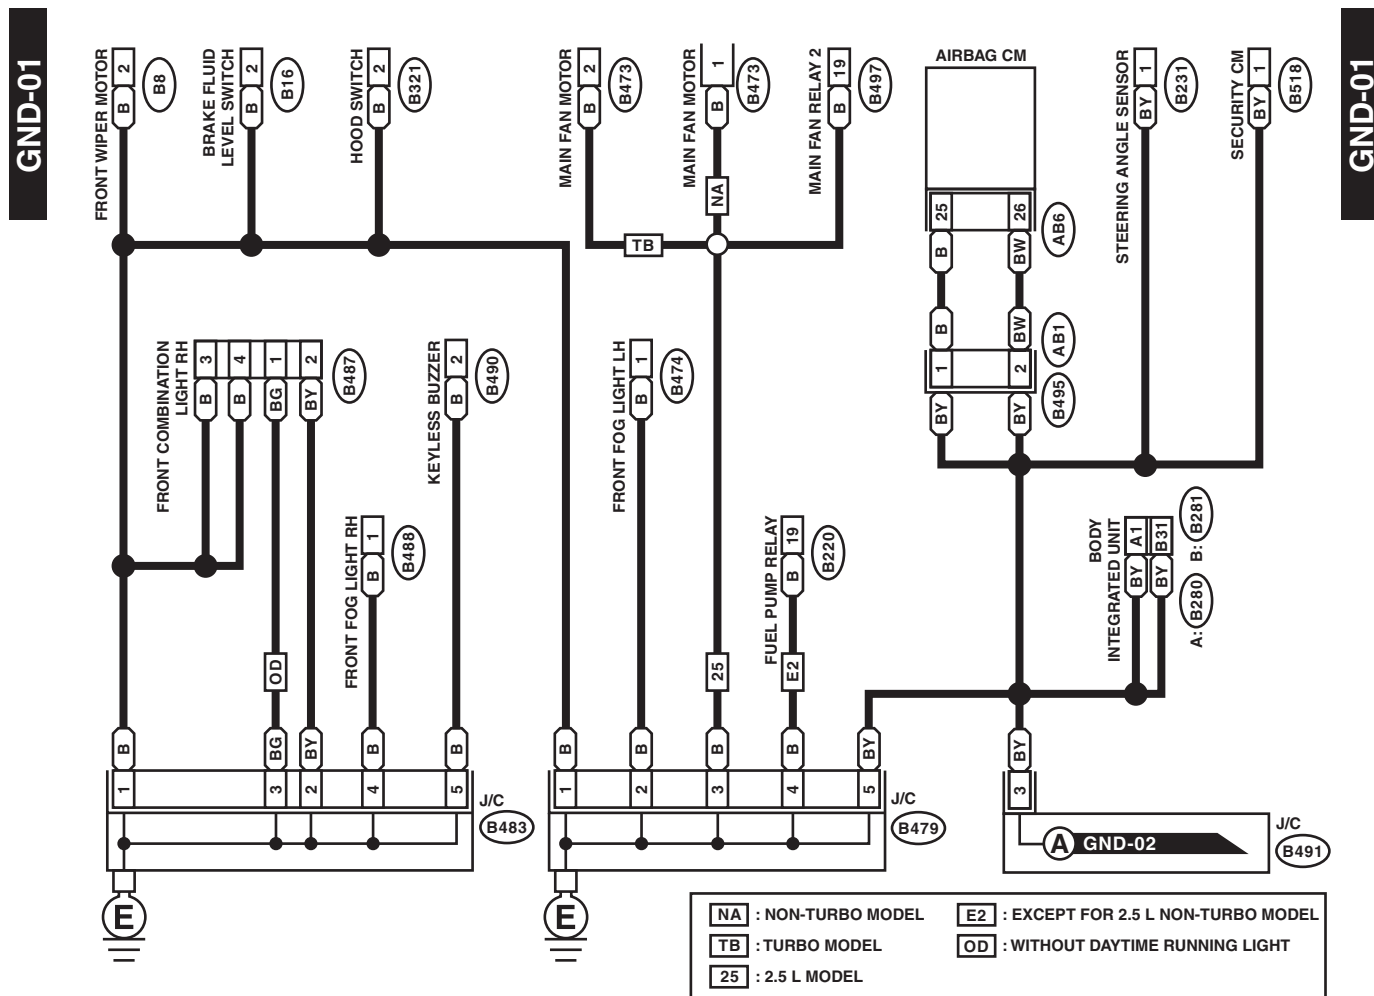

WI-25399

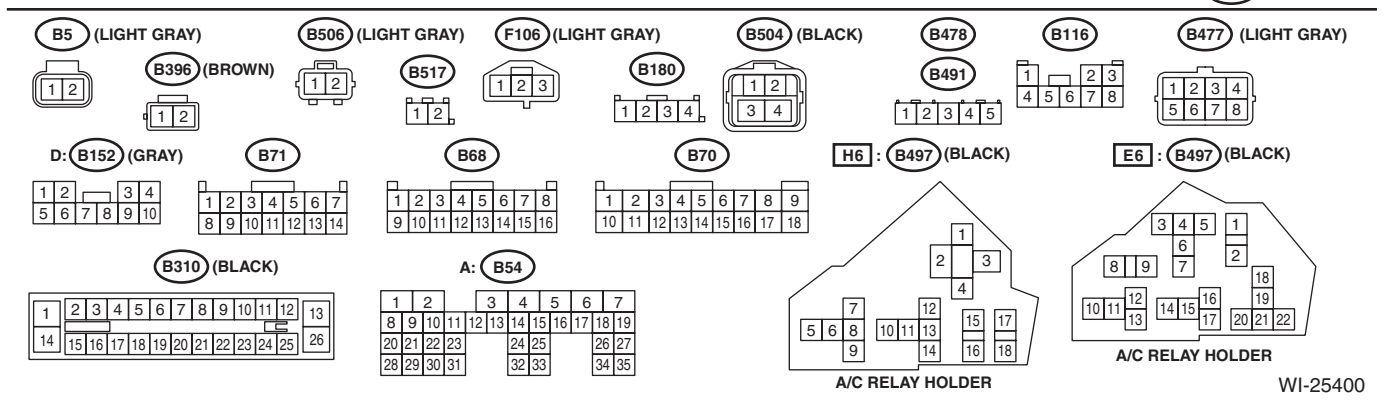
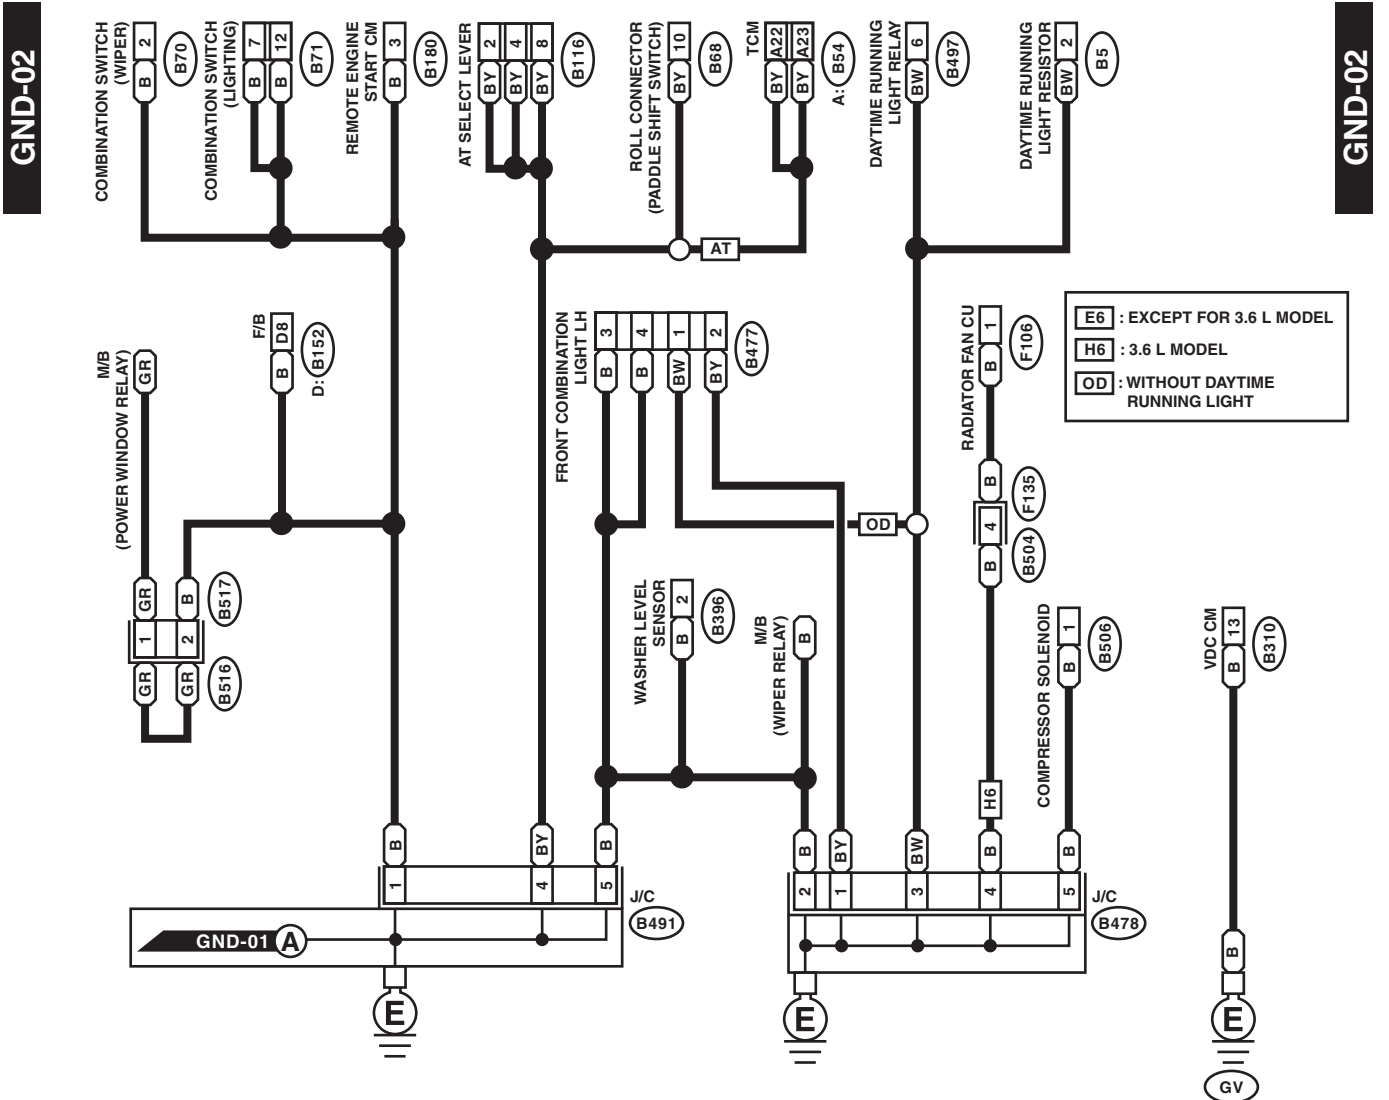


Ground Circuit

WIRING SYSTEM

GND-03

GND-03

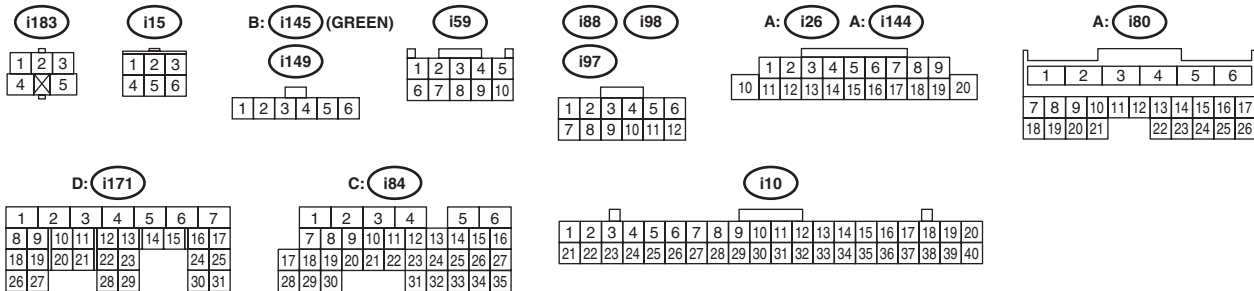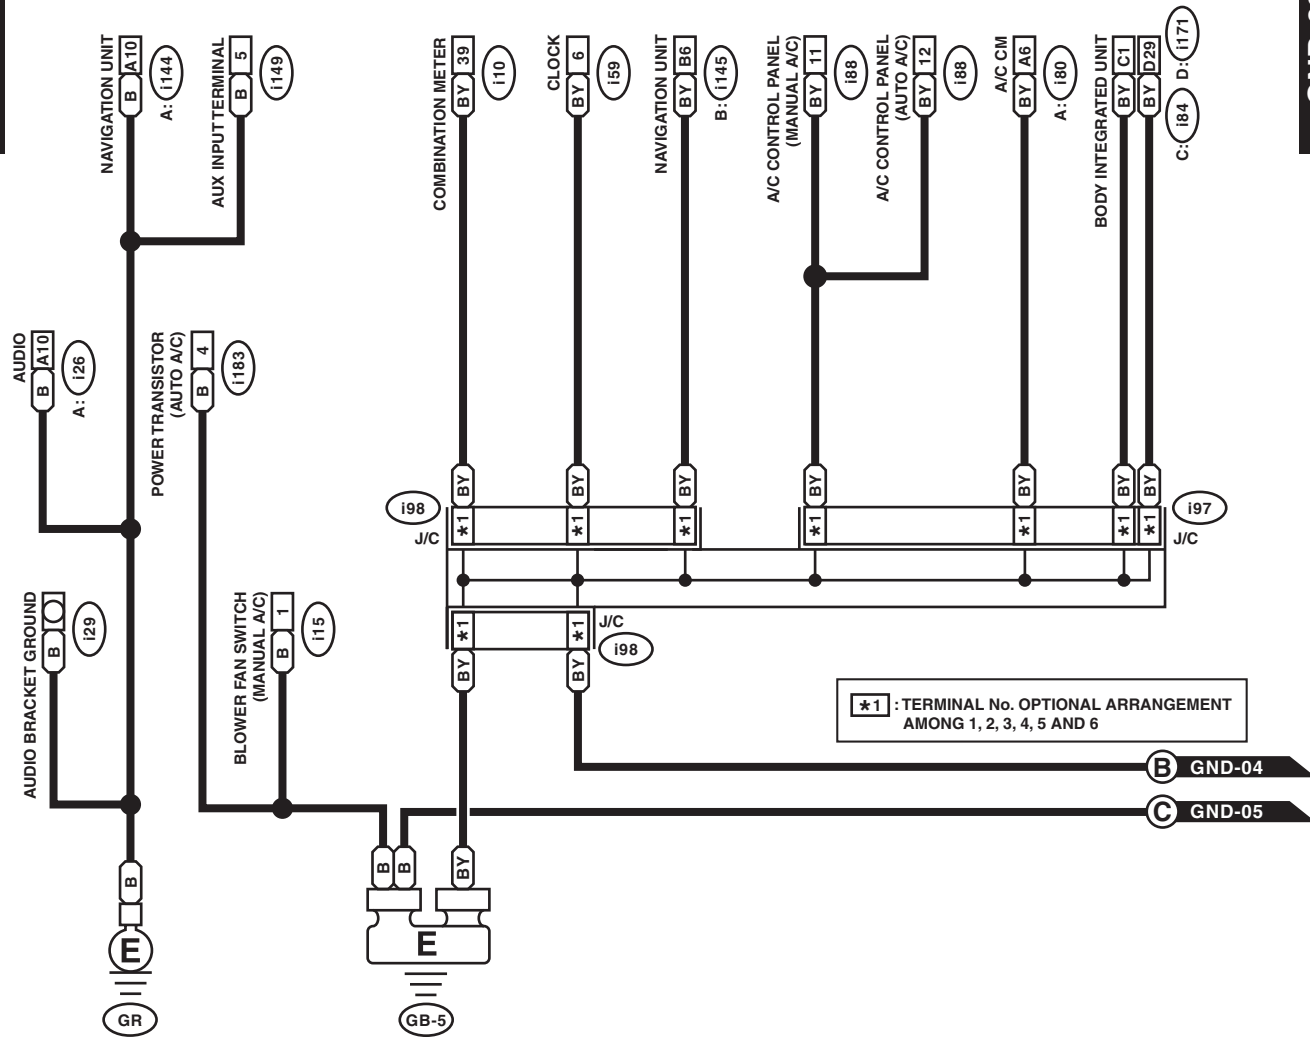



WI-25401

Ground Circuit

WIRING SYSTEM

GND-04


GND-04

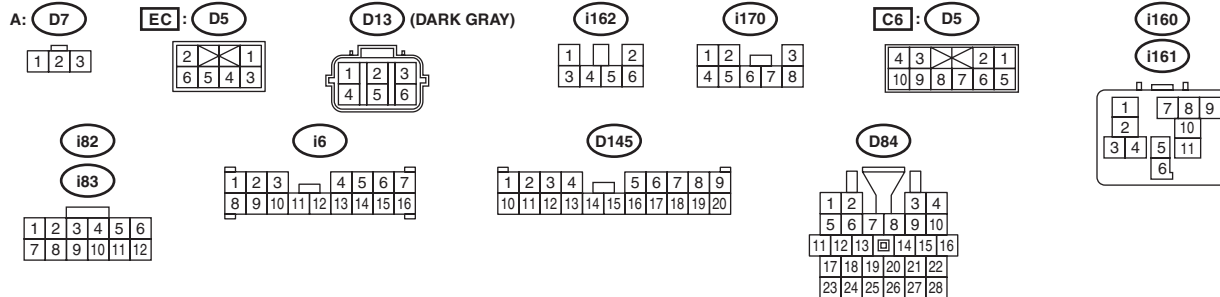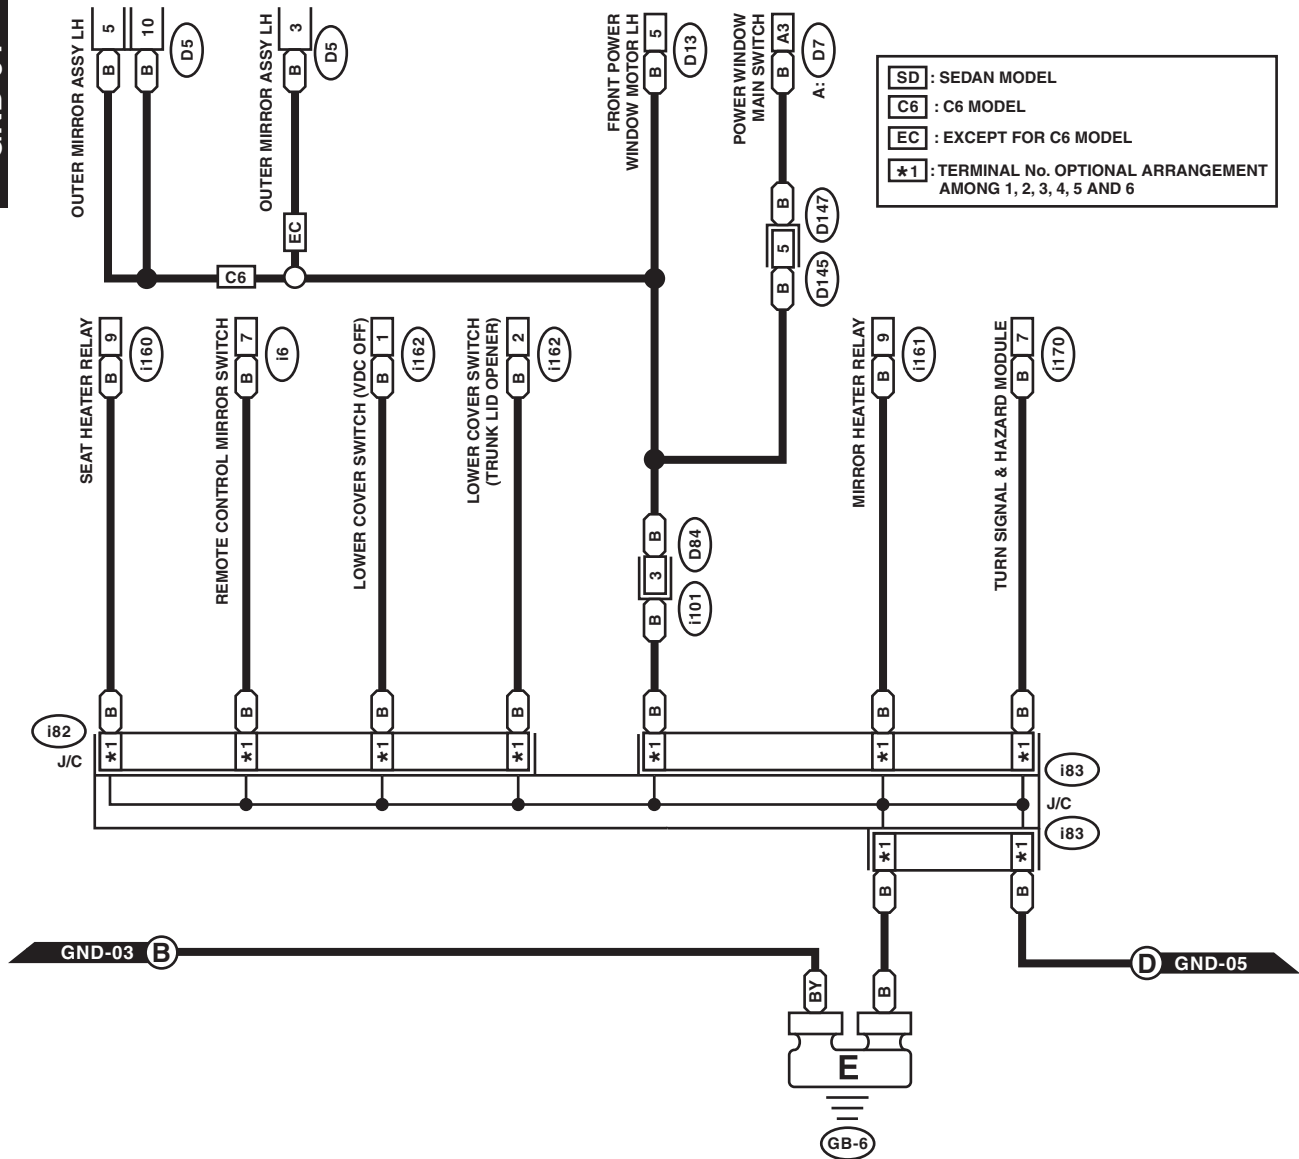


WI-25402

Ground Circuit

WIRING SYSTEM

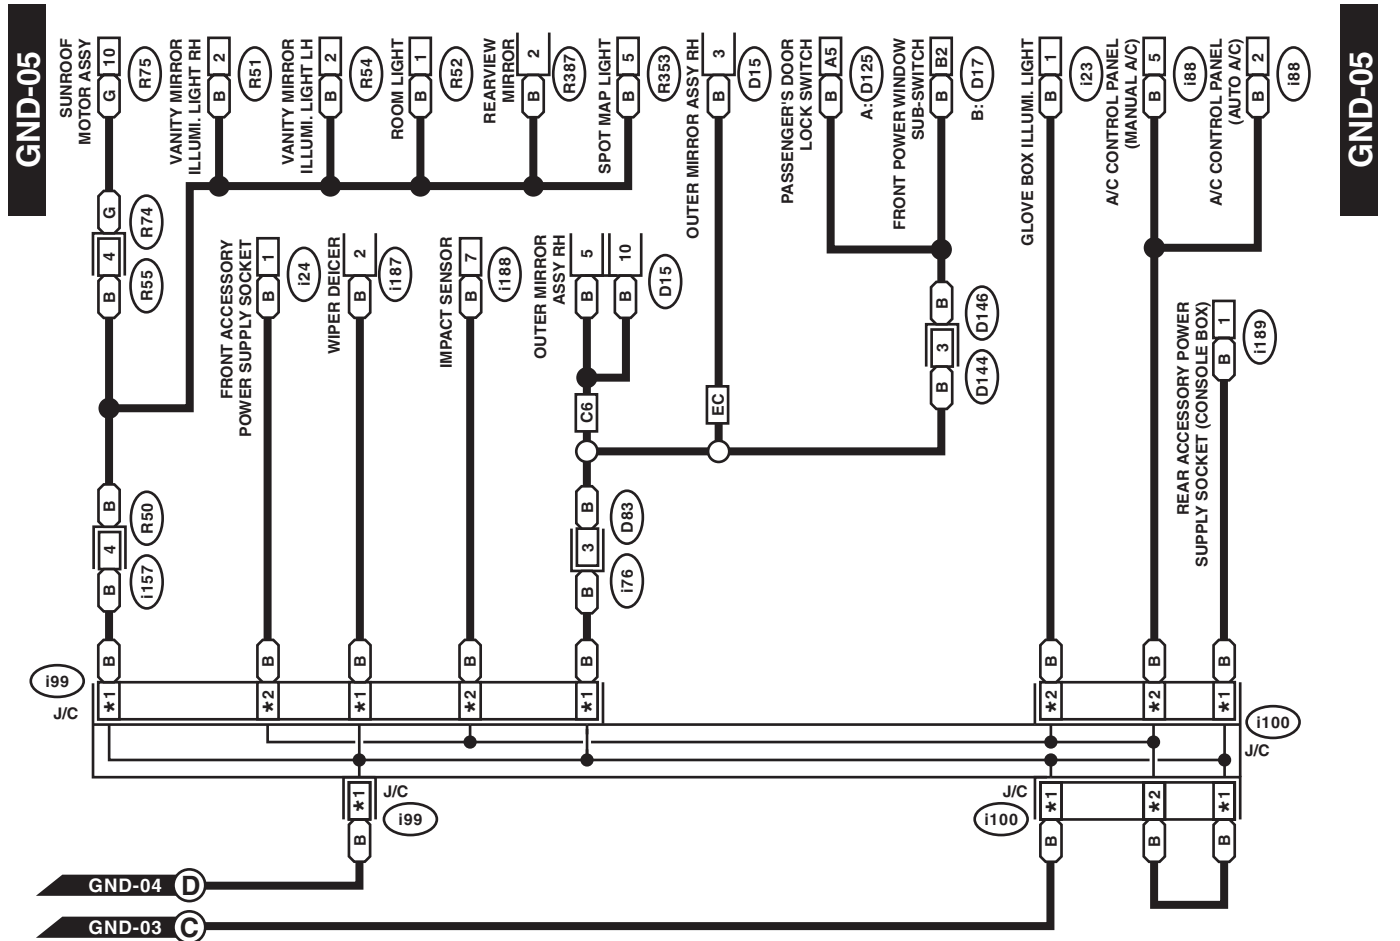



- C6** : C6 MODEL
- EC** : EXCEPT FOR C6 MODEL
- *1** : TERMINAL No. OPTIONAL ARRANGEMENT AMONG 1, 2, 3, 4, 5 AND 6
- *2** : TERMINAL No. OPTIONAL ARRANGEMENT AMONG 7, 8, 9, 10, 11 AND 12

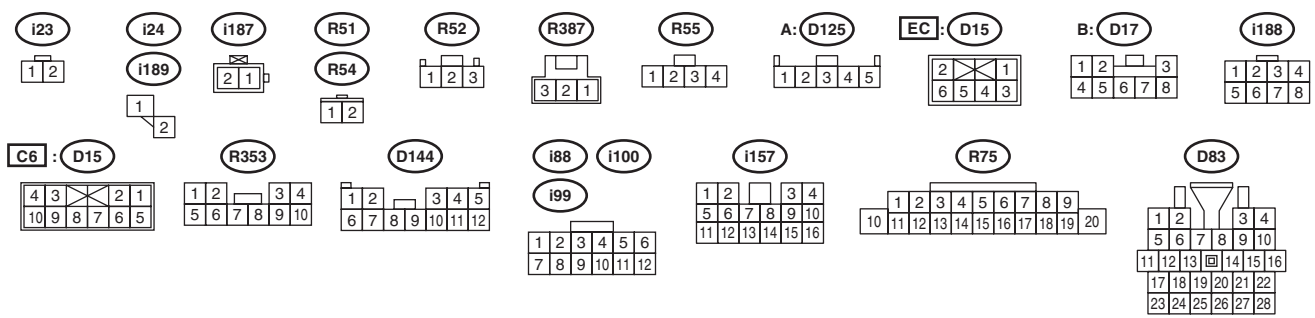

WI-25403

GND-06

GND-06

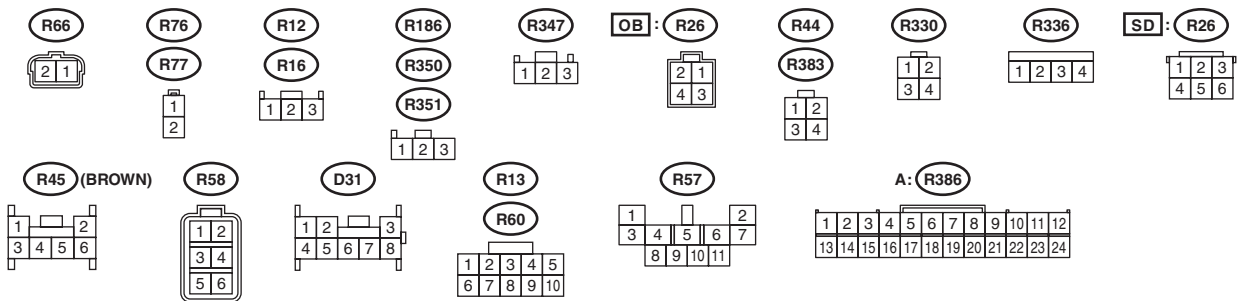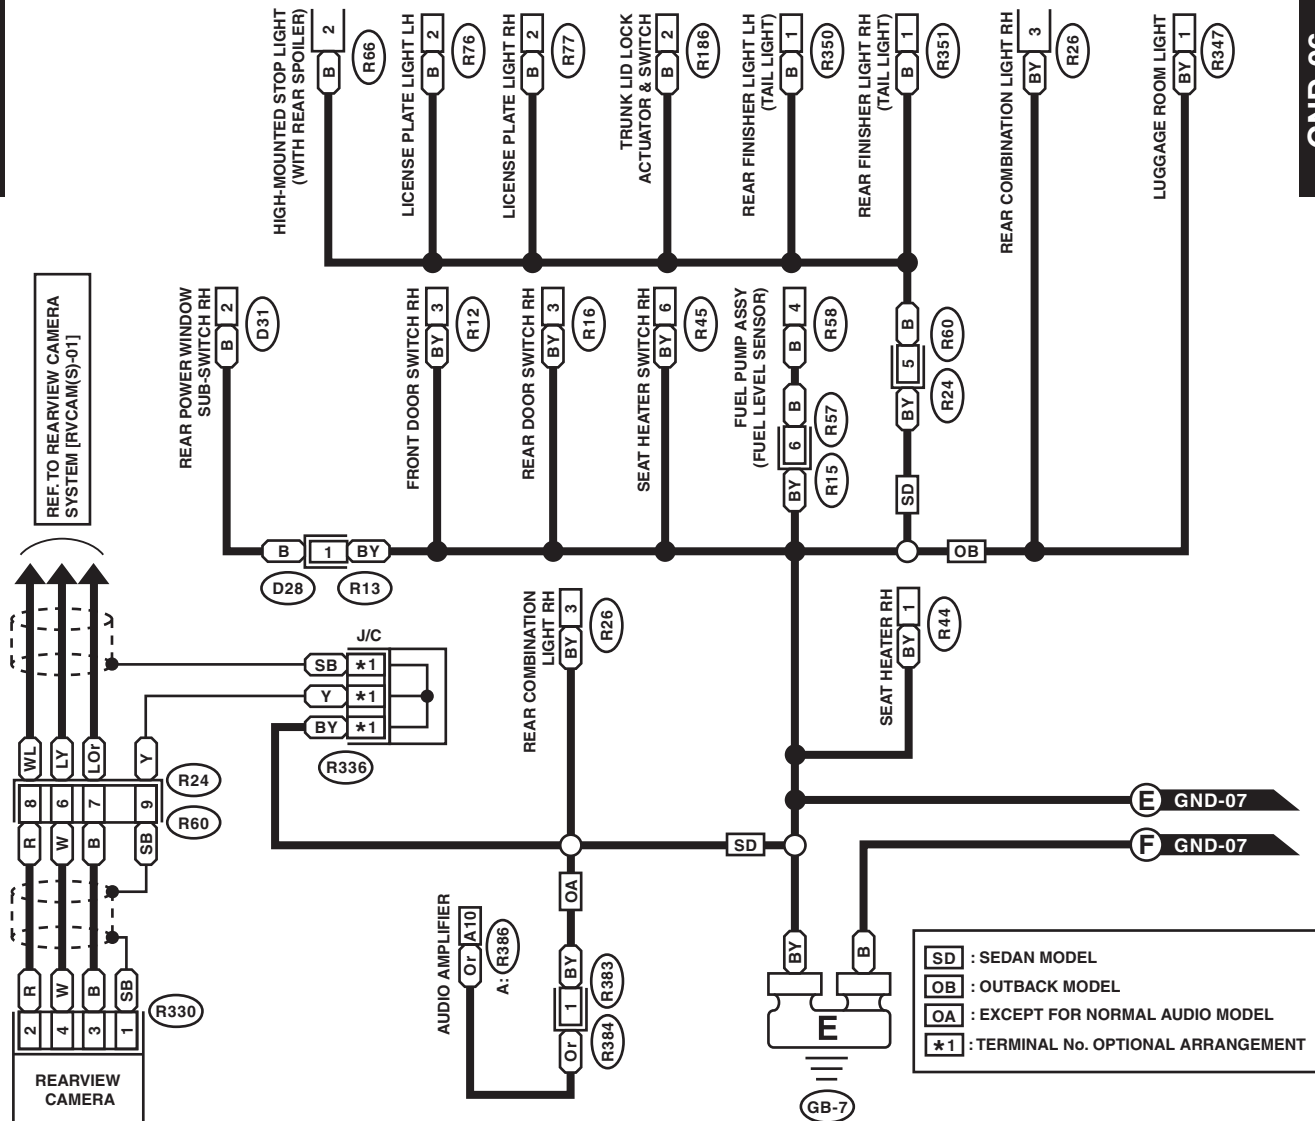


WI-25404


Ground Circuit

WIRING SYSTEM

GND-07

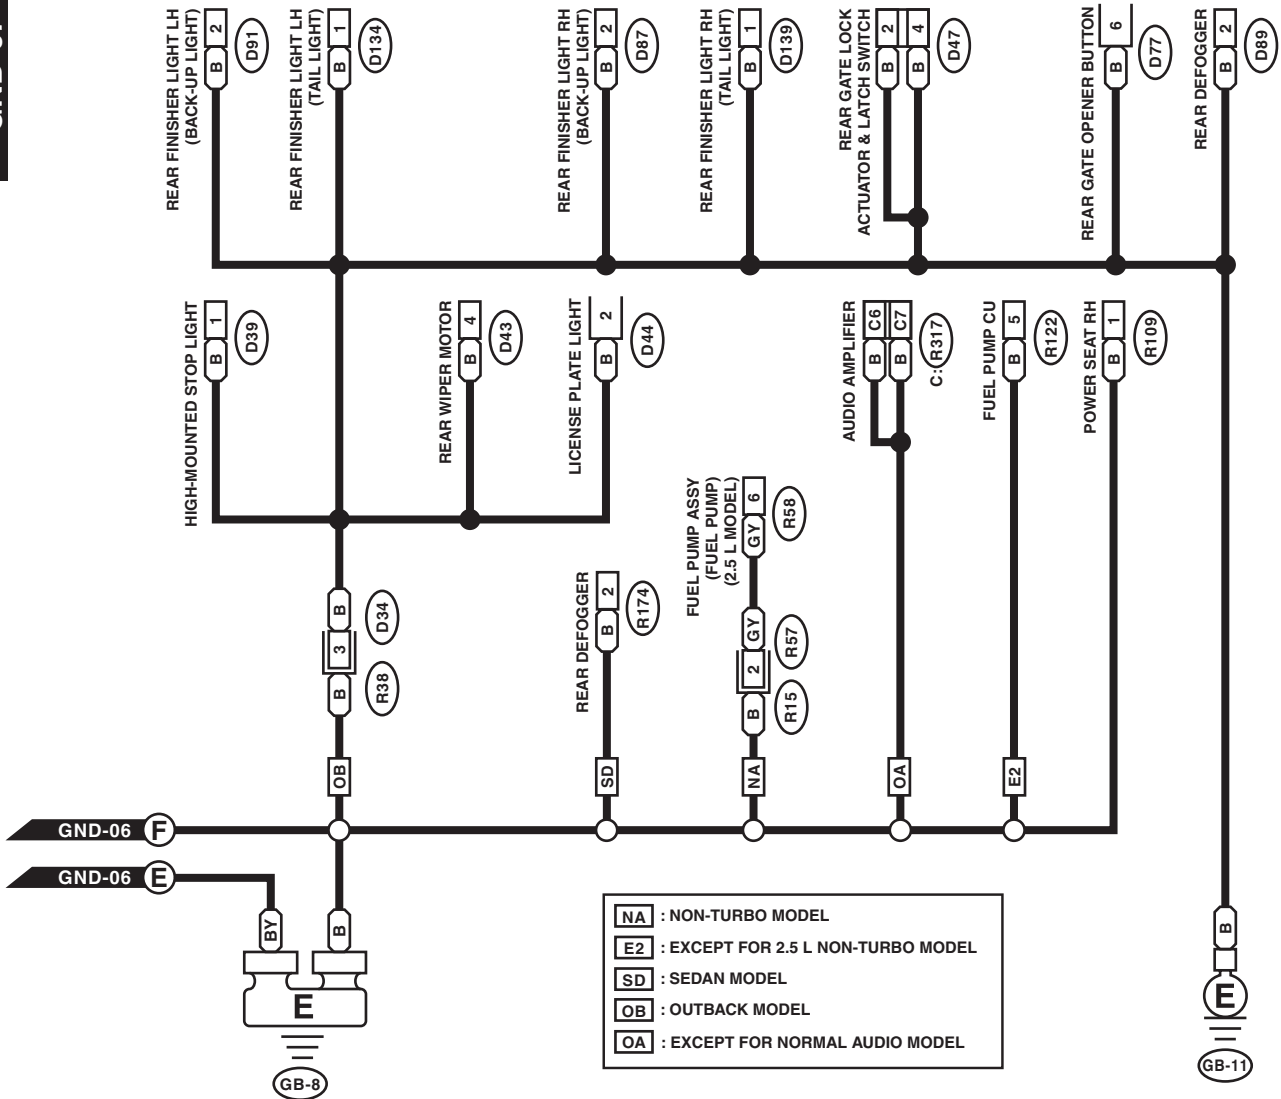


GND-07

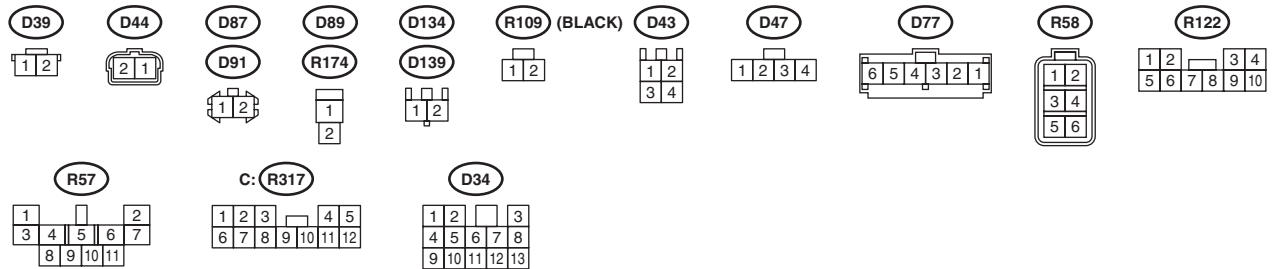

WI-25405

 
WIRING SYSTEM



Ground Circuit

WIRING SYSTEM

2. ENGINE GROUND (2.5 L NON-TURBO MODEL)

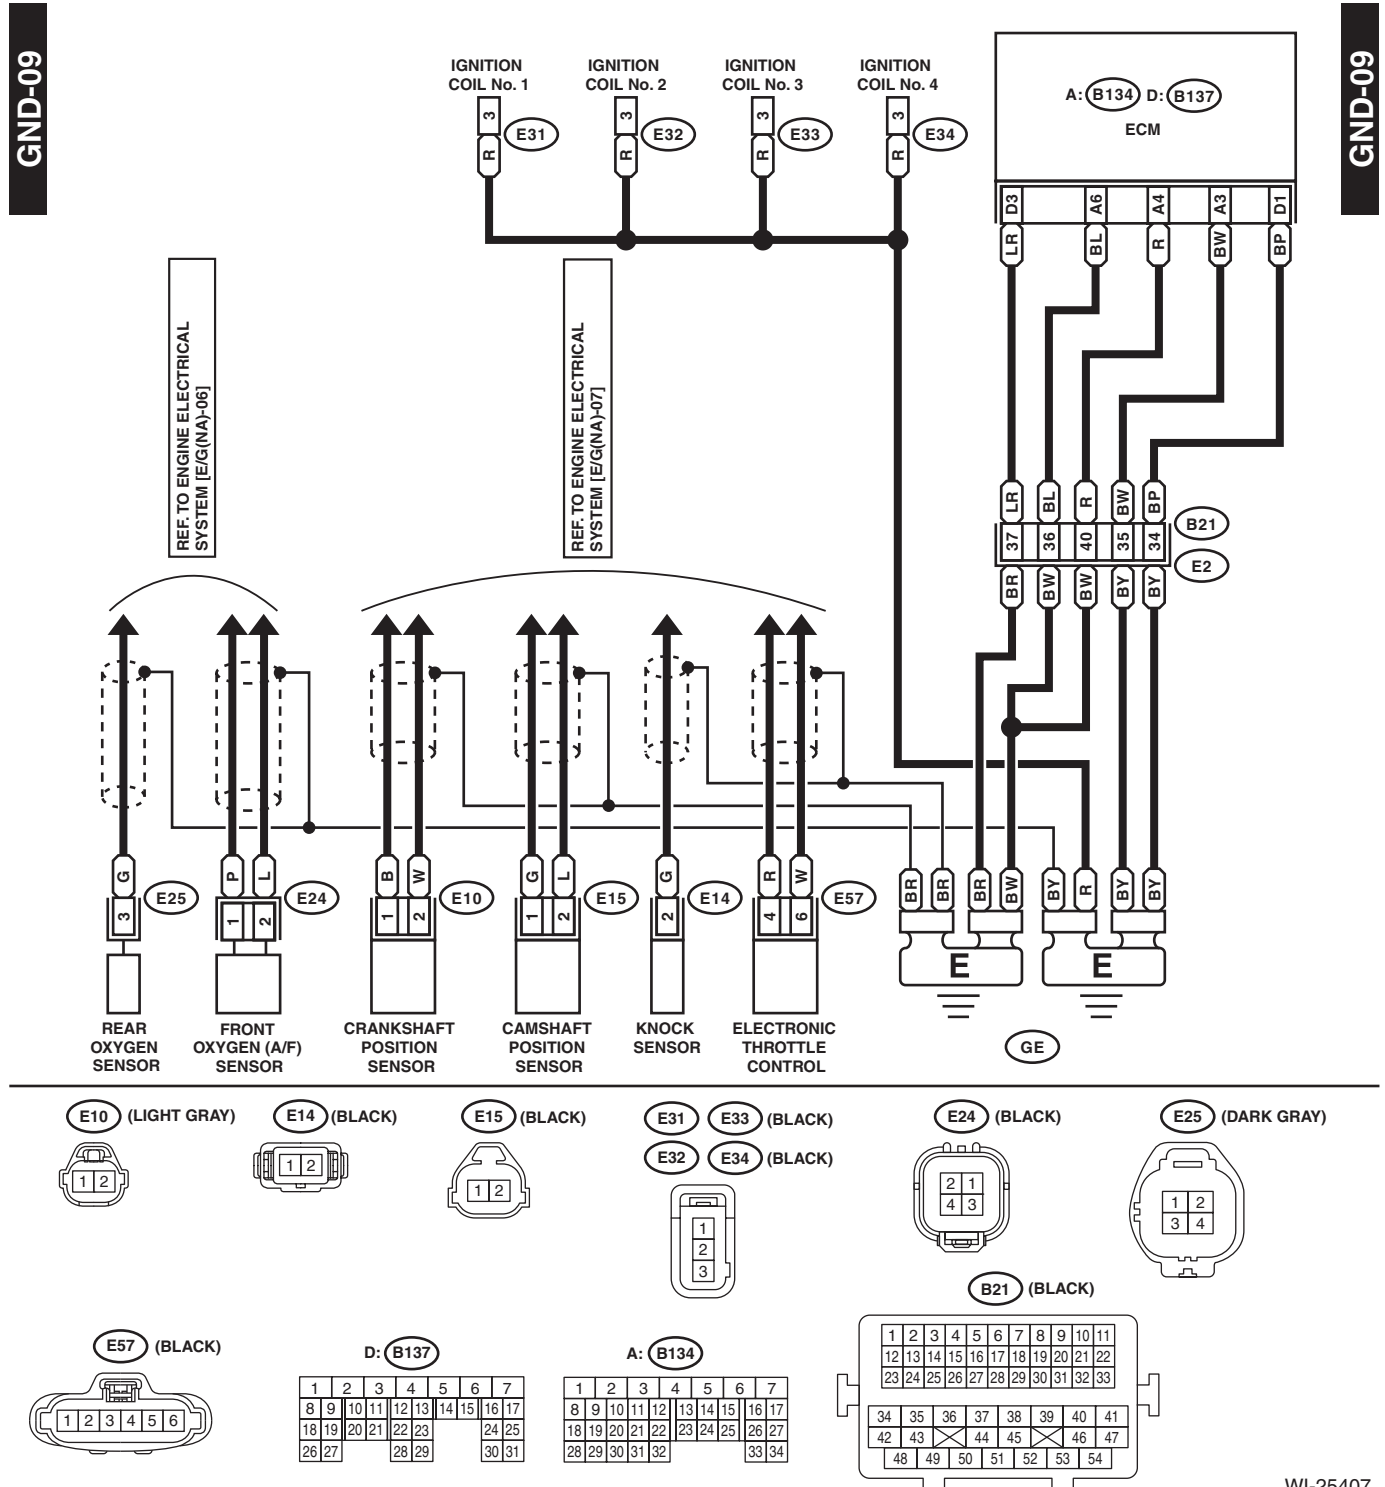


WI-25407

3. ENGINE GROUND (2.5 L TURBO MODEL)

GND-10

GND-10

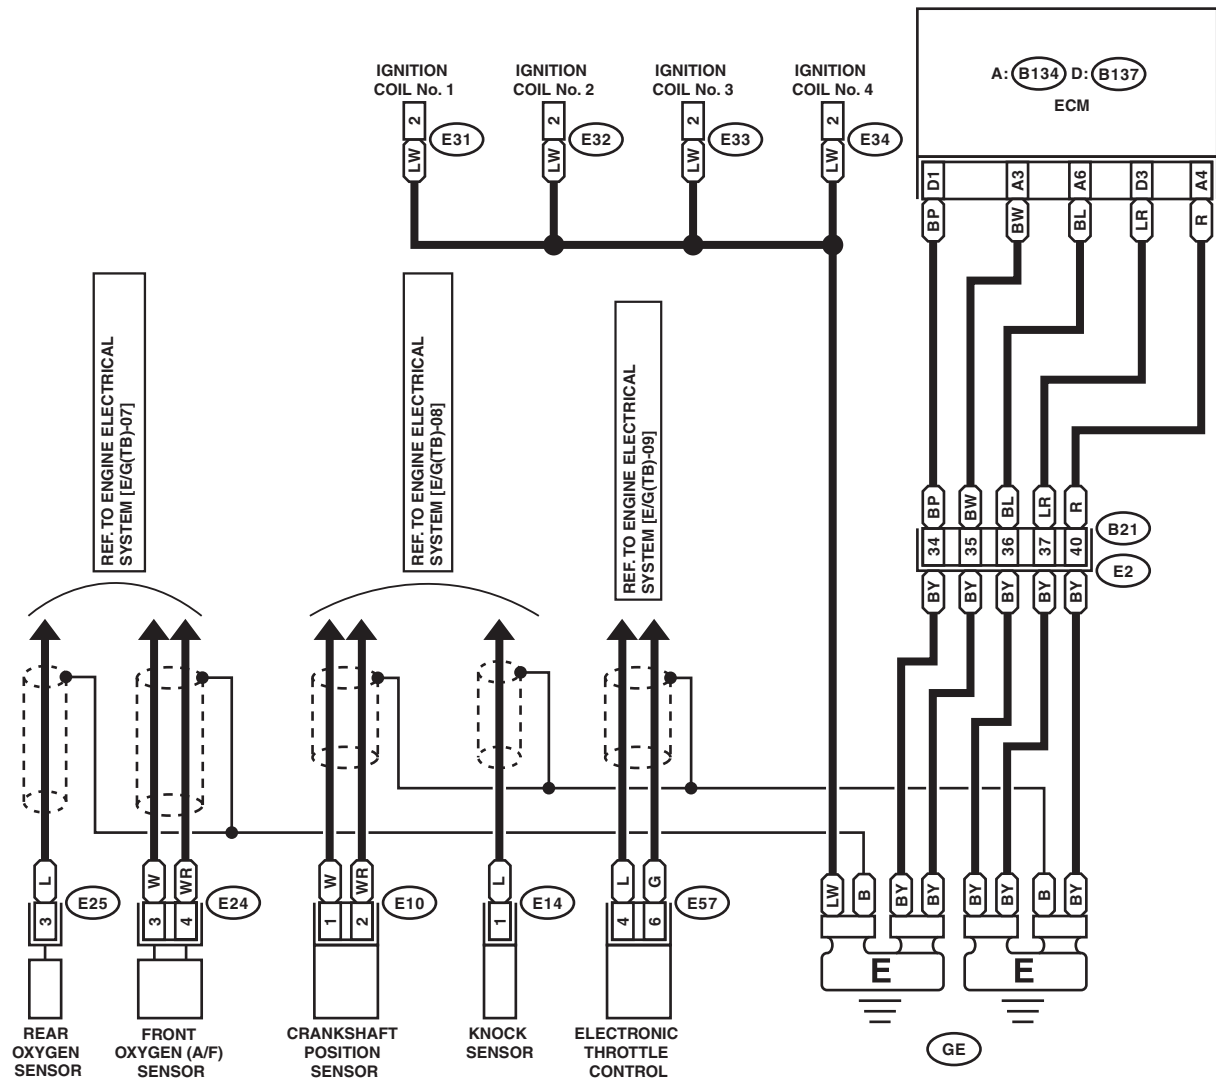

E10 (LIGHT GRAY) E14 (BLACK) (GRAY) E31 E33 (GRAY) E24 (LIGHT GRAY) E25 (BLACK) E57 (BLACK)
(GRAY) E32 E34 (GRAY)



D: B137

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31	32	33	34	35

A: B134

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31	32	33	34	35

B21 (BLACK)


1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31	32	33
34	35	36	37	38	39	40	41	42	43	44
45	46	47	48	49	50	51	52	53	54	55

WI-25408

Ground Circuit



WIRING SYSTEM

4. ENGINE GROUND (3.6 L MODEL)

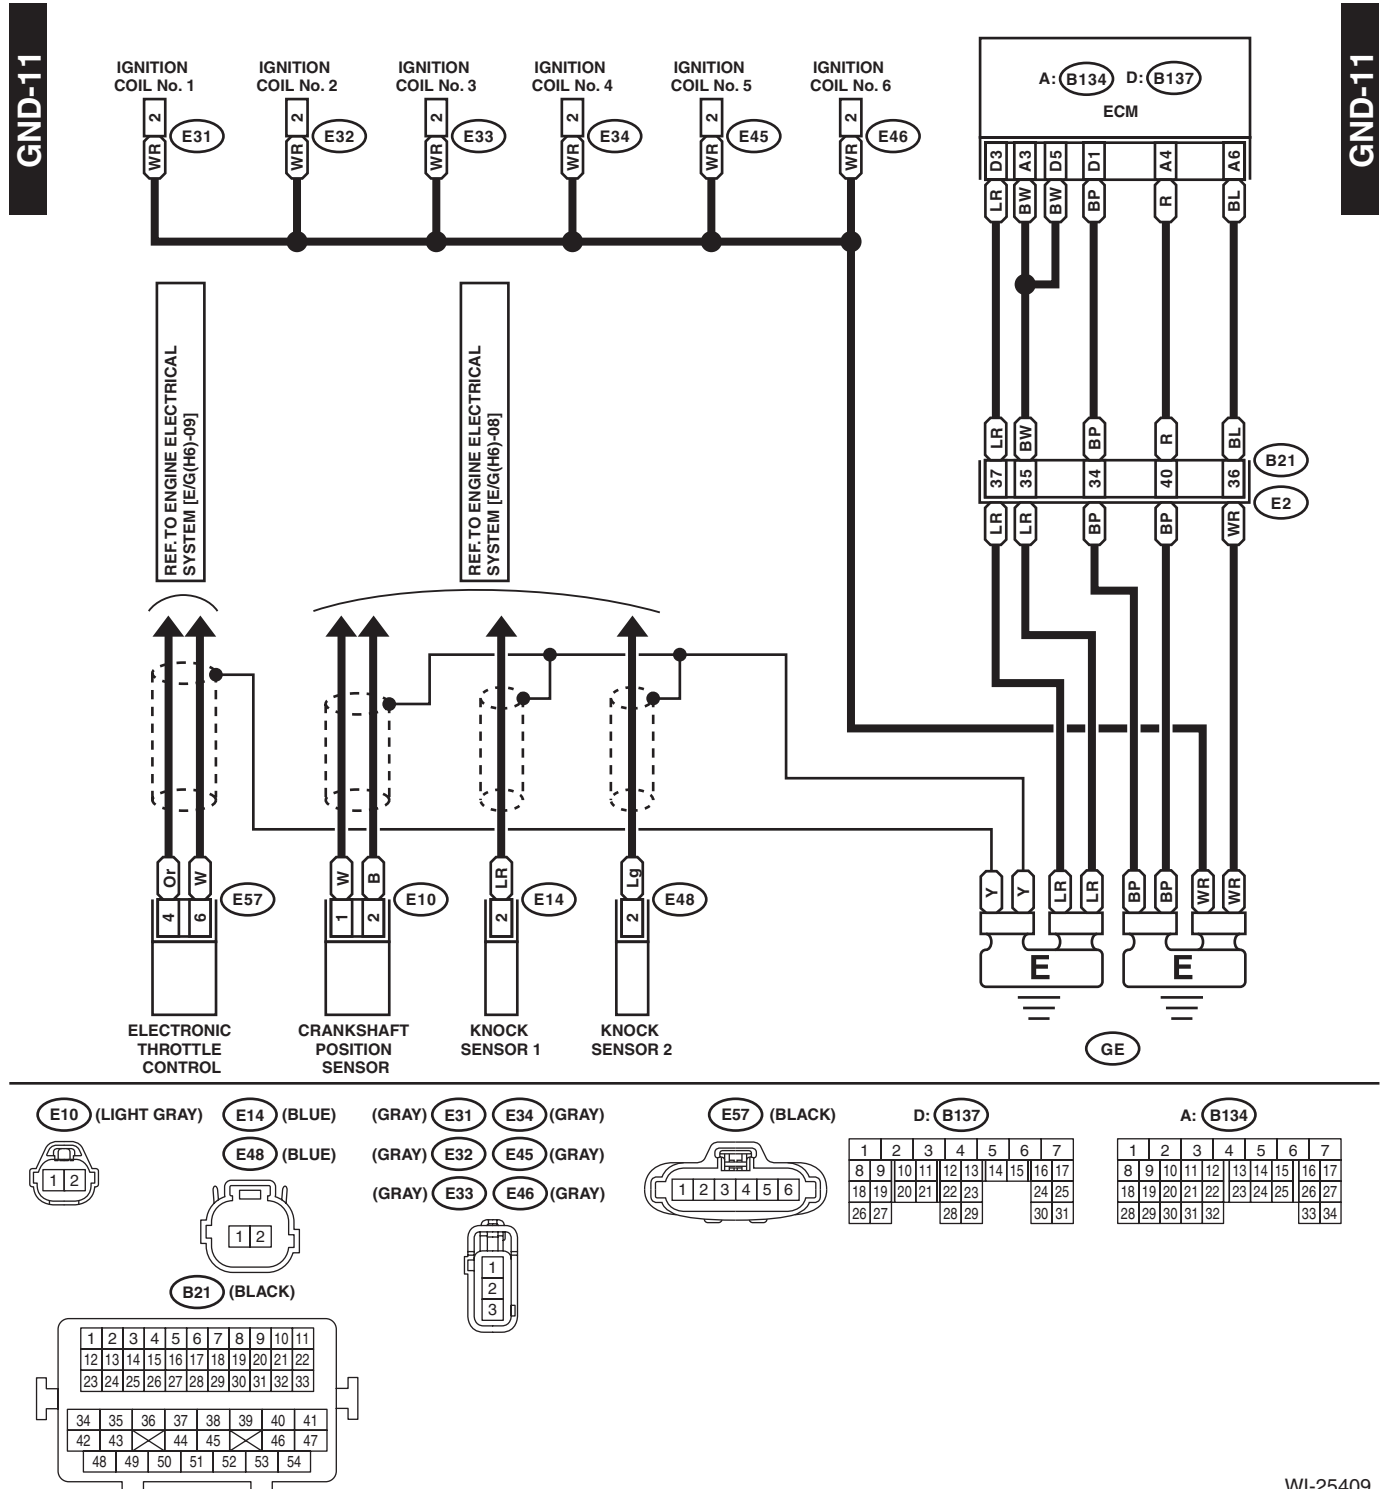

WI-25409

5. TRANSMISSION GROUND (AT MODEL)

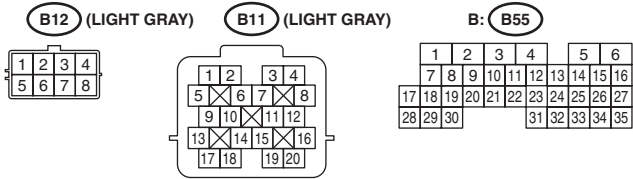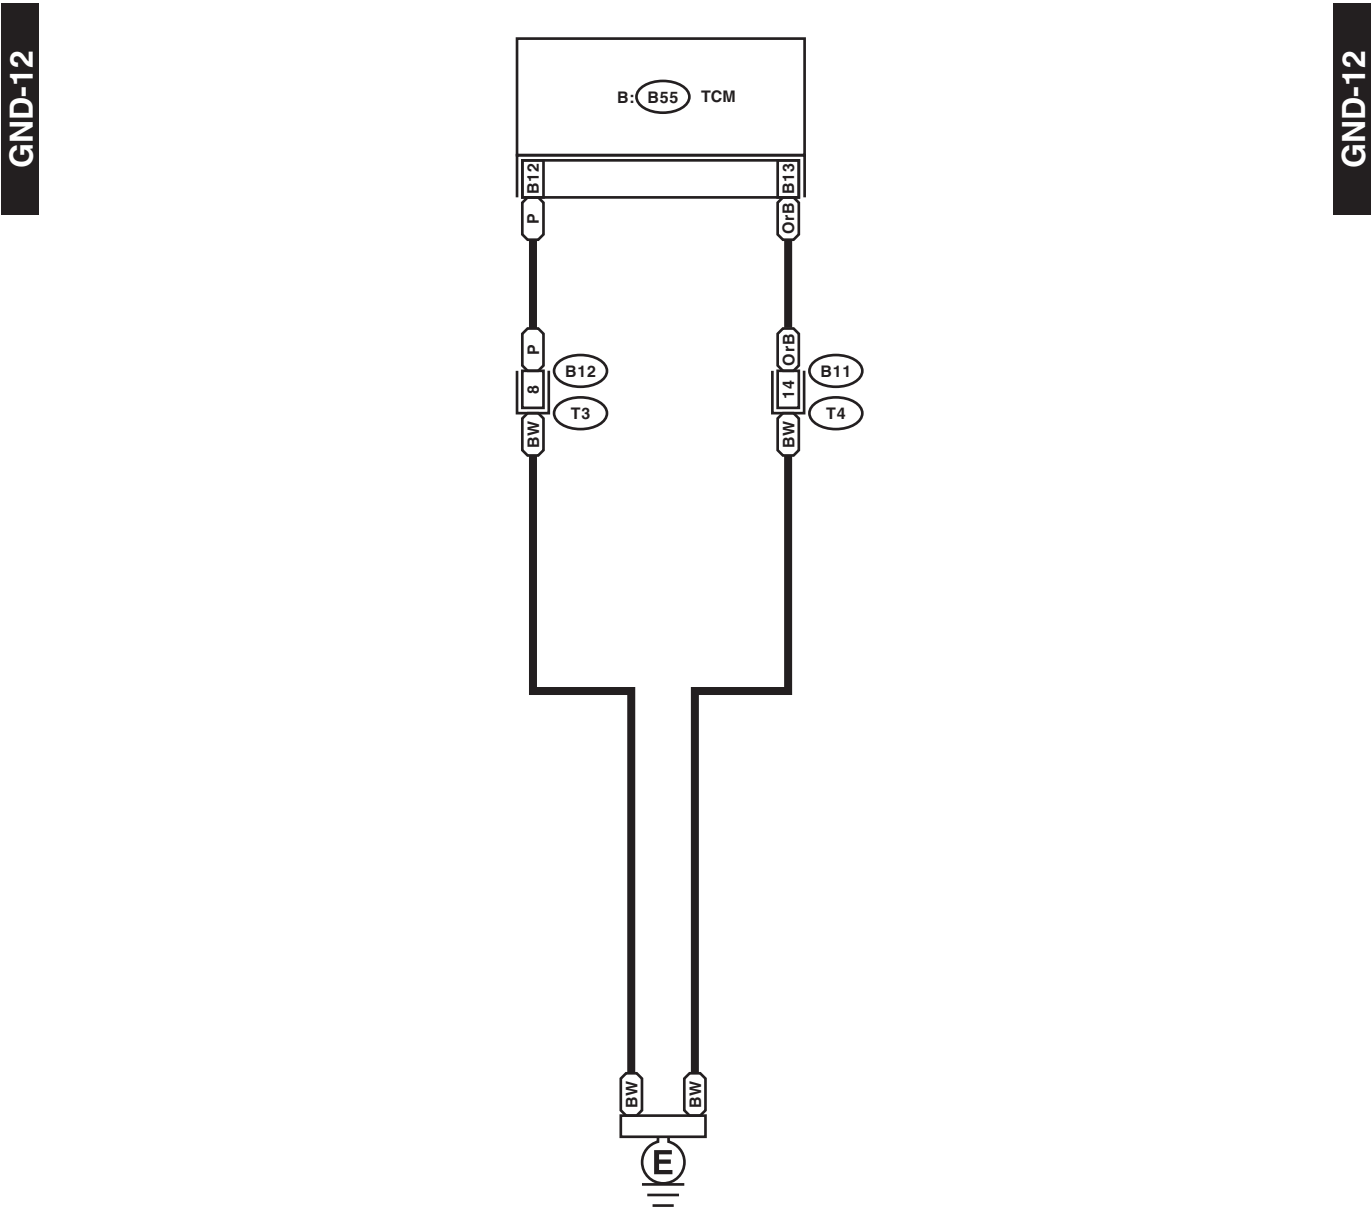

WI-25410



Ground Circuit

WIRING SYSTEM

6. TRANSMISSION GROUND (CVT MODEL)

GND-13


GND-13

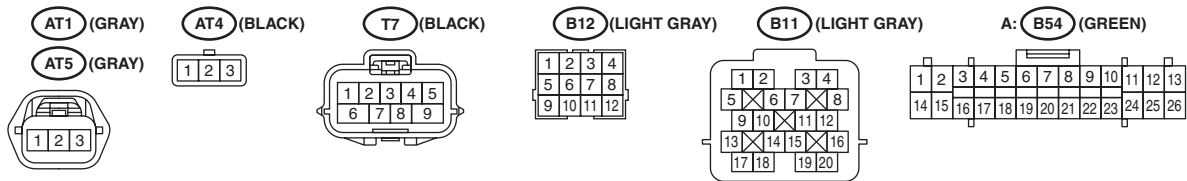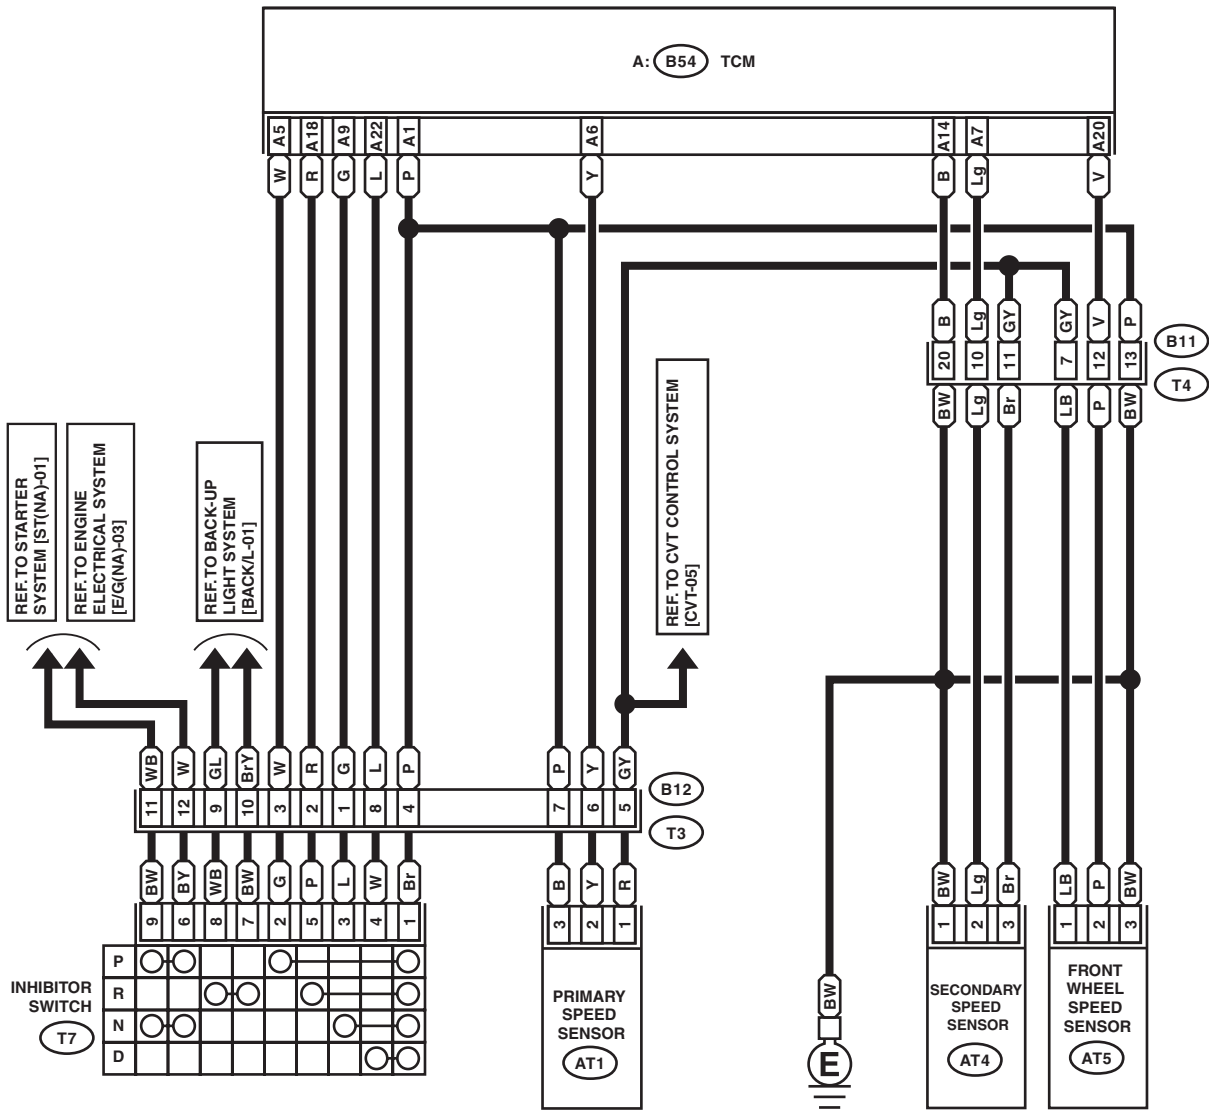

WI-25411

5. Airbag System

A: WIRING DIAGRAM

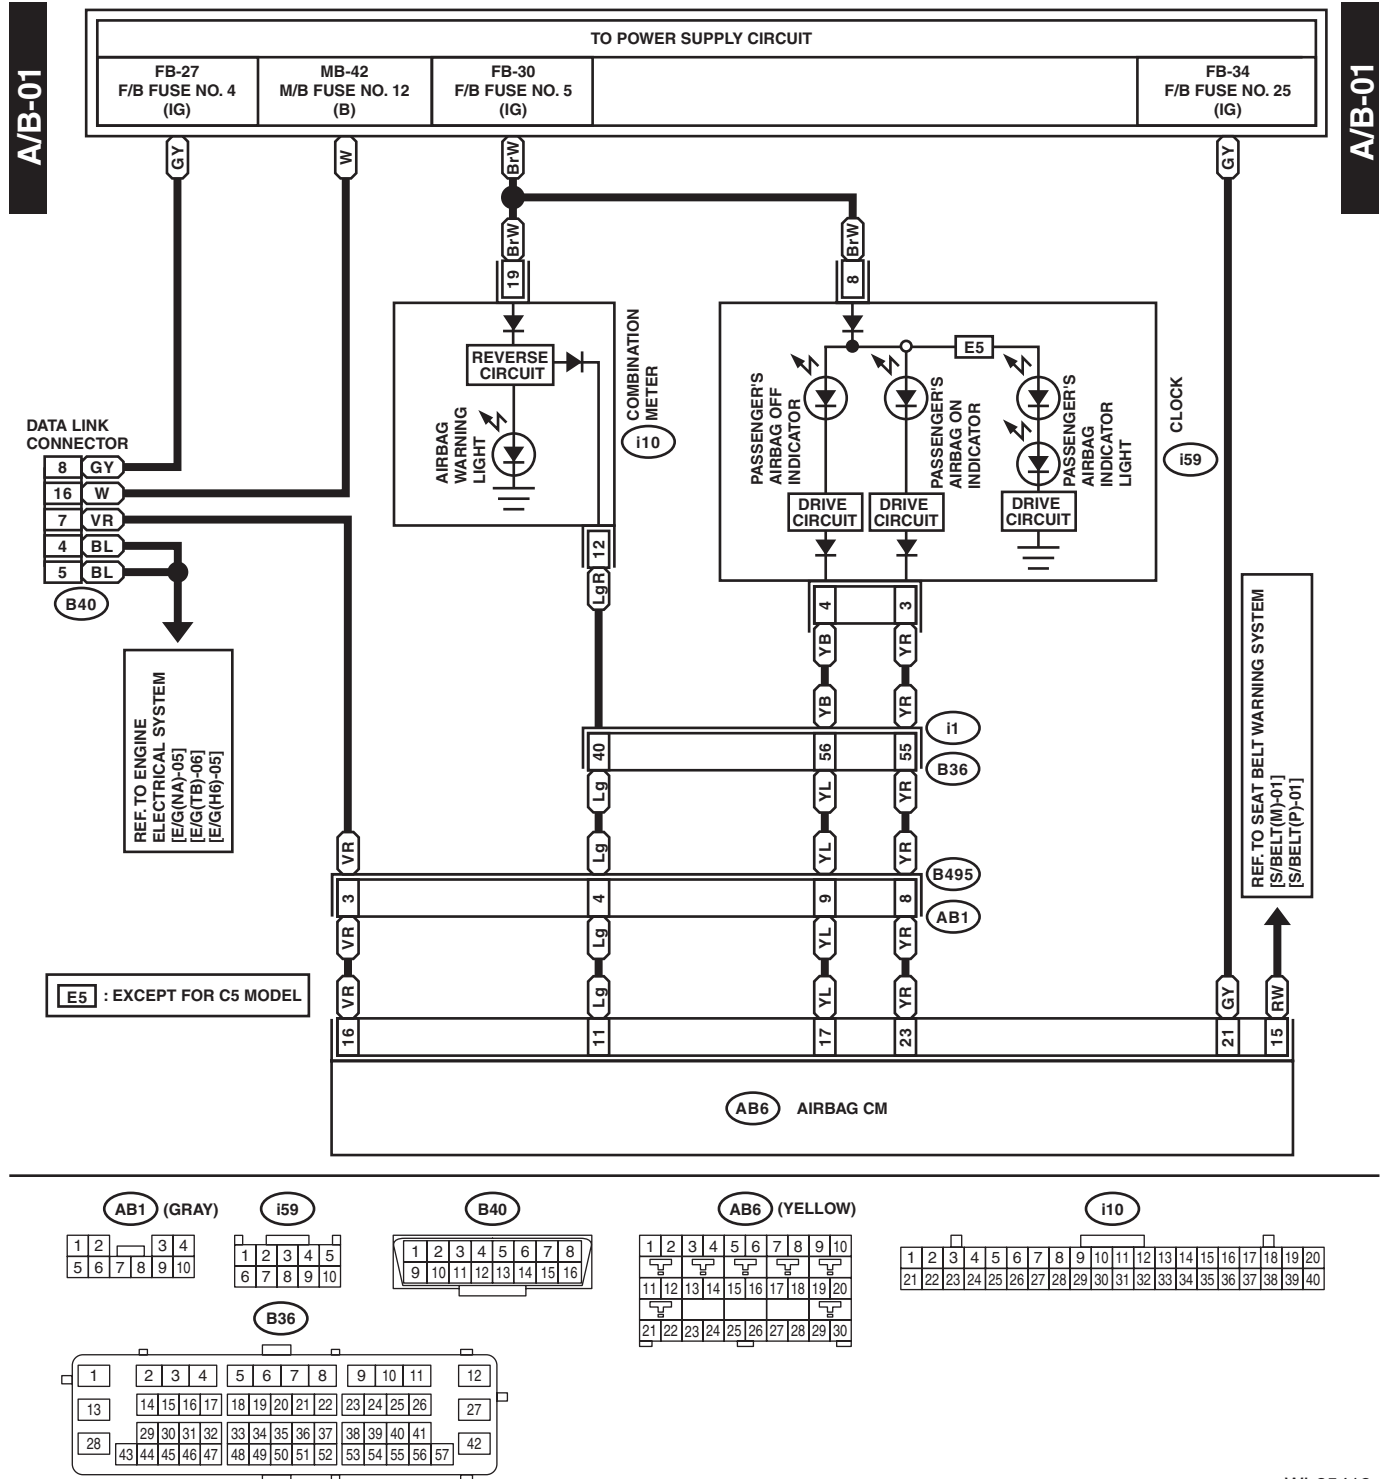



WI-25412

Airbag System

WIRING SYSTEM

A/B-02

A/B-02

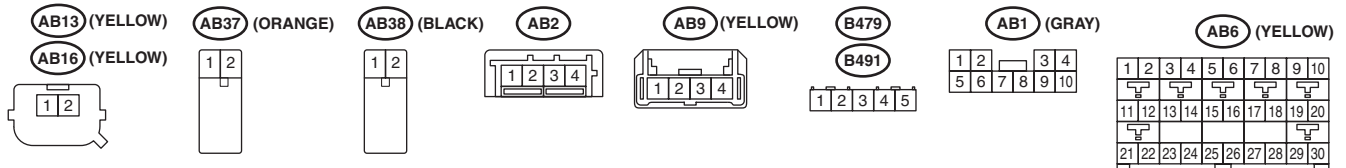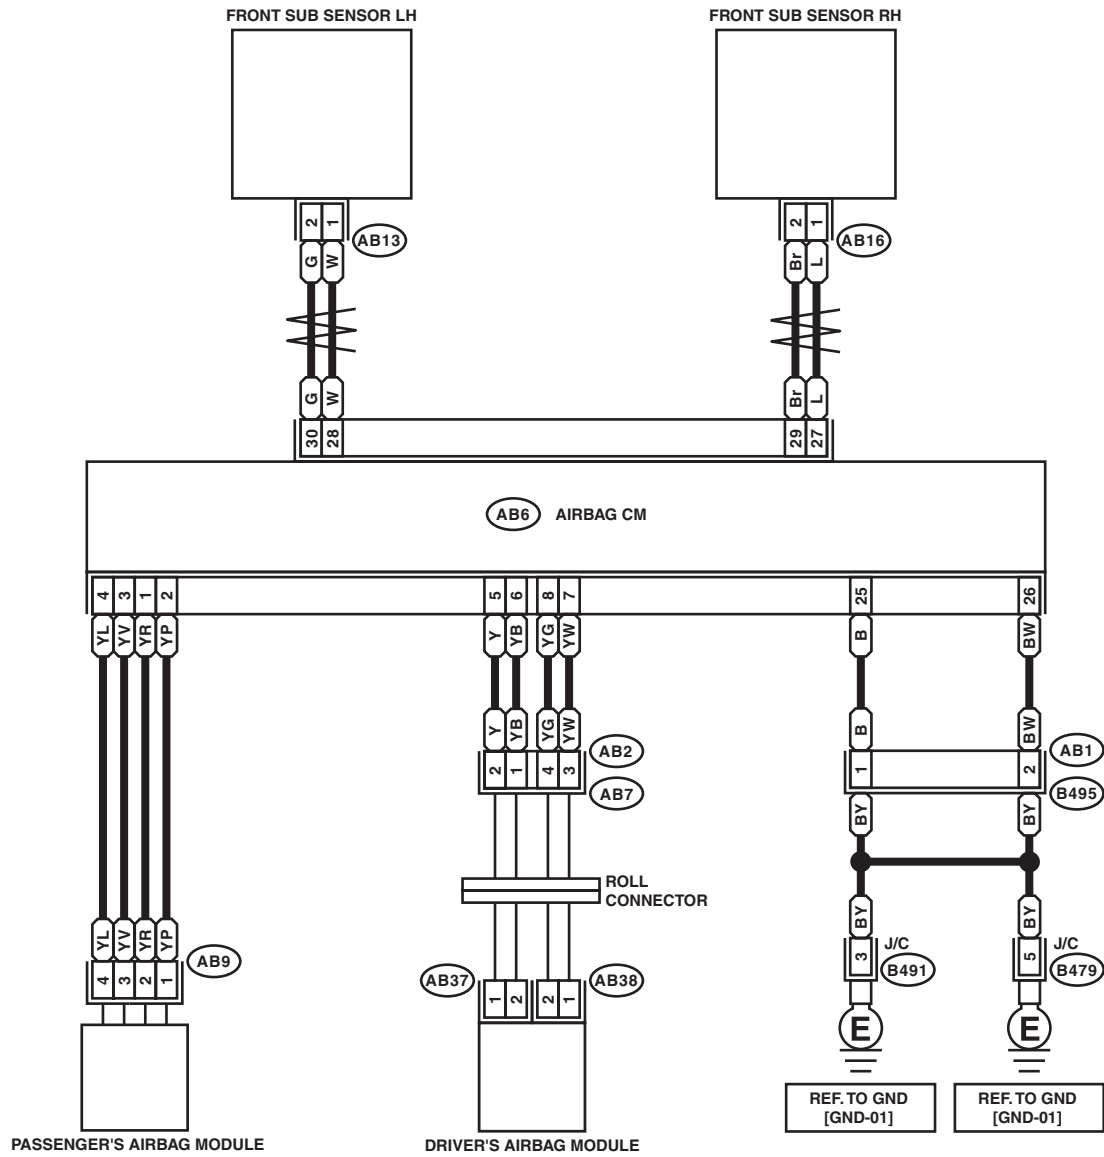


WI-25413

Airbag System

WIRING SYSTEM

A/B-03

A/B-03

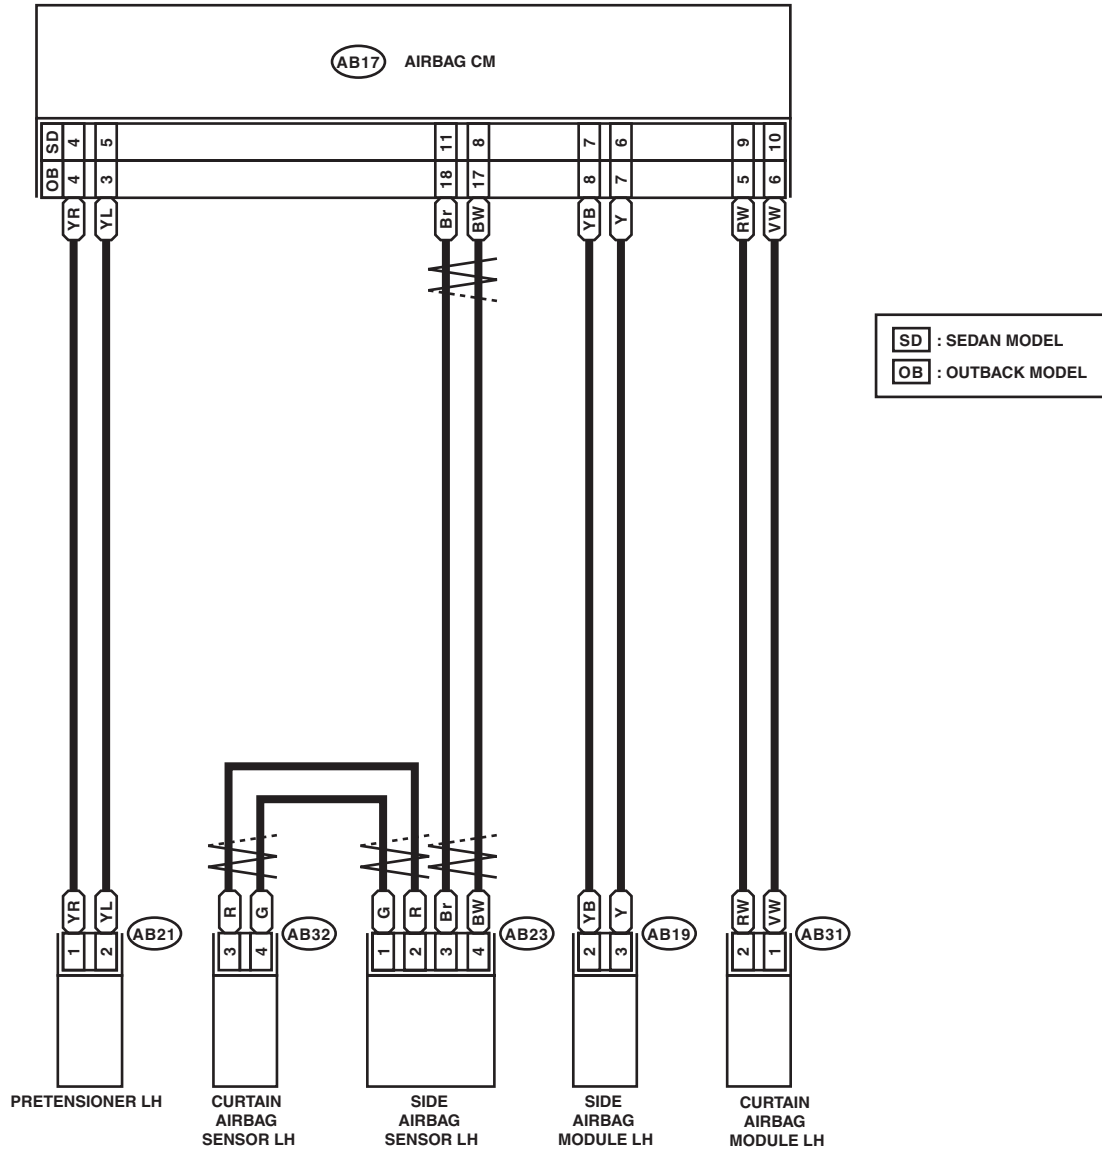


(AB21) (BLACK)

(AB31) (BLACK)




 (AB19) (YELLOW)




(AB23) (YELLOW)

 
(AB32) (YELLOW)



SD : (AB17) (YELLOW)

 


OB : (AB17) (YELLOW)

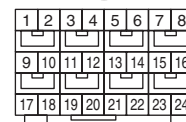

WI-25414

Airbag System

WIRING SYSTEM

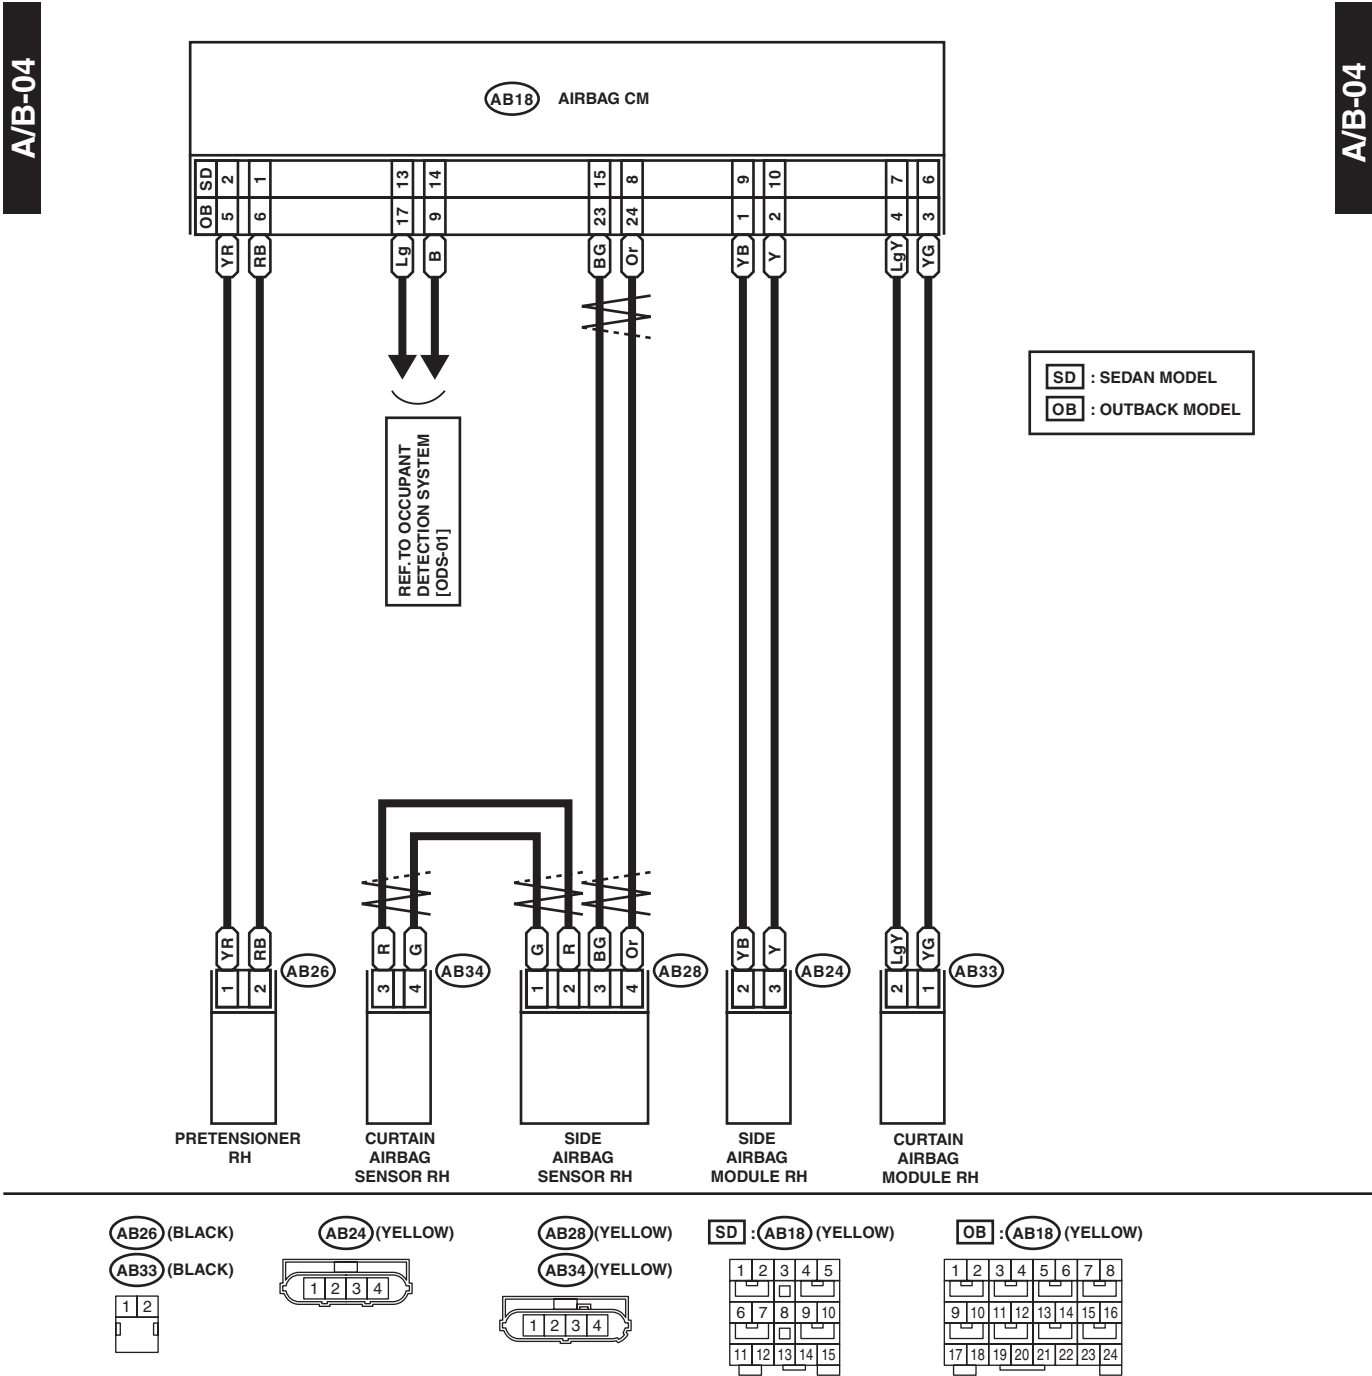

WI-25415



6. Air Conditioning System

A: WIRING DIAGRAM

1. MANUAL A/C


M-A/C-C-01

M-A/C-C-01

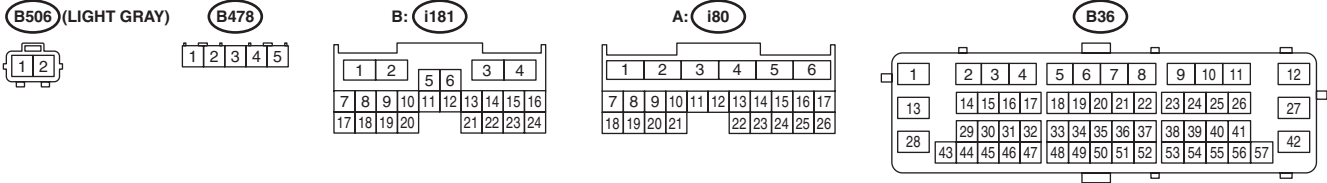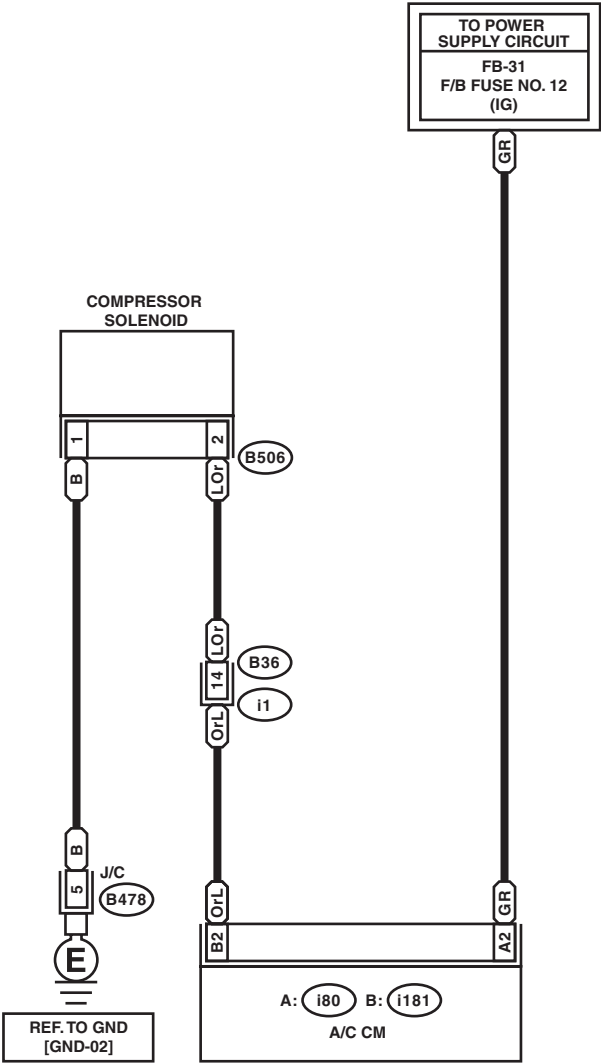

Air Conditioning System

WIRING SYSTEM

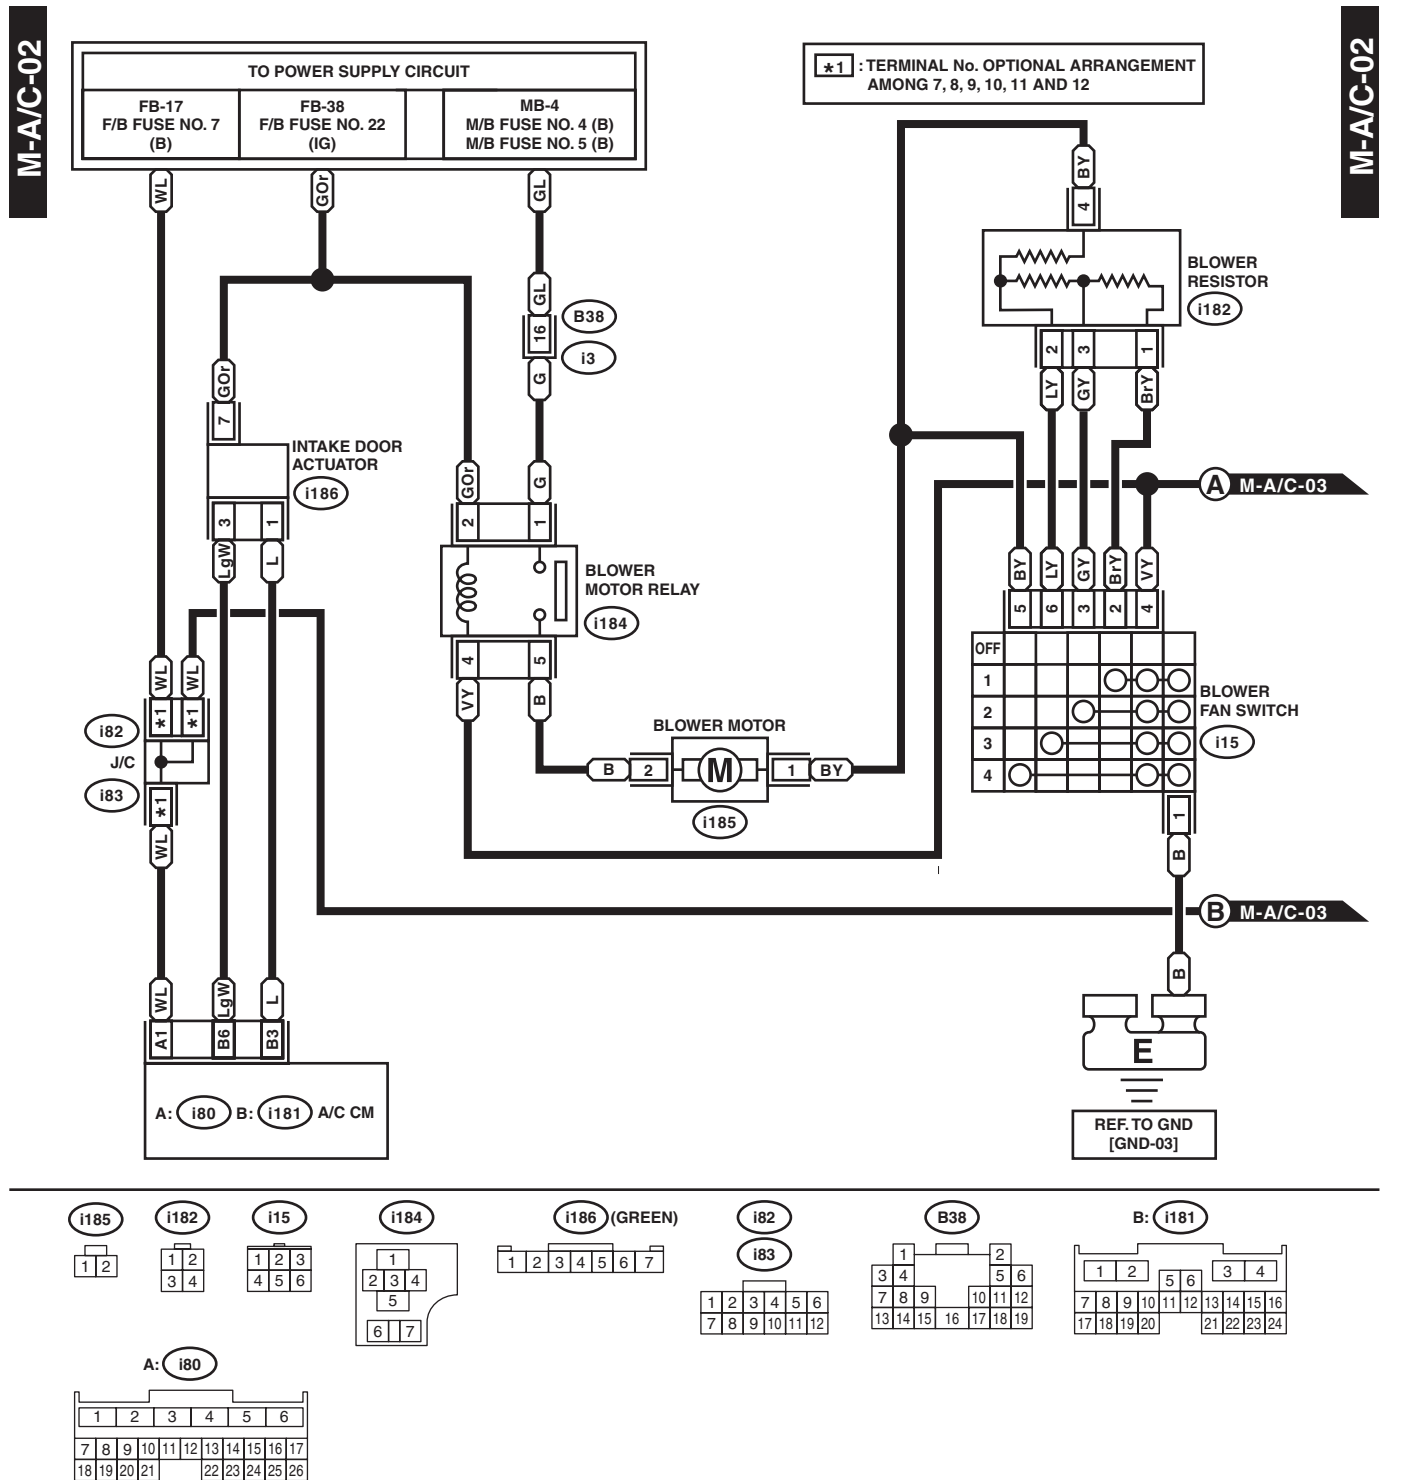


WI-25417

Air Conditioning System

WIRING SYSTEM

M-A/C-03

M-A/C-03

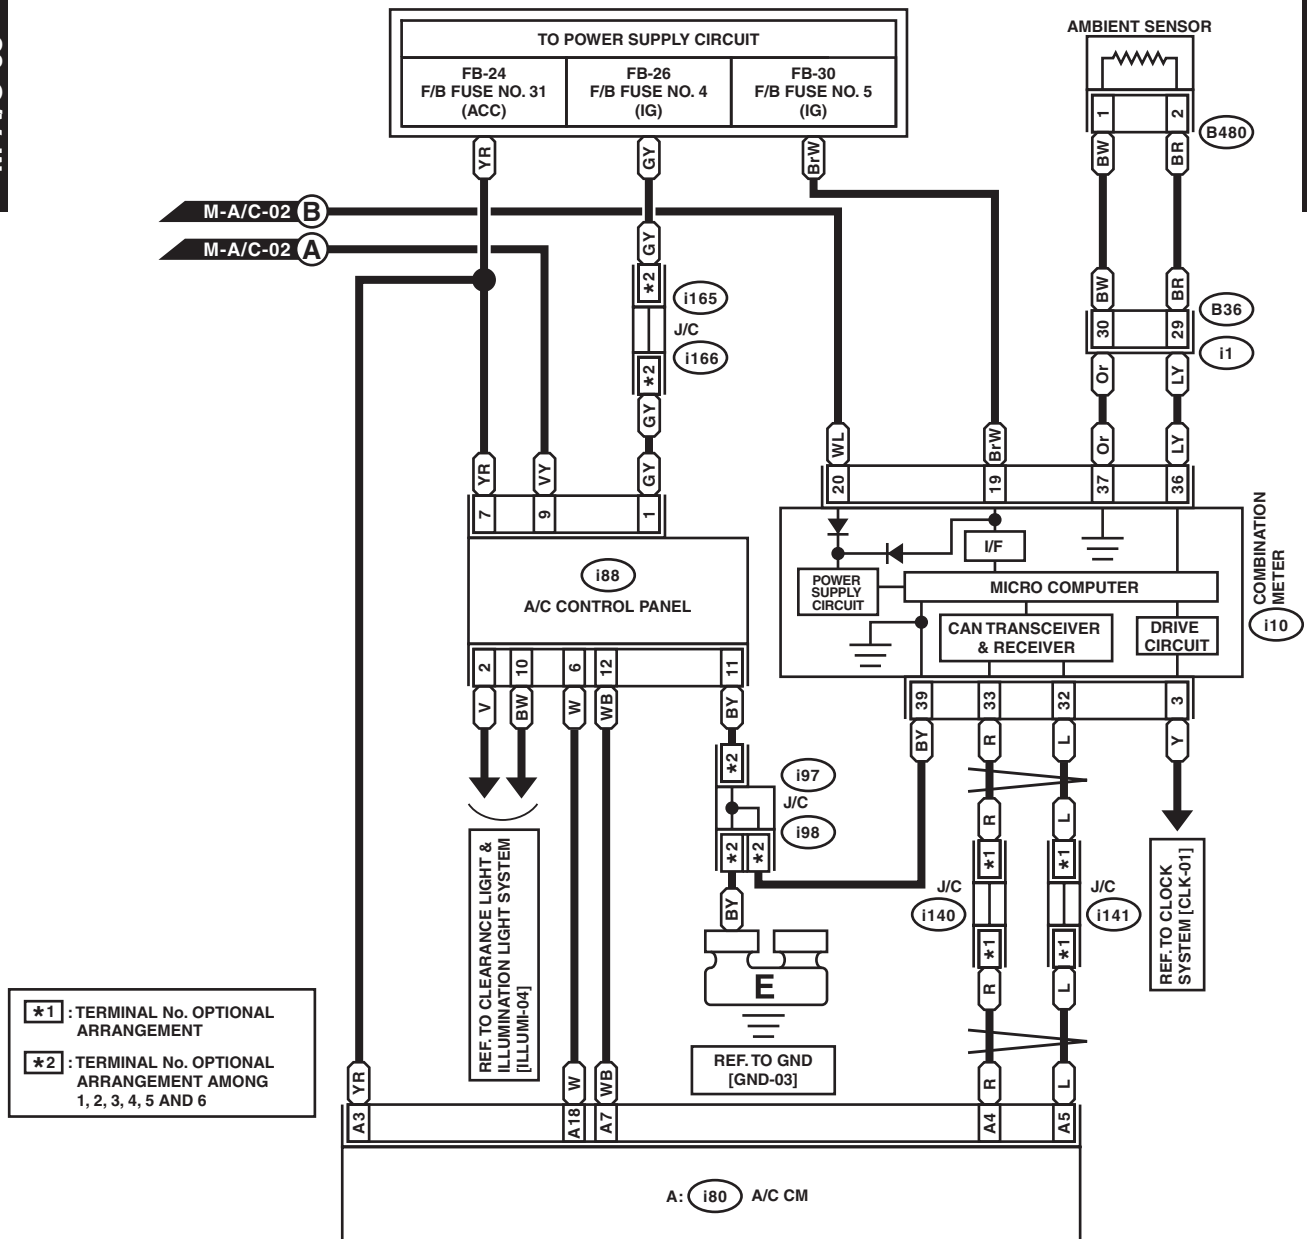

B480 (BLACK)



i140

 
i141




i88 i165

i97 i166


i98




A: i80

 

i10

 

B36

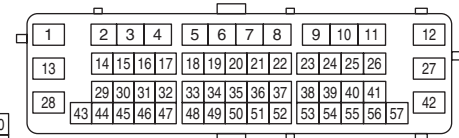



WI-25418

Air Conditioning System

WIRING SYSTEM

M-A/C-04

M-A/C-04

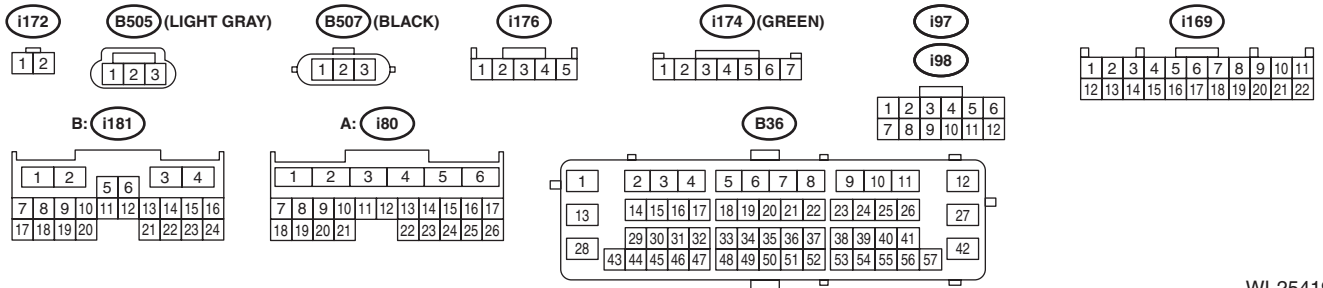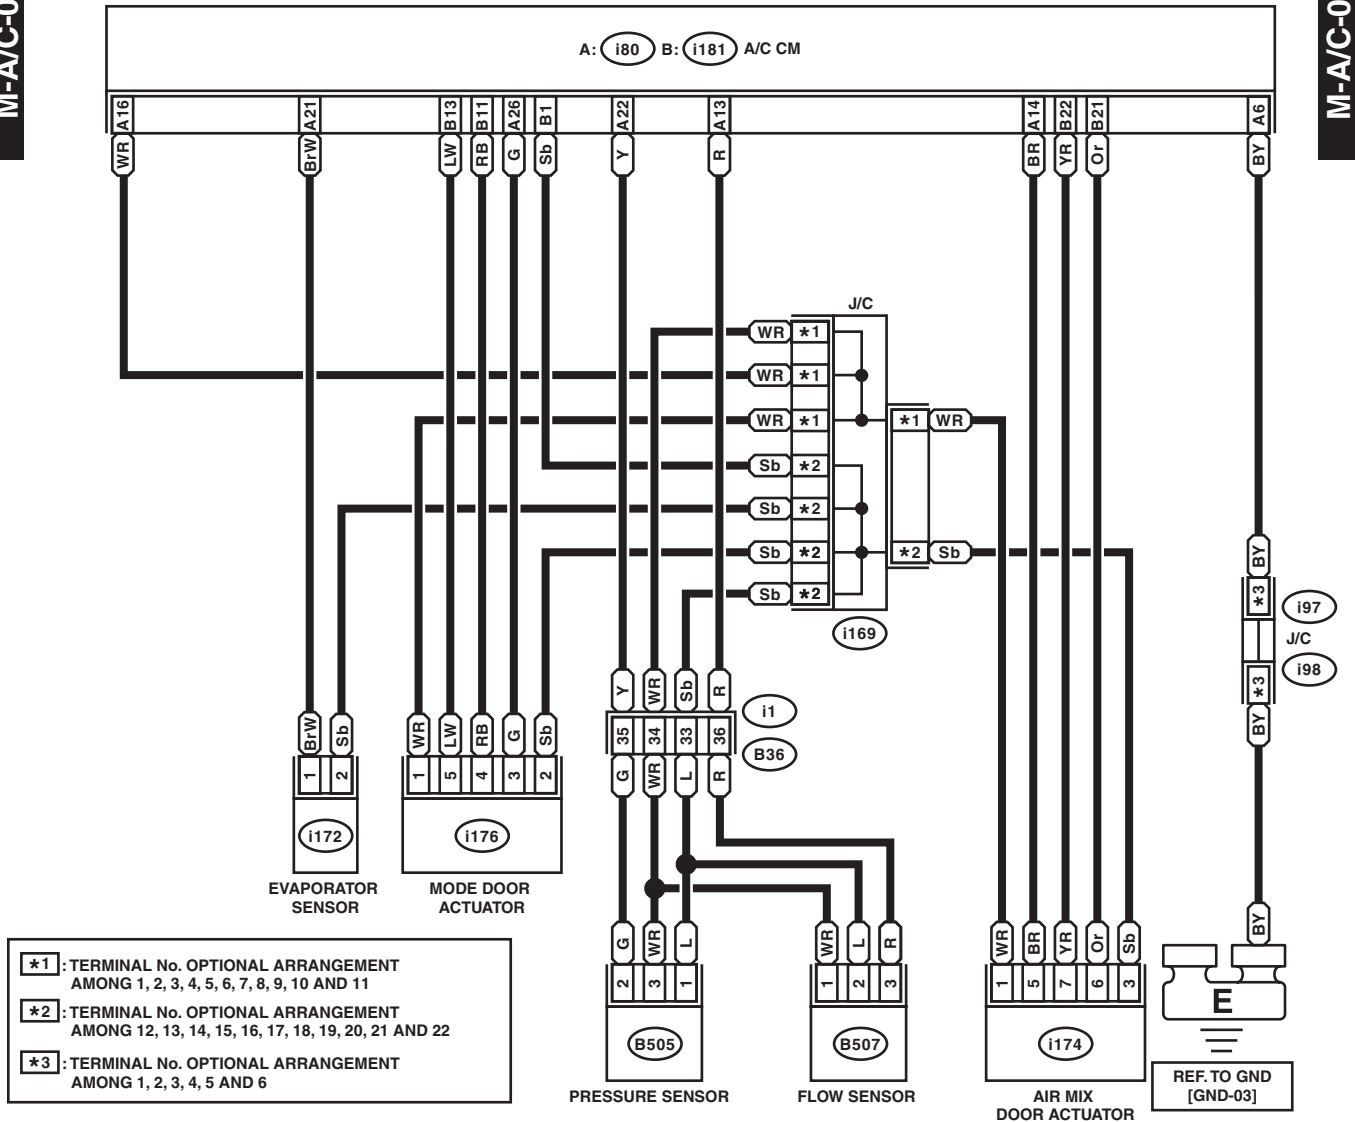


WI-25419

2. AUTO A/C

A-A/C-01


A-A/C-01

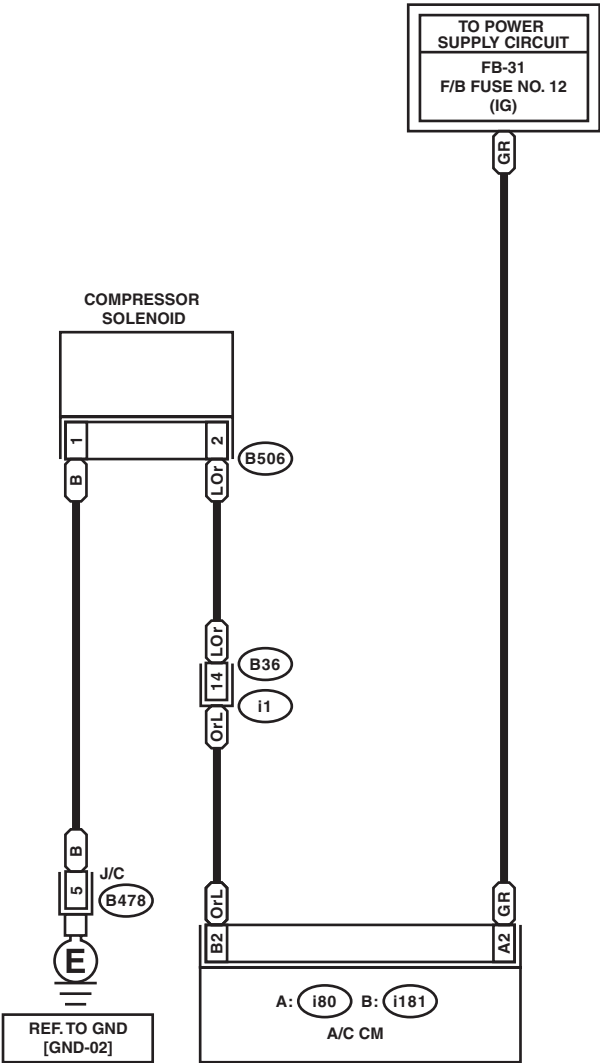


B506 (LIGHT GRAY)



 
B478




B: i181

 

A: i80

 

B36

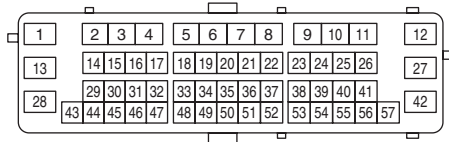



WI-25421

Air Conditioning System

WIRING SYSTEM

A-A/C-02

A-A/C-02

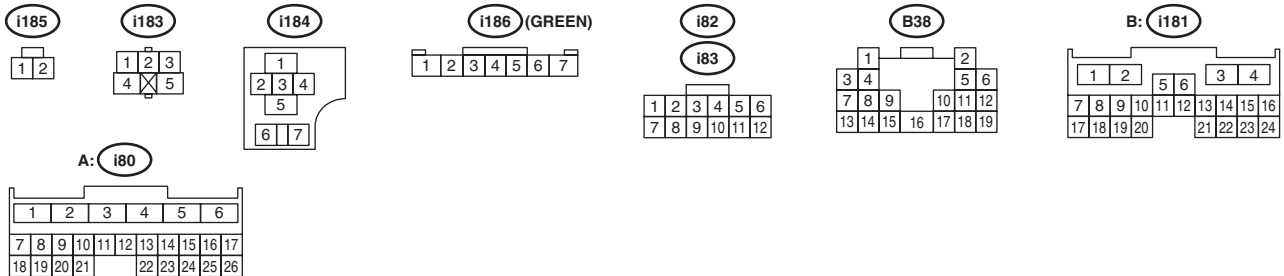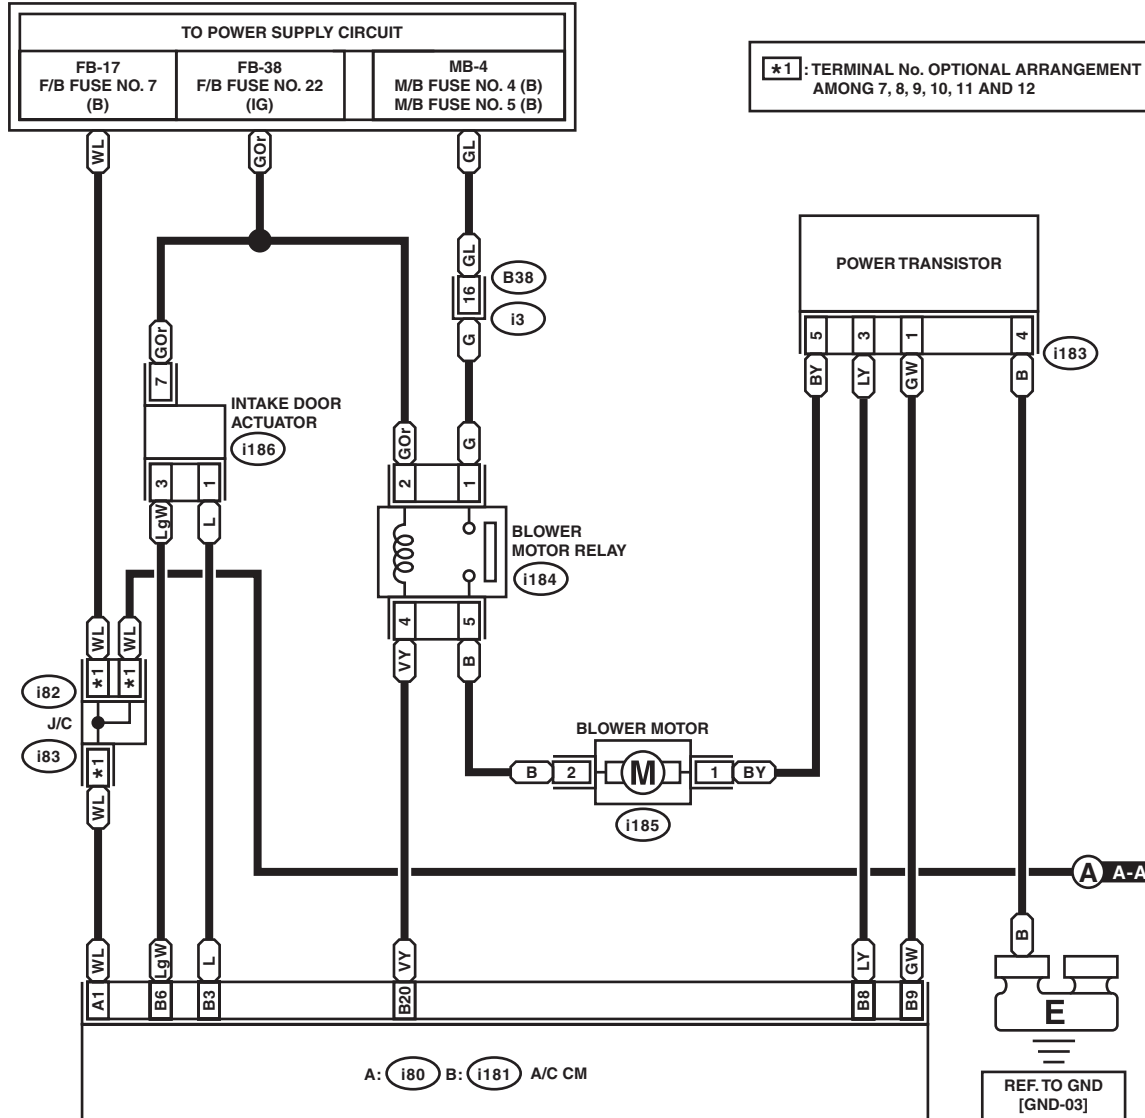


WI-25422

Air Conditioning System

WIRING SYSTEM

A-A/C-03

A-A/C-03

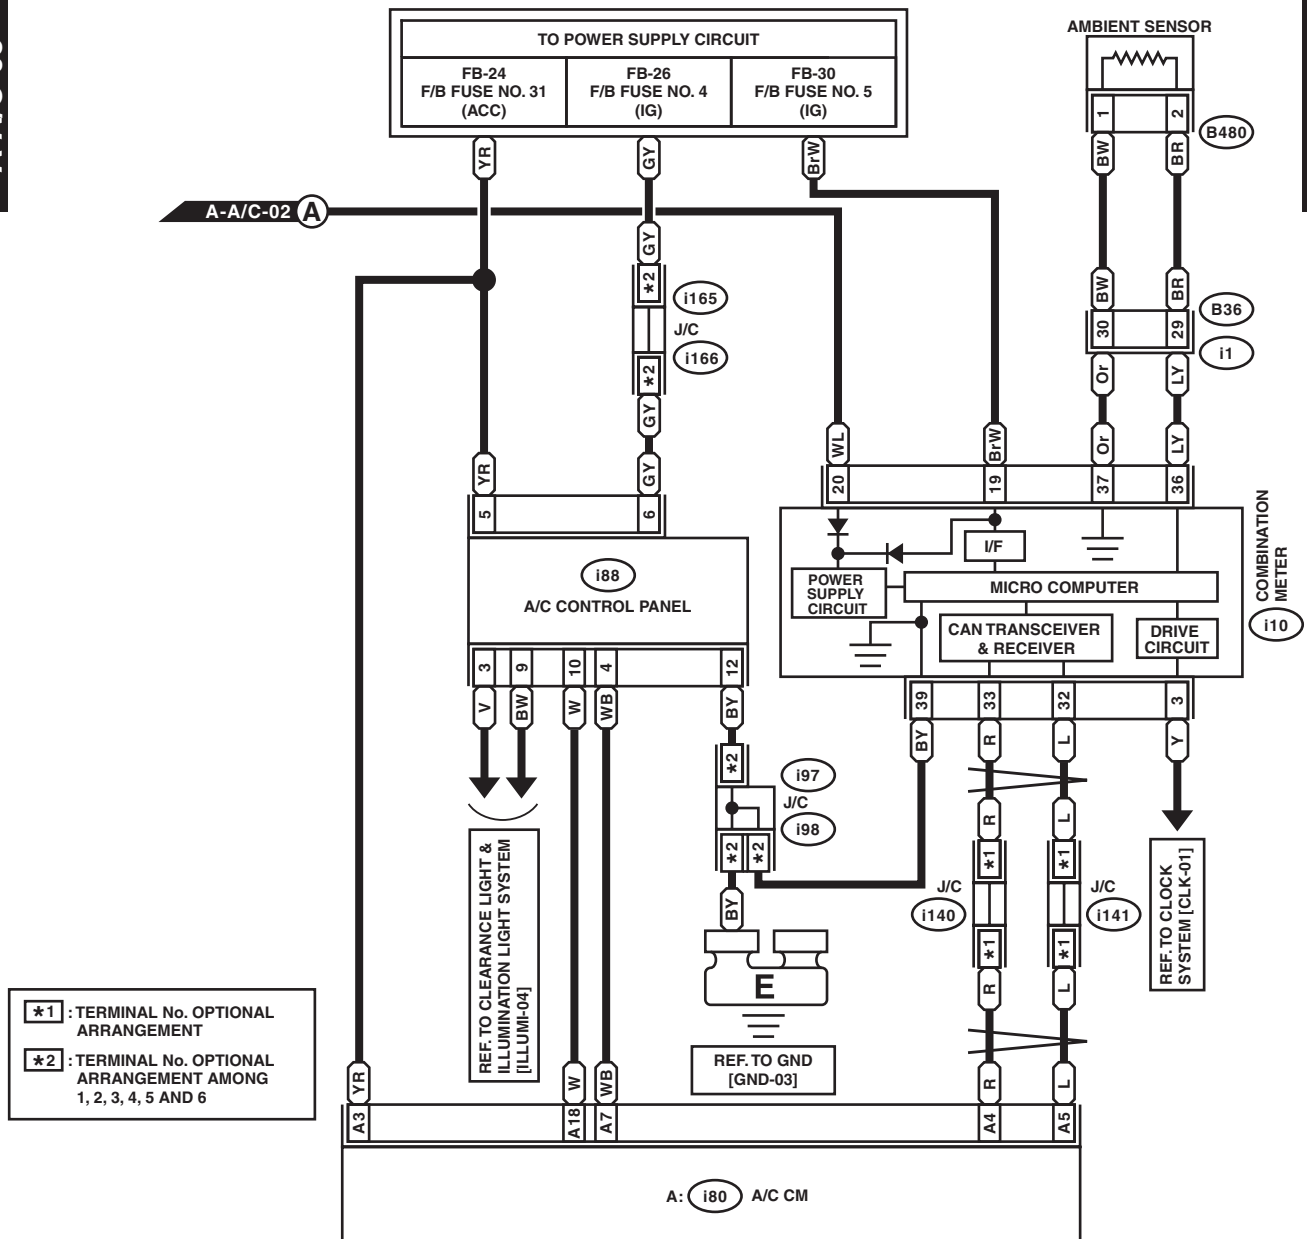

B480 (BLACK)



i140

 
i141




i88 i165

i97 i166


i98




A: i80

 

i10

 


B36

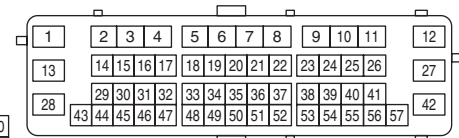

WI-25423

Air Conditioning System


WIRING SYSTEM

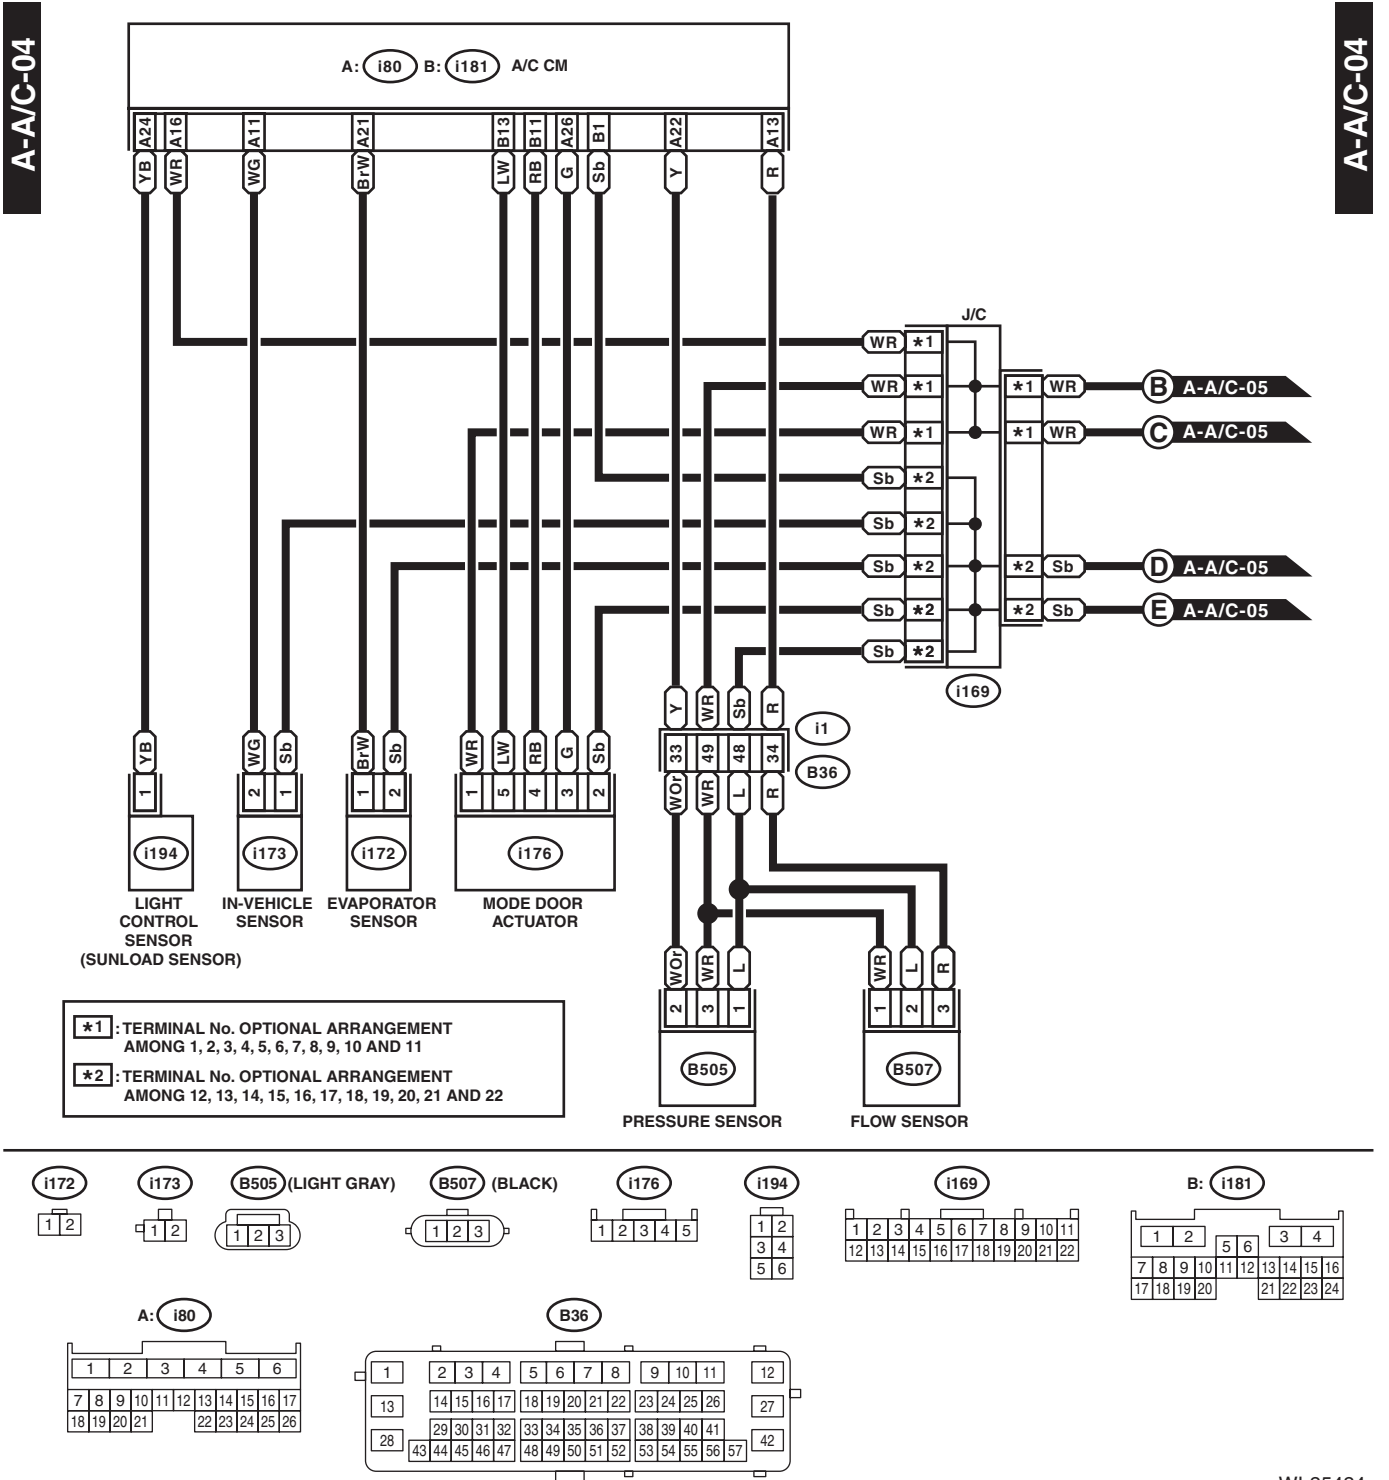

WI-25424

WIRING SYSTEM

A-A/C-05

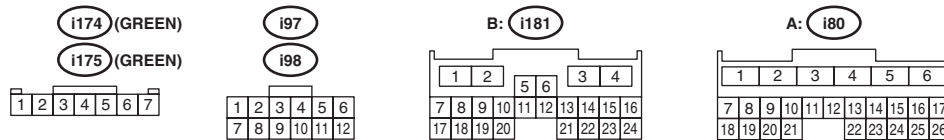
**WI-49**

AT Control System


WIRING SYSTEM

7. AT Control System

A: WIRING DIAGRAM

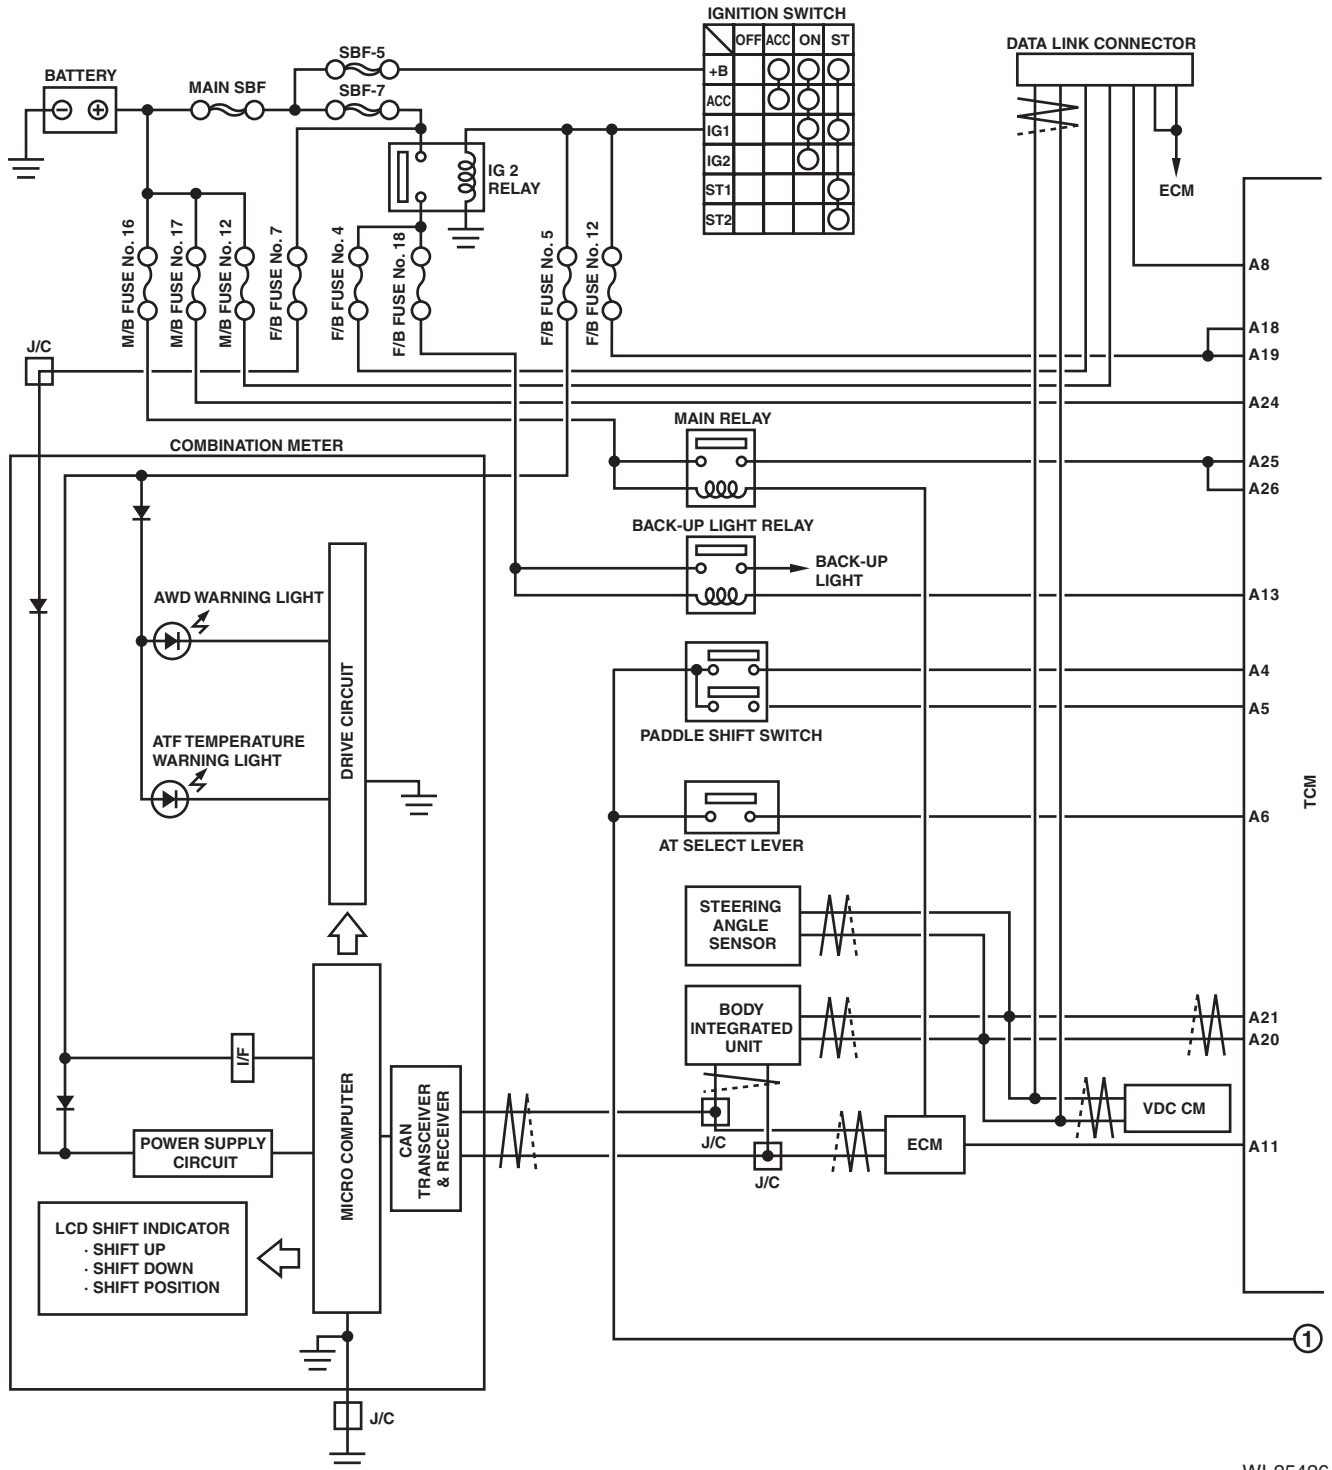


WI-25426

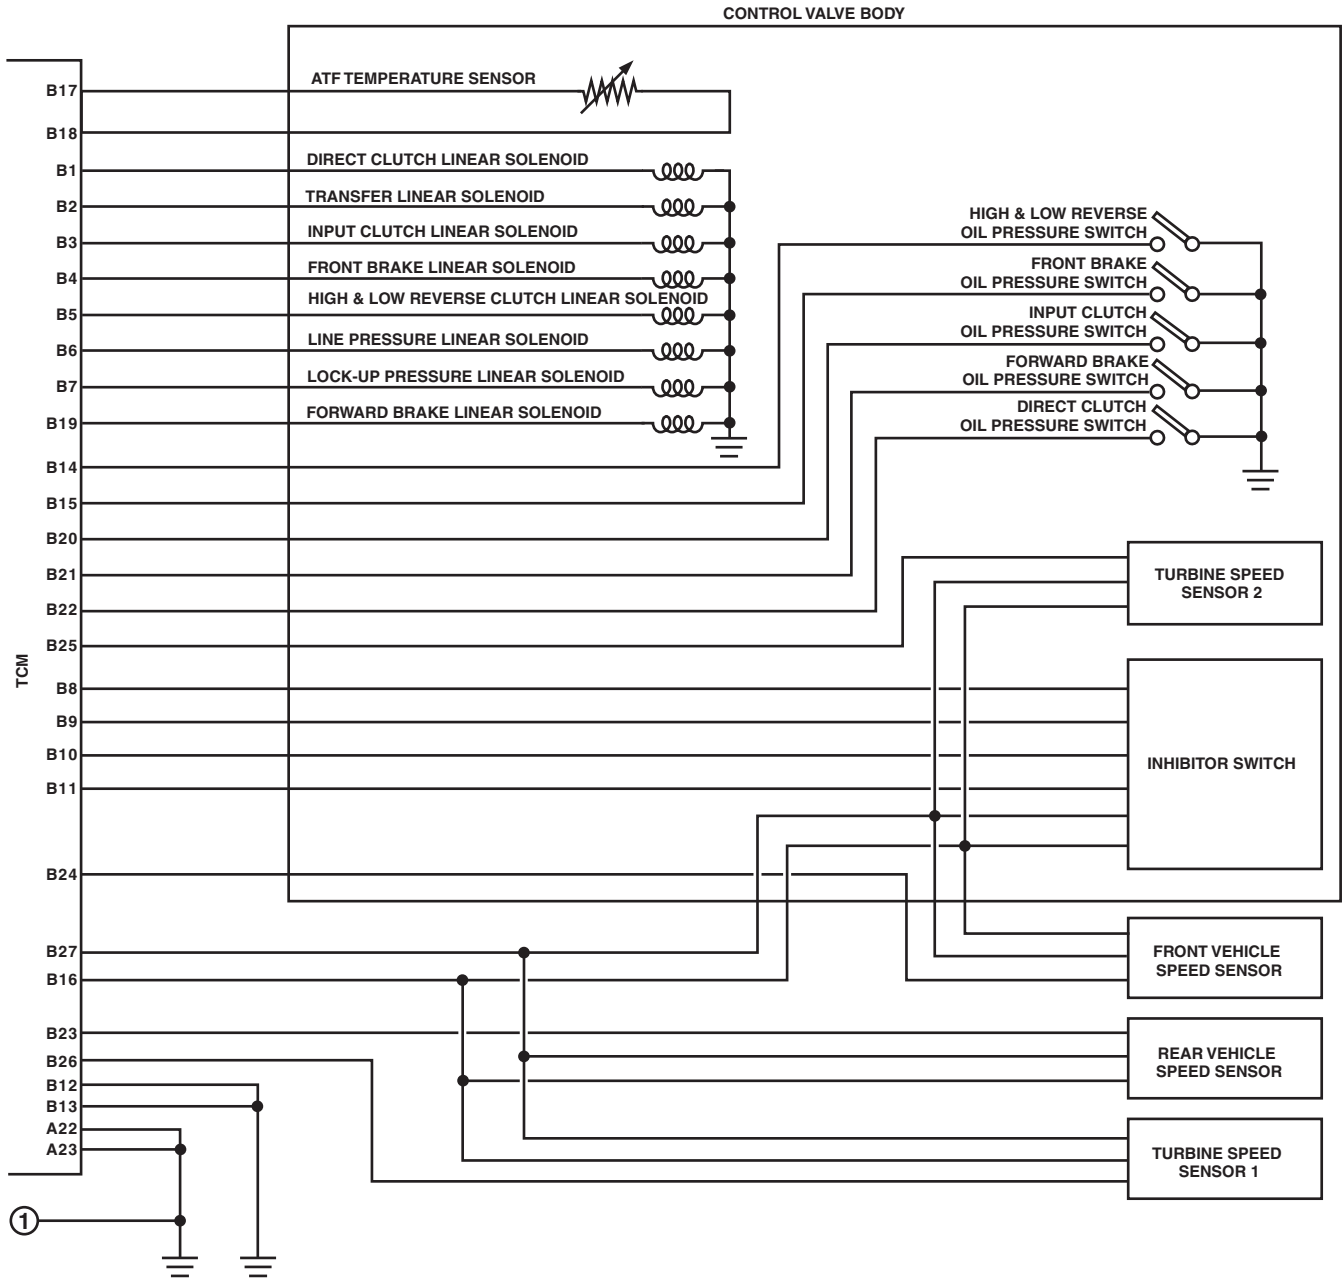

WI-25427

AT Control System


WIRING SYSTEM

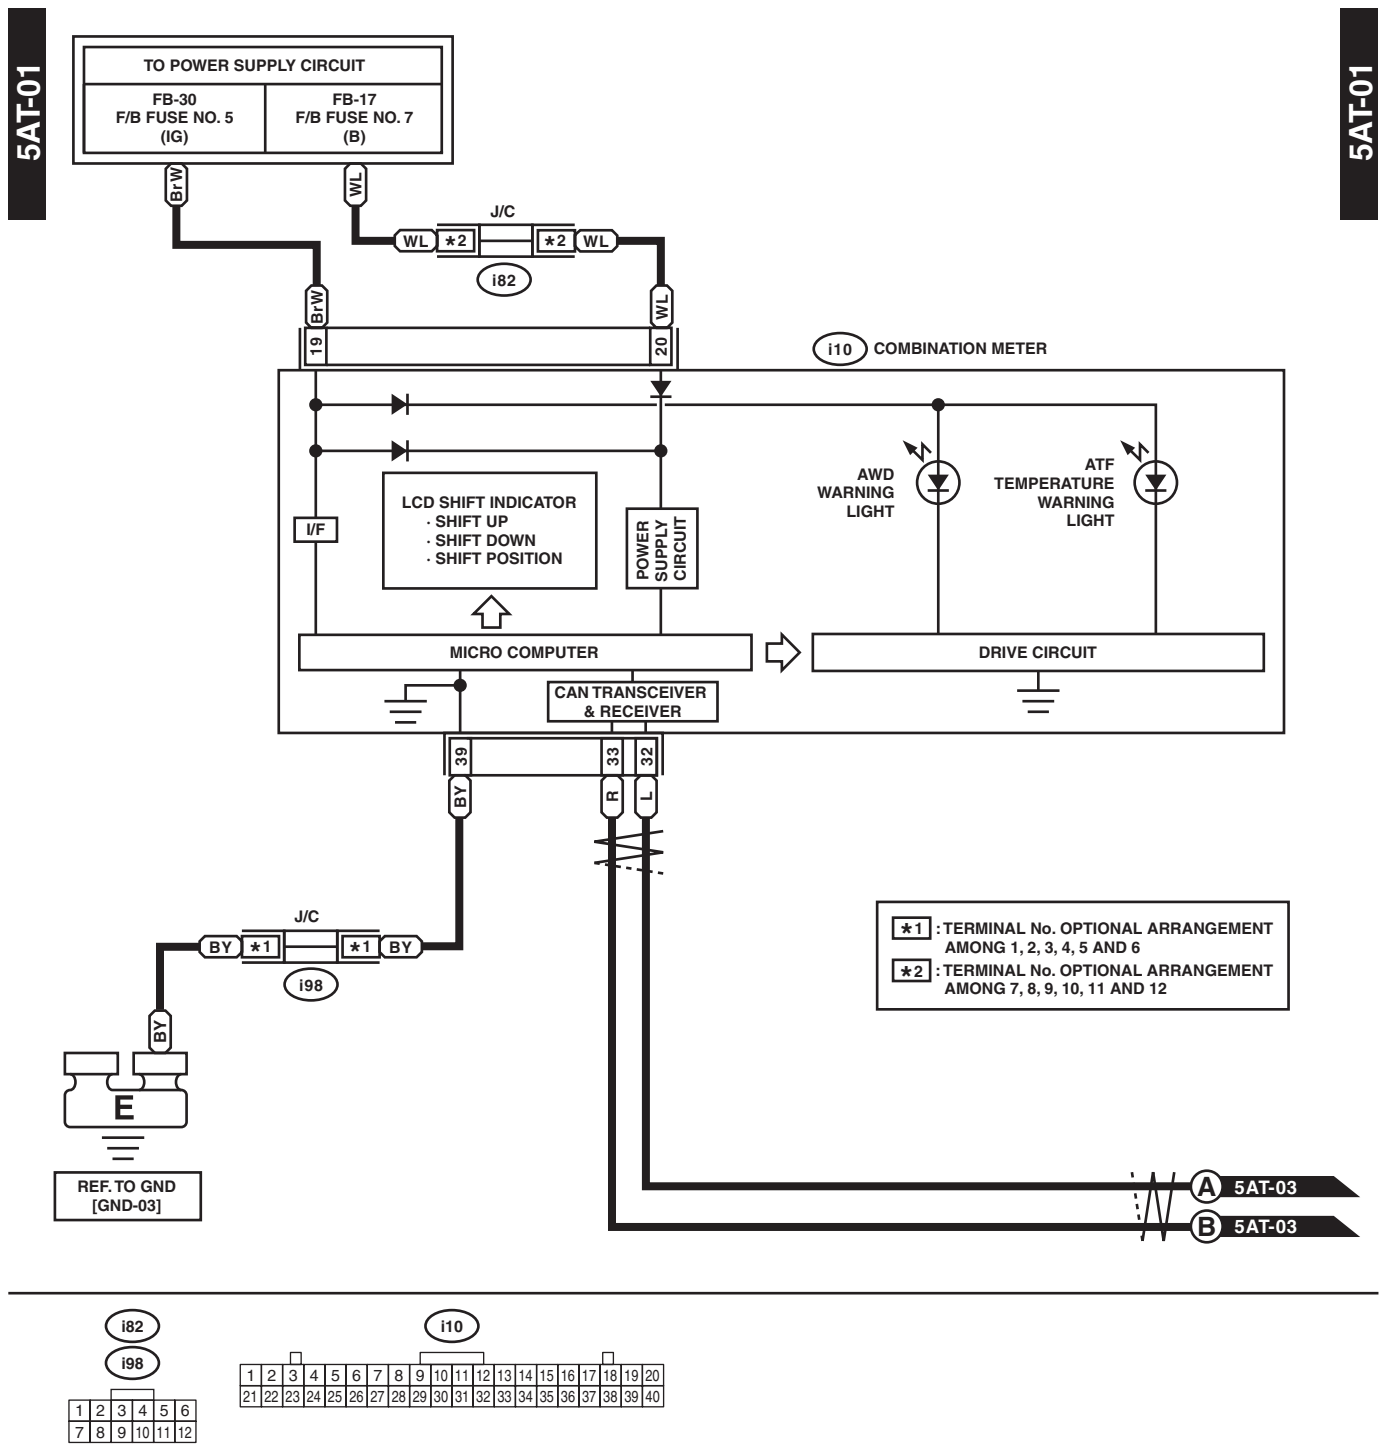

WI-25428

5AT-02

5AT-02

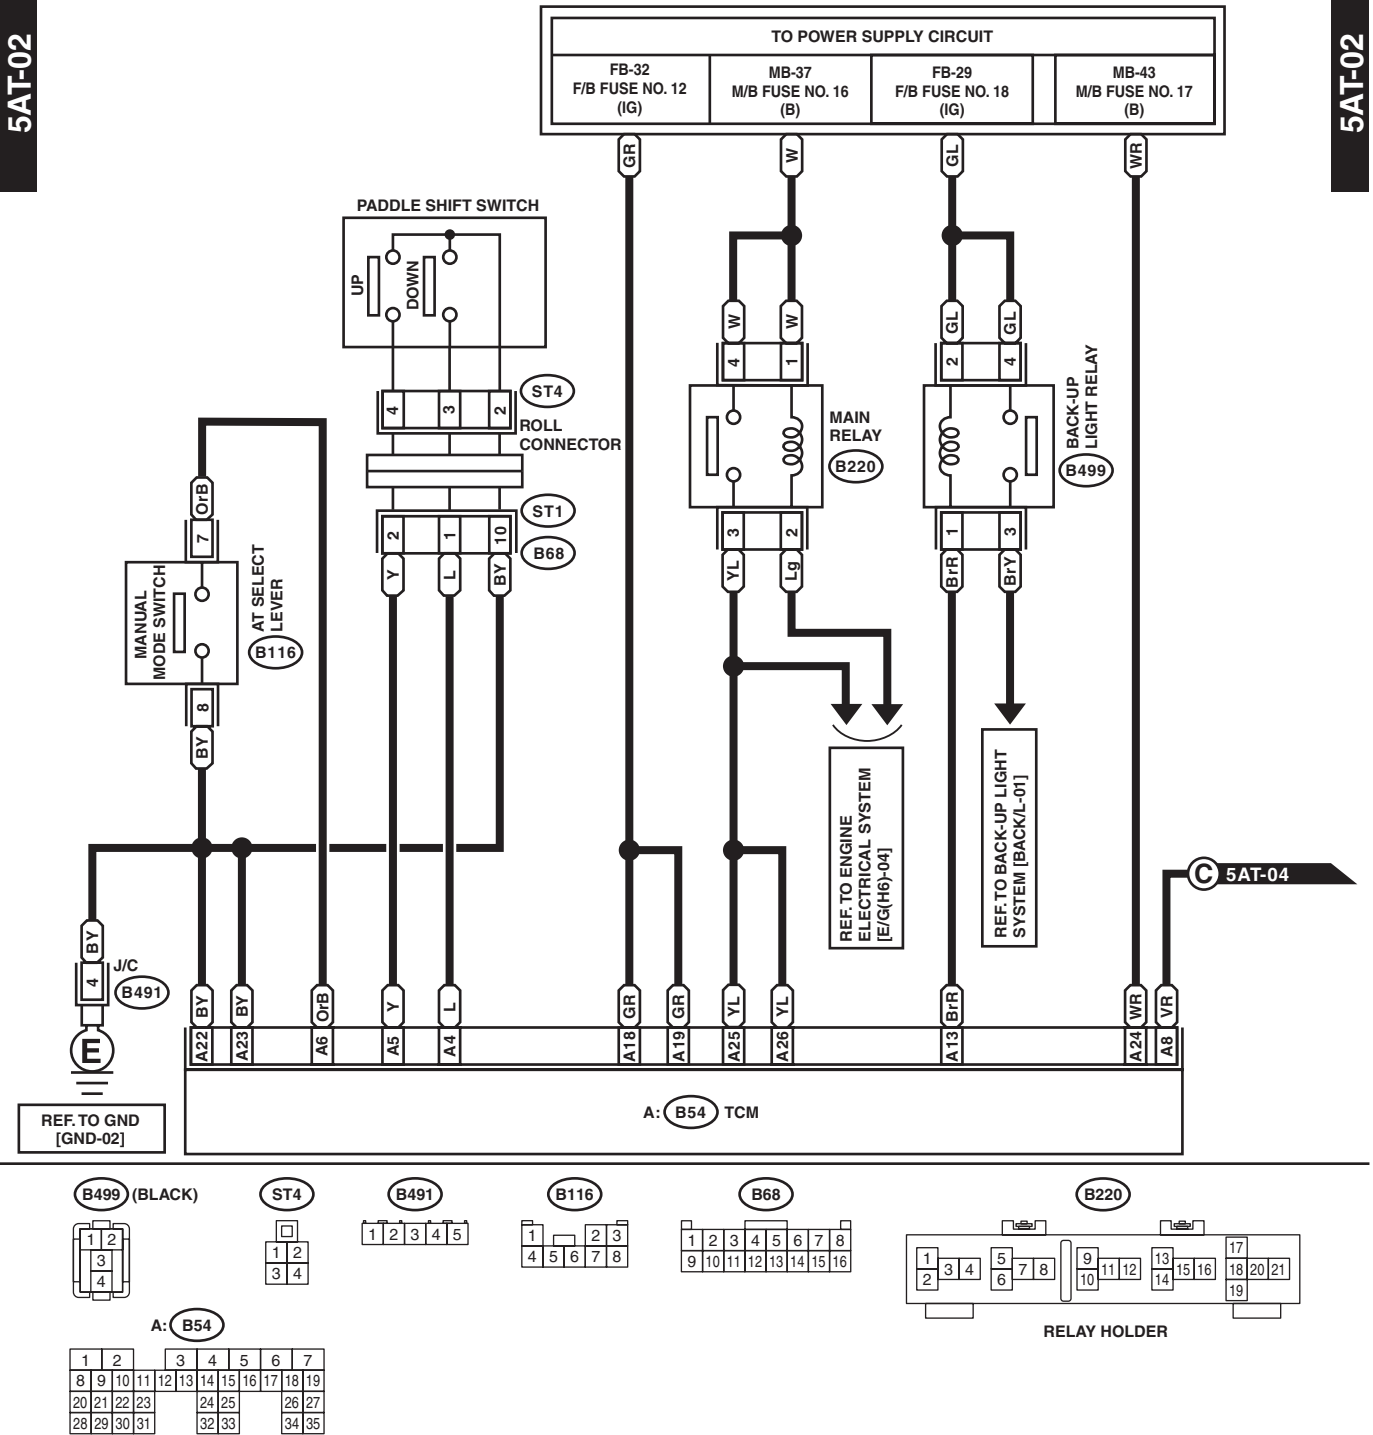







WI-25429

AT Control System


WIRING SYSTEM

5AT-03

  5AT-03

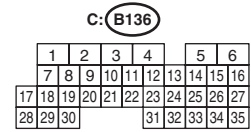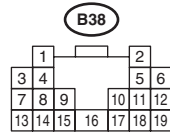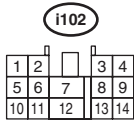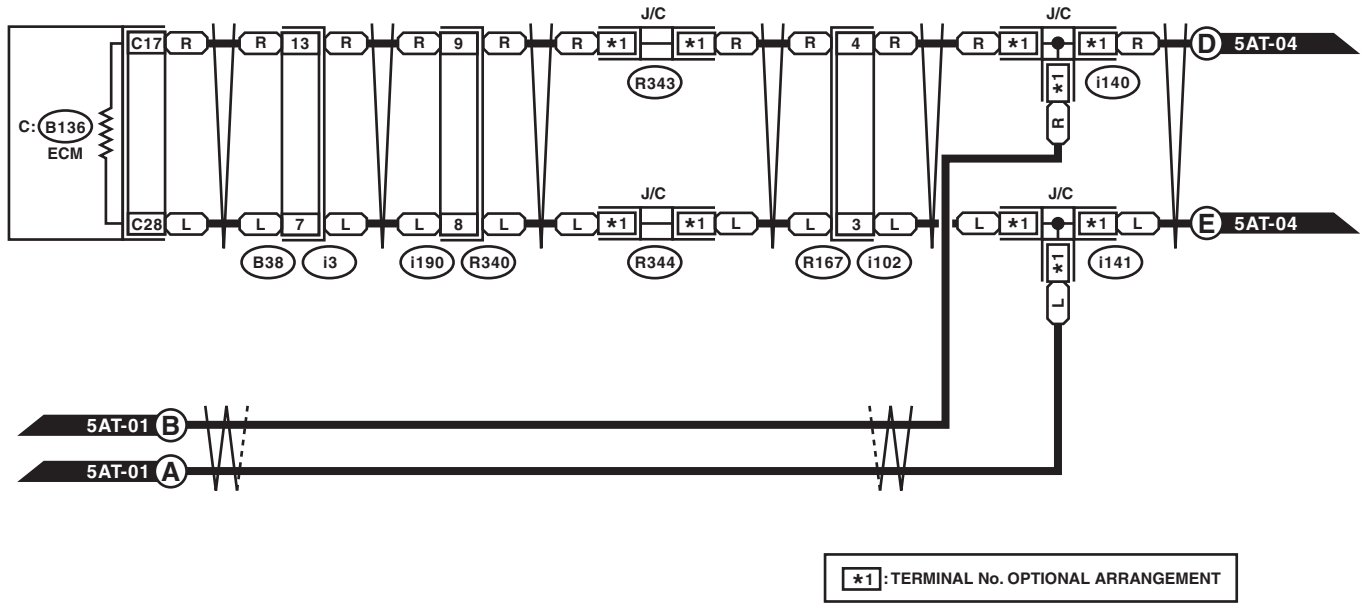


WI-25430

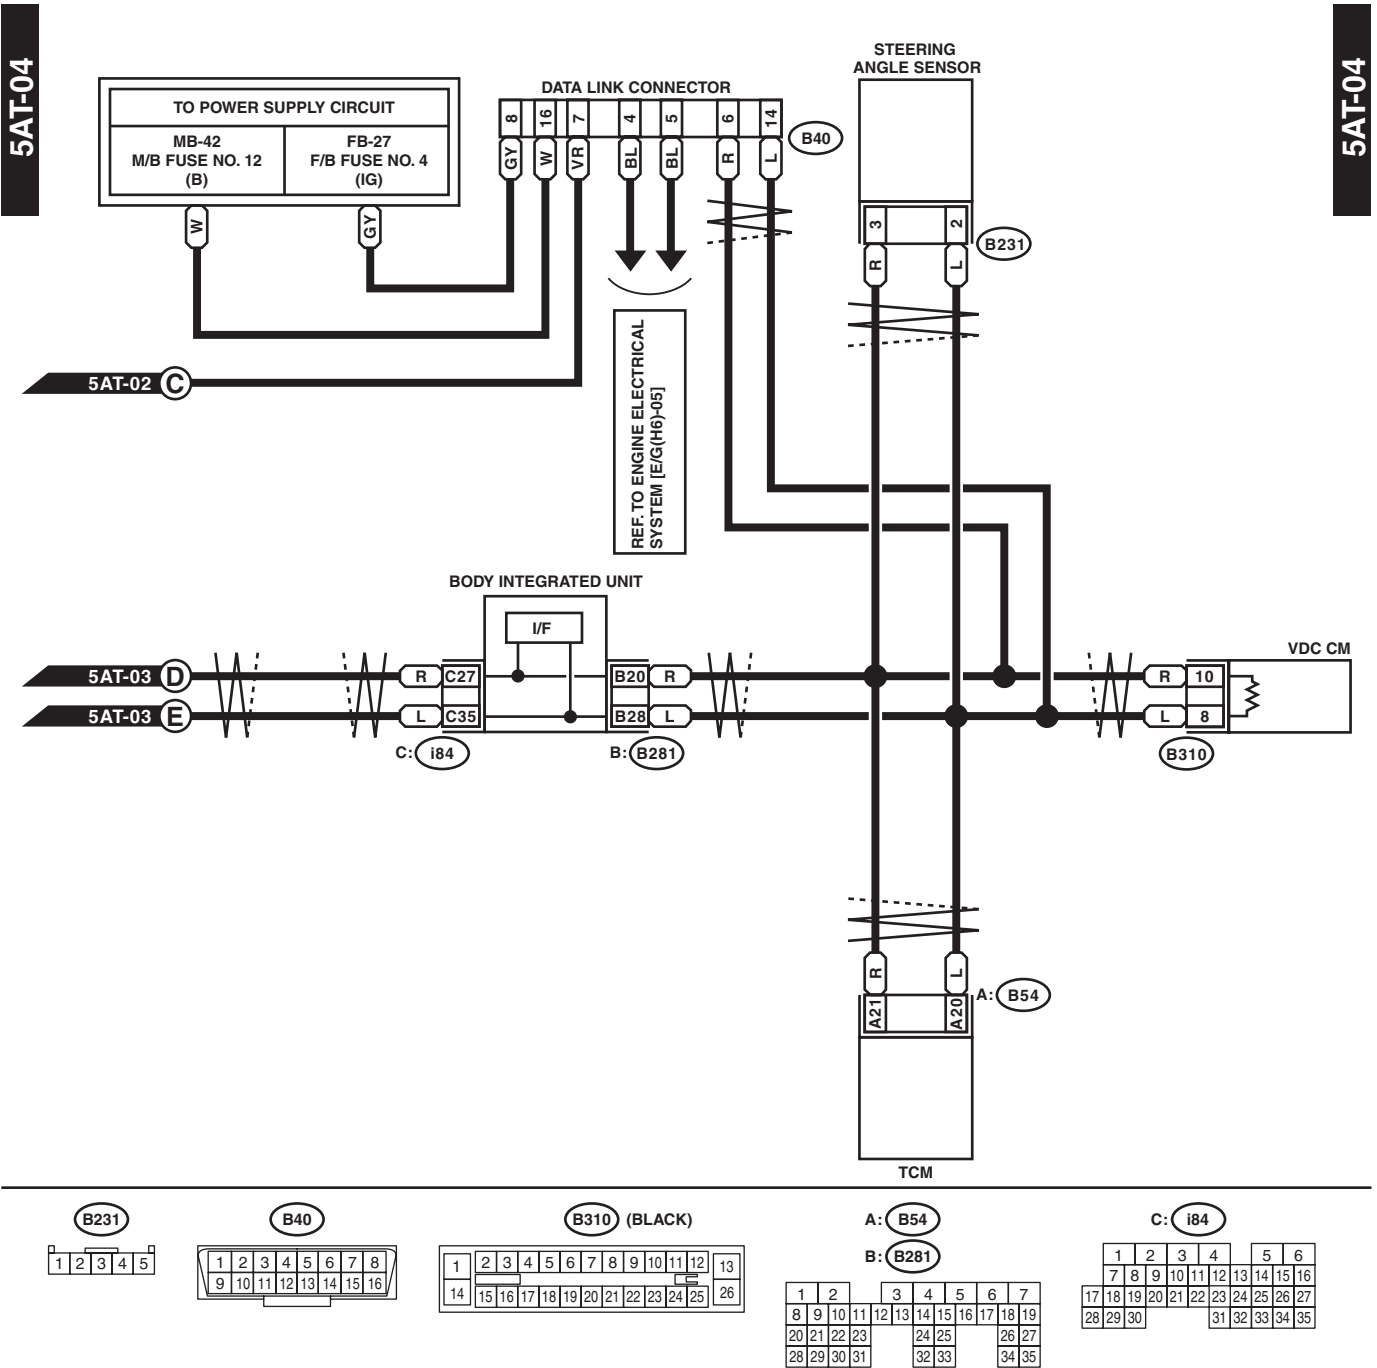

WI-25431


AT Control System

WIRING SYSTEM

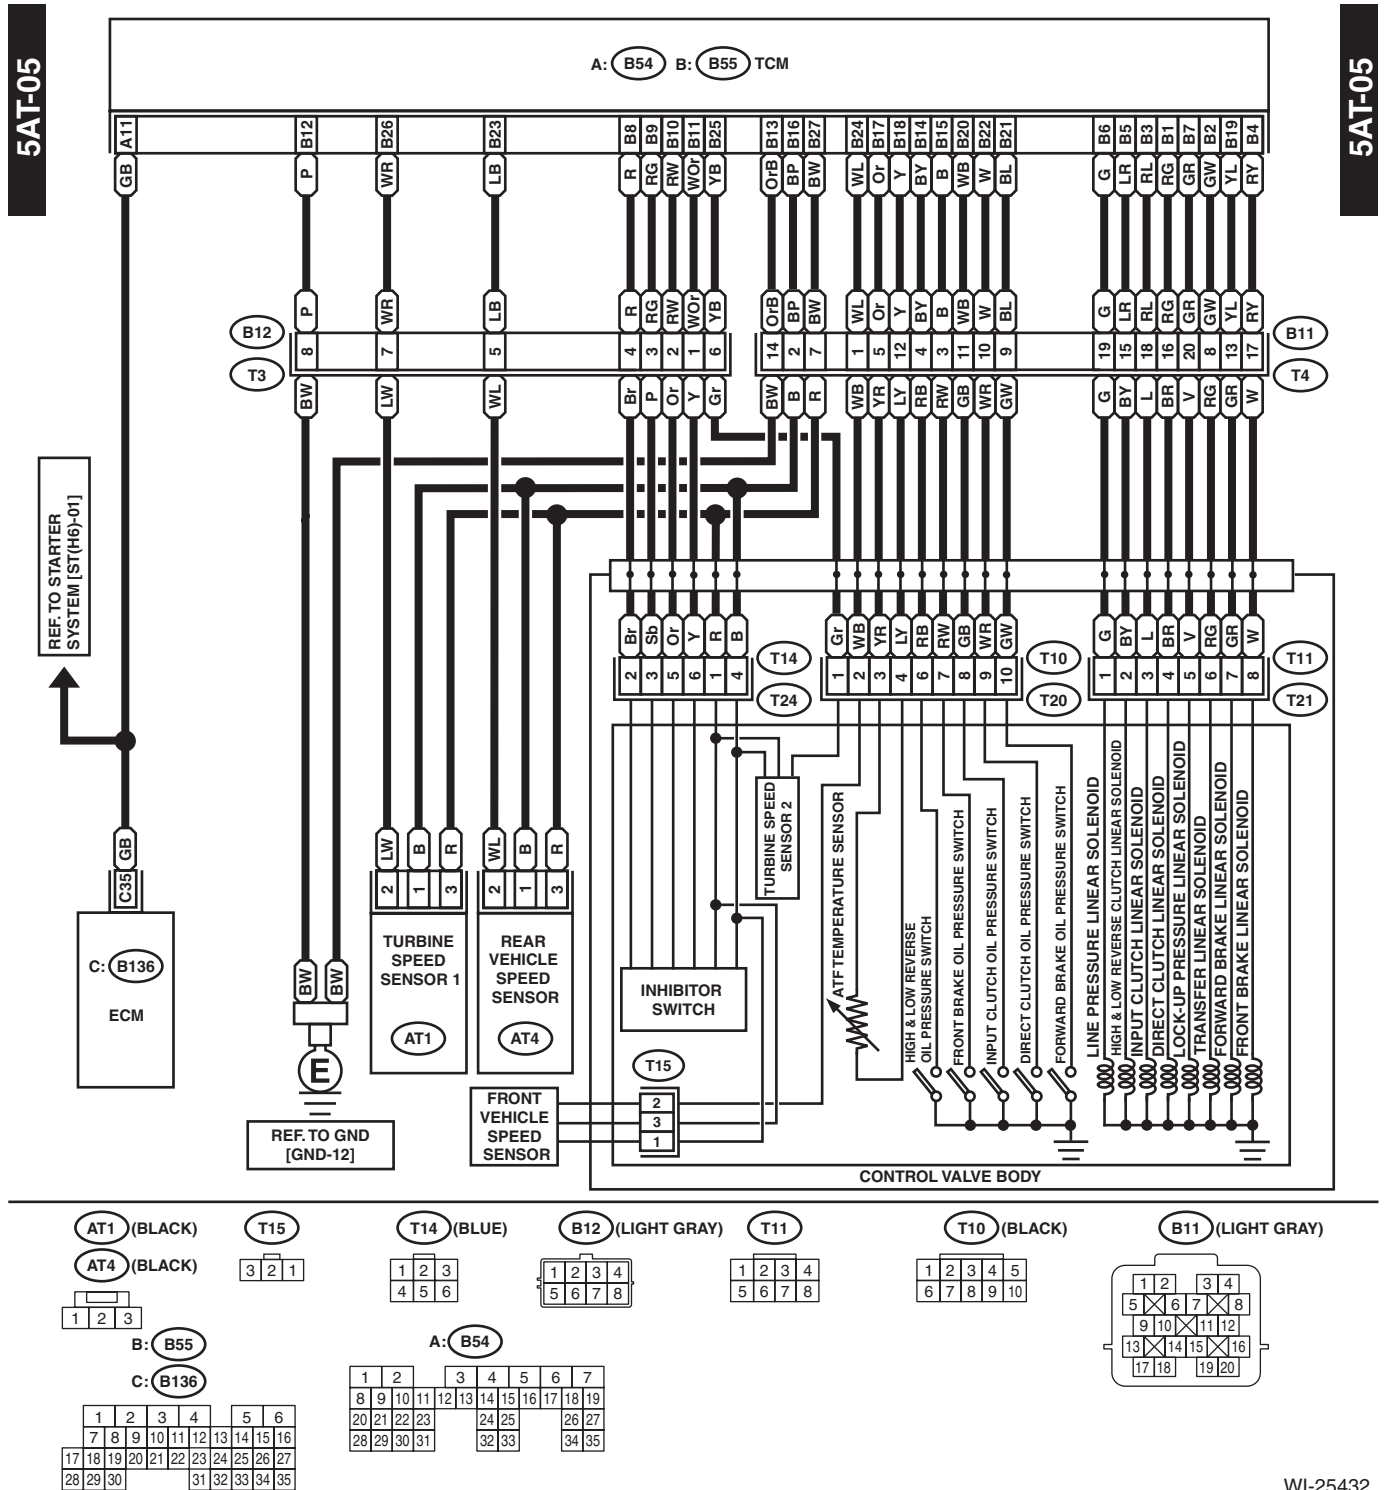

8. AT Shift Lock Control System

A: WIRING DIAGRAM

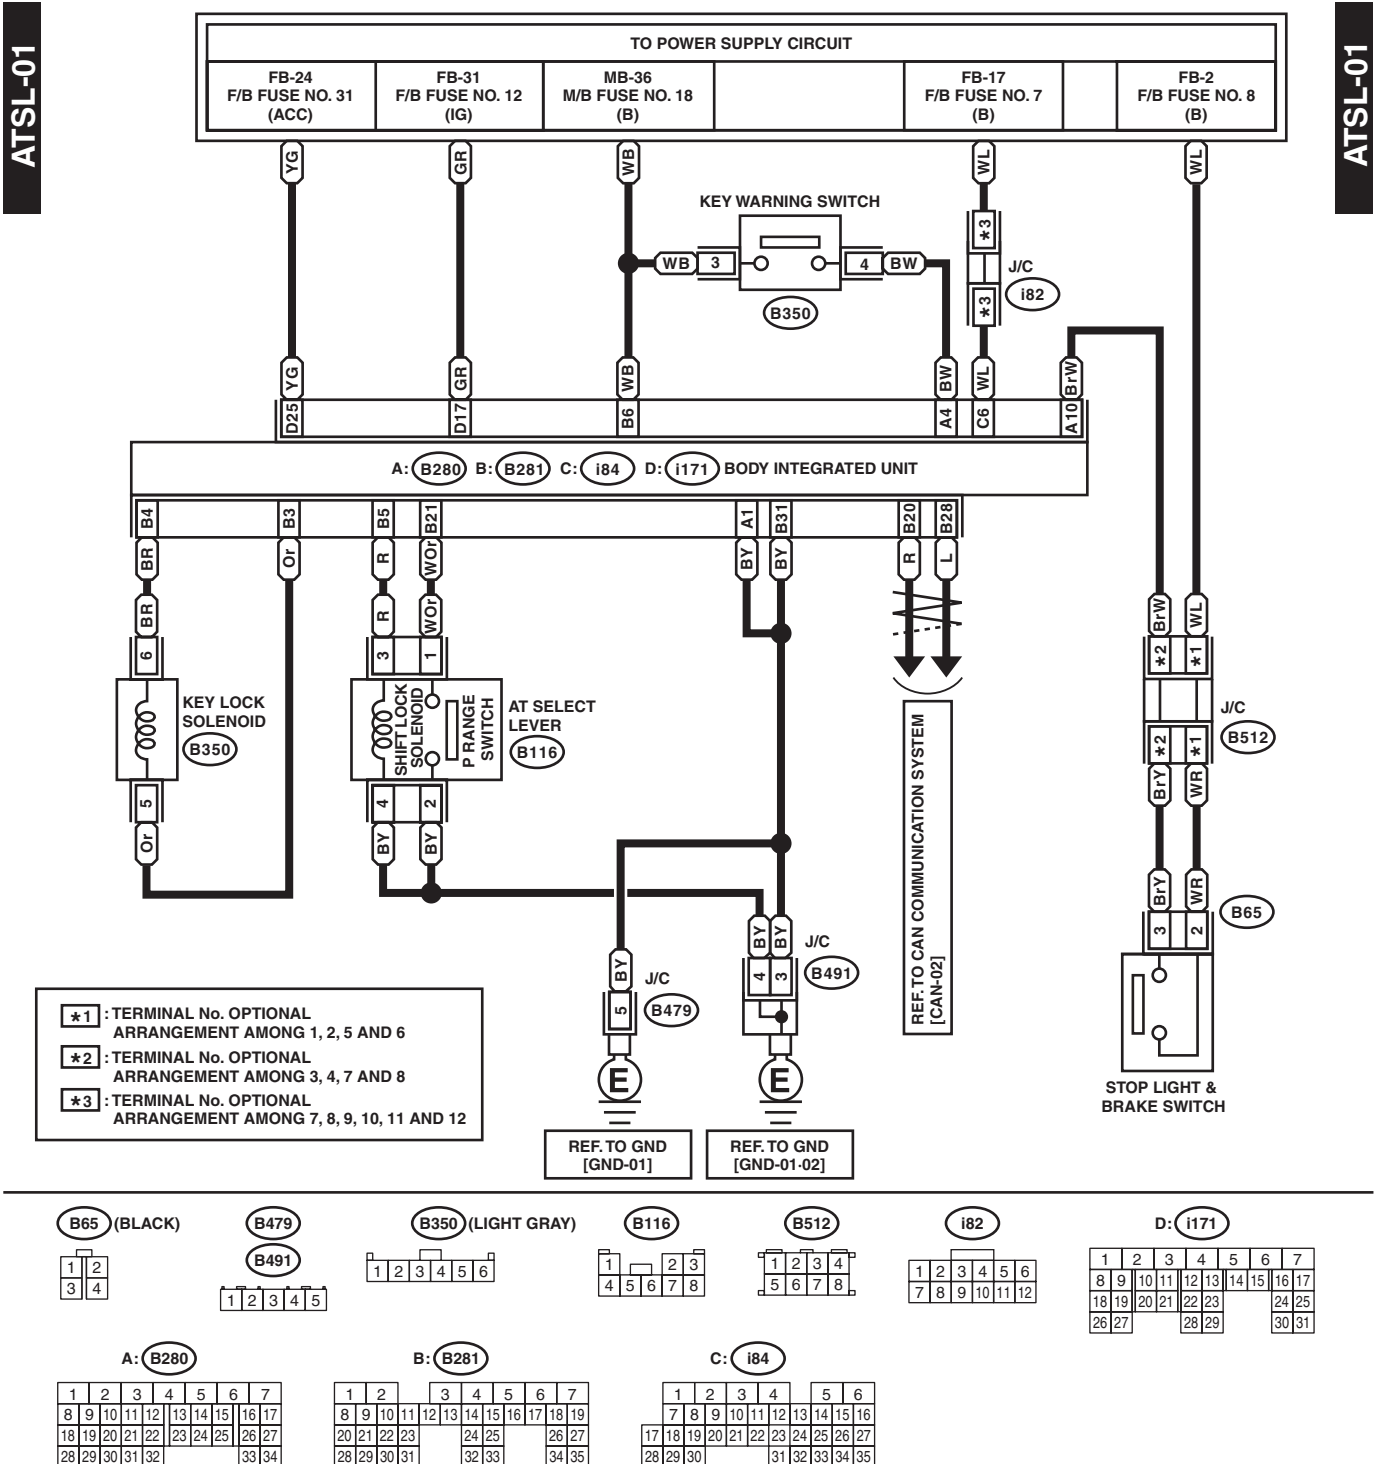

WI-25433


Audio System

WIRING SYSTEM

9. Audio System

A: WIRING DIAGRAM

1. NORMAL AUDIO


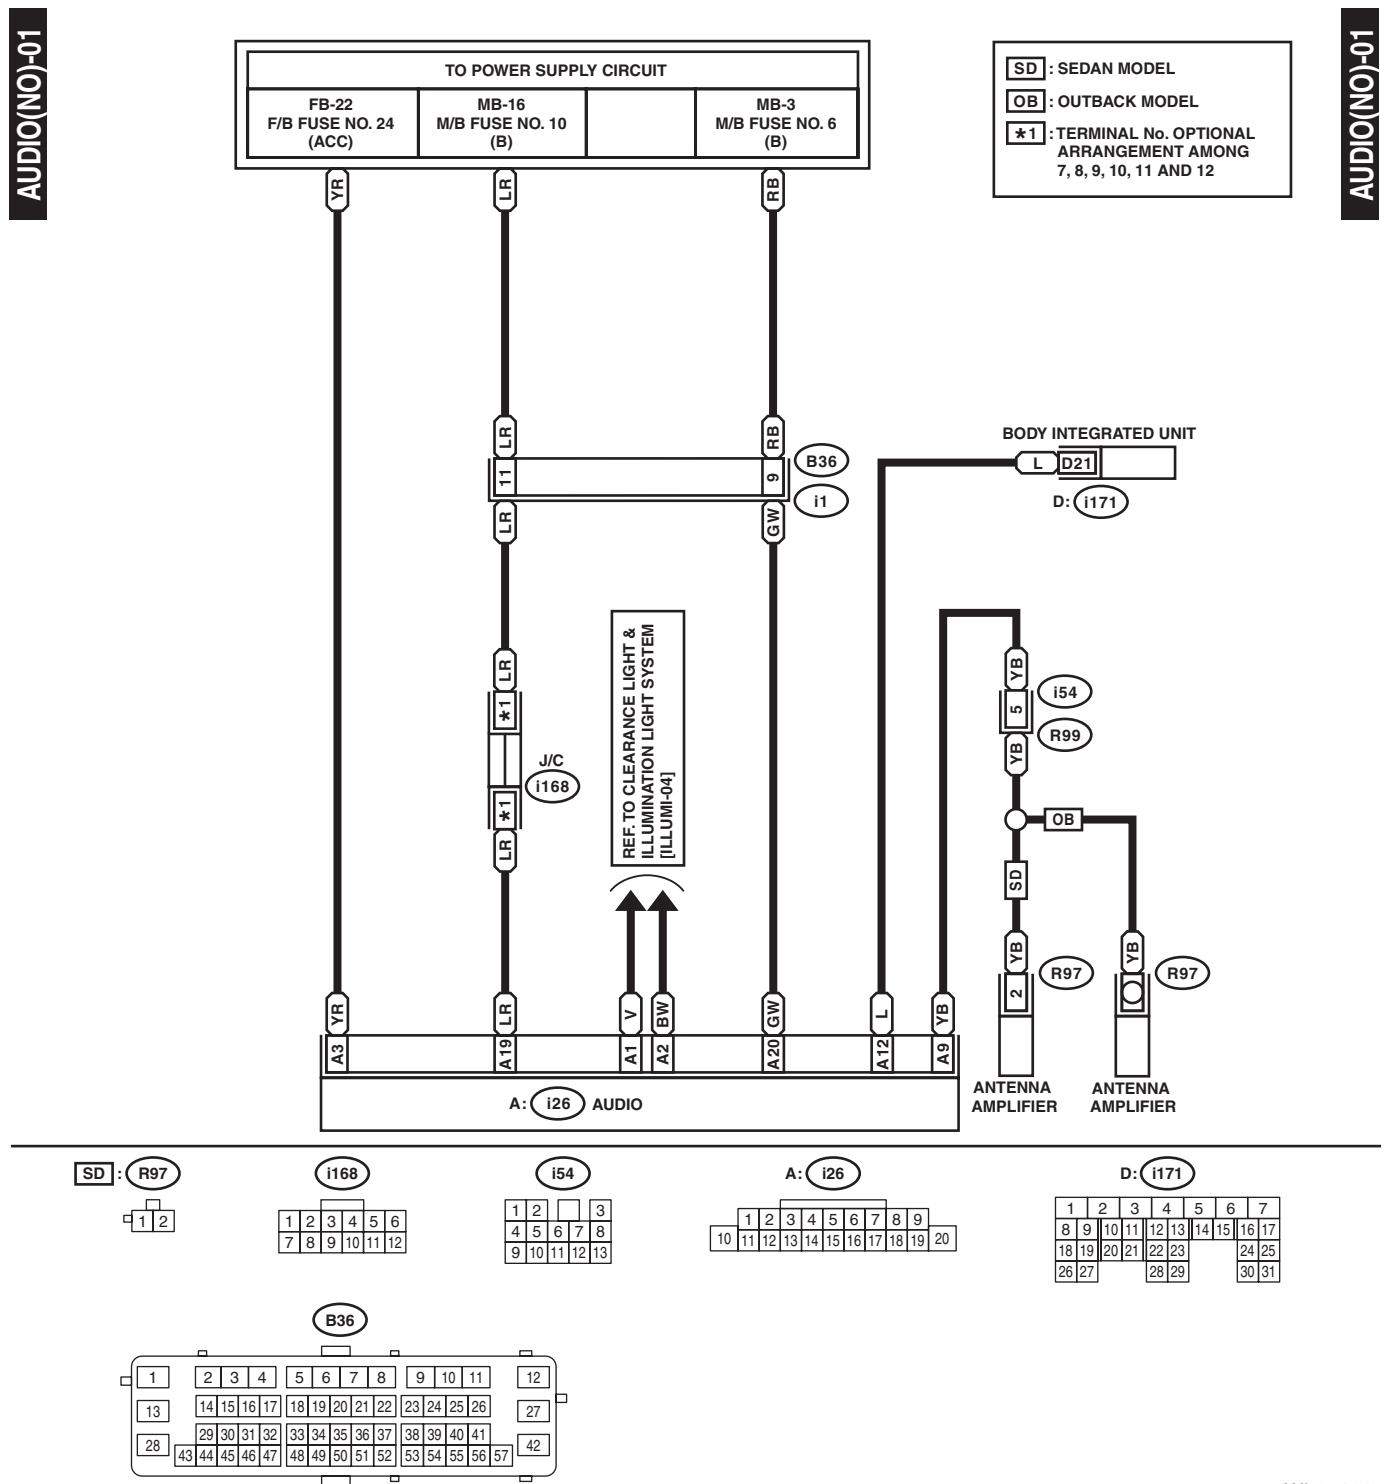


WI-25434

AUDIO(NO)-02

AUDIO(NO)-02


- ★1 : TERMINAL No. OPTIONAL
ARRANGEMENT
AMONG 1, 2 AND 3
- ★2 : TERMINAL No. OPTIONAL
ARRANGEMENT
AMONG 4, 5 AND 12
- ★3 : TERMINAL No. OPTIONAL
ARRANGEMENT
AMONG 6, 7 AND 8
- ★4 : TERMINAL No. OPTIONAL
ARRANGEMENT
AMONG 9, 10 AND 11

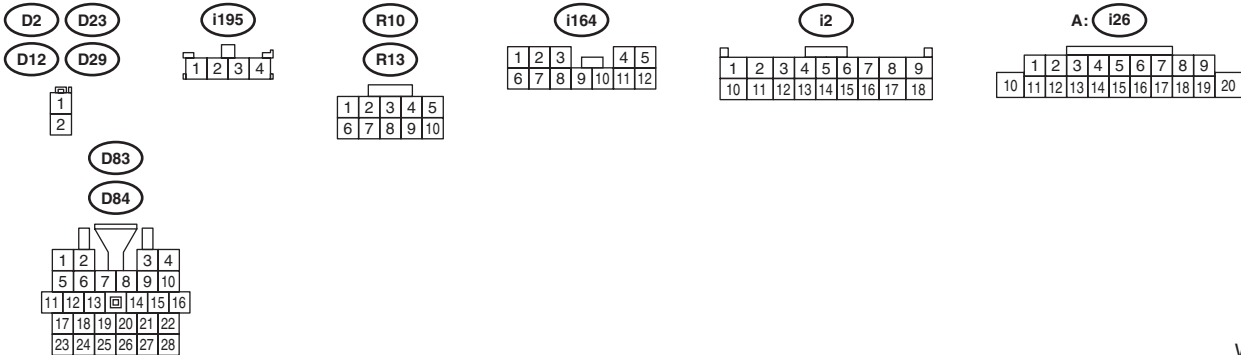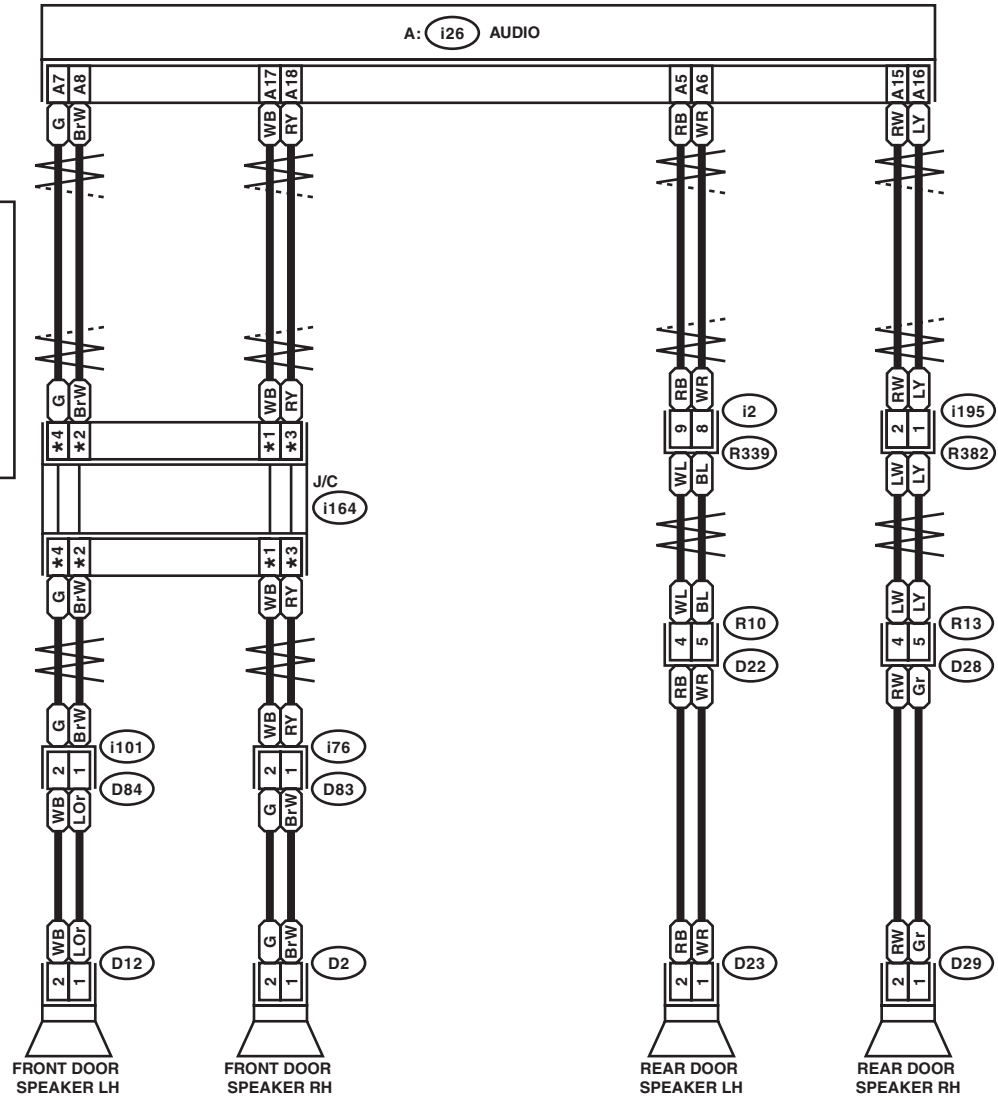

WI-25435


Audio System

WIRING SYSTEM

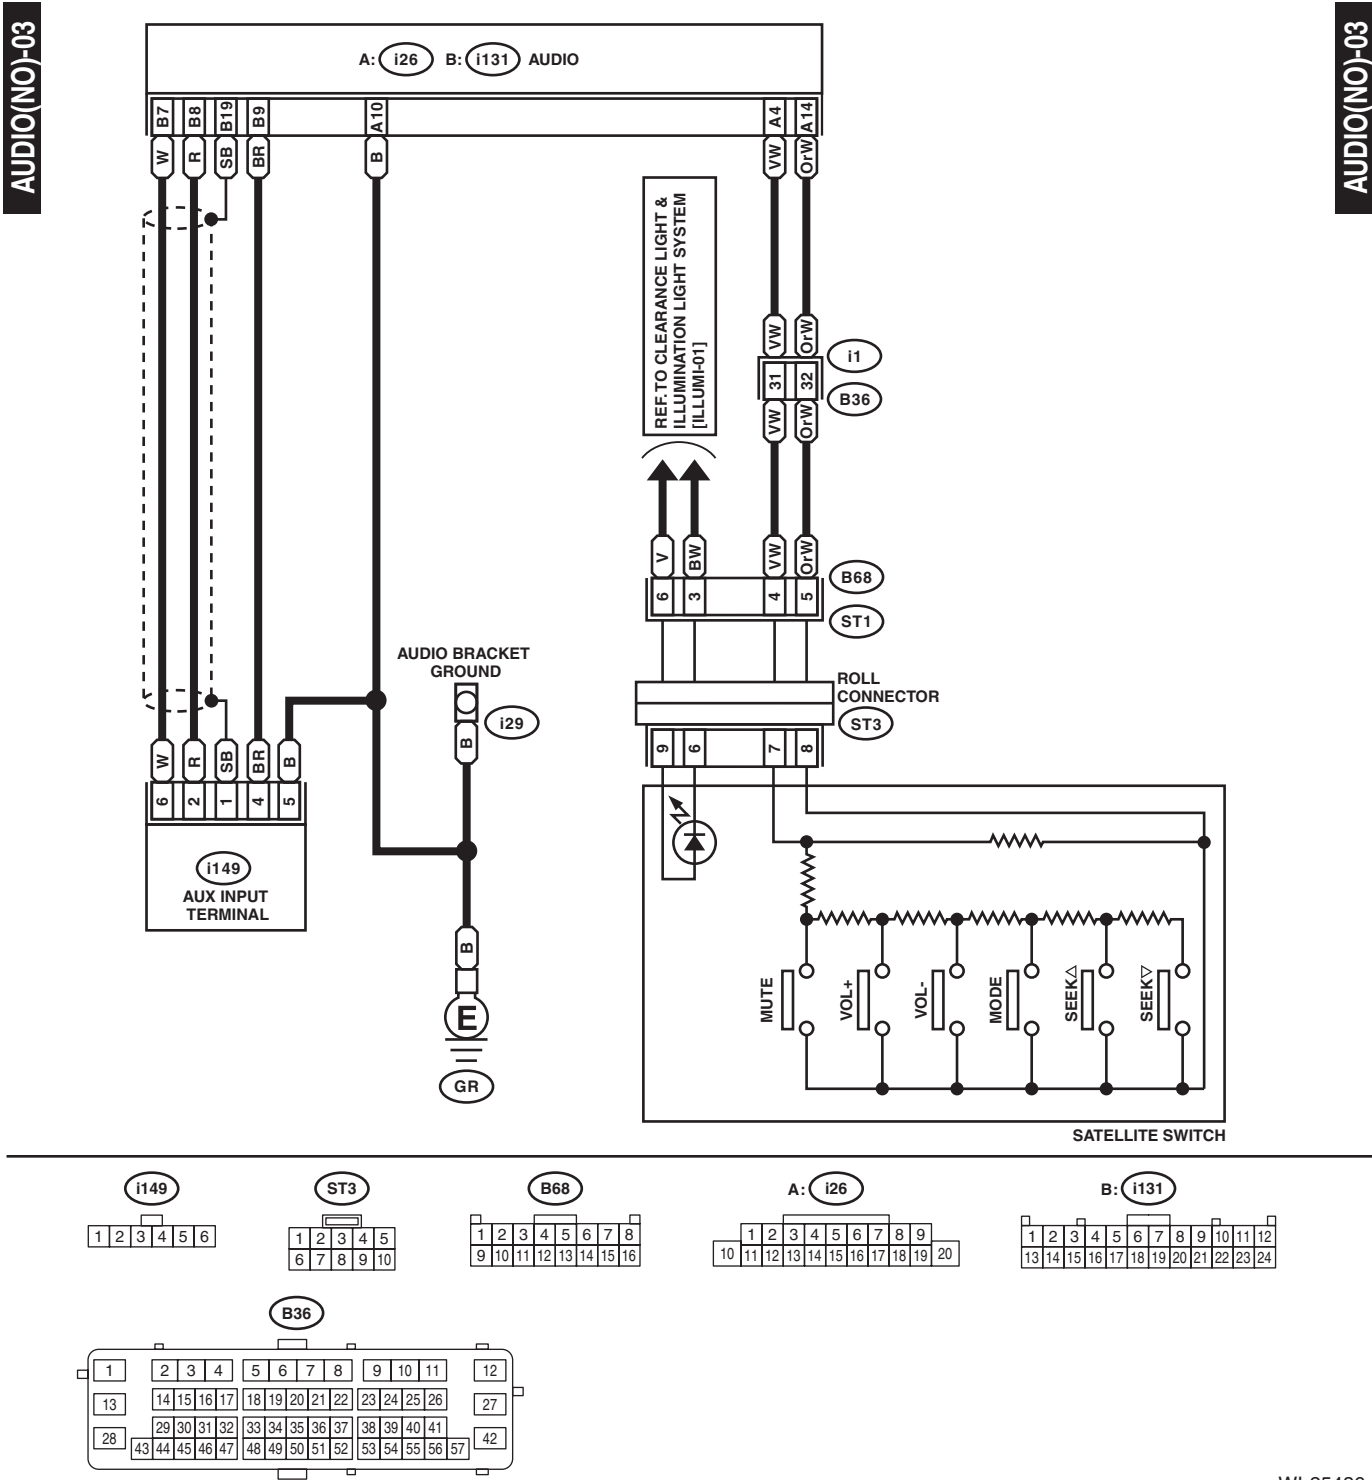

WI-25436


2. PREMIUM AUDIO

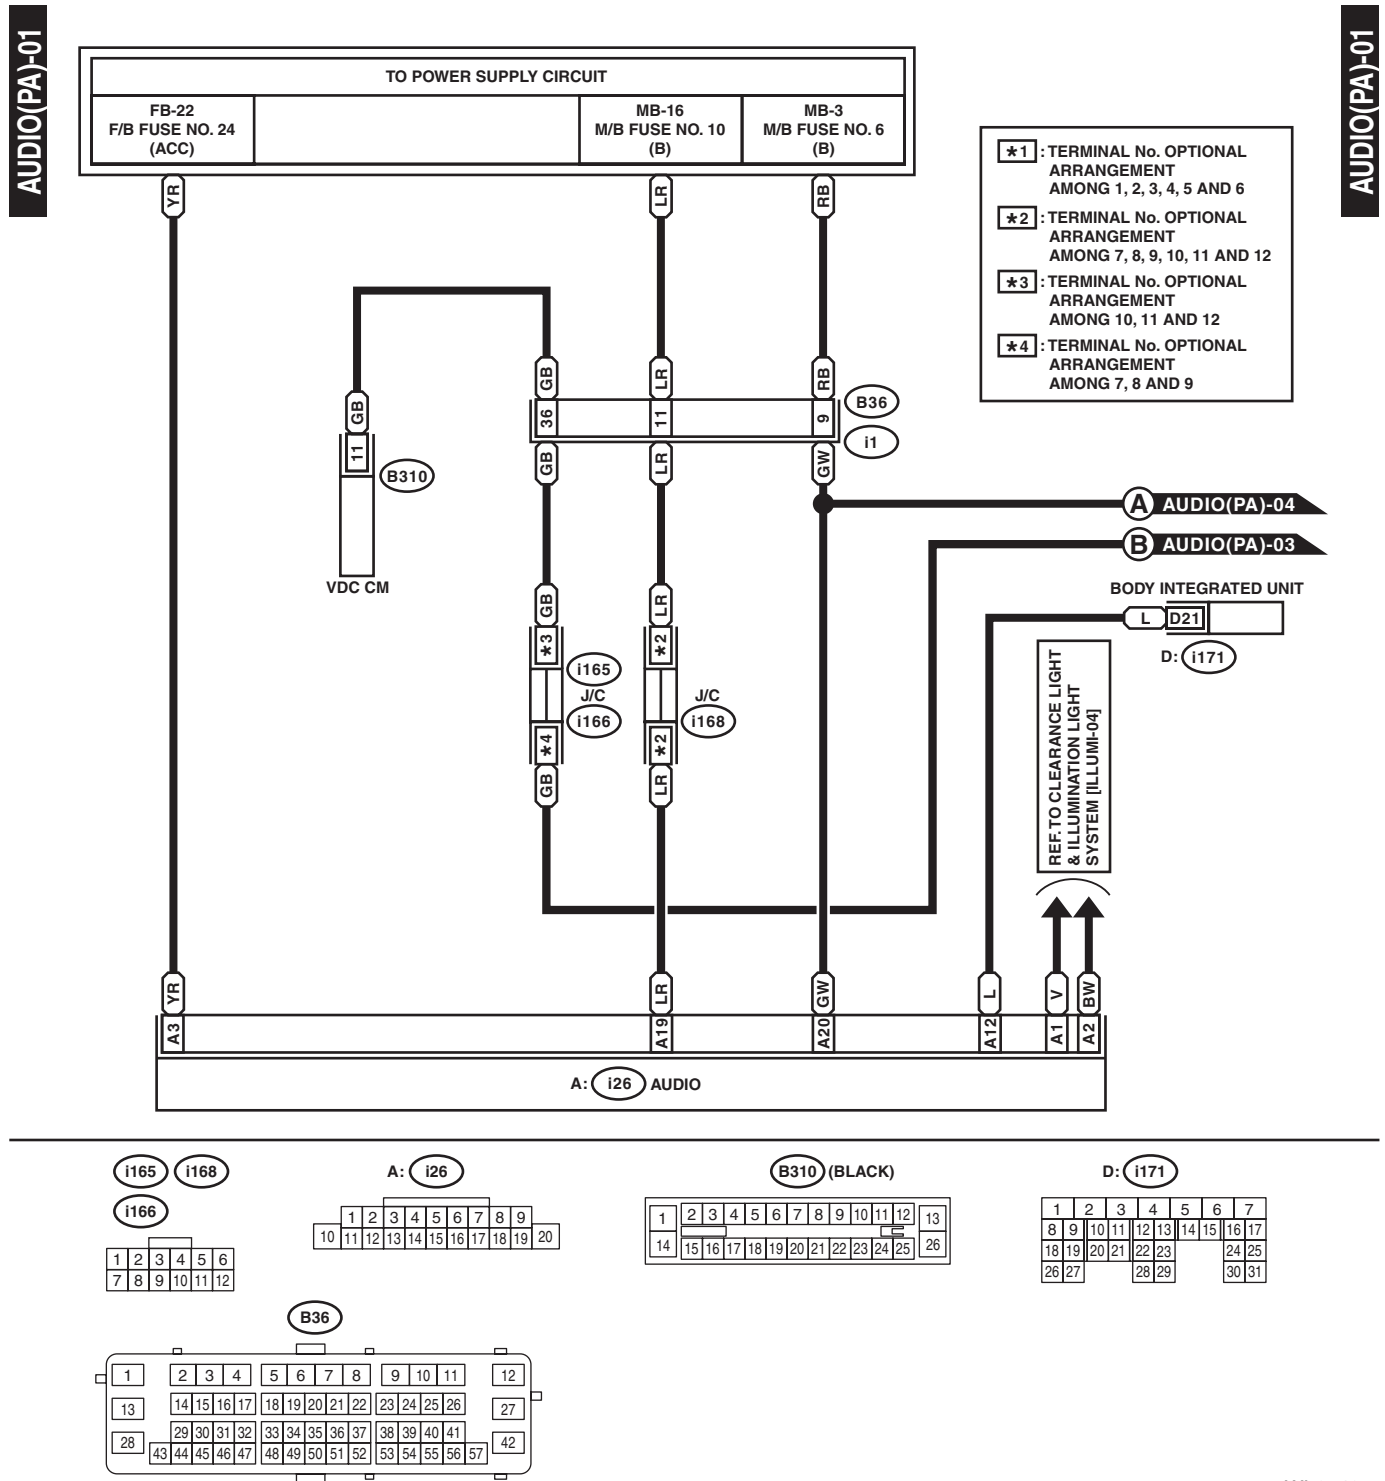

WI-25437



Audio System

WIRING SYSTEM

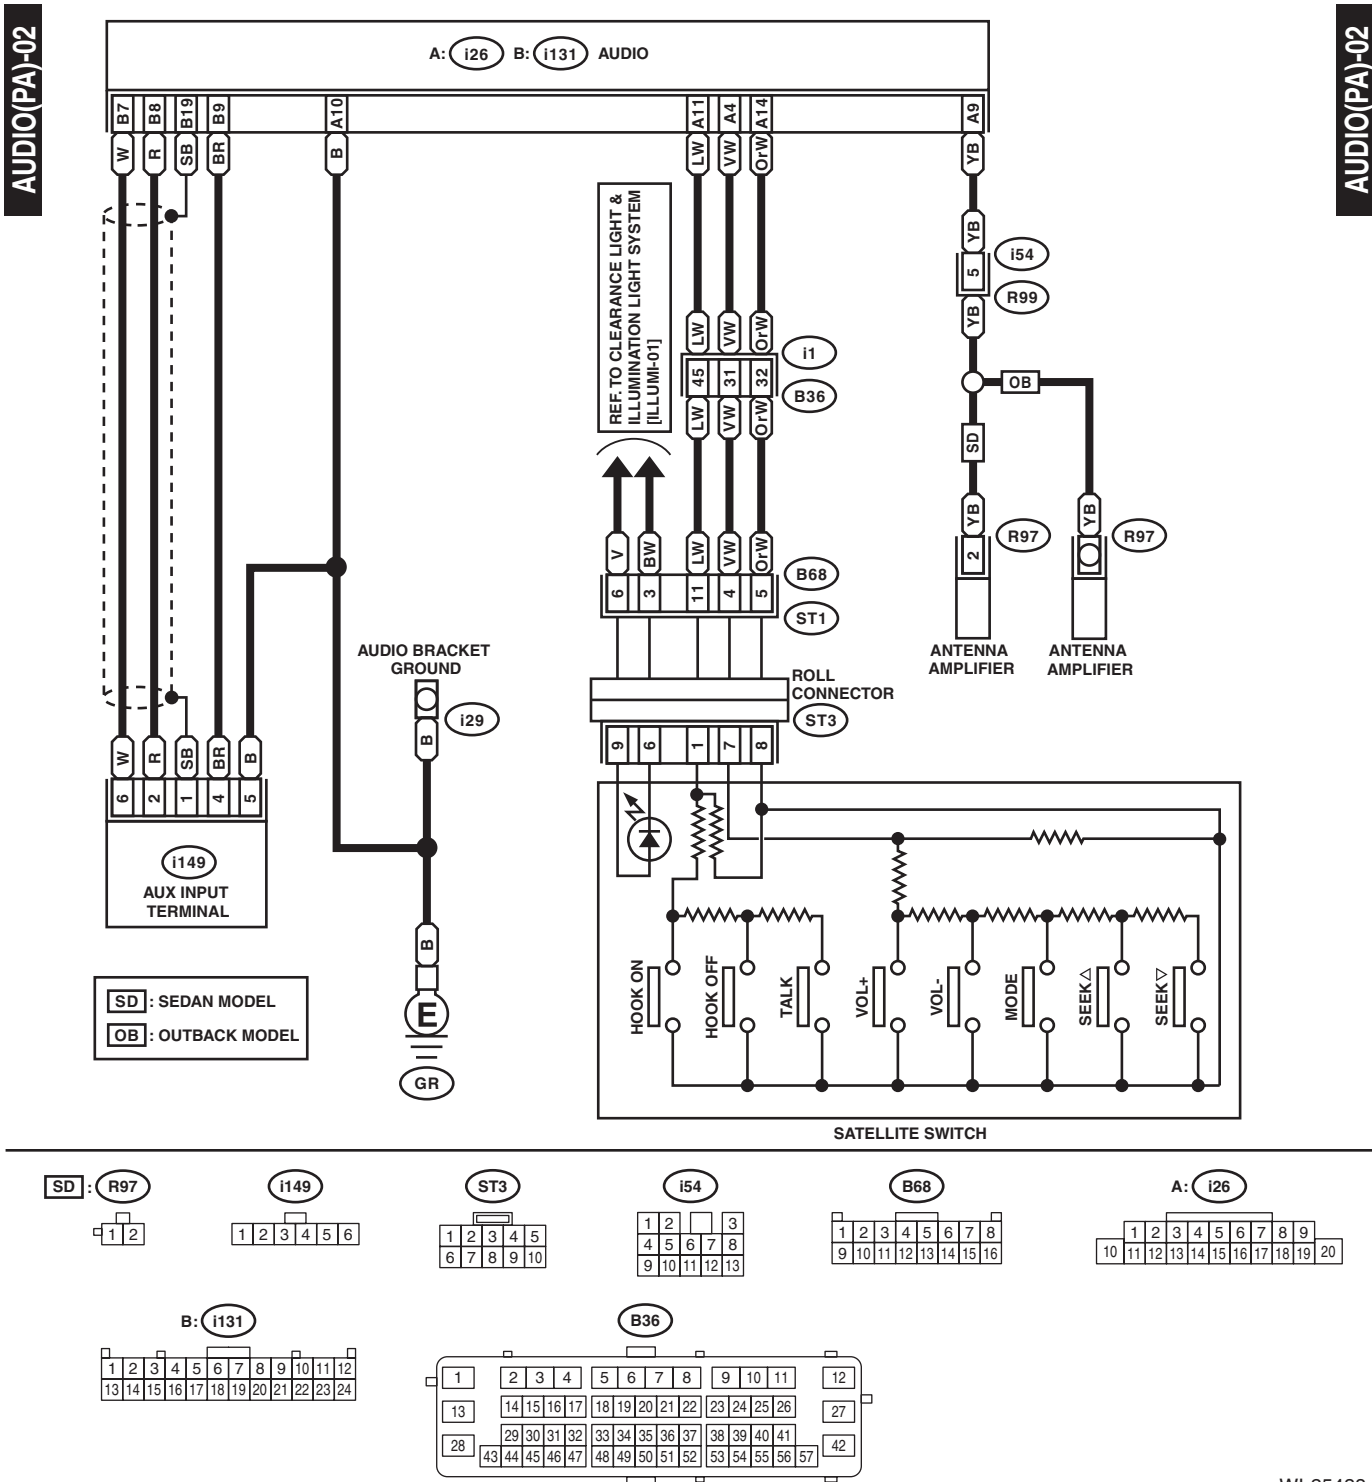

Audio System

WIRING SYSTEM

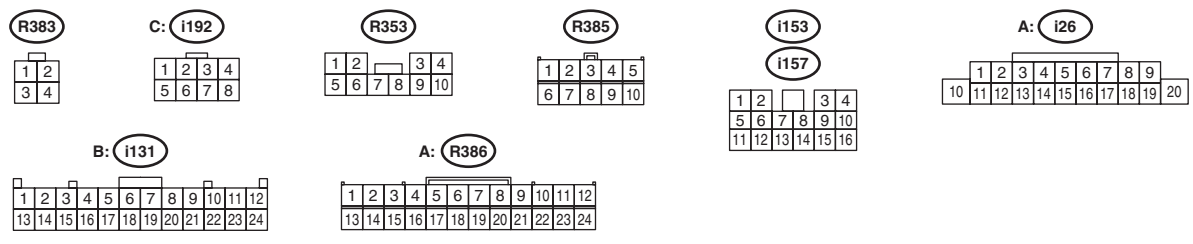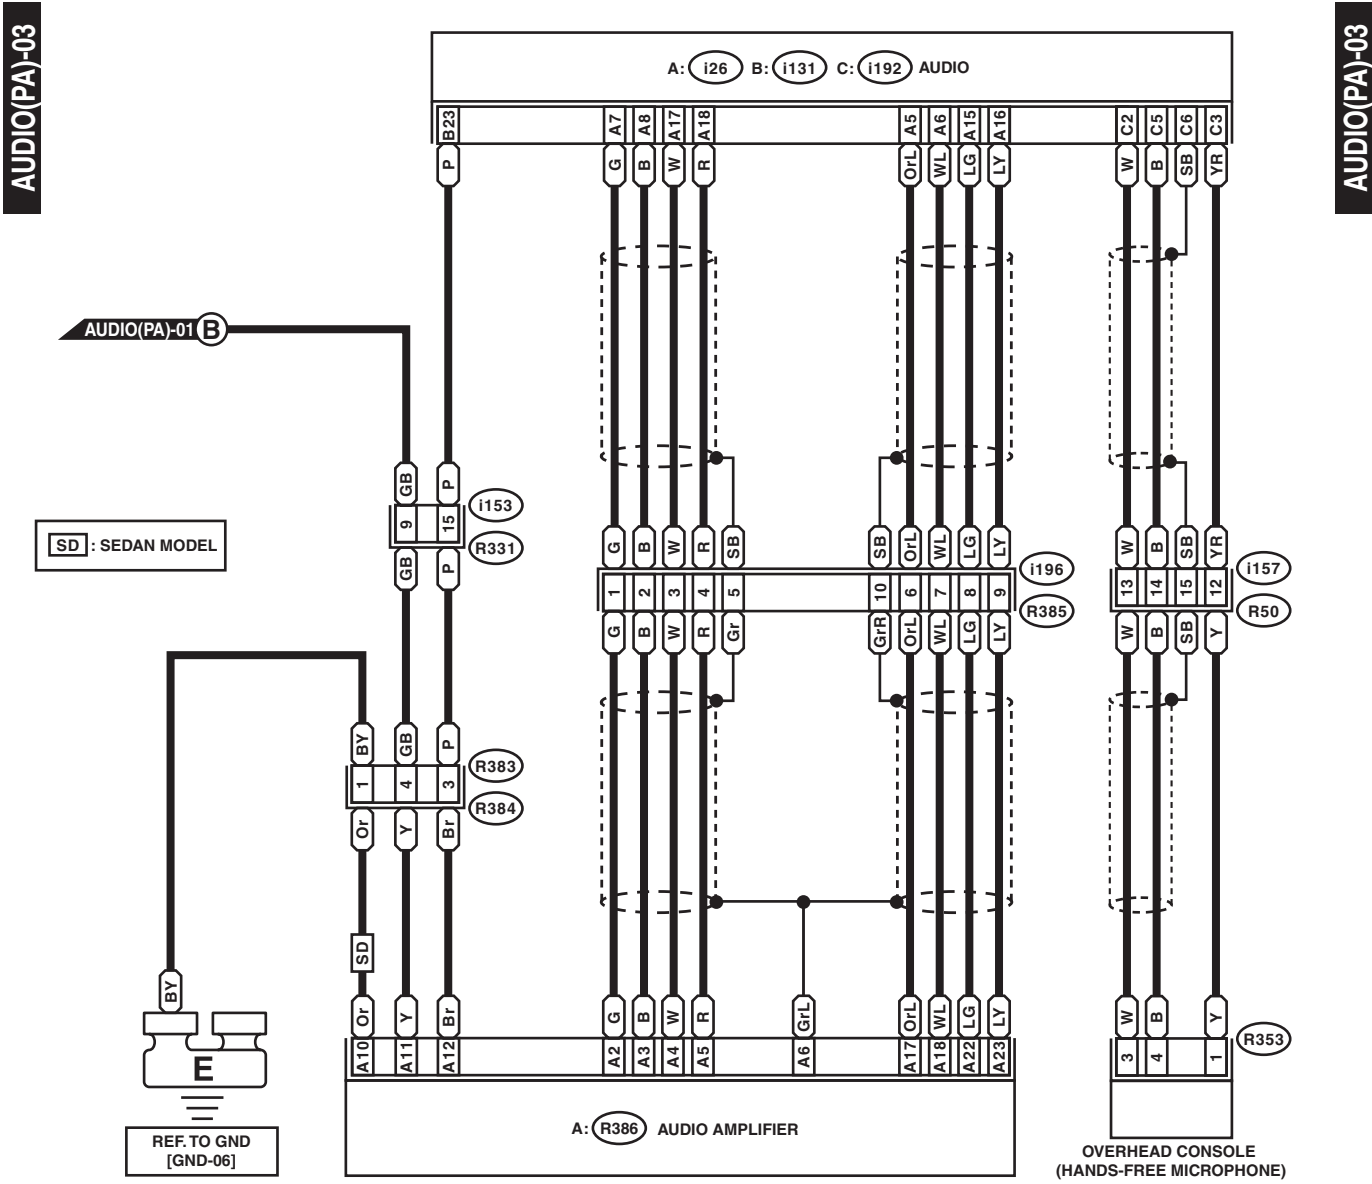






WI-25439

Audio System

WIRING SYSTEM

AUDIO(PA)-04



 
 
 

AUDIO(PA)-04

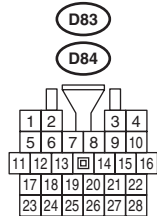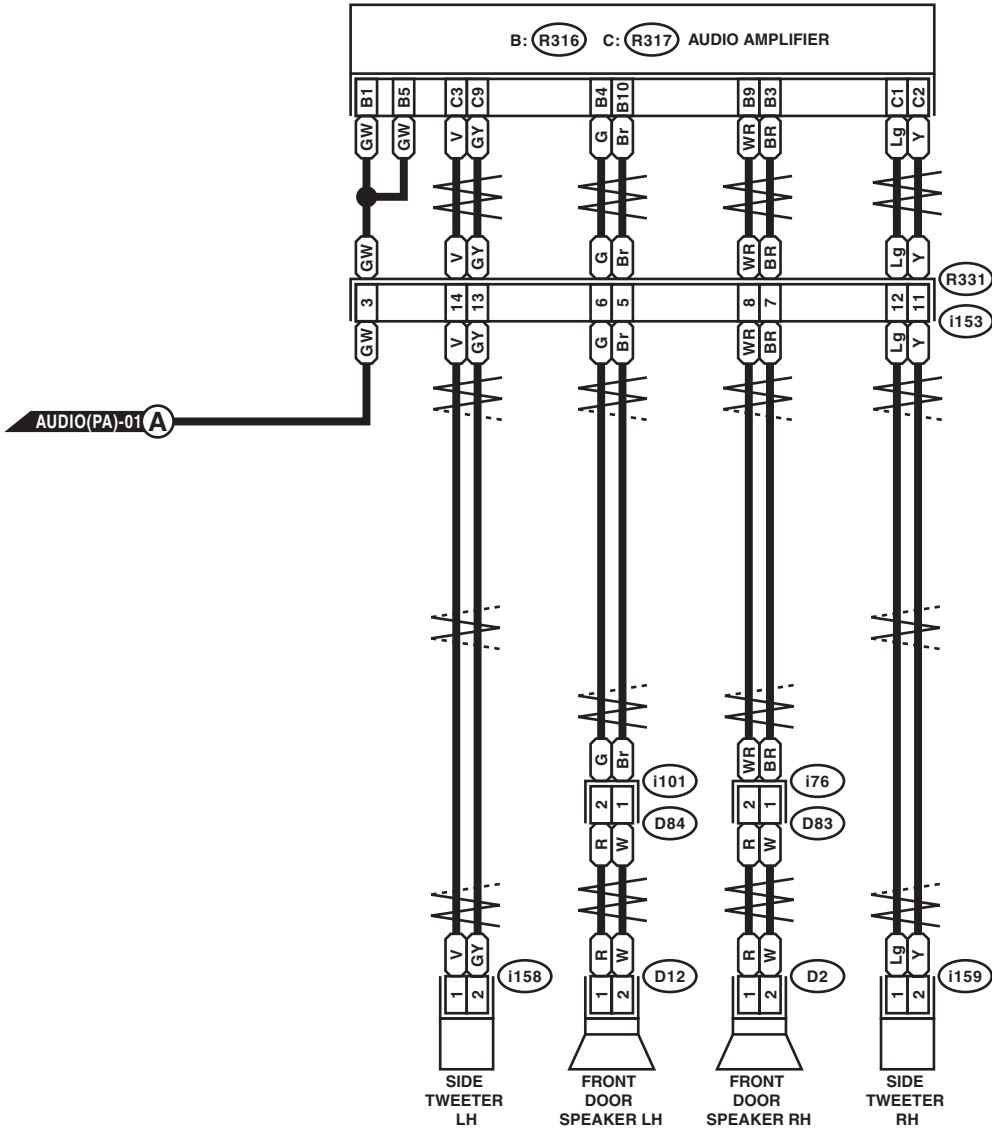

WI-25440

AUDIO(PA)-05

     AUDIO(PA)-05

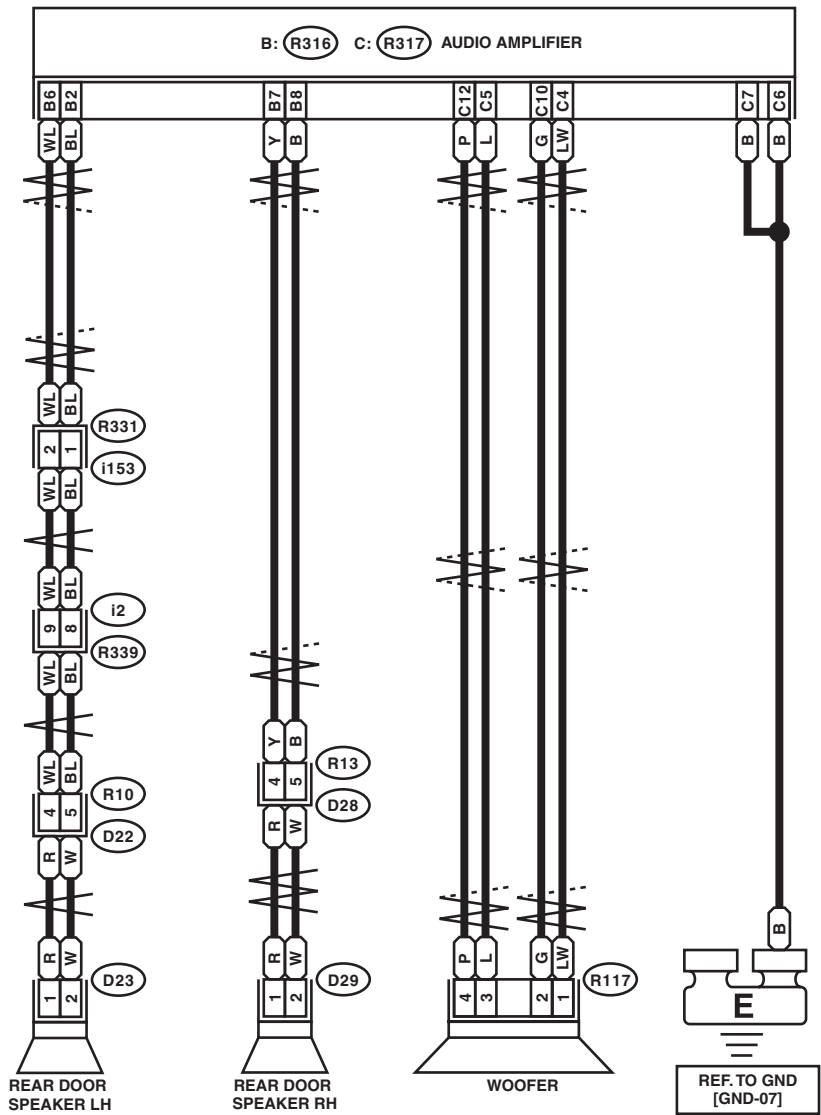


Back-up Light System

WIRING SYSTEM

10.Back-up Light System

A: WIRING DIAGRAM

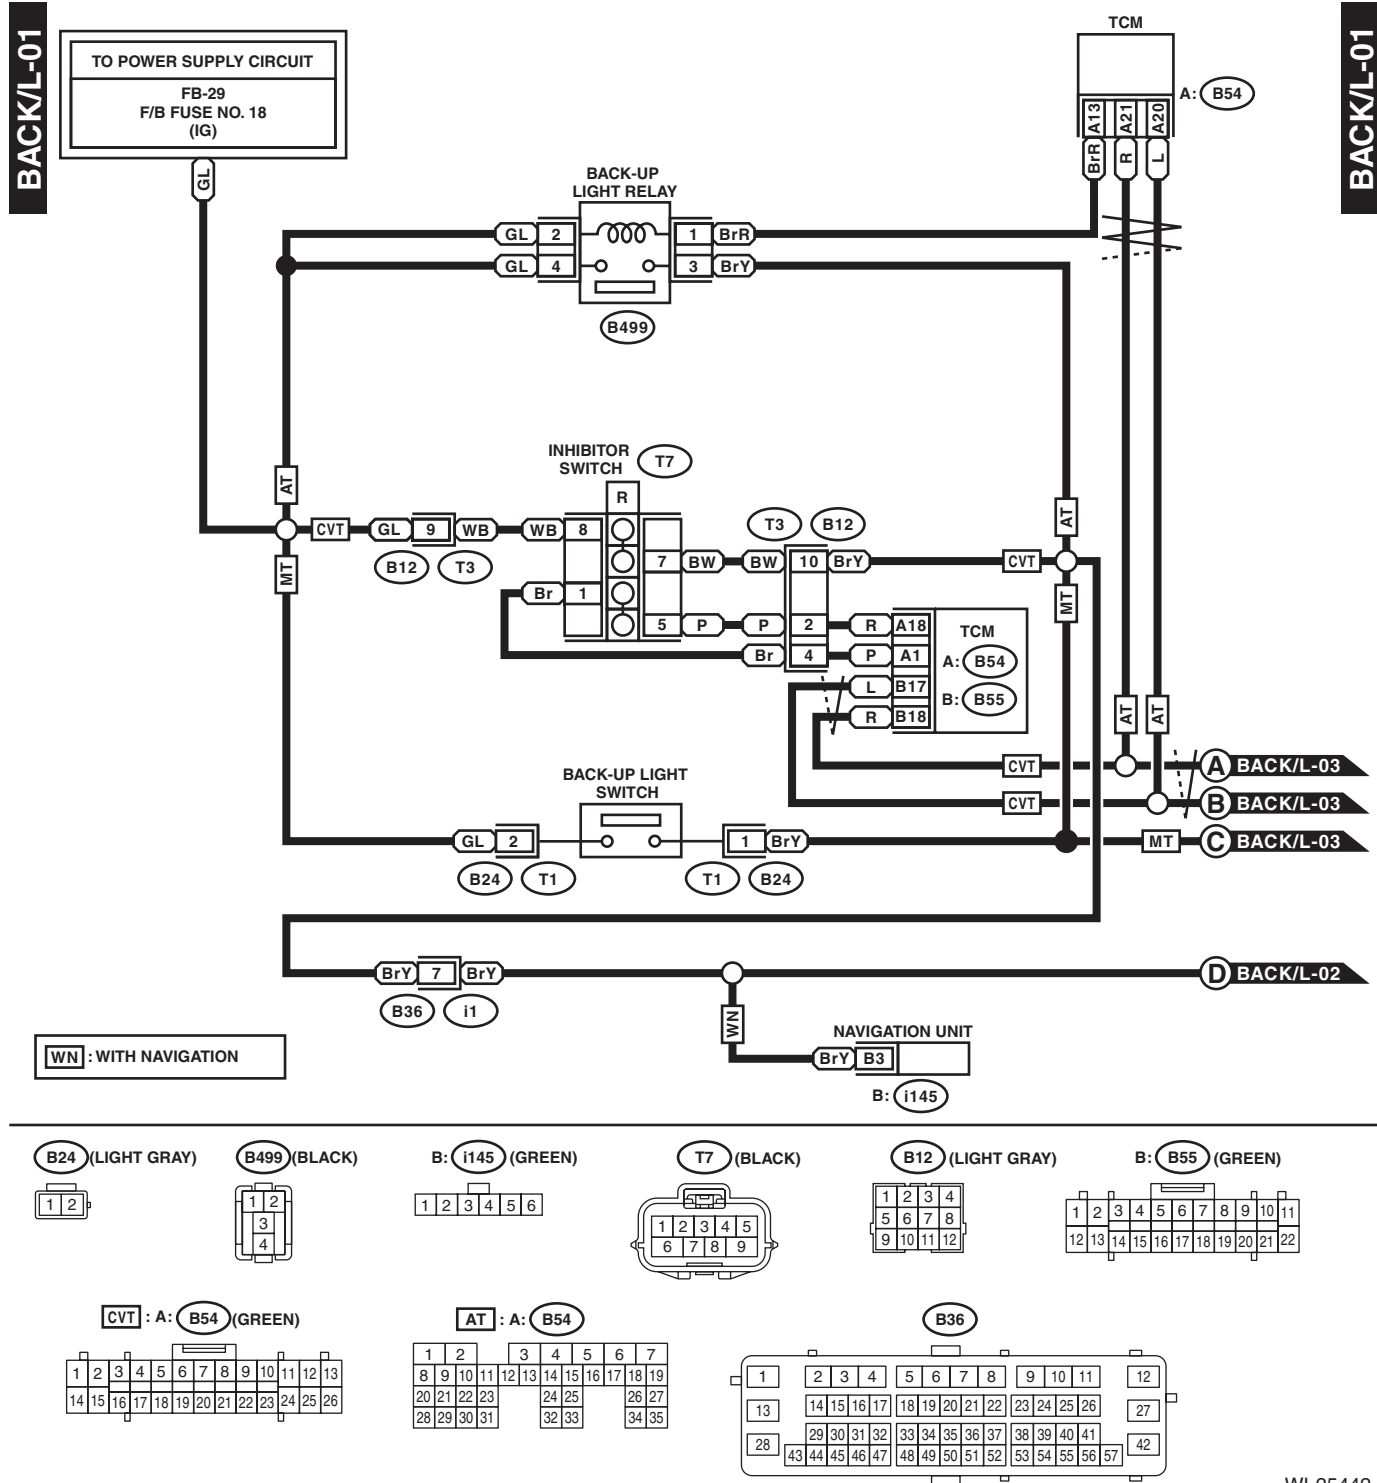



WI-25442

Back-up Light System

WIRING SYSTEM

BACK/L-02

BACK/L-02

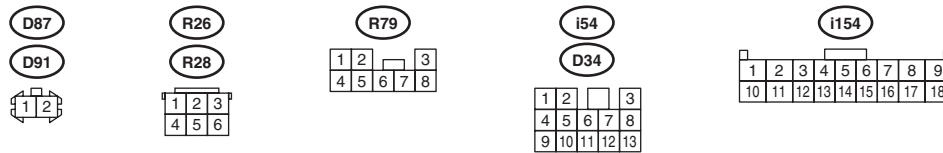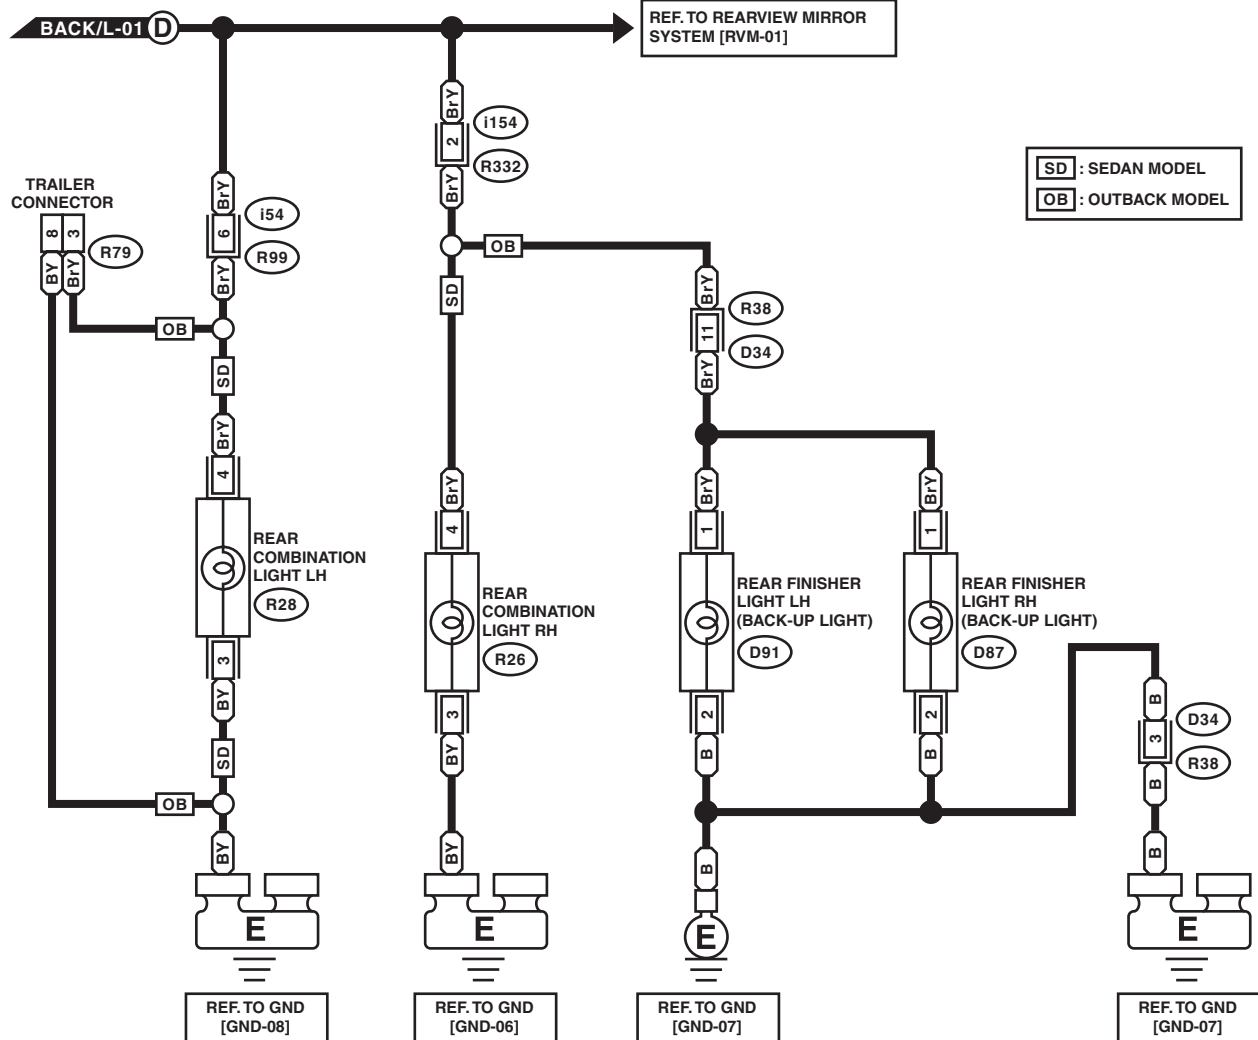


WI-25443

Back-up Light System

WIRING SYSTEM

BACK/L-03

BACK/L-03

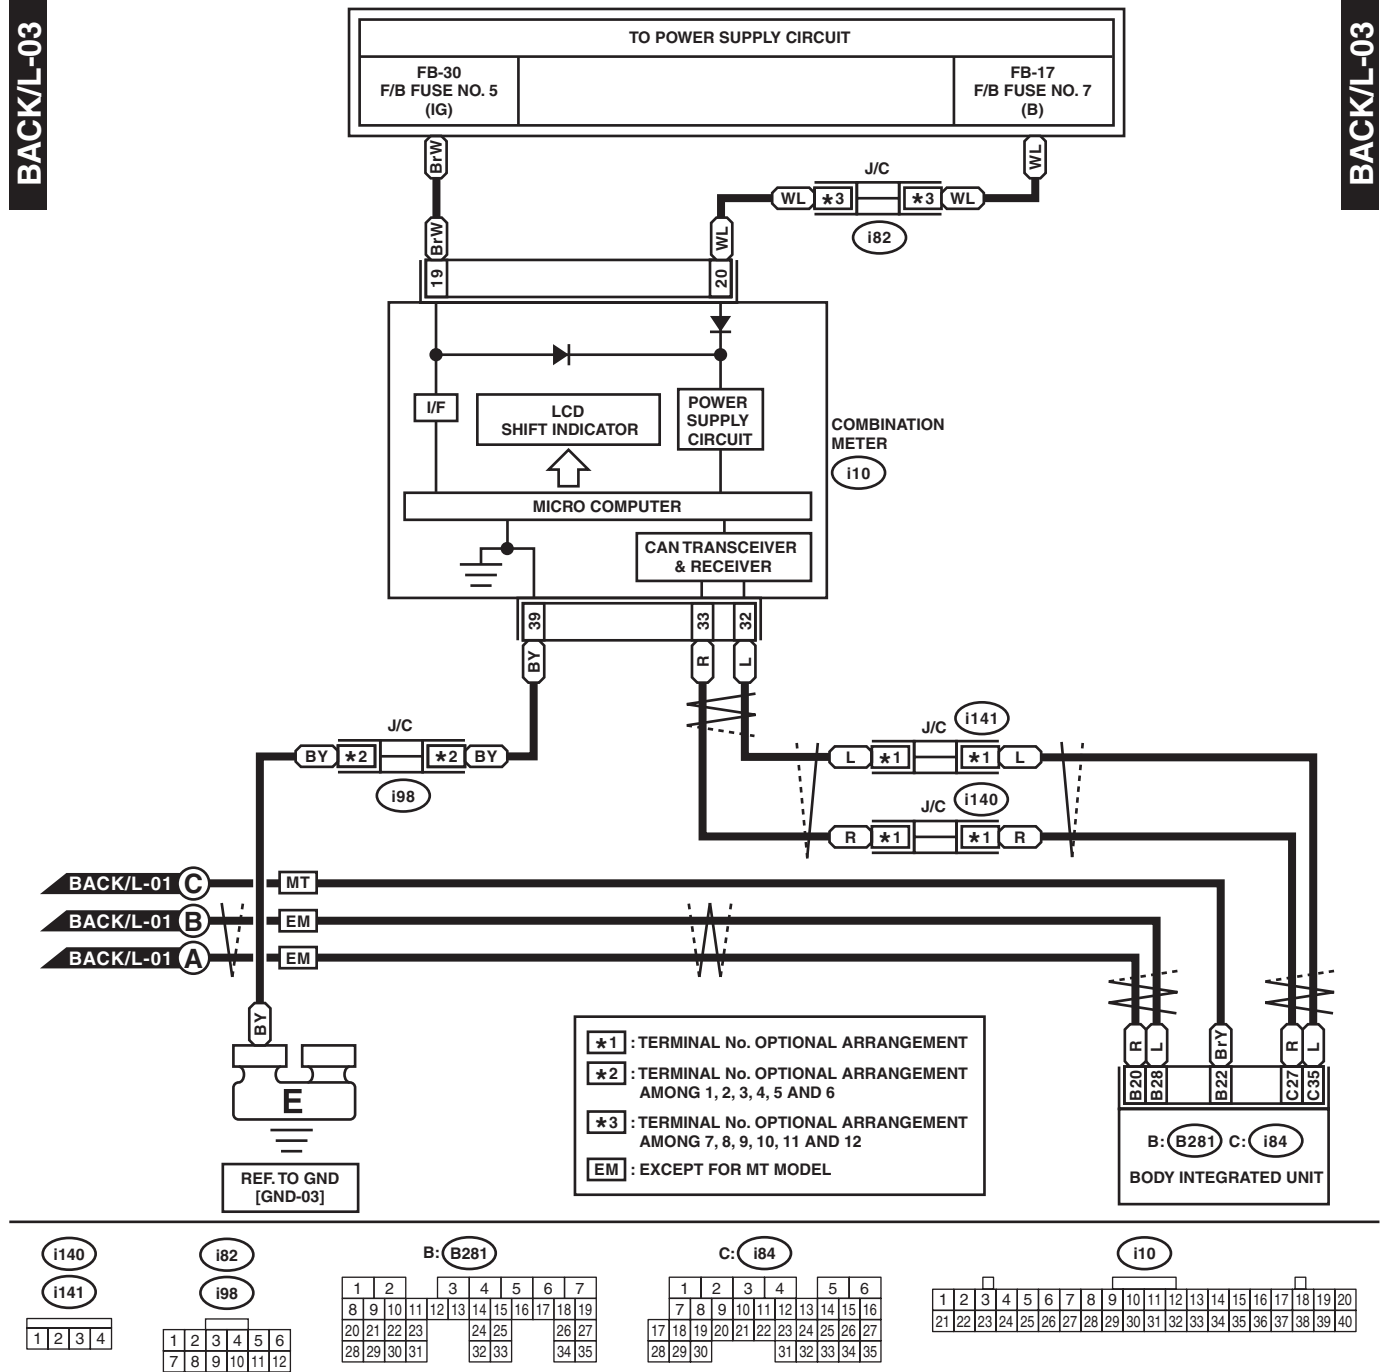



WI-25444

11. CAN Communication System

A: WIRING DIAGRAM

CAN-01



CAN-01

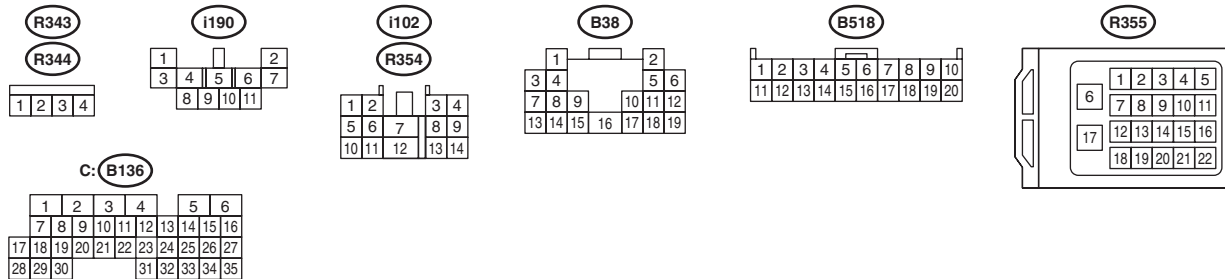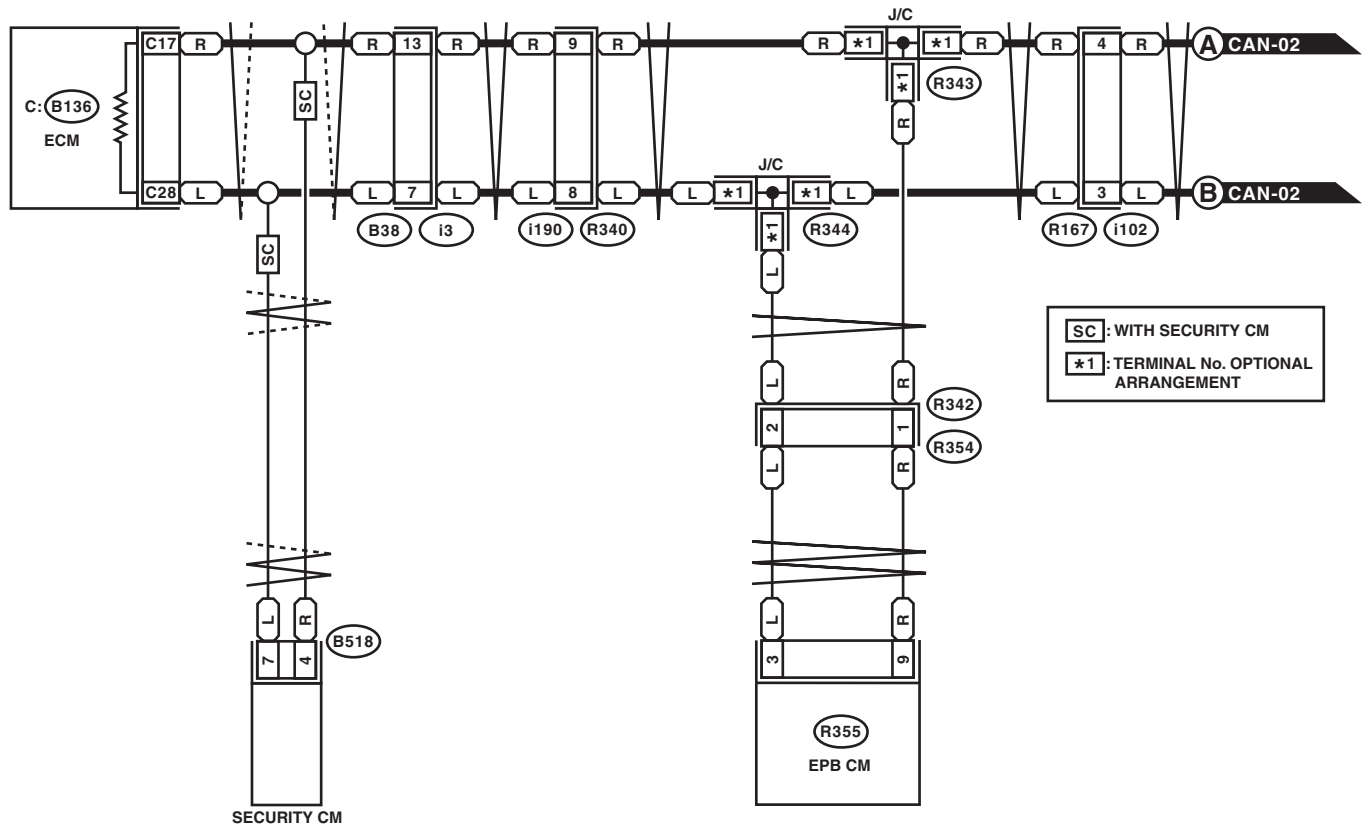


WI-25445

CAN Communication System

WIRING SYSTEM

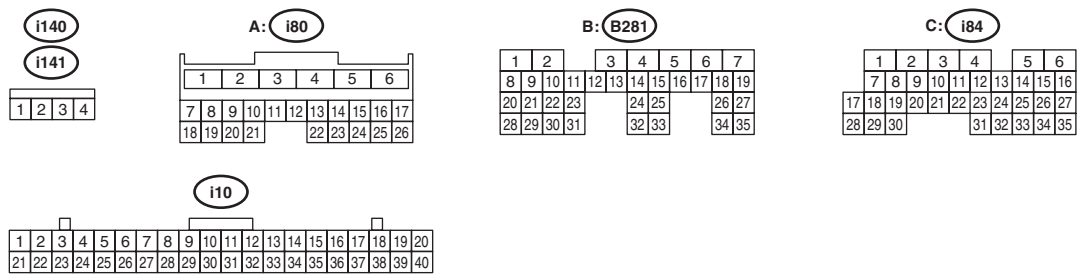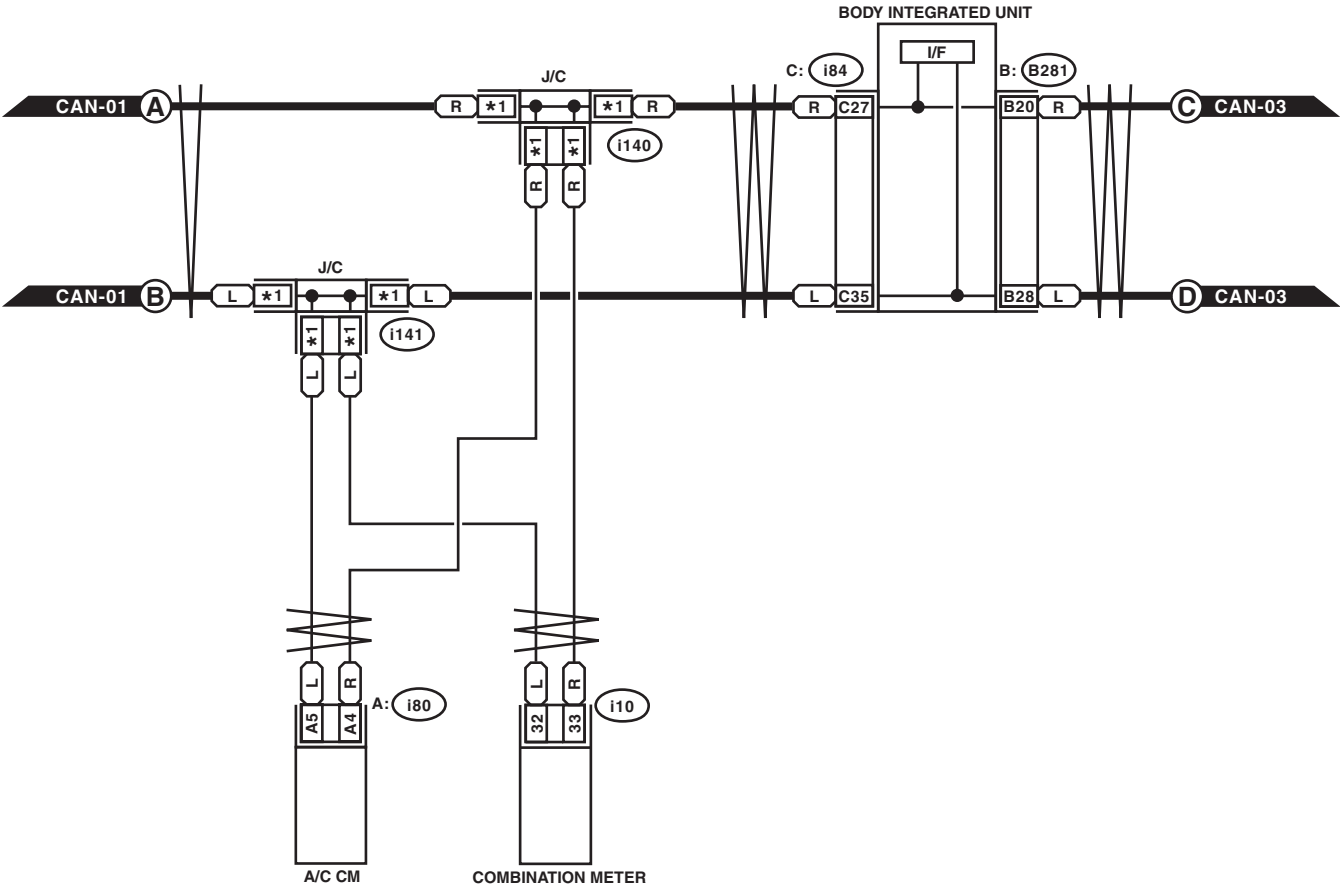


WI-25446

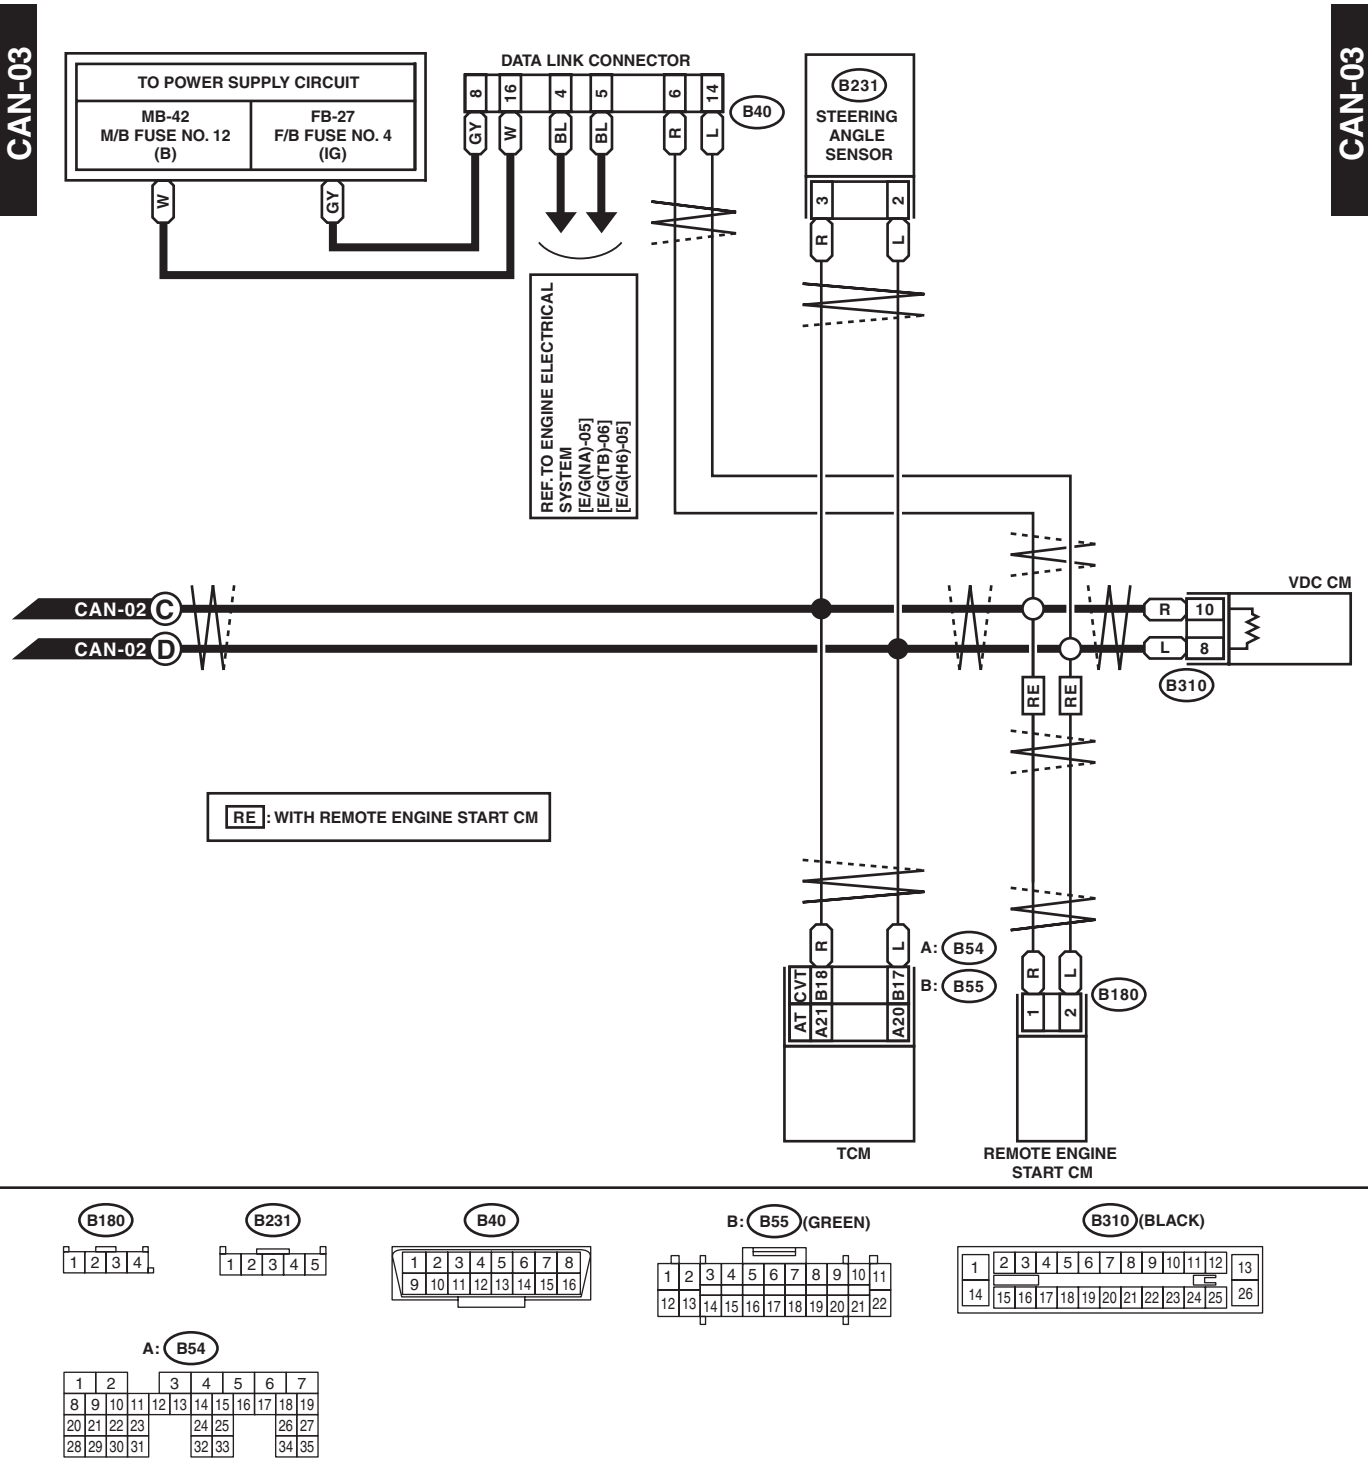

WI-25447





12.Charging System

A: WIRING DIAGRAM

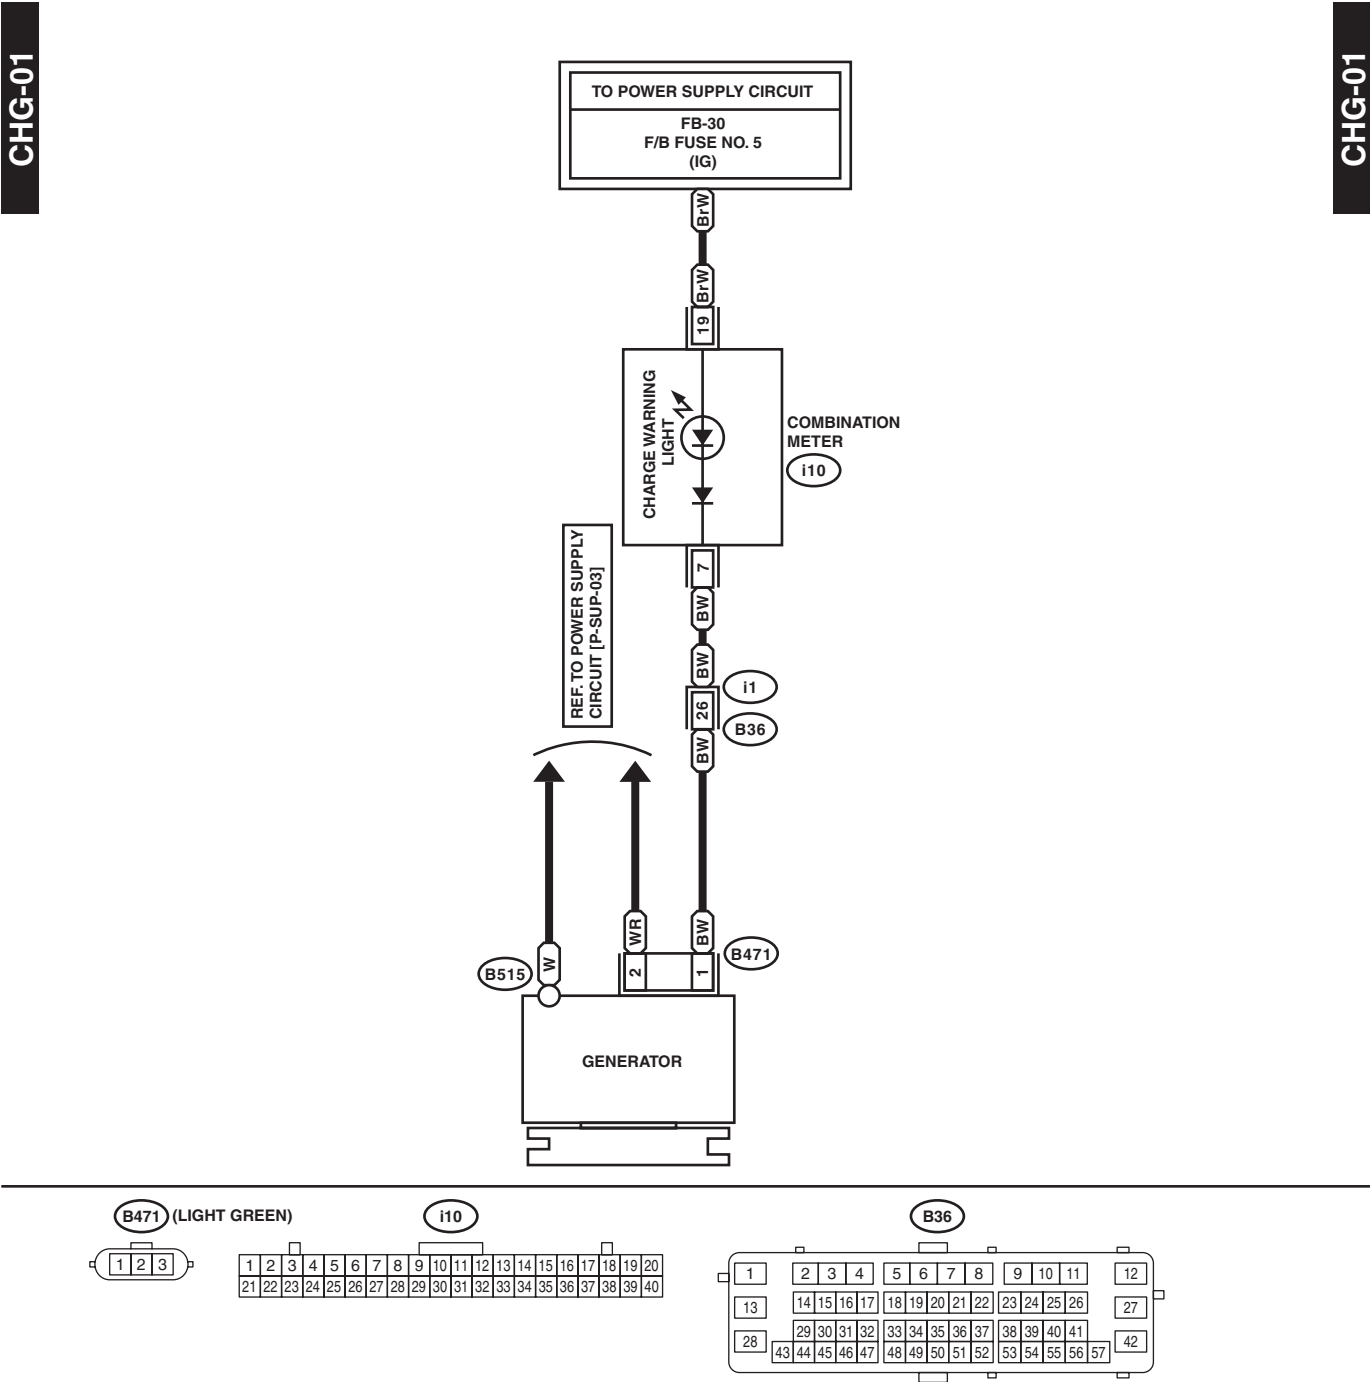

13. Clearance Light and Illumination Light System


A: WIRING DIAGRAM

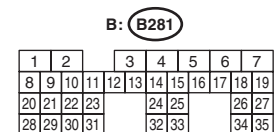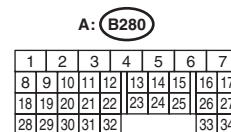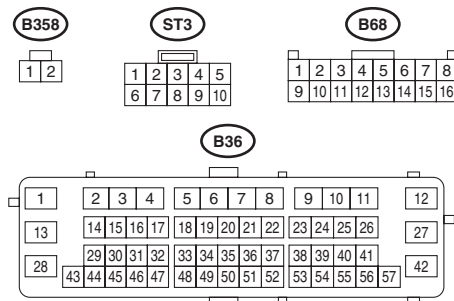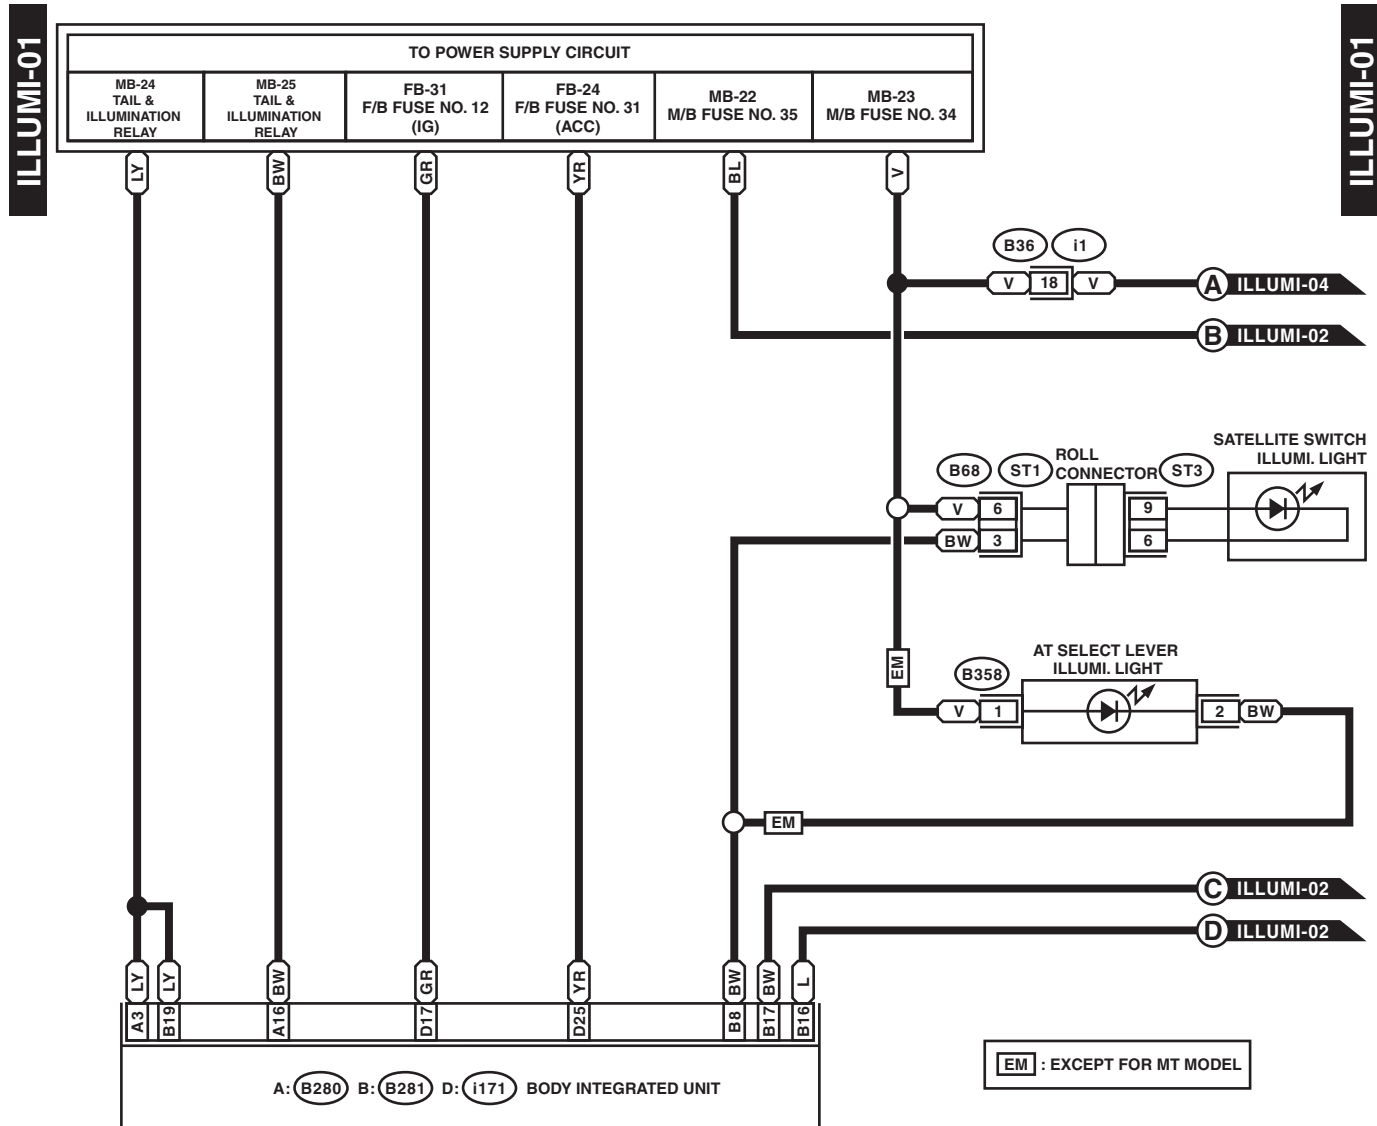

WI-25449

Clearance Light and Illumination Light System


WIRING SYSTEM

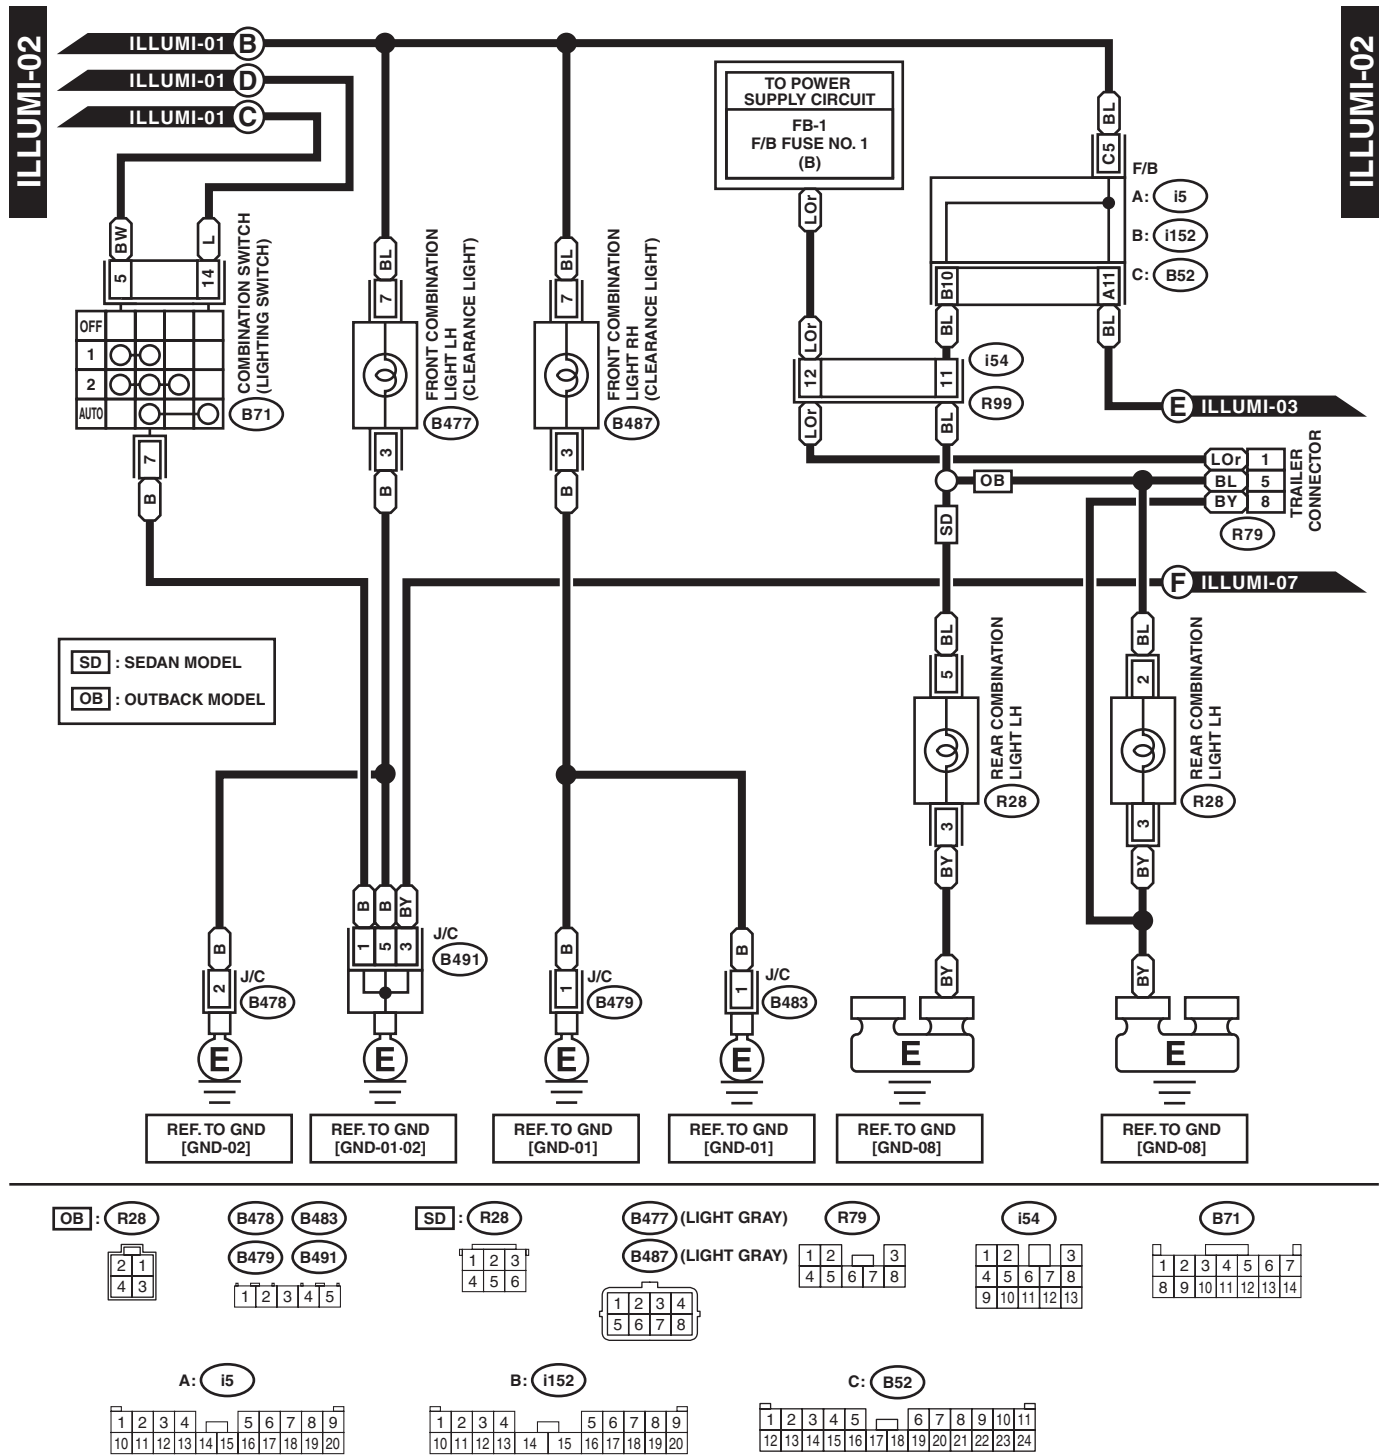

WI-25450

Clearance Light and Illumination Light System


WIRING SYSTEM

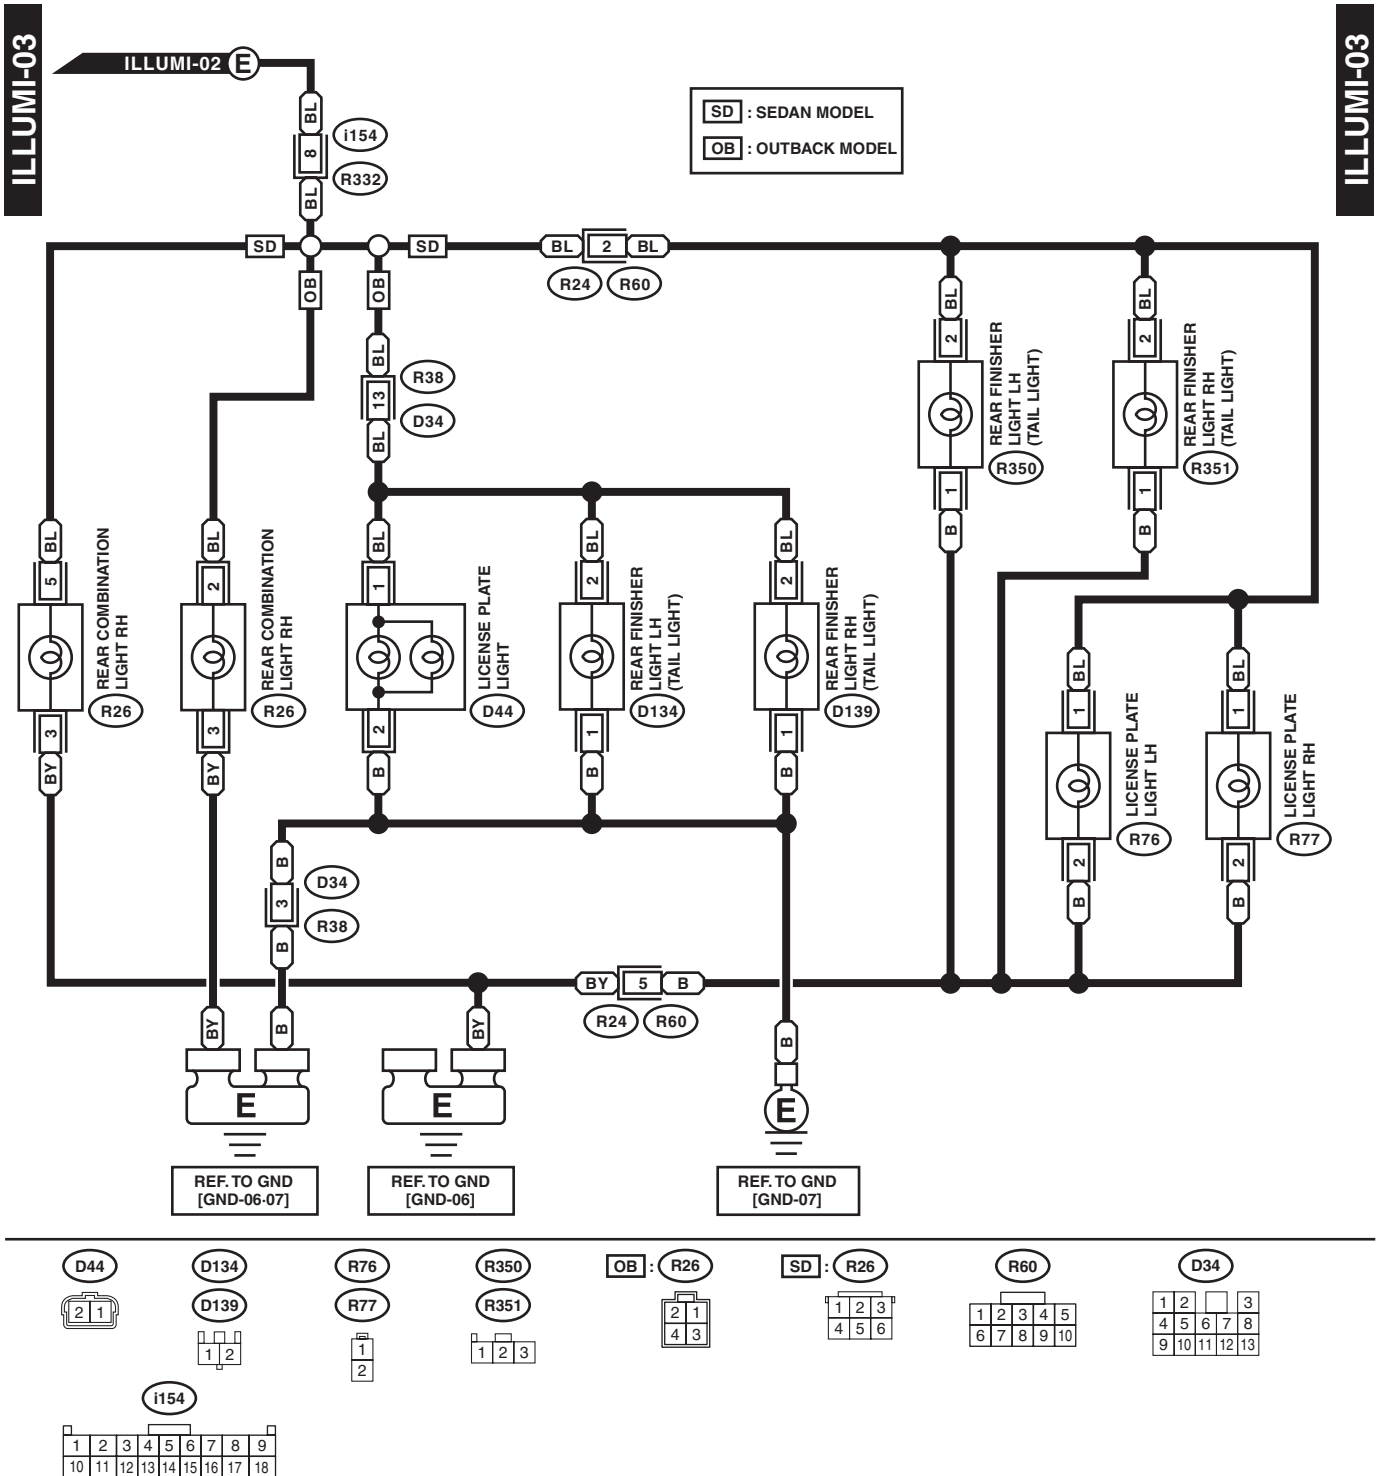

WI-25451

Clearance Light and Illumination Light System

WIRING SYSTEM

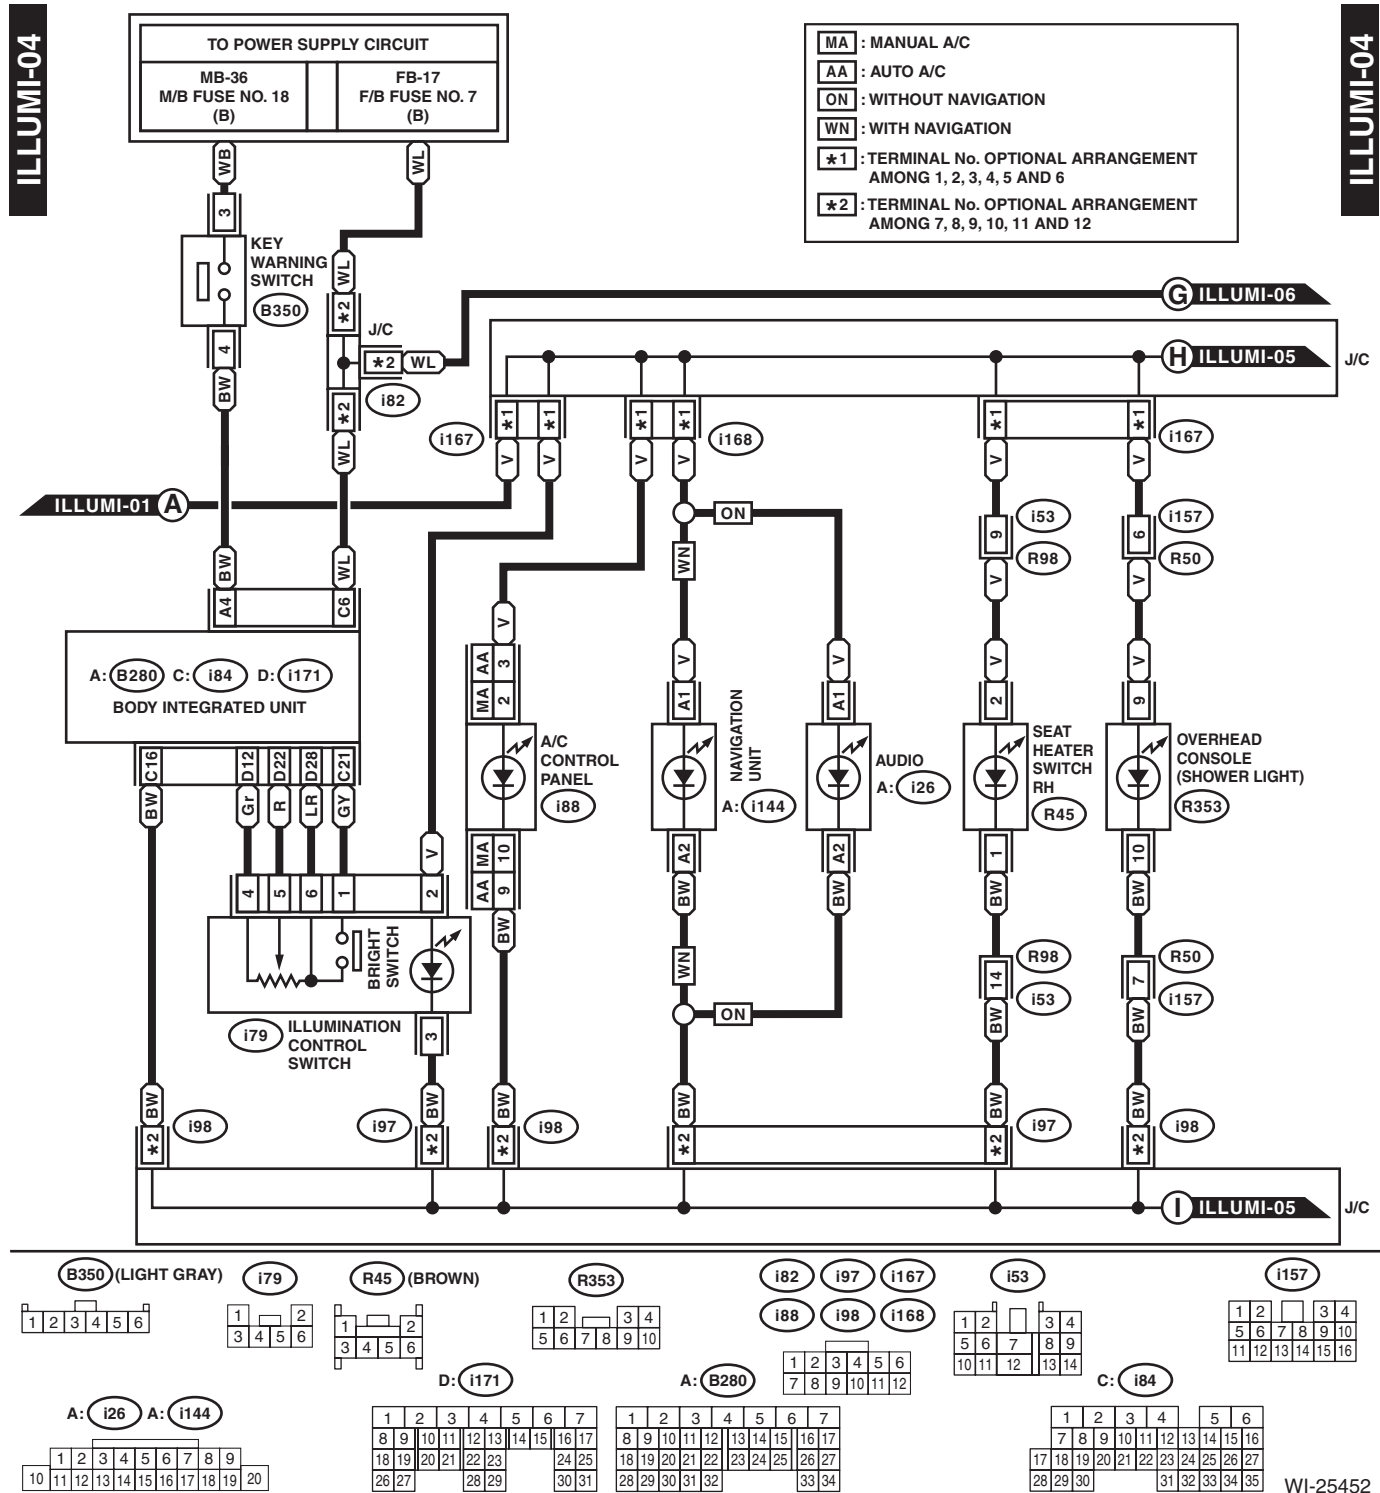



Clearance Light and Illumination Light System

WIRING SYSTEM

ILLUMI-05

- *1 : TERMINAL No. OPTIONAL ARRANGEMENT AMONG 1, 2, 3, 4, 5 AND 6
- *2 : TERMINAL No. OPTIONAL ARRANGEMENT AMONG 7, 8 AND 9
- *3 : TERMINAL No. OPTIONAL ARRANGEMENT AMONG 10, 11 AND 12
- *4 : TERMINAL No. OPTIONAL ARRANGEMENT AMONG 7, 8, 9, 10, 11 AND 12


ILLUMI-05

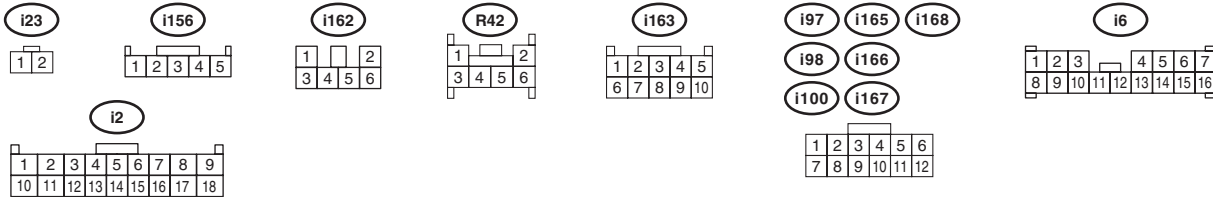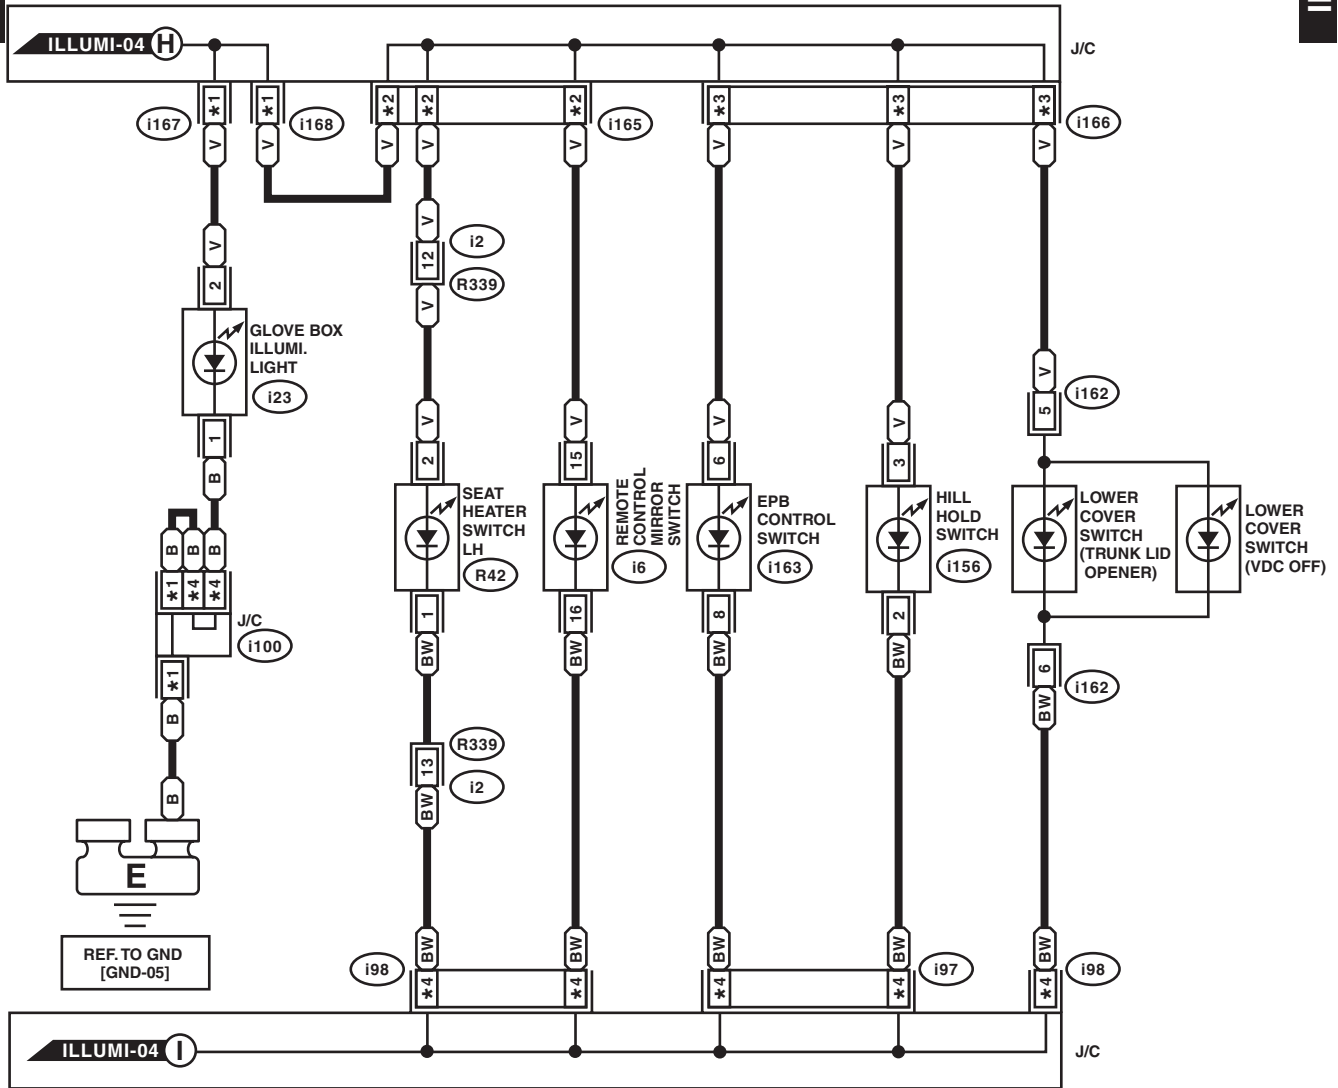

WI-25453

Clearance Light and Illumination Light System

WIRING SYSTEM

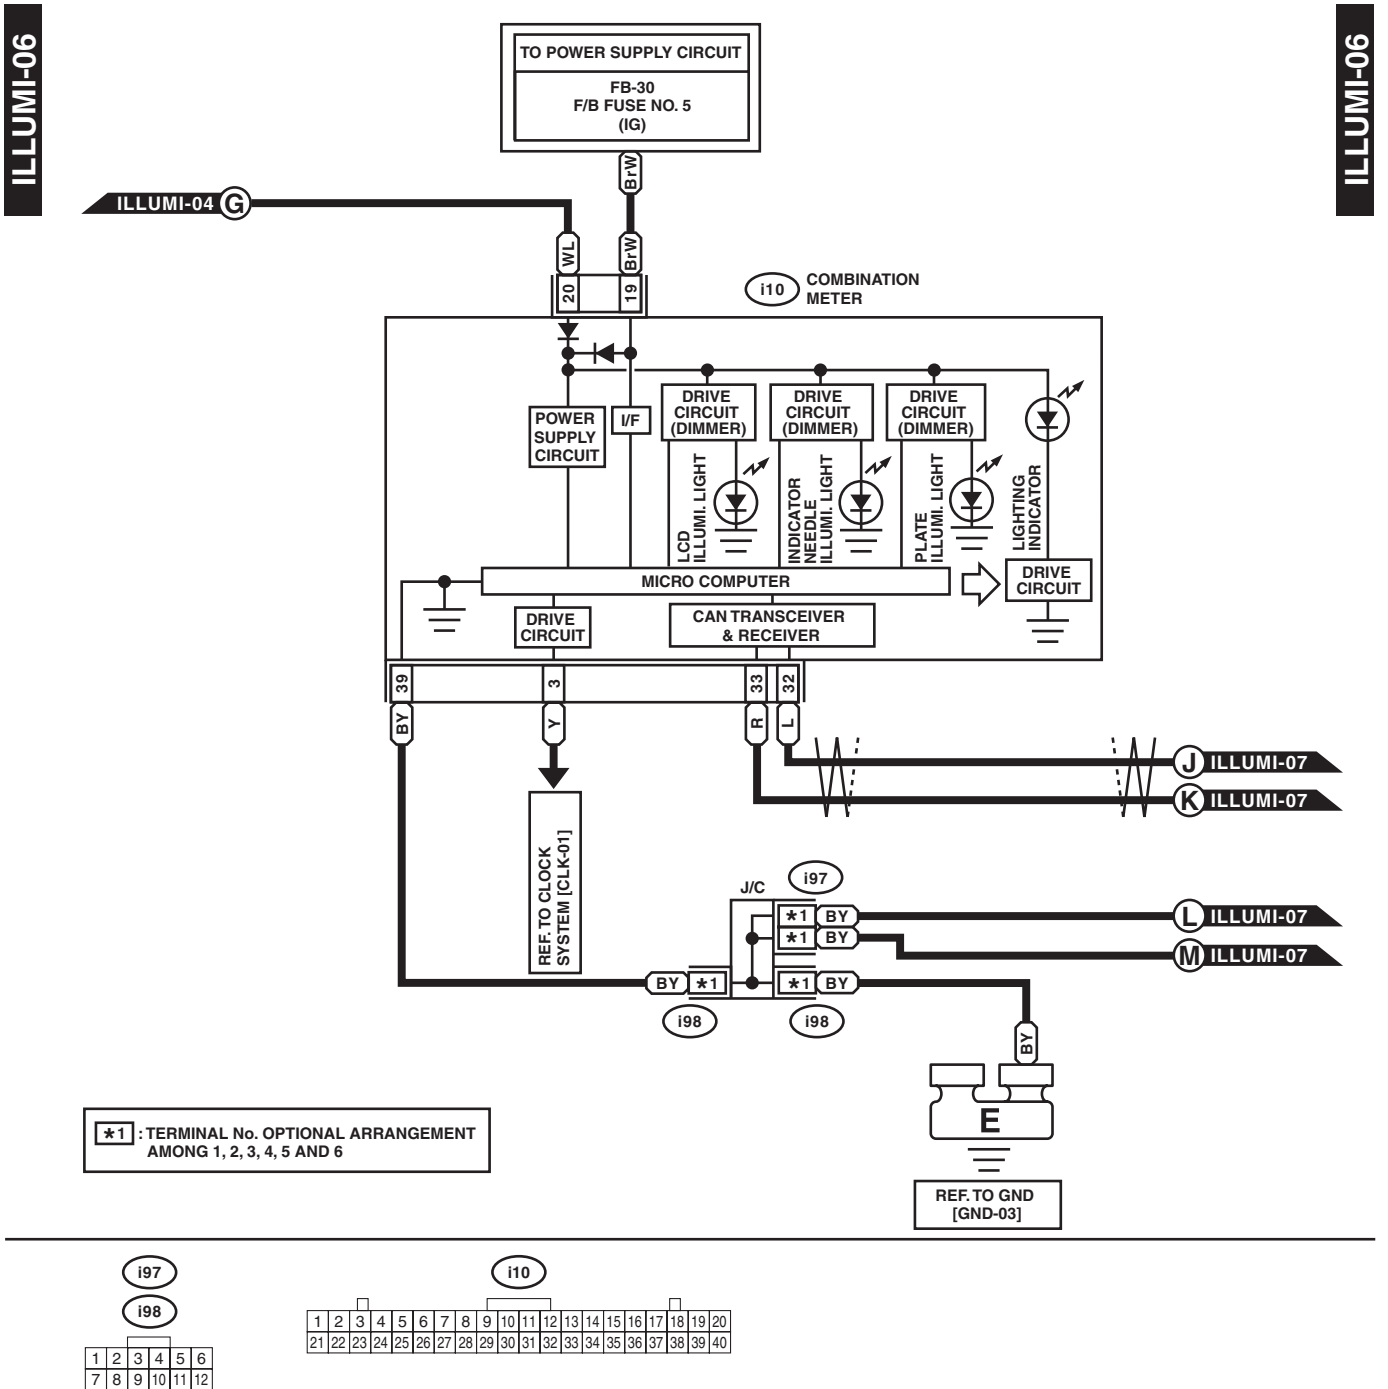


WI-25454

Clearance Light and Illumination Light System

WIRING SYSTEM

ILLUMI-07

ILLUMI-07

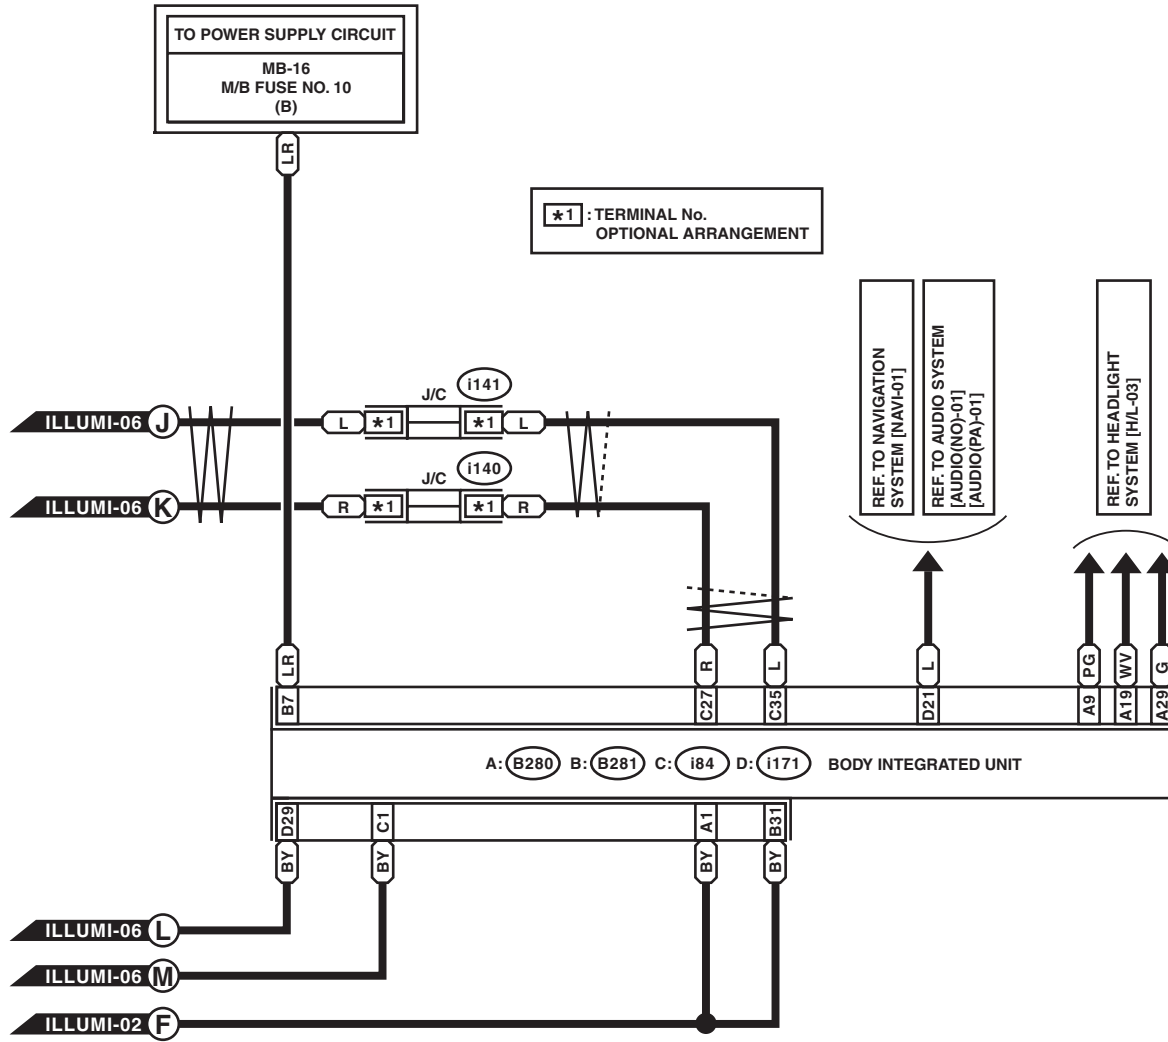

i140

i141

1

2

3

4

D: i171

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31	32	33	34	35

A: B280

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31	32	33	34	35

B: B281

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31	32	33	34	35

C: i84

1	2	3	4	5	6
7	8	9	10	11	12
13	14	15	16	17	18
19	20	21	22	23	24
25	26	27	28	29	30
31	32	33	34	35	36


WI-25455

Clock System

WIRING SYSTEM

14.Clock System

A: WIRING DIAGRAM

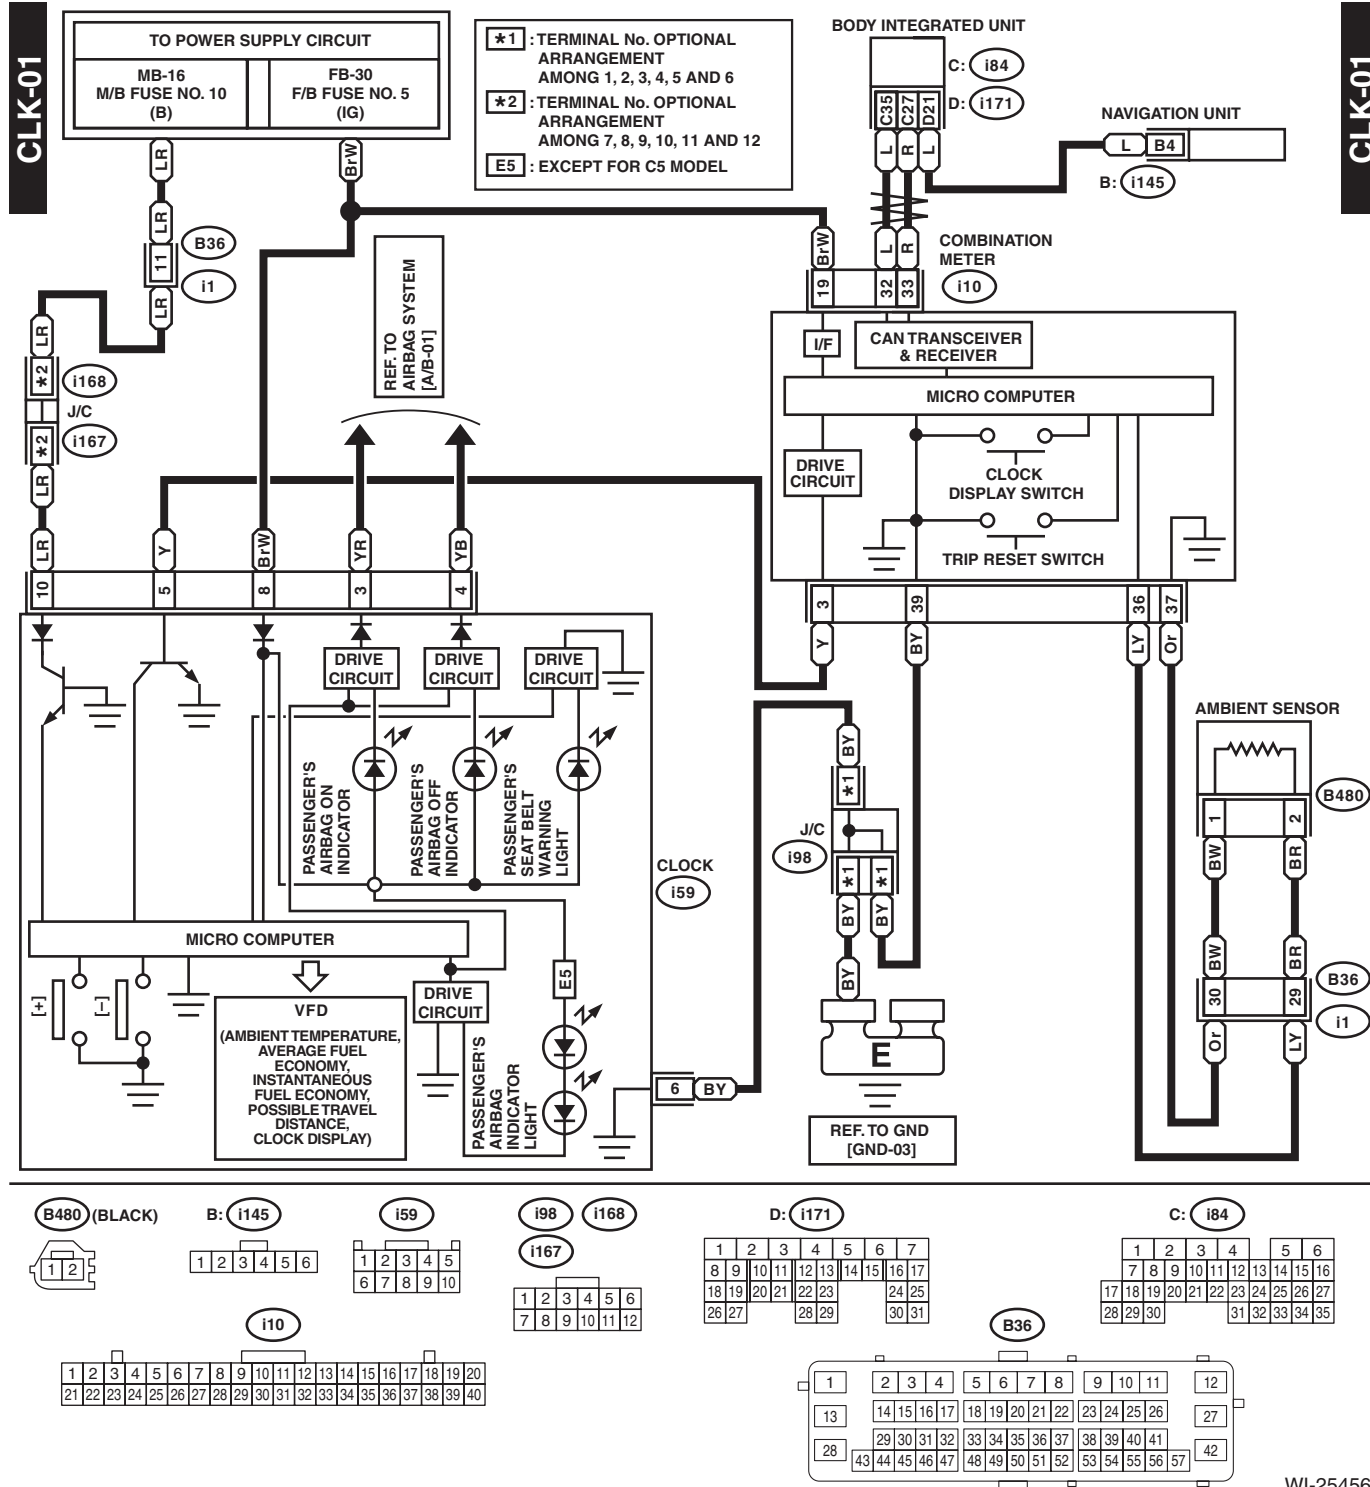


WI-25456

15. Combination Meter System

A: WIRING DIAGRAM

C/M-01


C/M-01

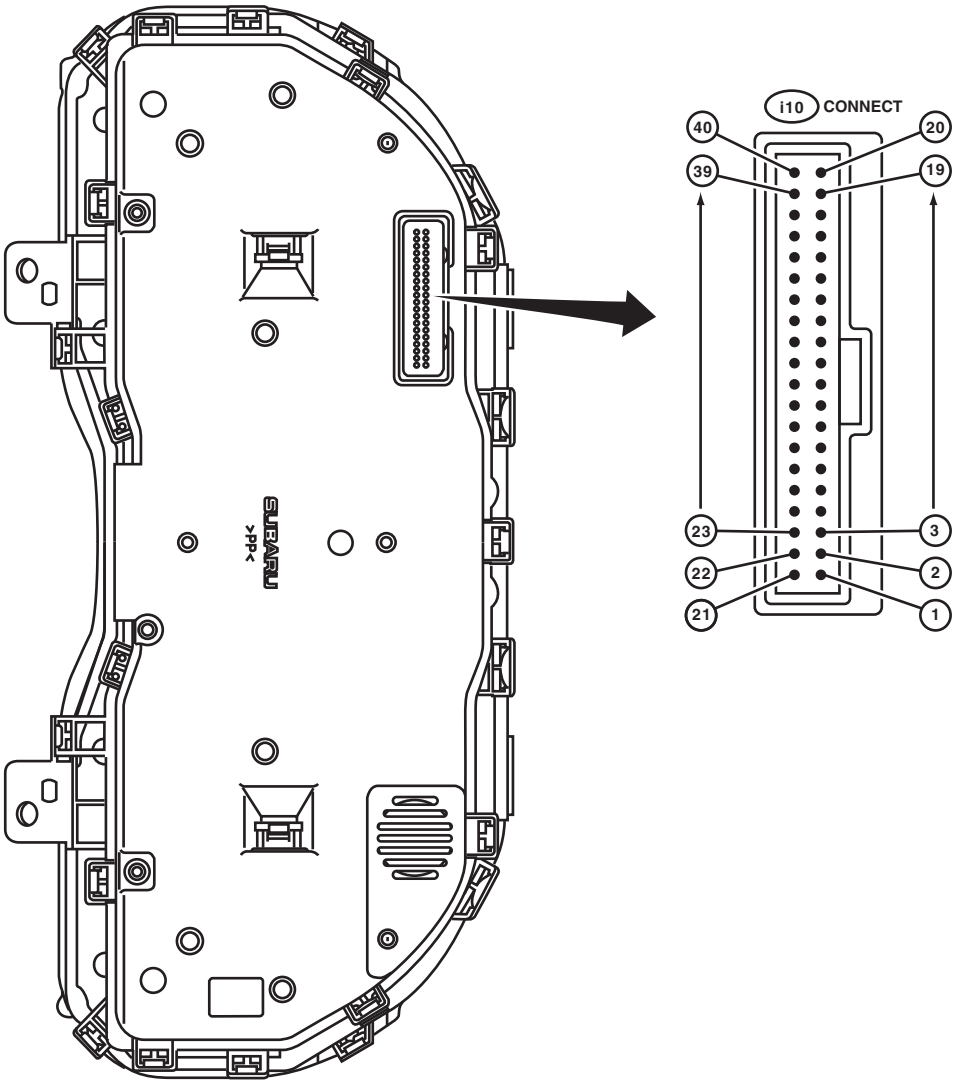


WI-25457

Combination Meter System

WIRING SYSTEM

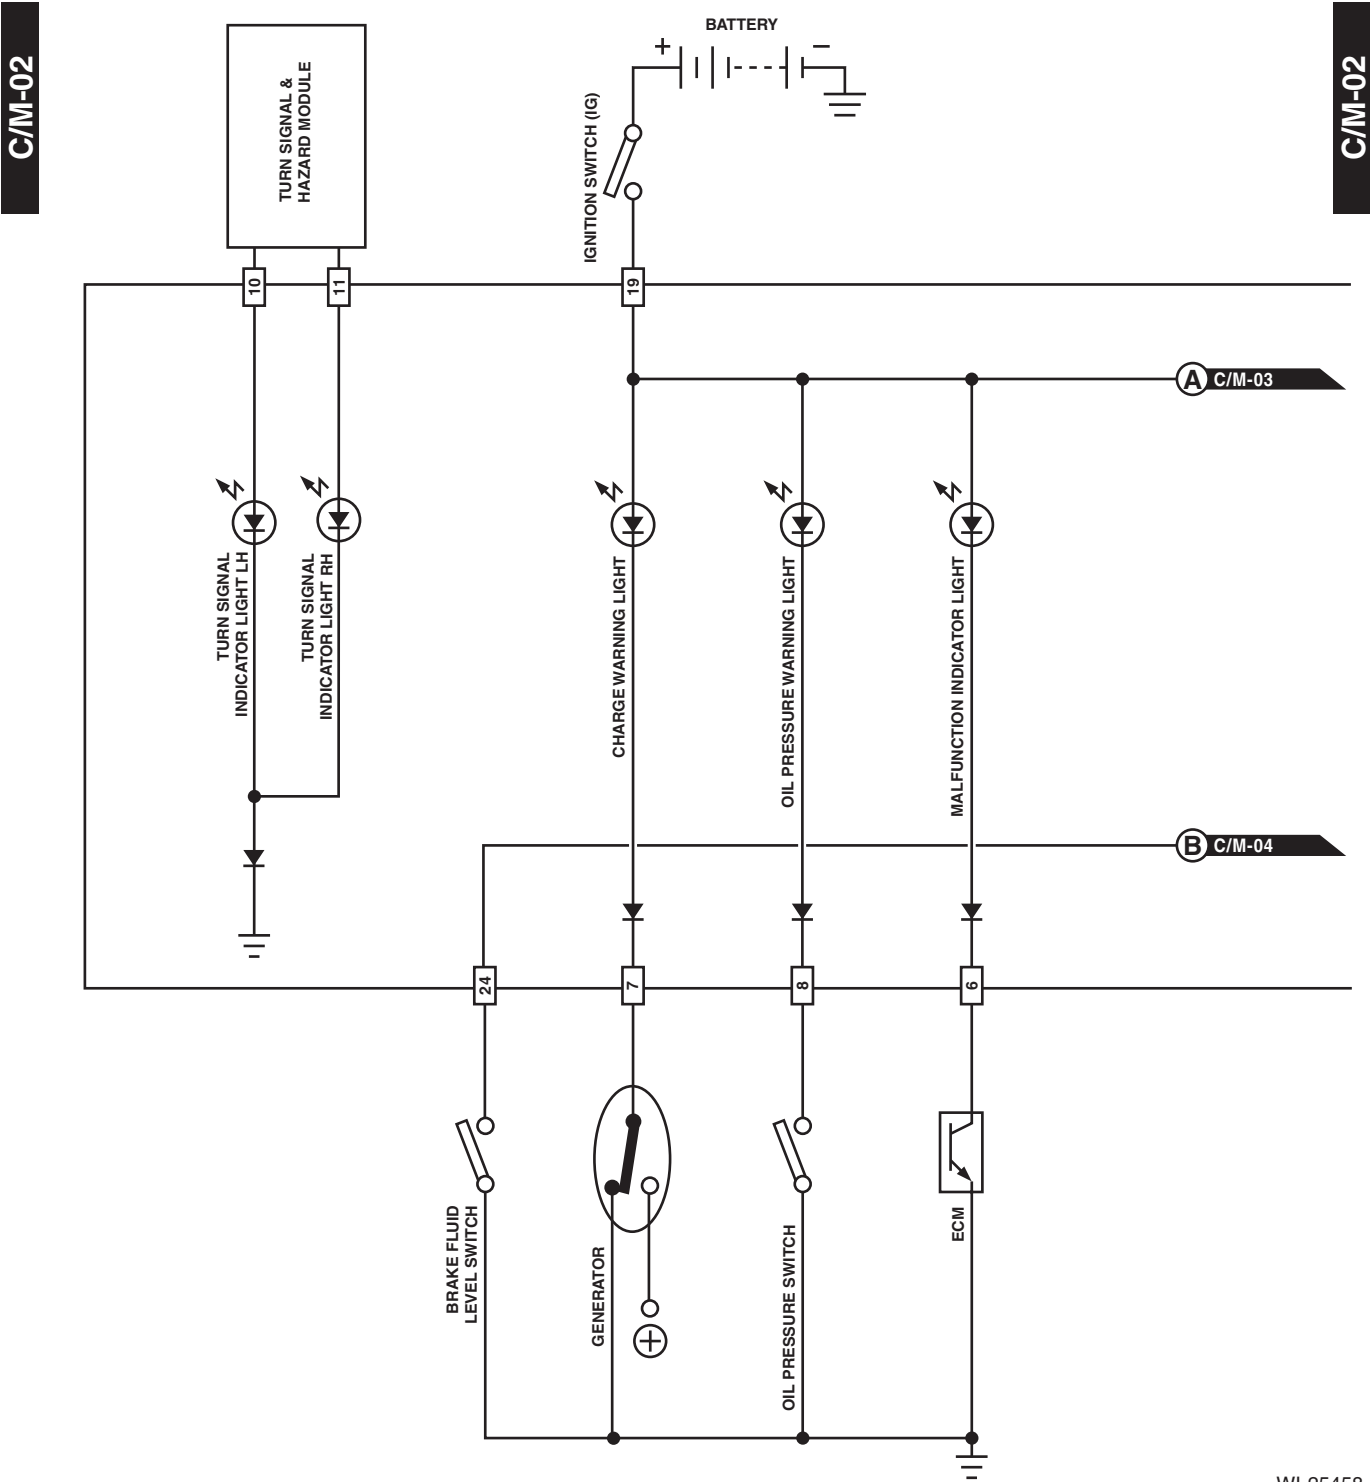

WI-25458

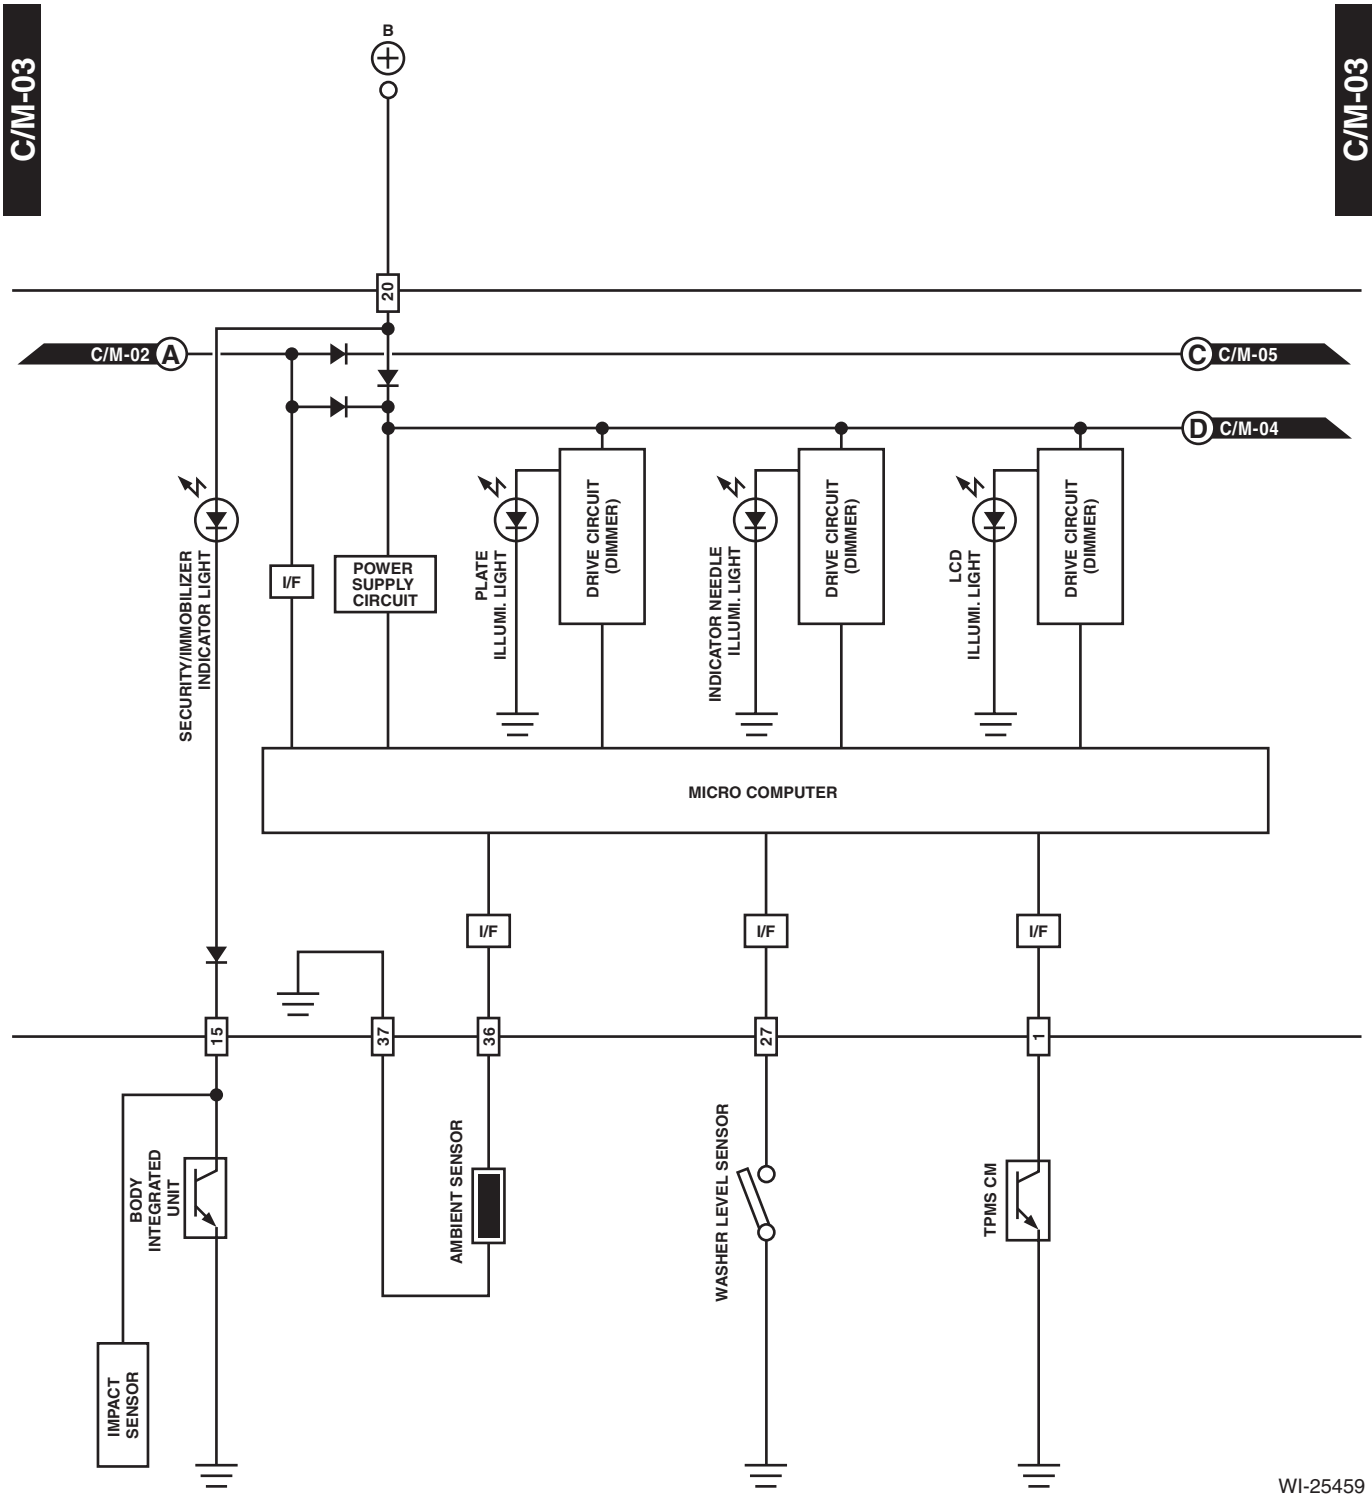

WI-25459

Combination Meter System

WIRING SYSTEM

C/M-04

C/M-04


*1 : SPORT SHIFT
HIGH ENGINE OIL TEMPERATURE
CUSTOMIZED
SEAT BELT
EPB
KEY WARNING
HEADLIGHT WARNING

SC : WITH SECURITY CM


PA : PREMIUM AUDIO MODEL

WN : WITH NAVIGATION

WS : WITH SUNROOF

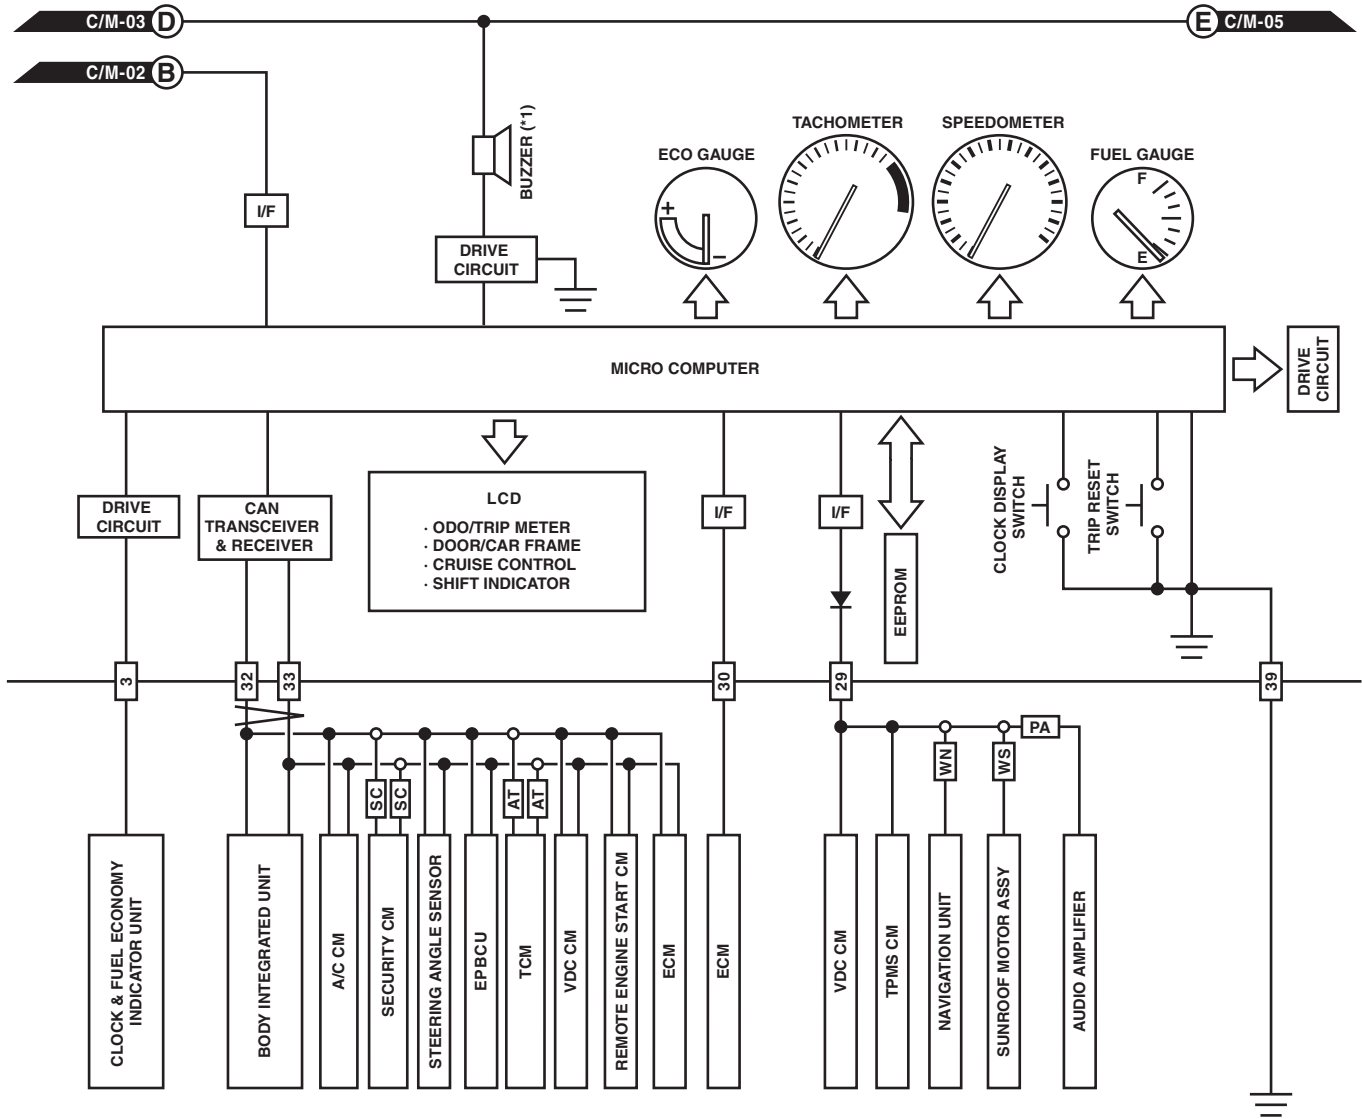

WI-25460

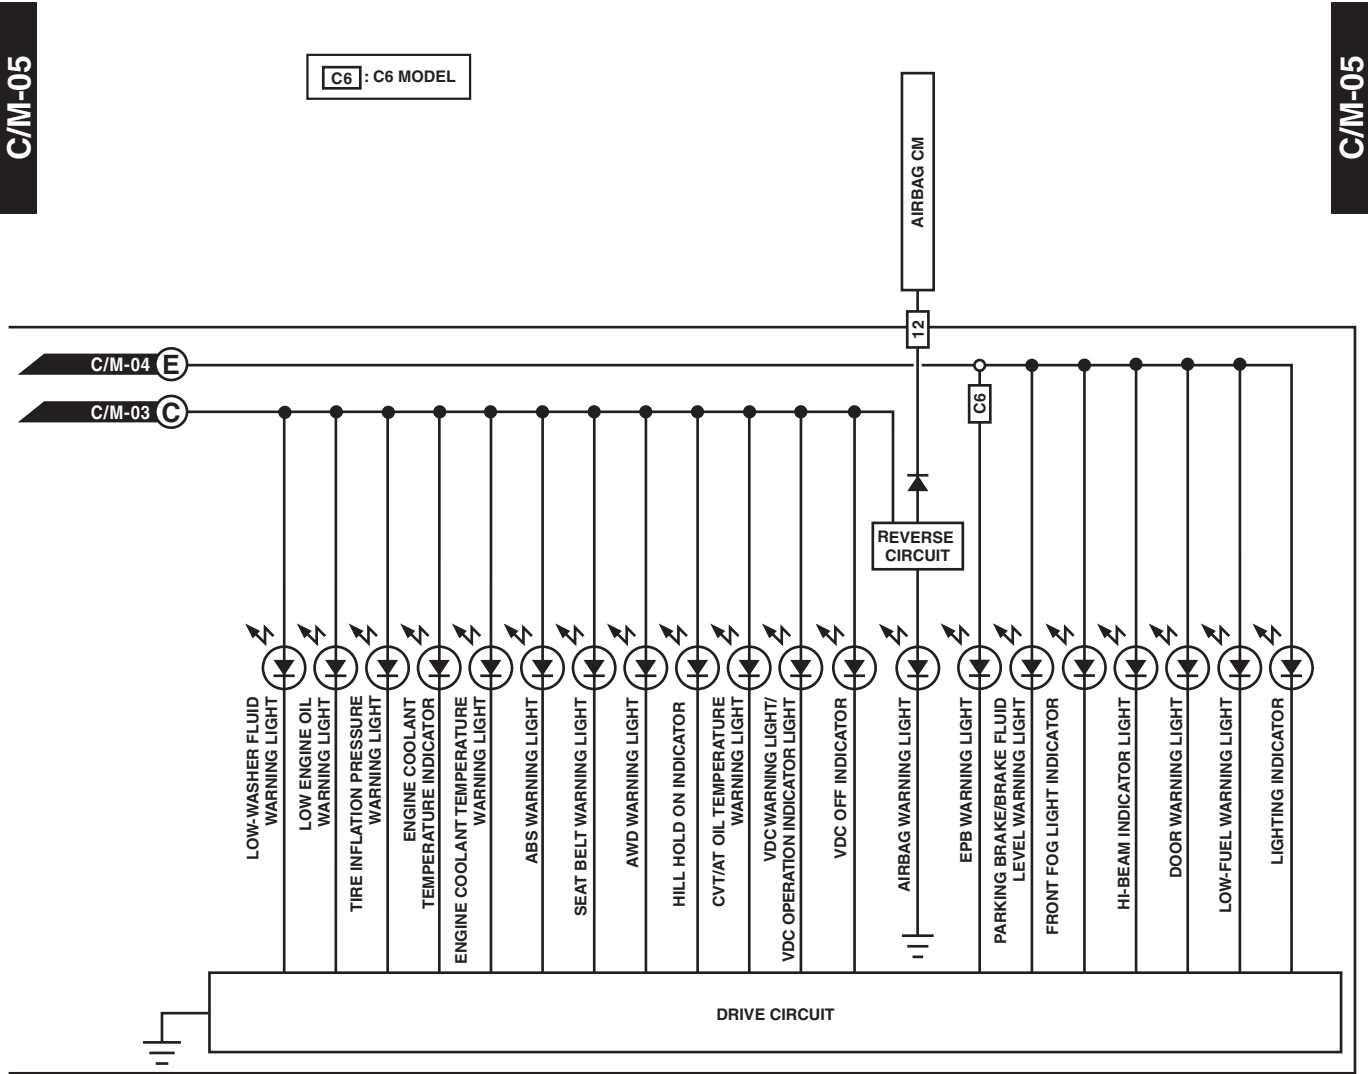

A: WIRING DIAGRAM





Coolant Temperature System

WIRING SYSTEM

C/TEMP-02

C/TEMP-02

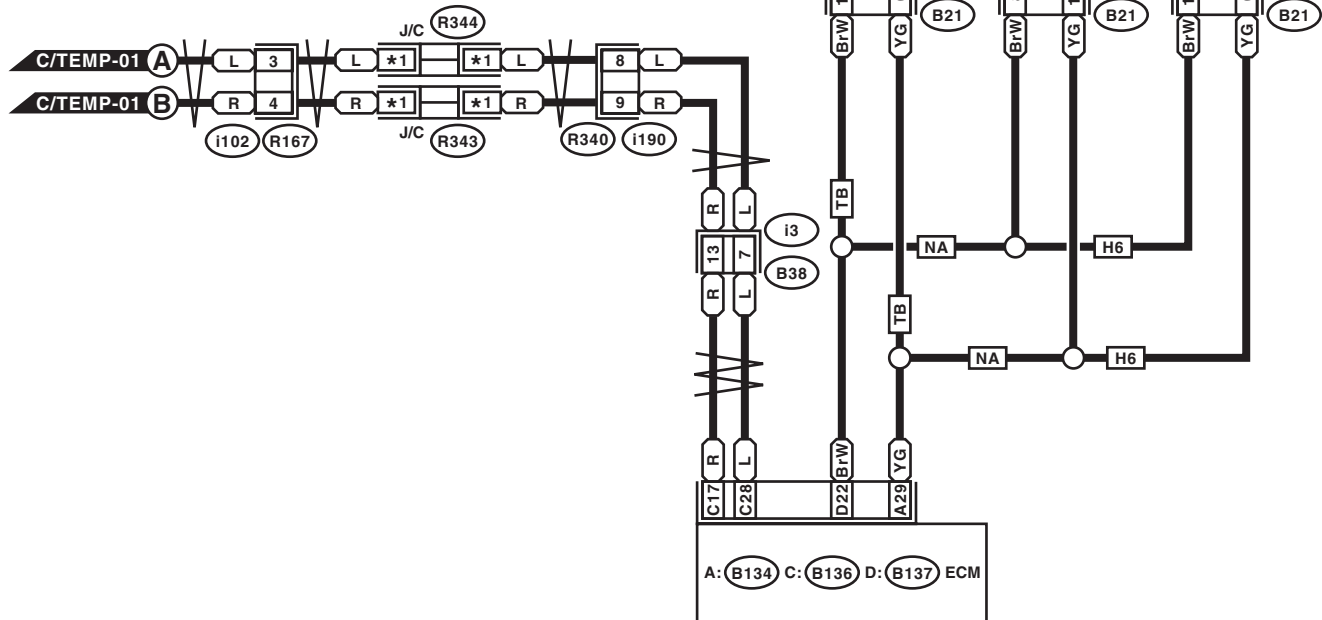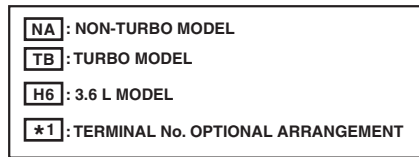

NA : E8 (BROWN)

TB : E8 (BLACK)

 
 
 
 
R343

i190


i102

B38


D: B137




A: B134

 

C: B136

 

B21 (BLACK)

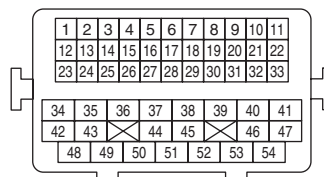

WI-25463


Cruise Control System

WIRING SYSTEM

17.Cruise Control System

A: WIRING DIAGRAM


1. 2.5 L NON-TURBO MODEL

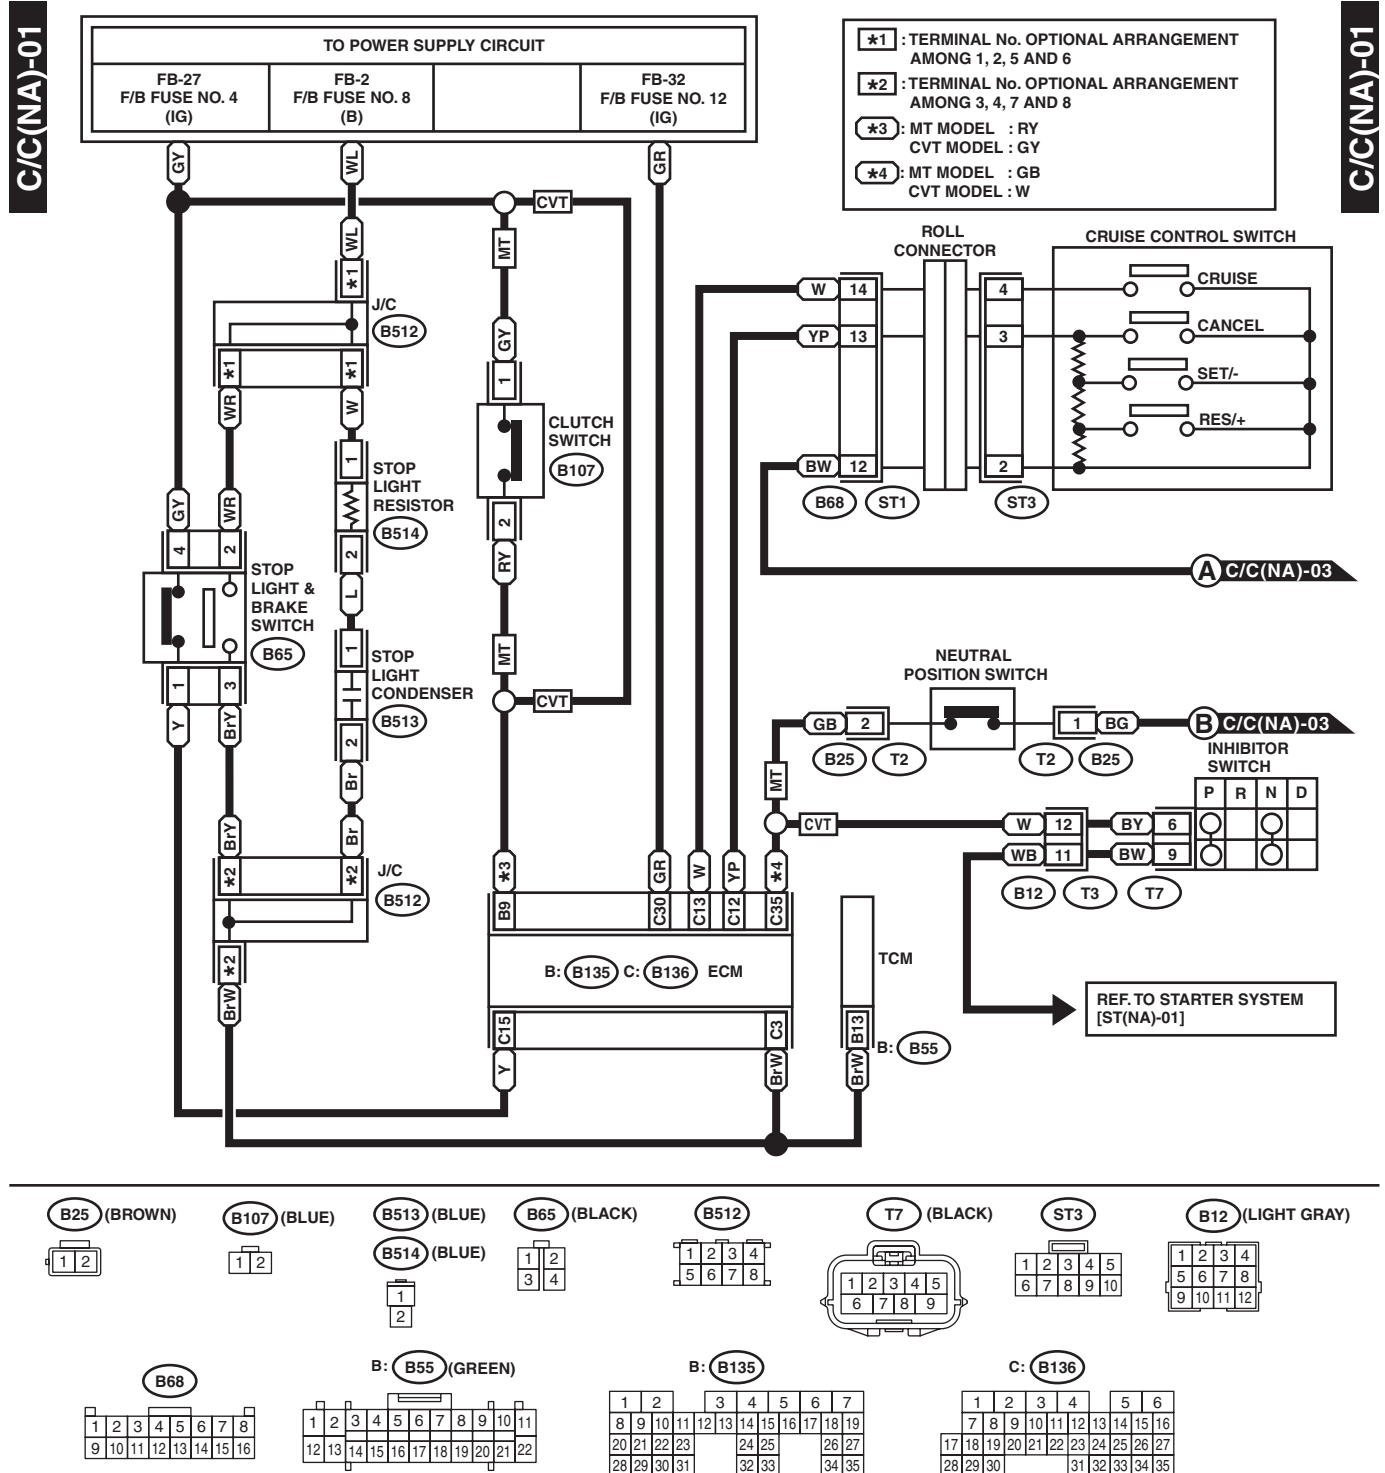

WI-25464


Cruise Control System

WIRING SYSTEM

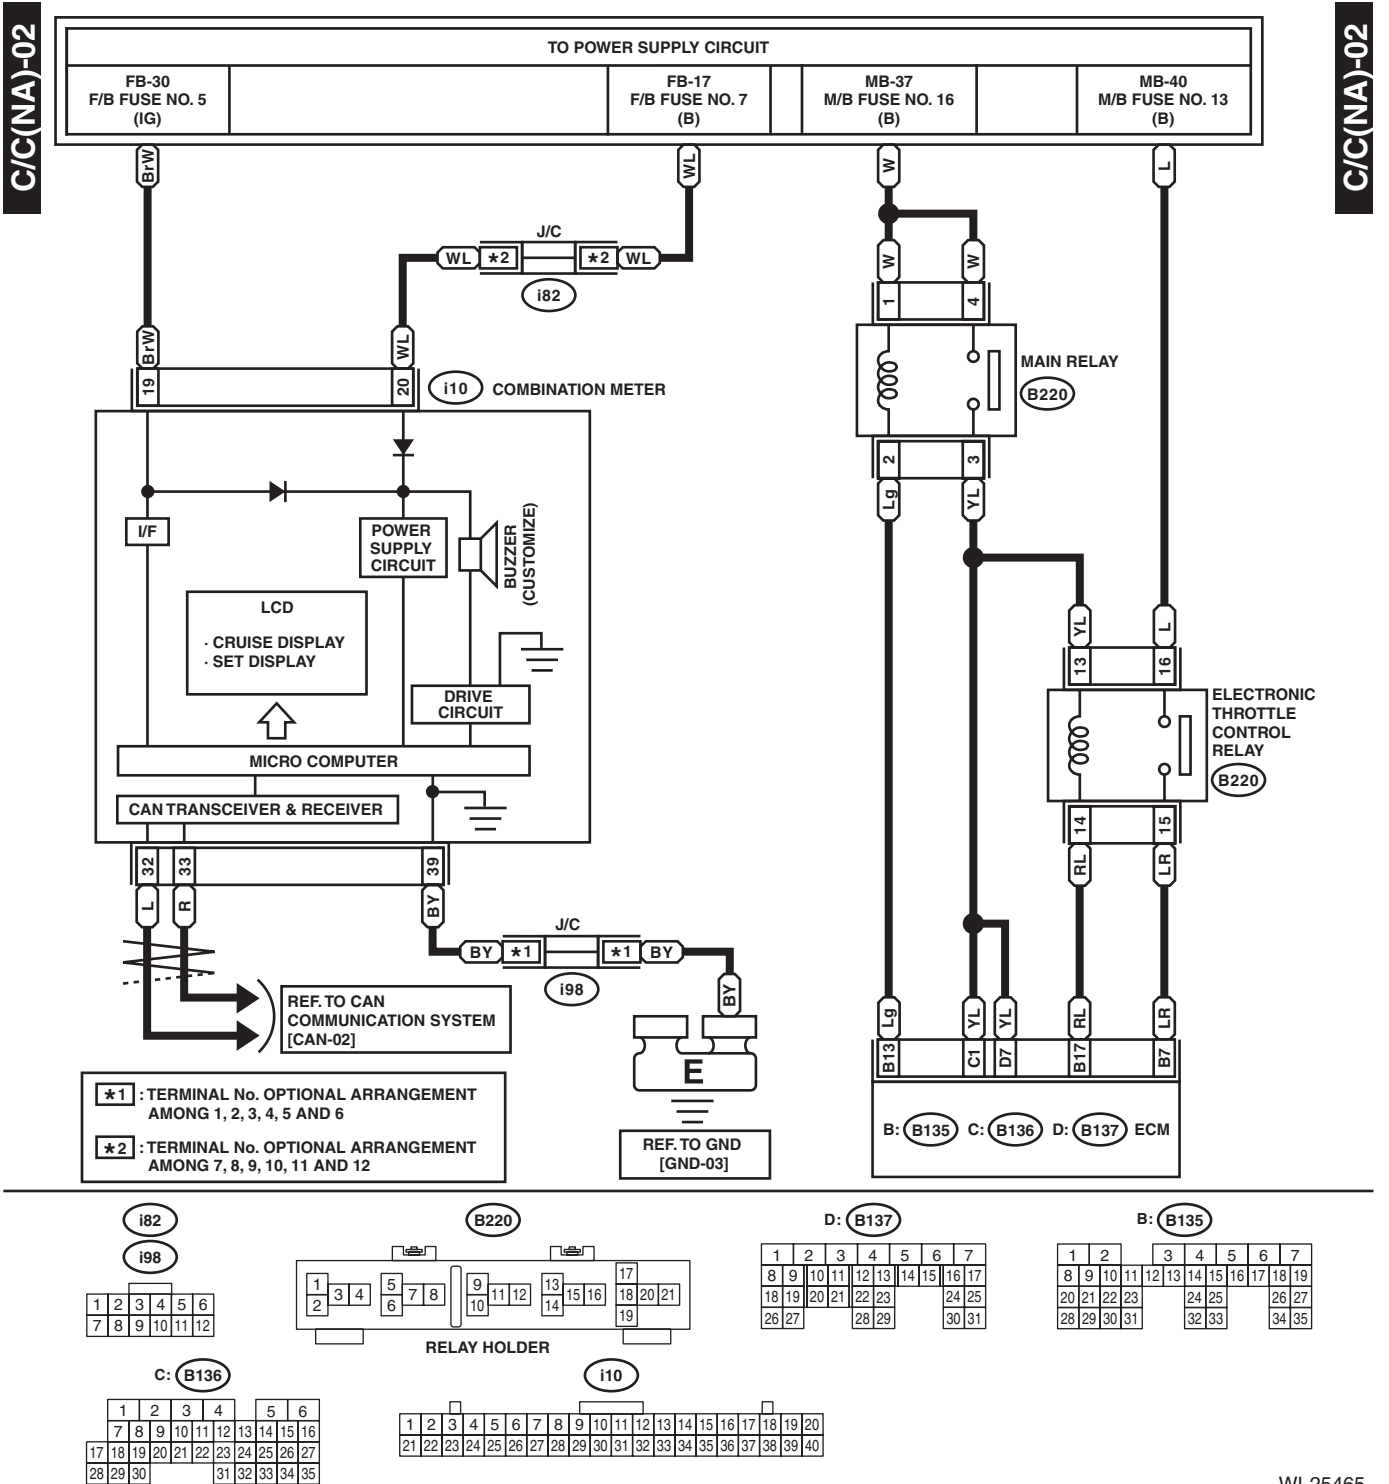


Cruise Control System

WIRING SYSTEM

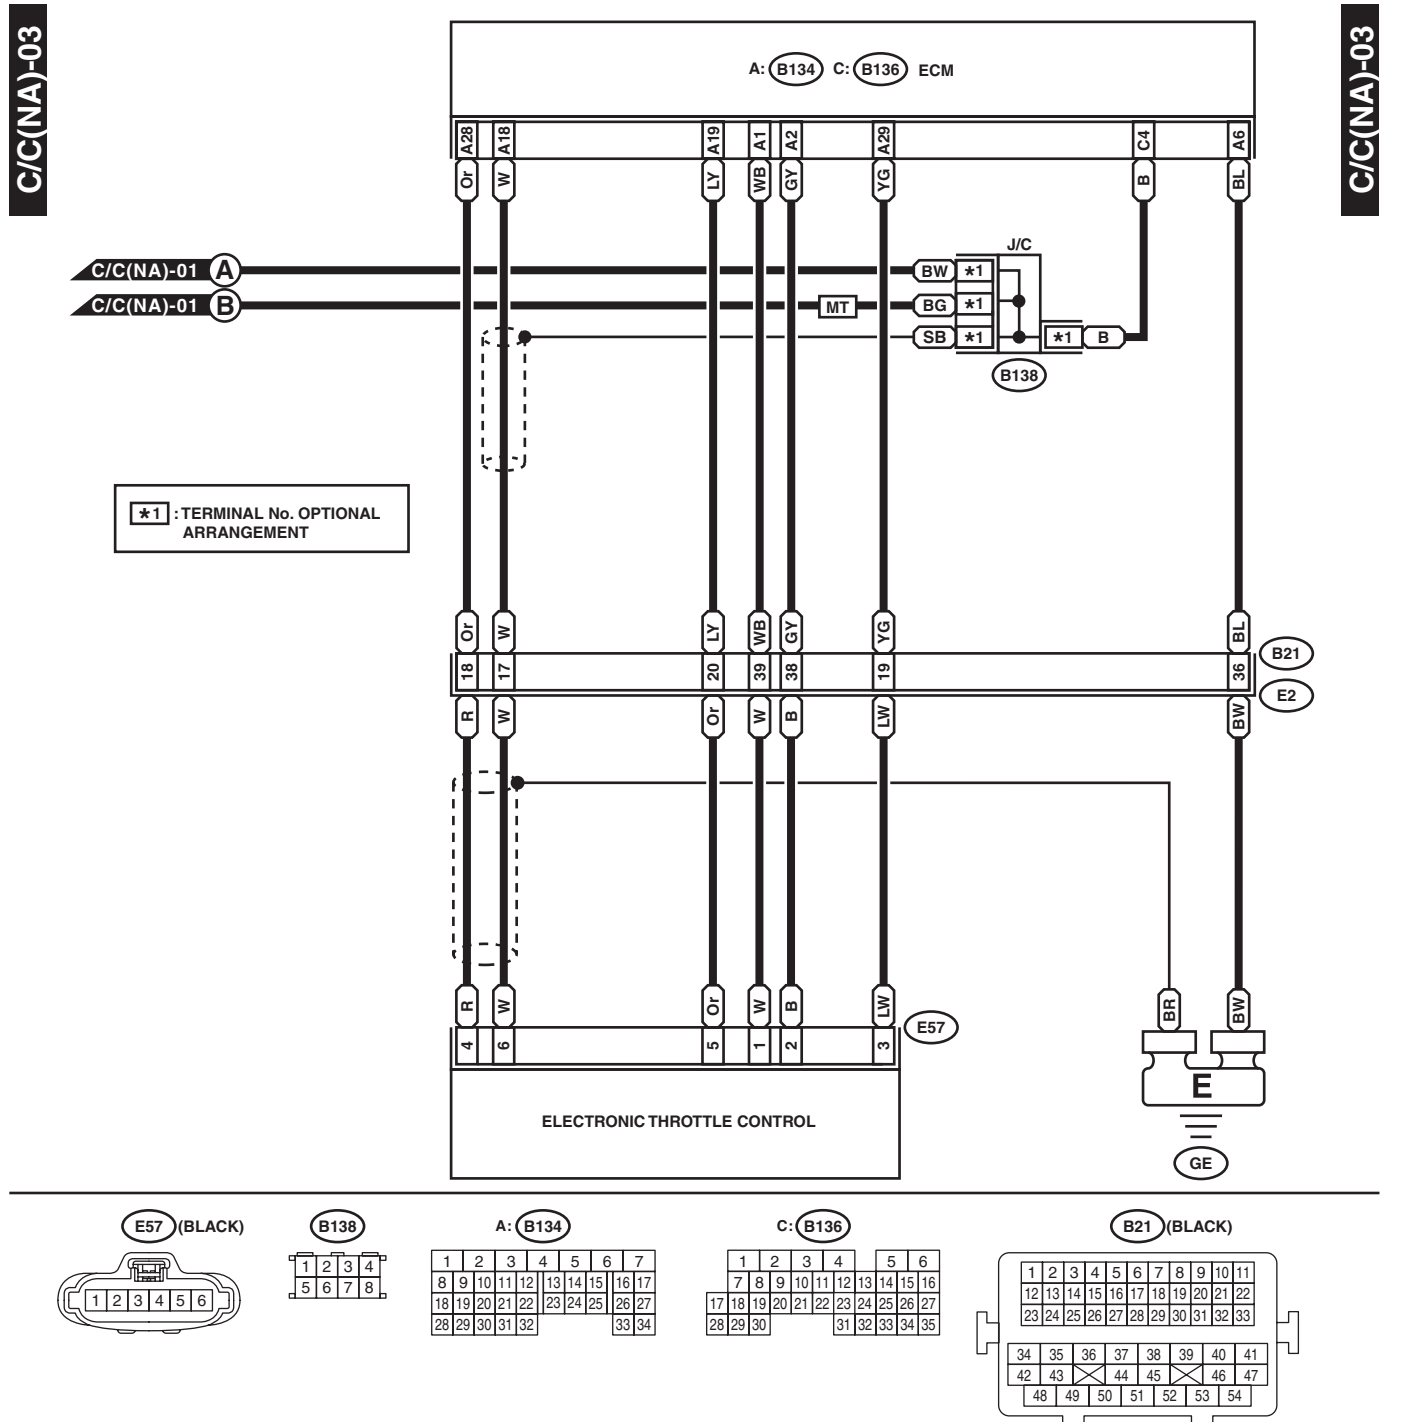

WI-25466


2. EXCEPT FOR 2.5 L NON-TURBO MODEL

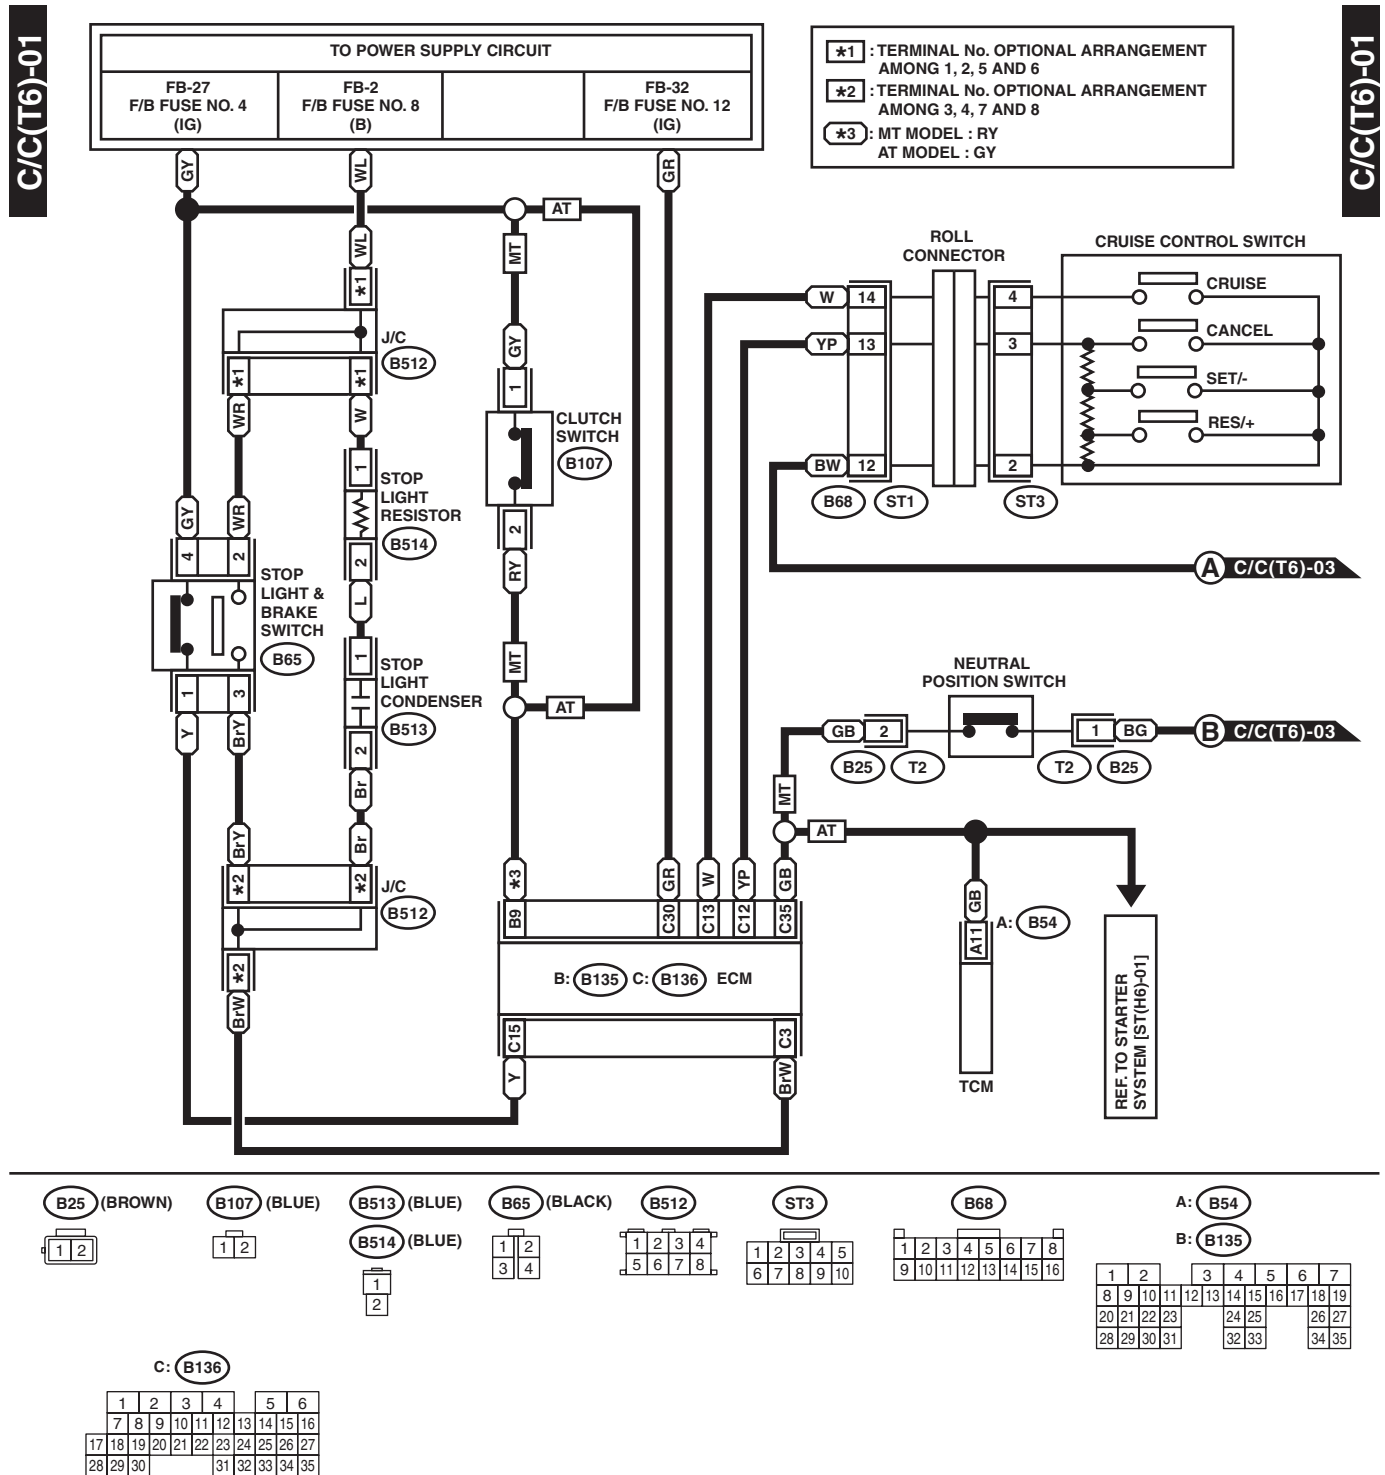

WI-25467

Cruise Control System

WIRING SYSTEM






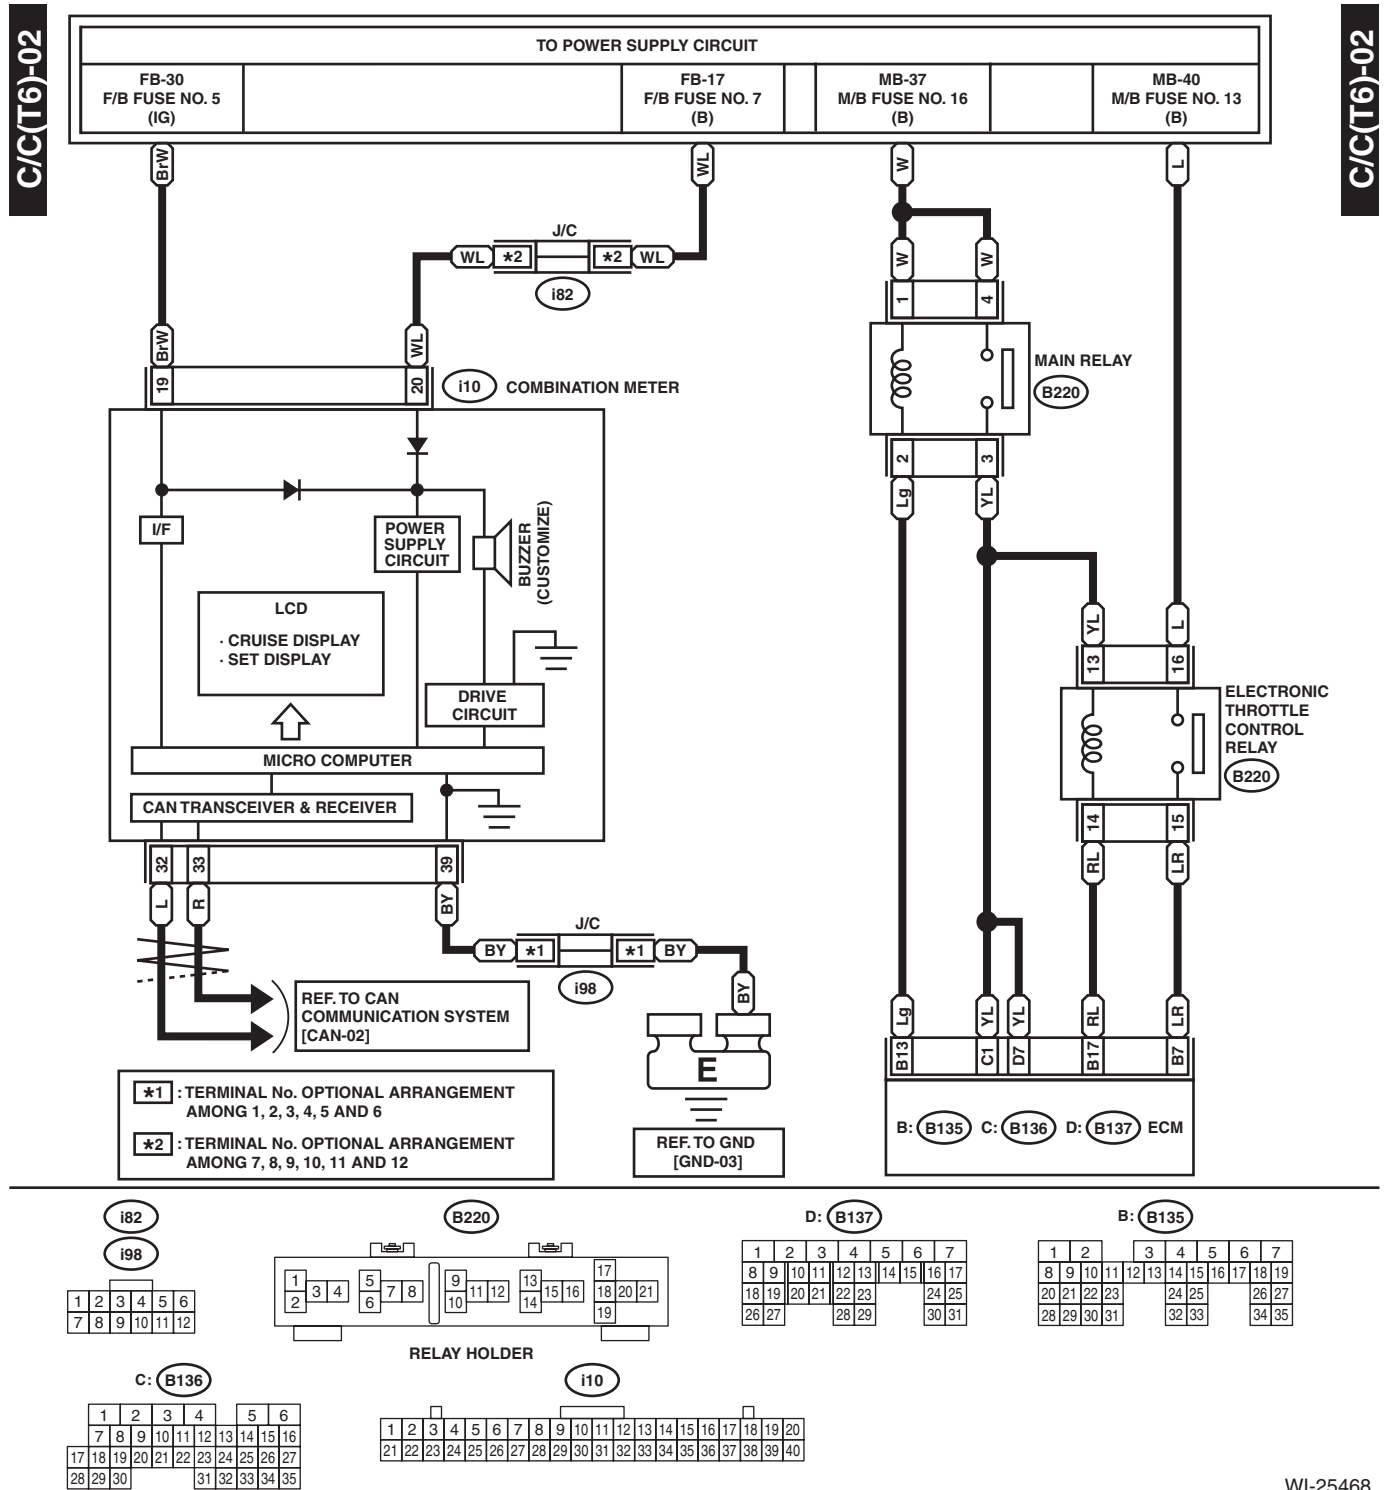


Cruise Control System

WIRING SYSTEM

C/C(T6)-03

 C/C(T6)-03

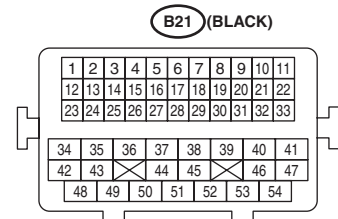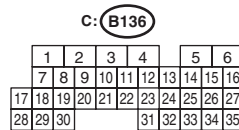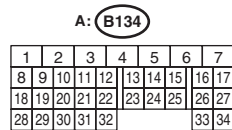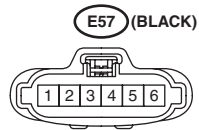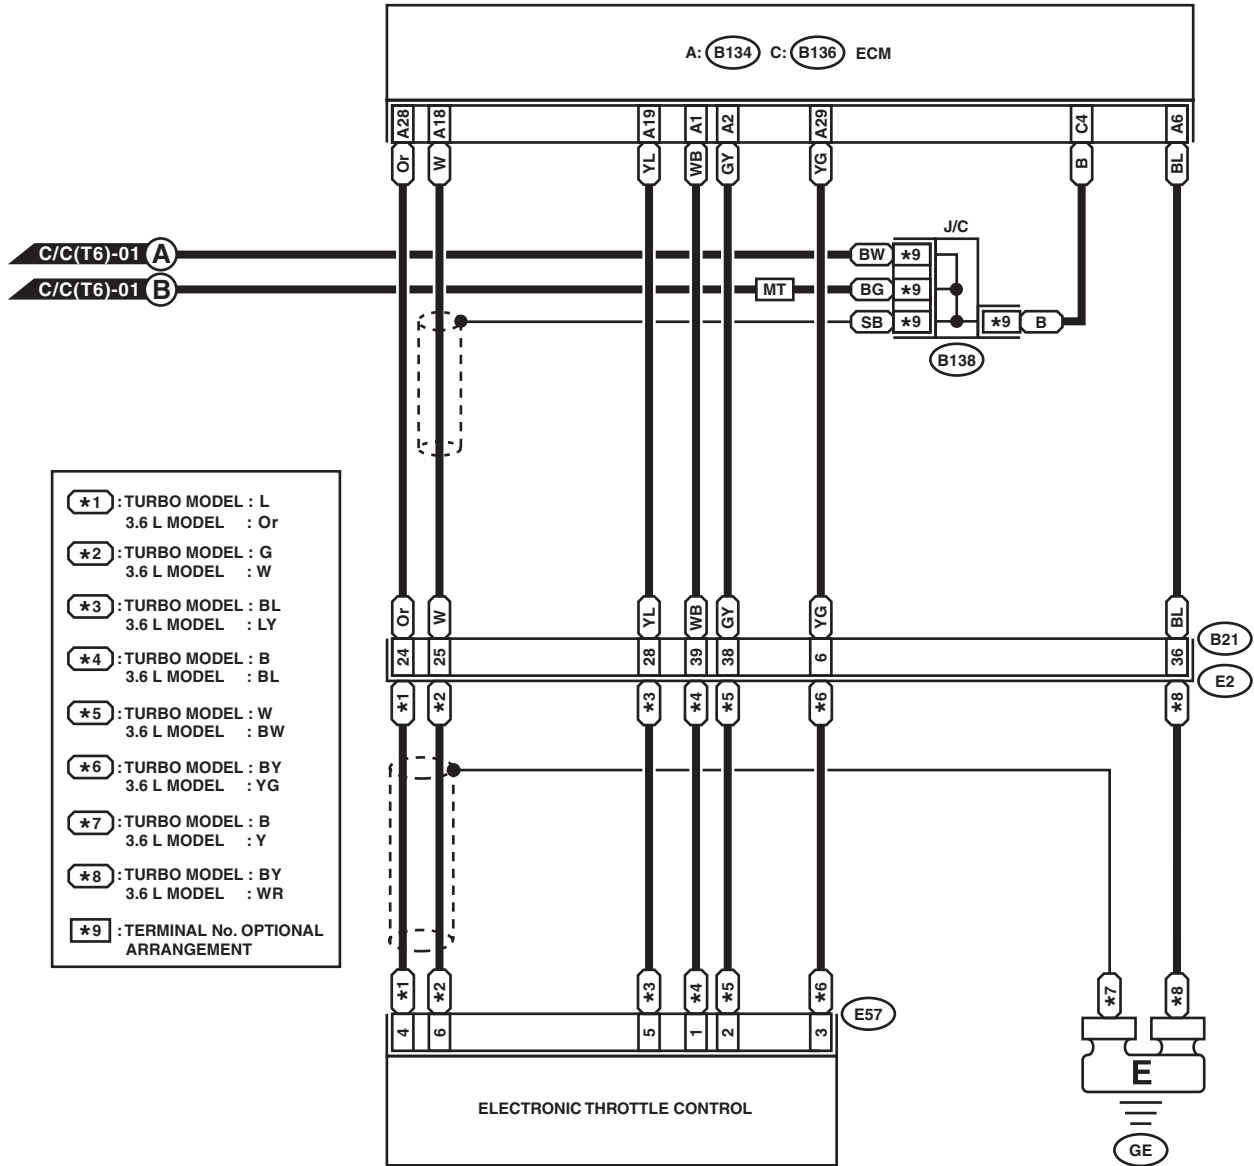


WI-25469

CVT Control System


WIRING SYSTEM

18.CVT Control System

A: WIRING DIAGRAM

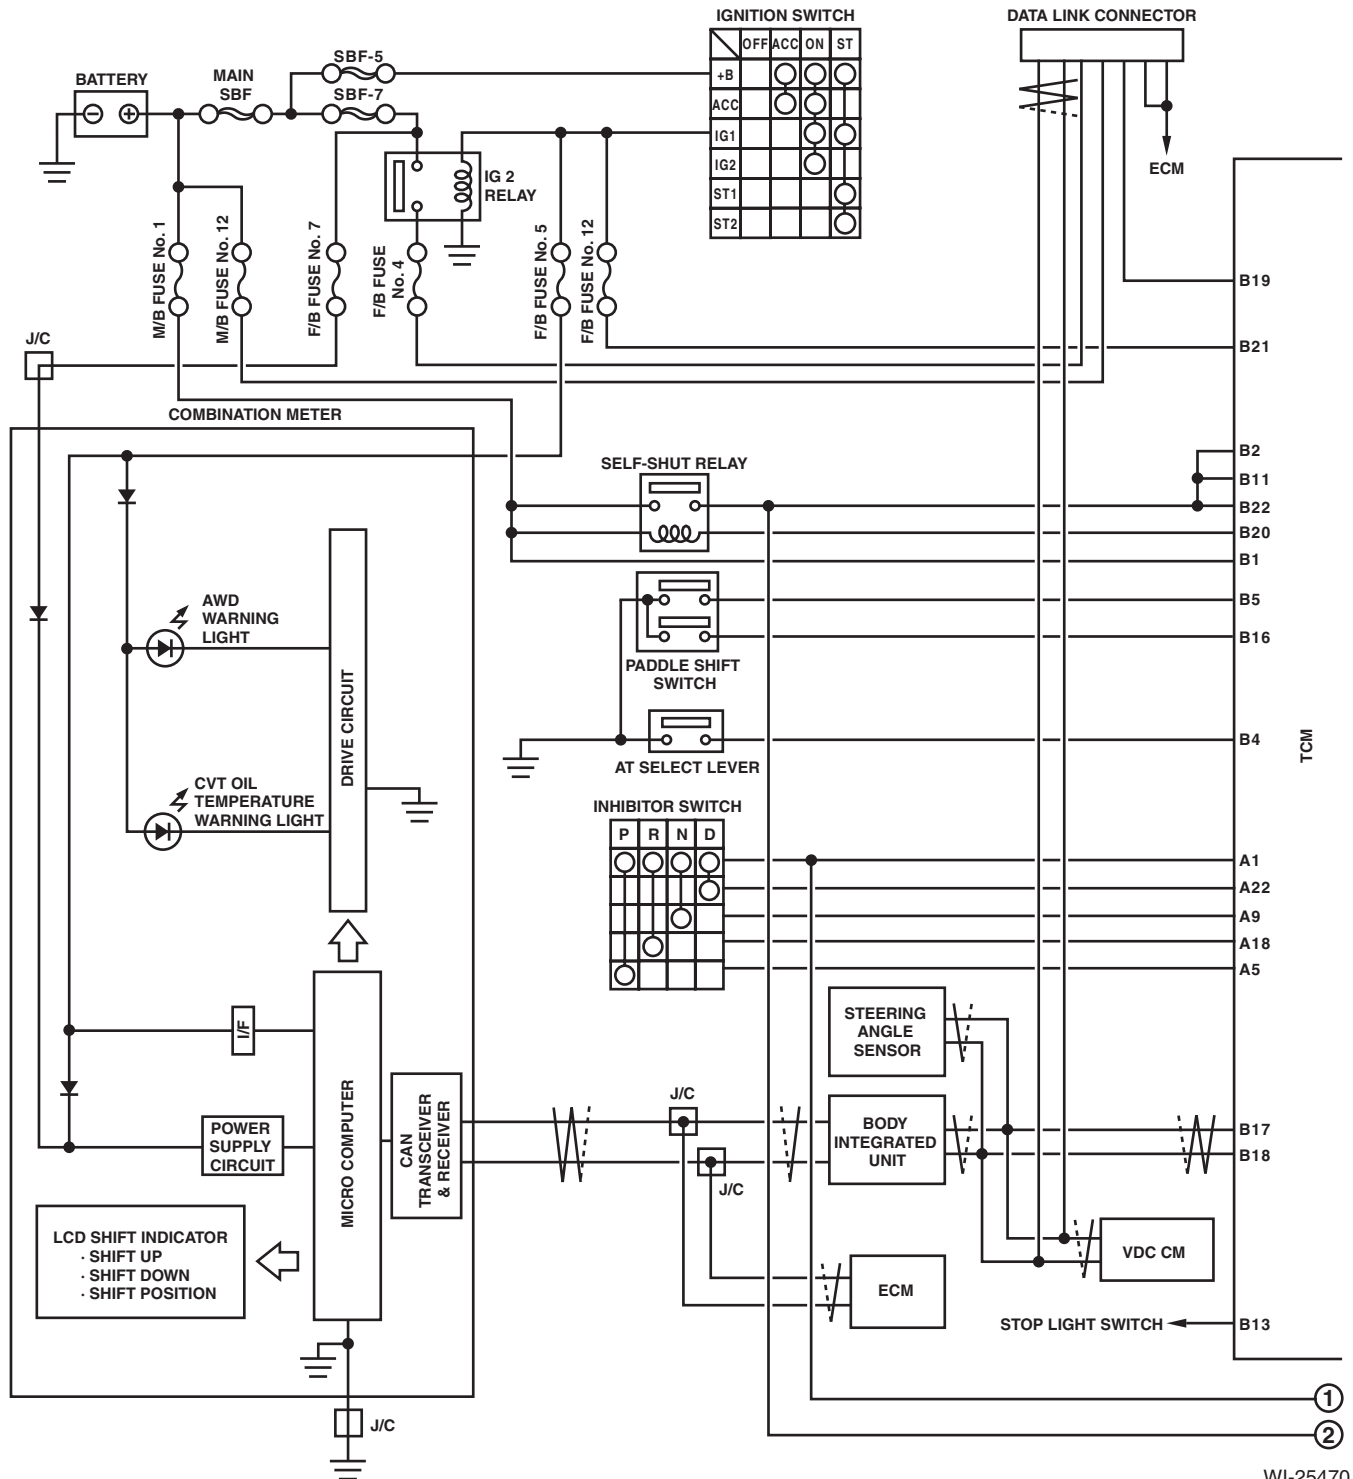


WI-25470

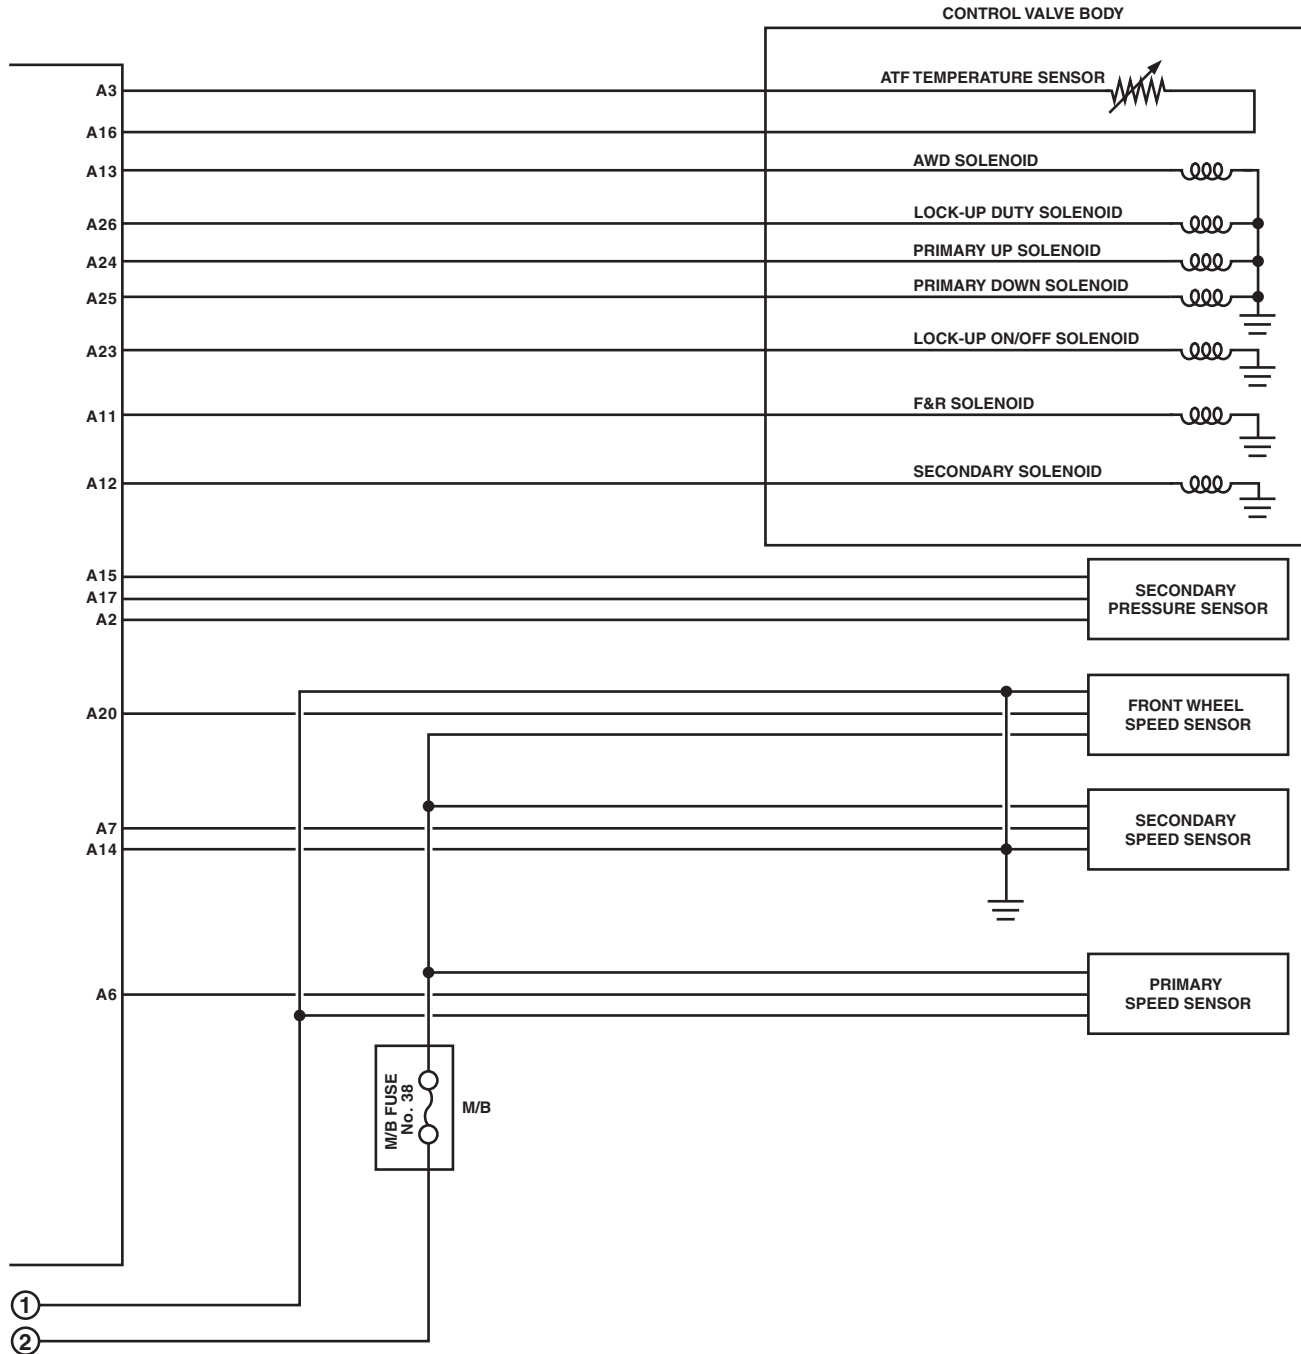

WI-25471

CVT Control System








WIRING SYSTEM

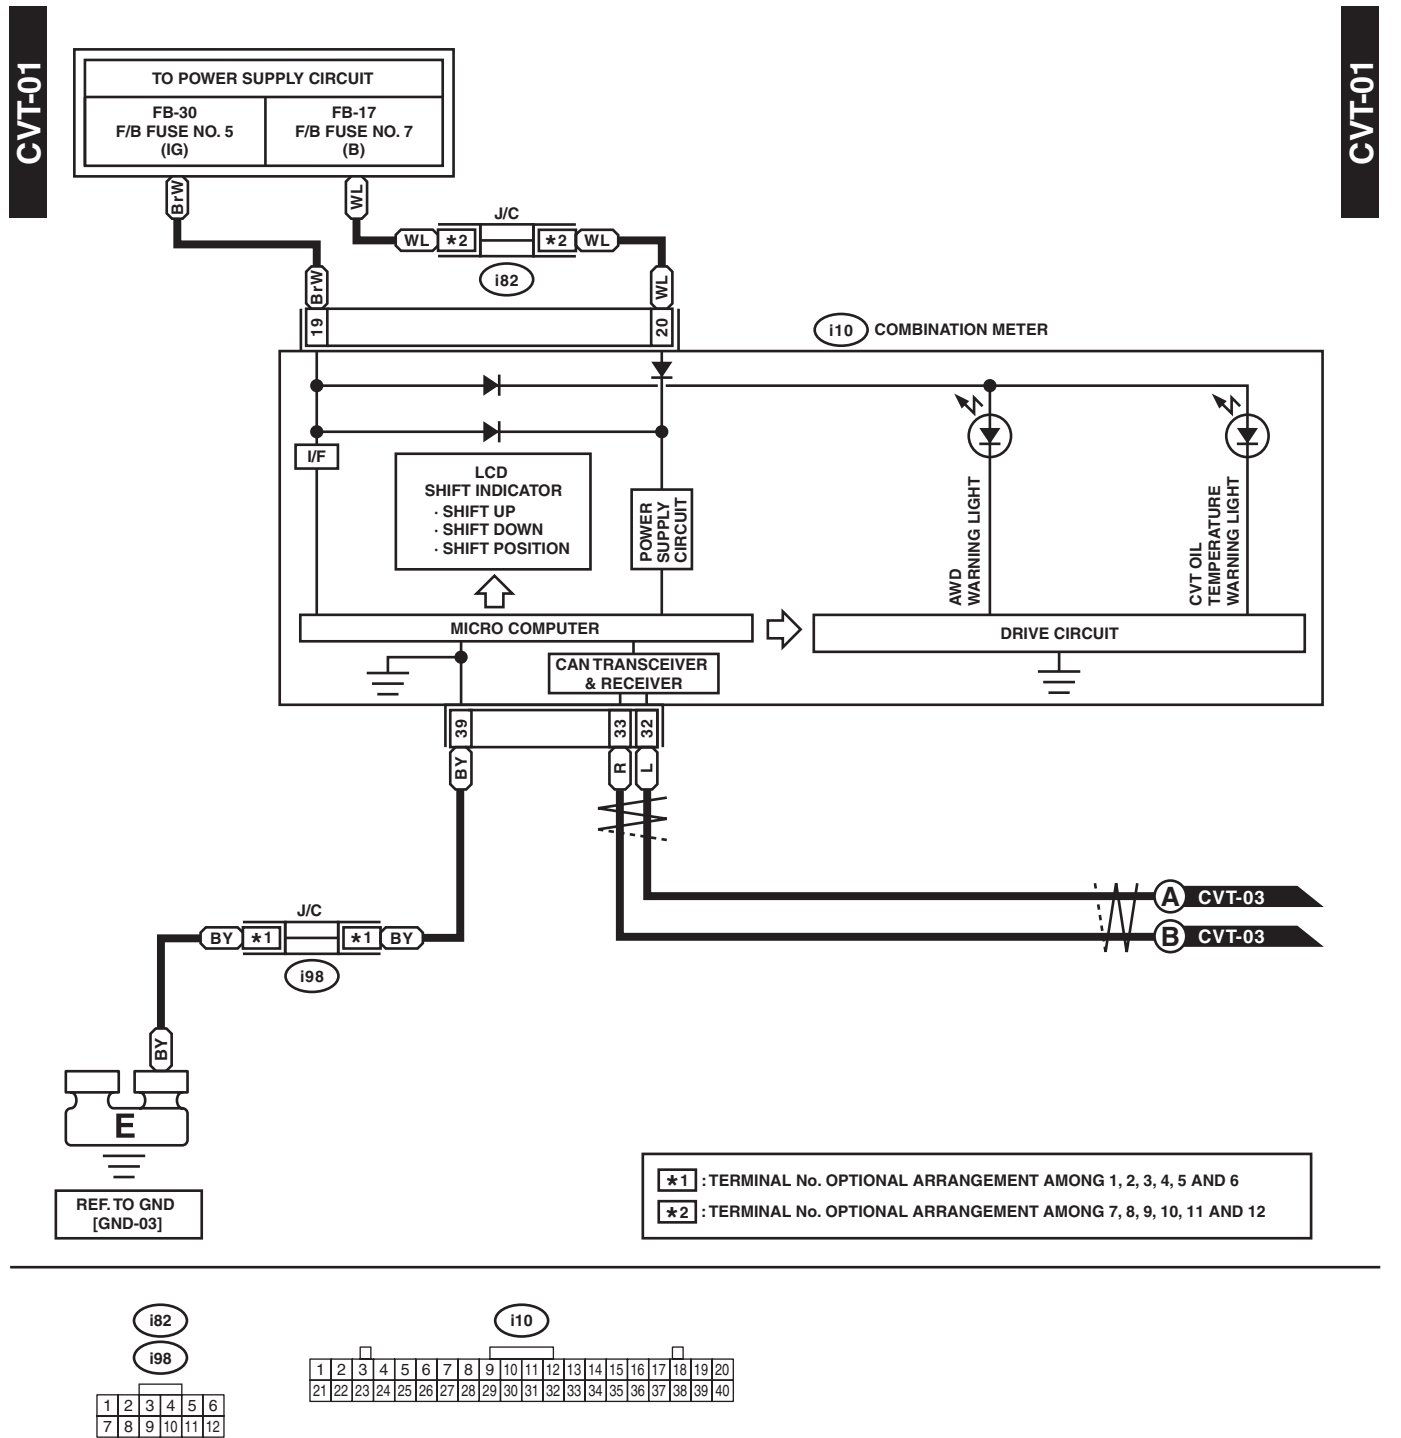

WI-25472

CVT-02

    CVT-02

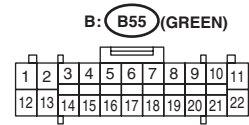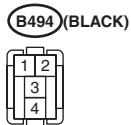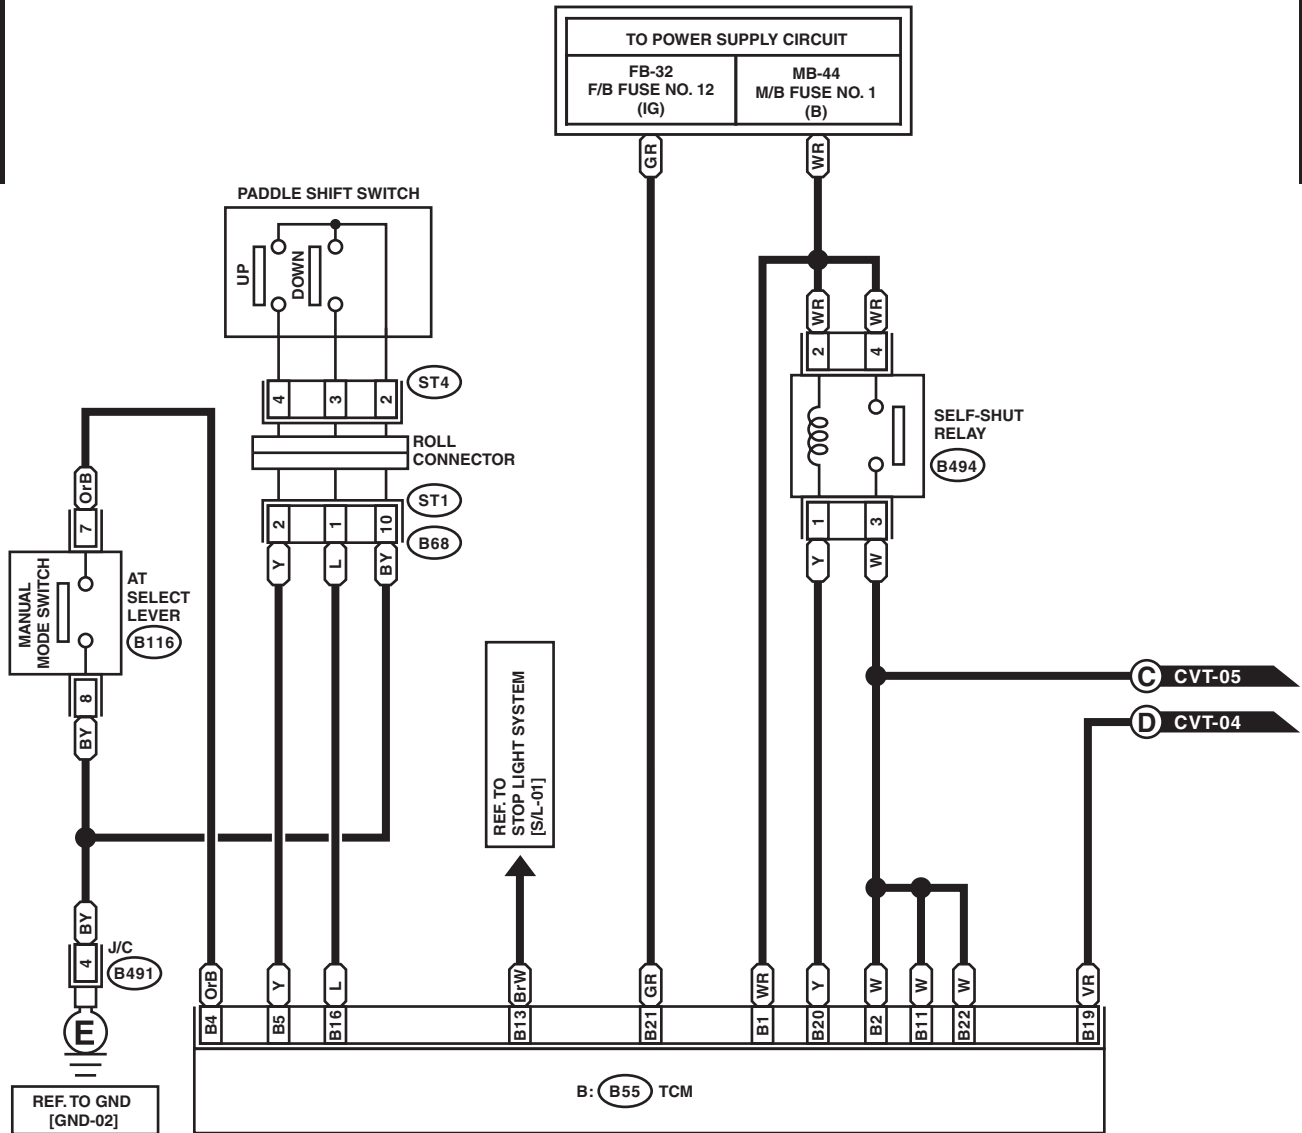


WI-25473

CVT Control System






WIRING SYSTEM

CVT-03

CVT-03

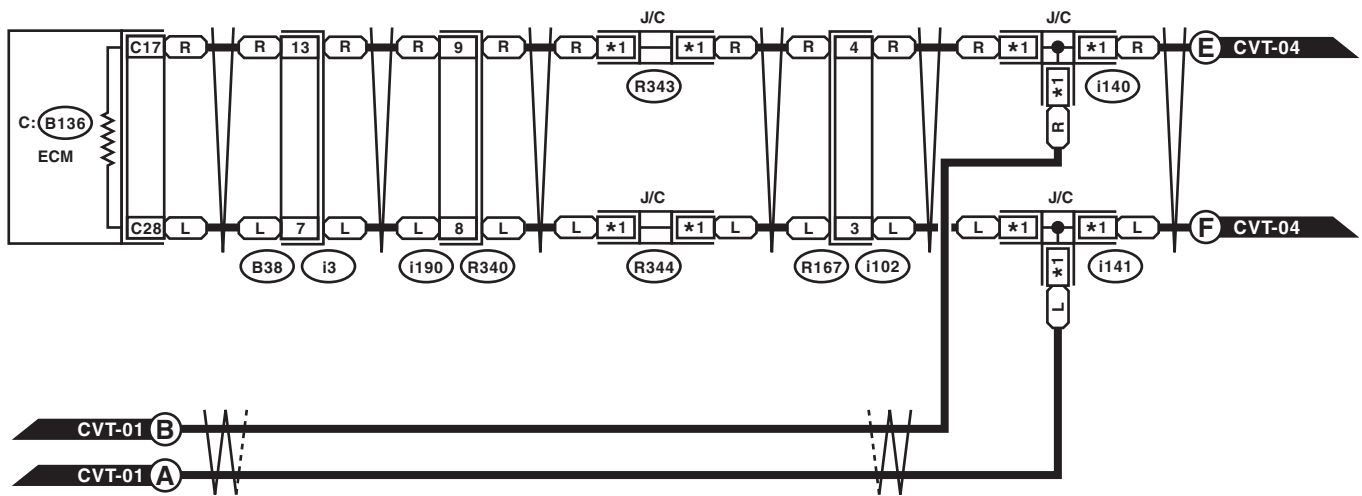



*1: TERMINAL No. OPTIONAL ARRANGEMENT

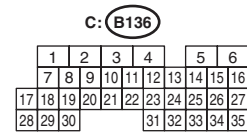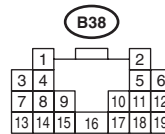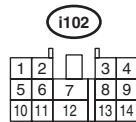  

WI-25474

CVT Control System


WIRING SYSTEM

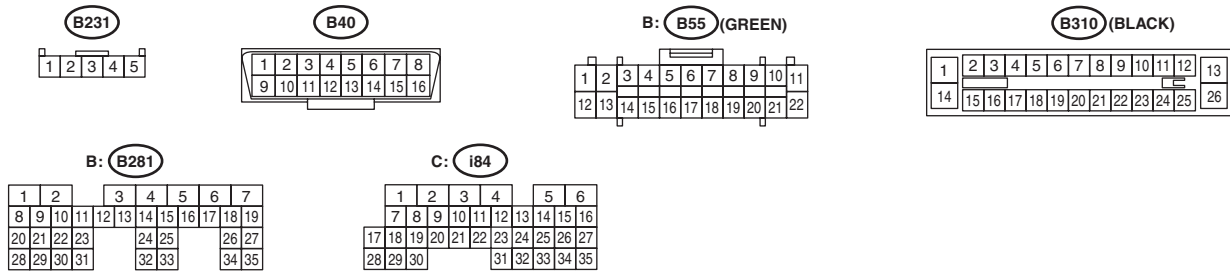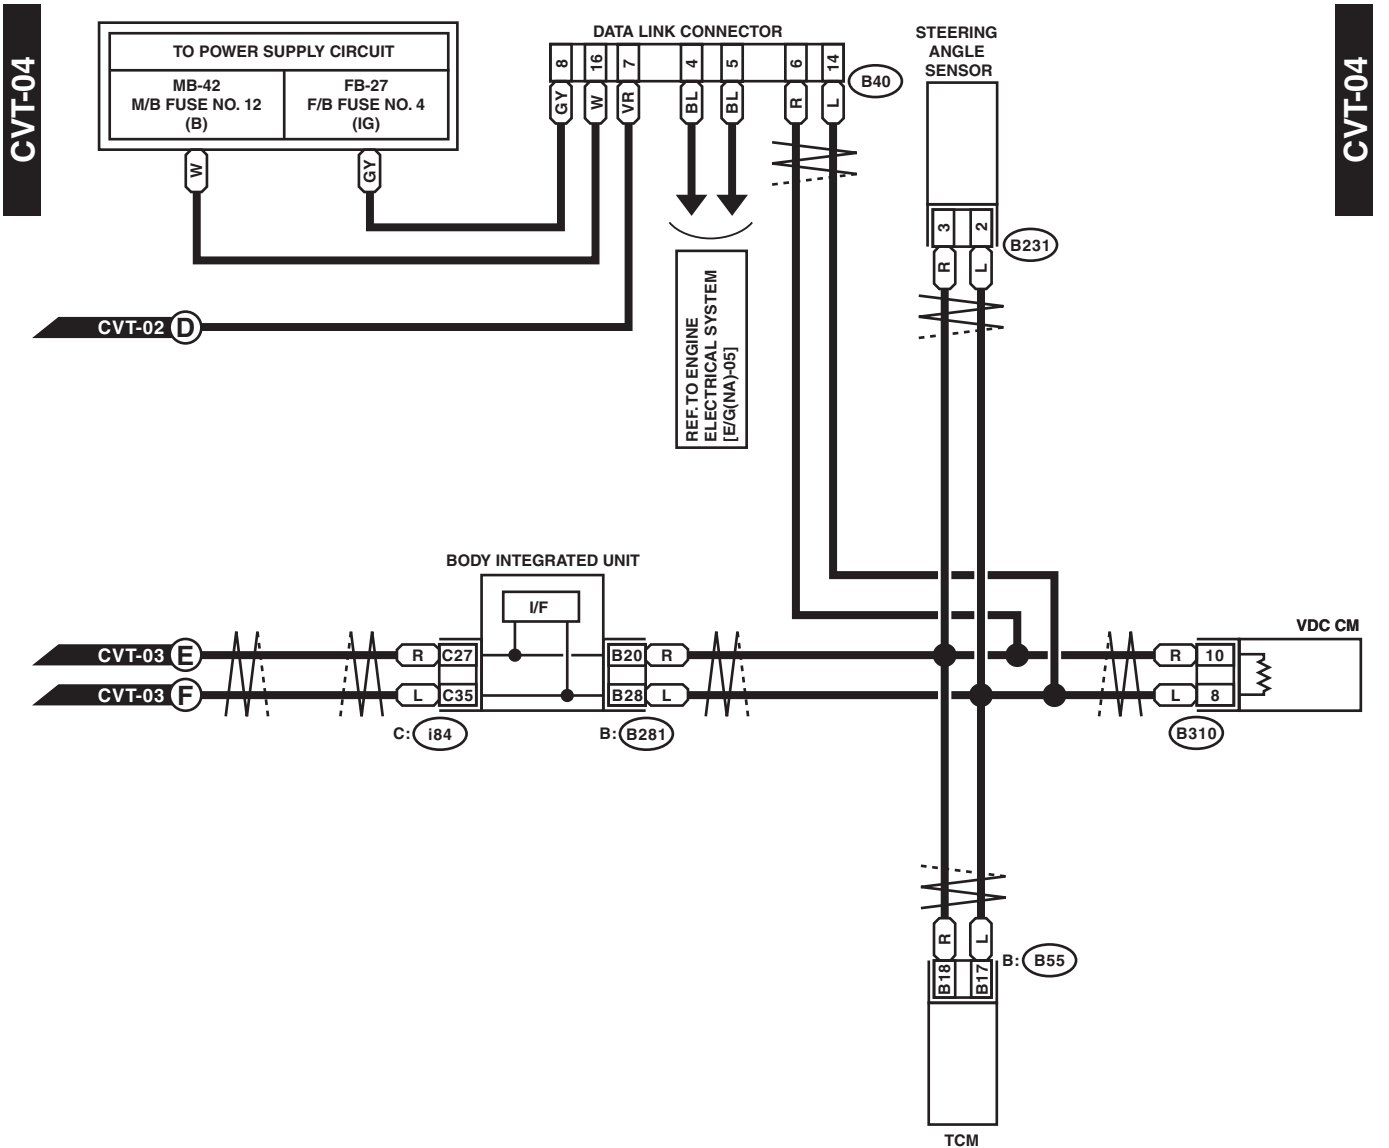

WI-25475

CVT Control System

WIRING SYSTEM

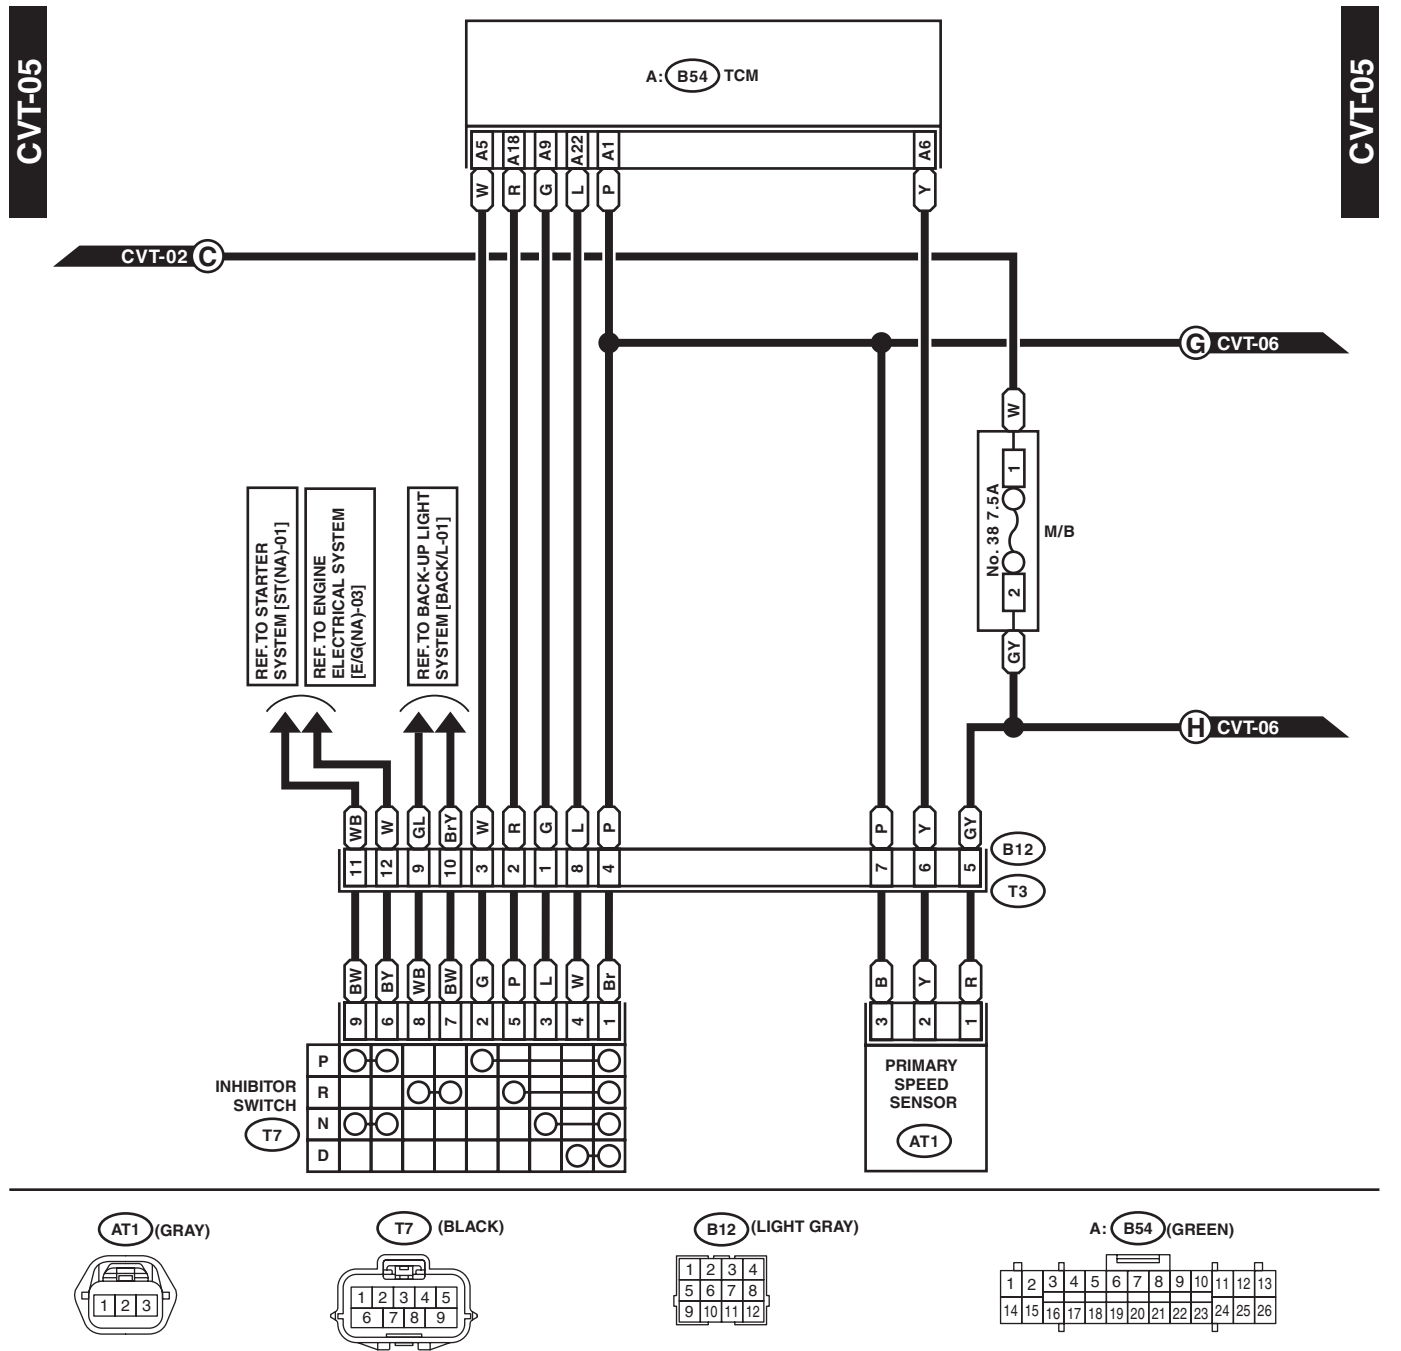


WI-25476

CVT Control System

WIRING SYSTEM

CVT-06

CVT-06

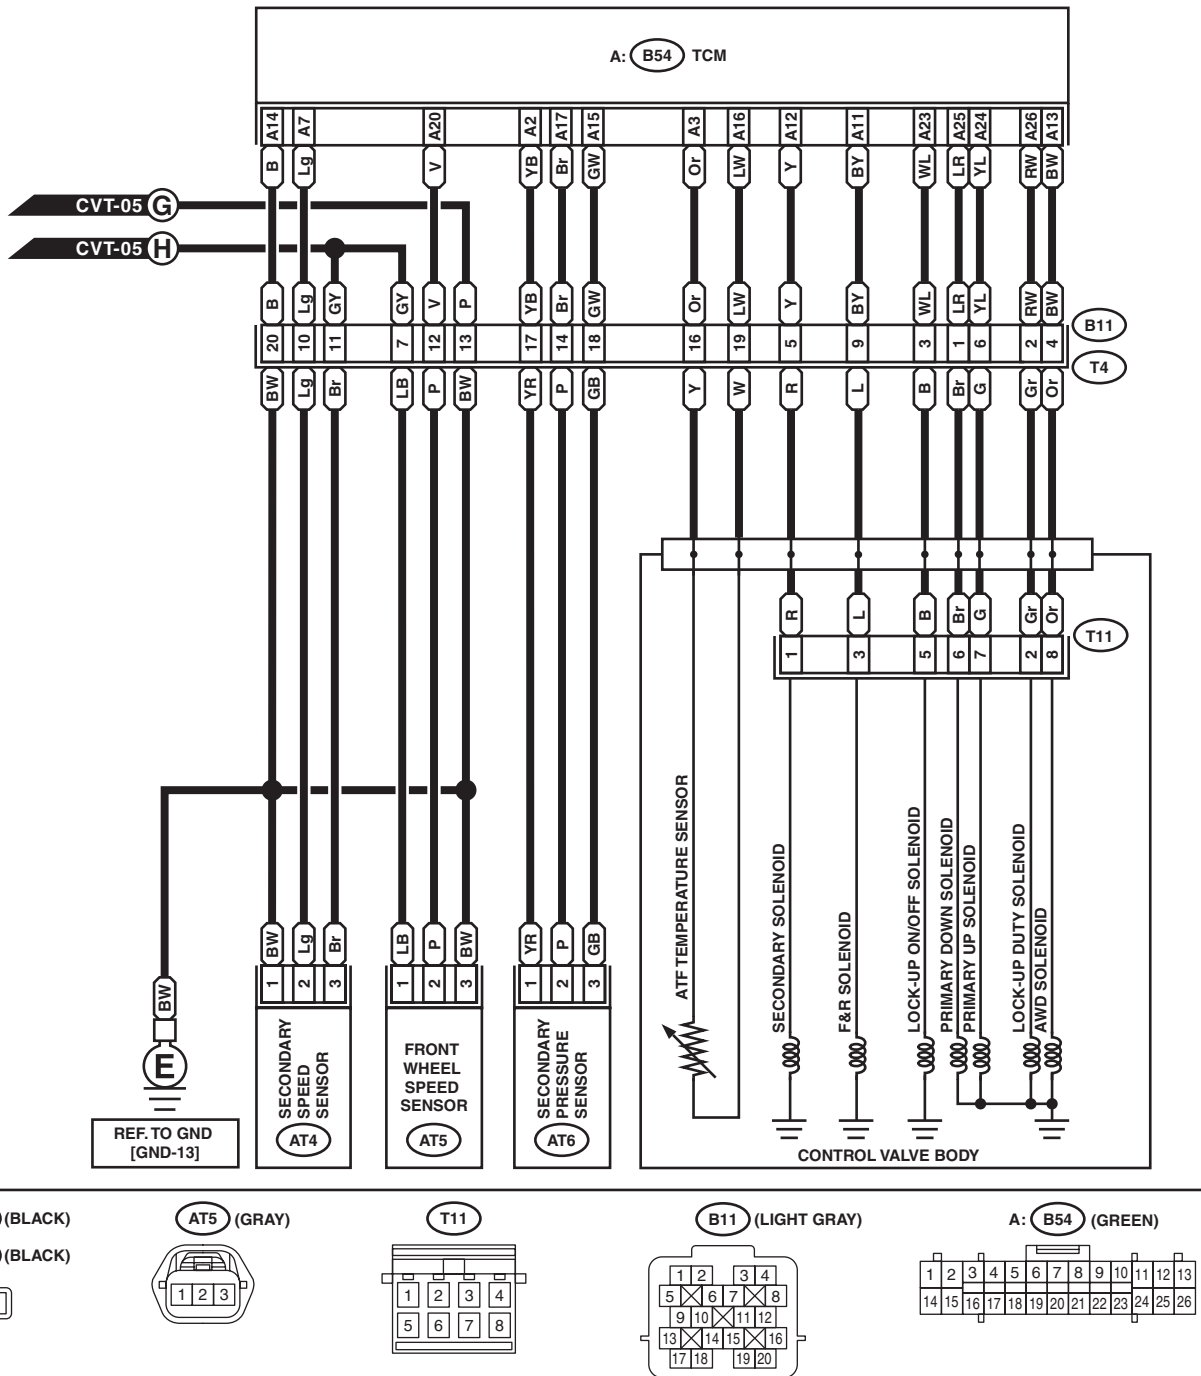




AT4 (BLACK)

AT5 (GRAY)

T11

B11 (LIGHT GRAY)

  A: B54 (GREEN)

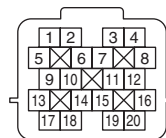


WI-25477


19.Engine Electrical System

A: WIRING DIAGRAM

1. 2.5 L NON-TURBO MODEL

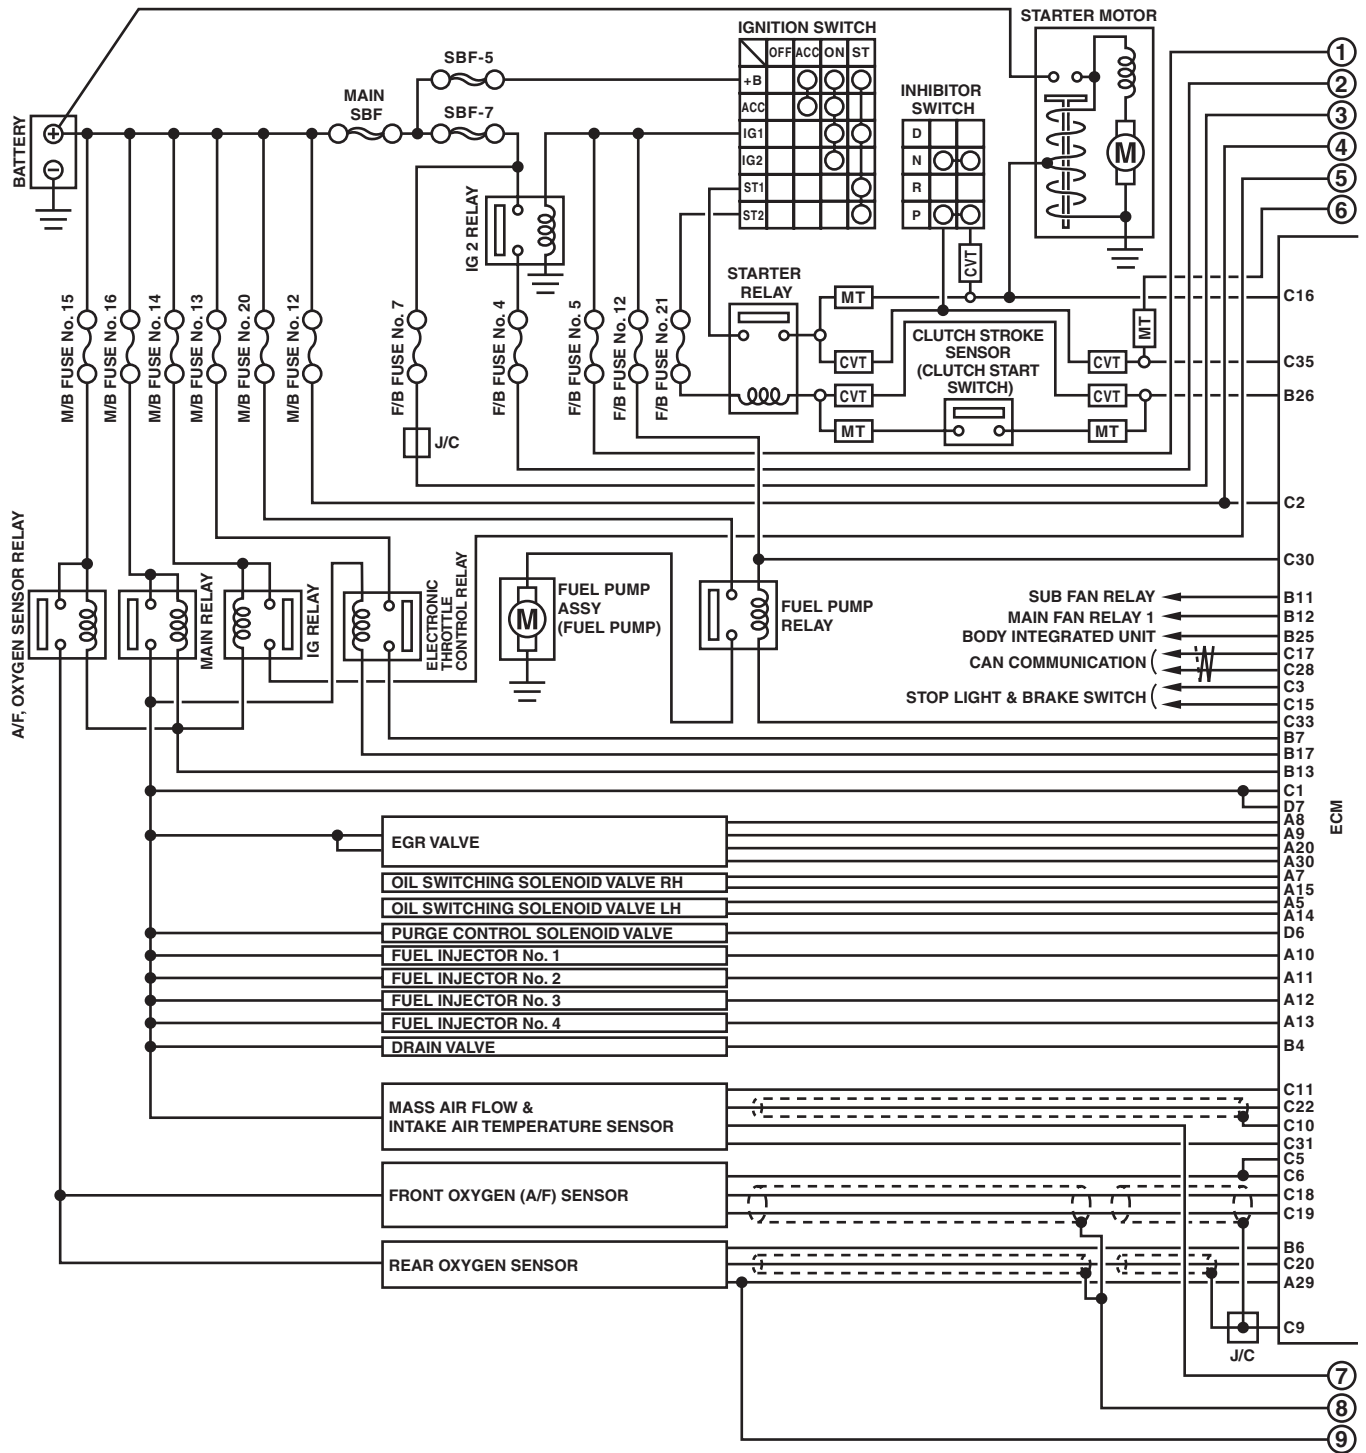


WI-25481

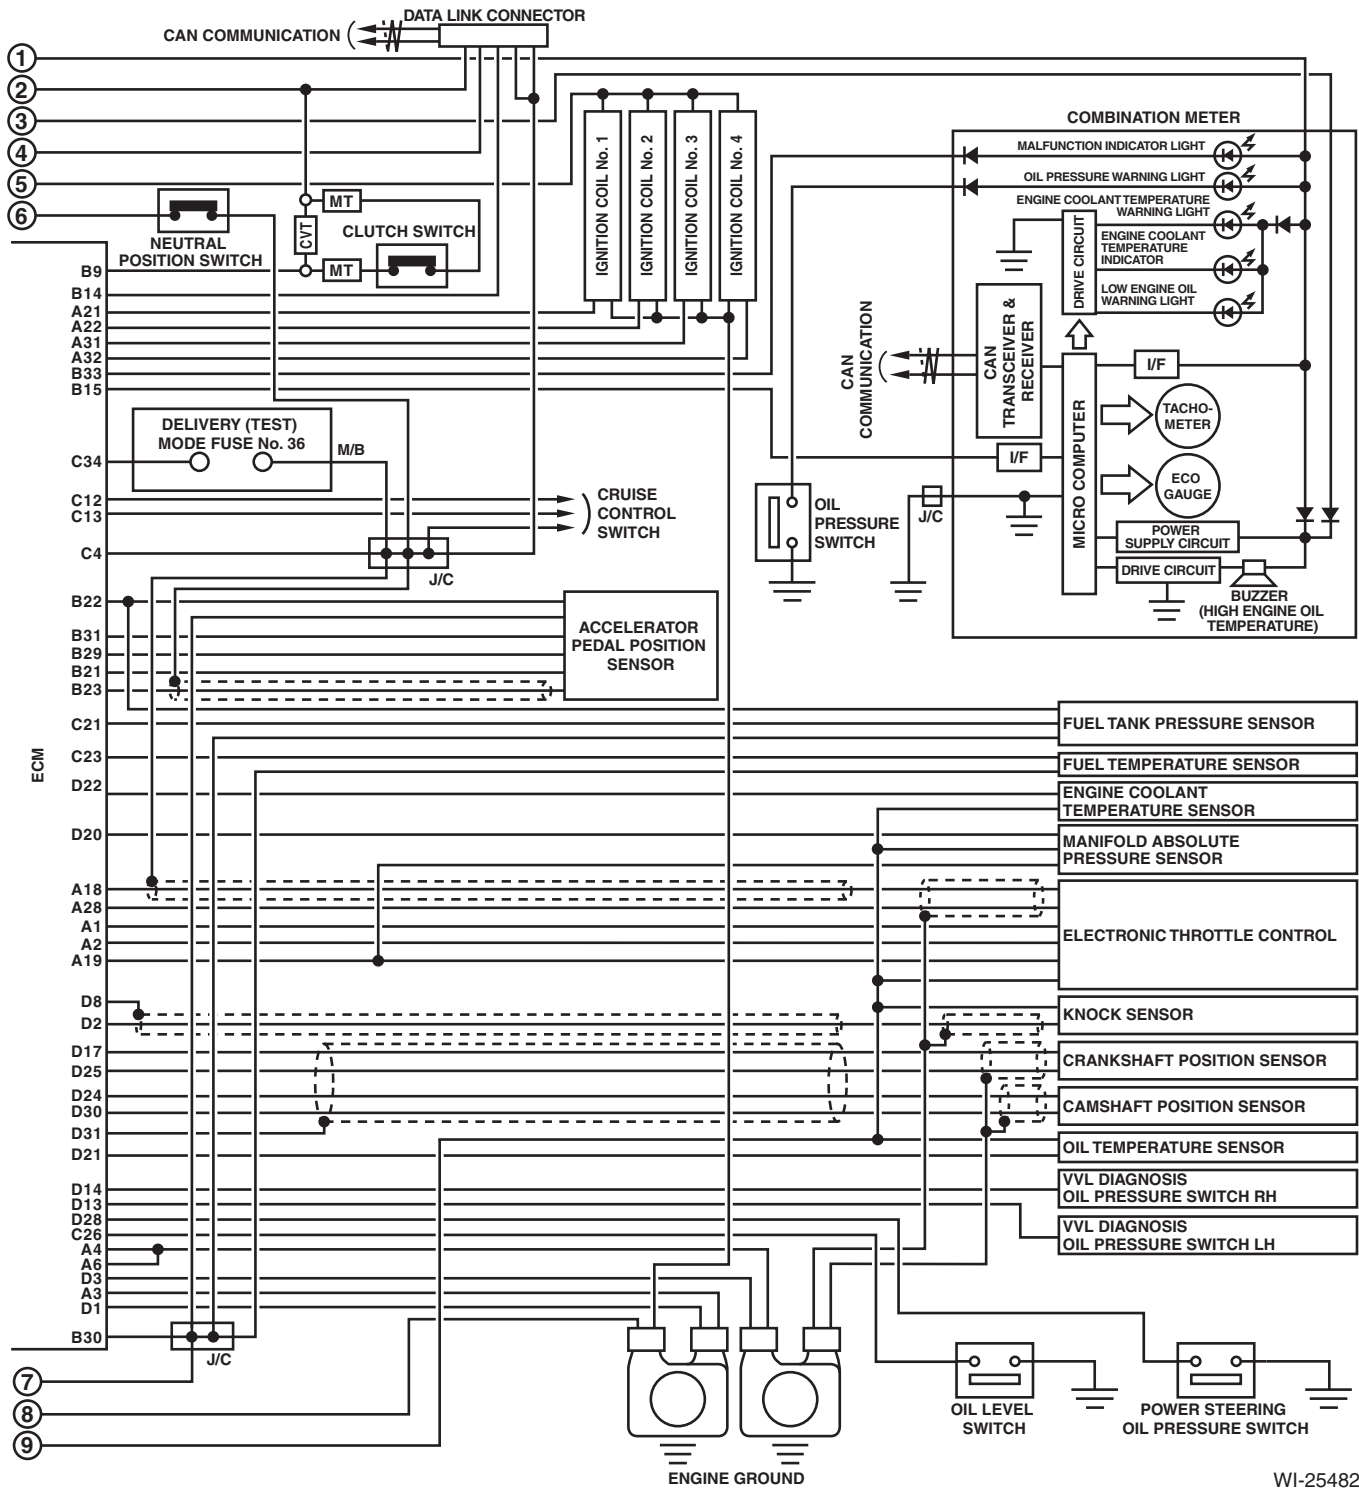

Engine Electrical System

WIRING SYSTEM


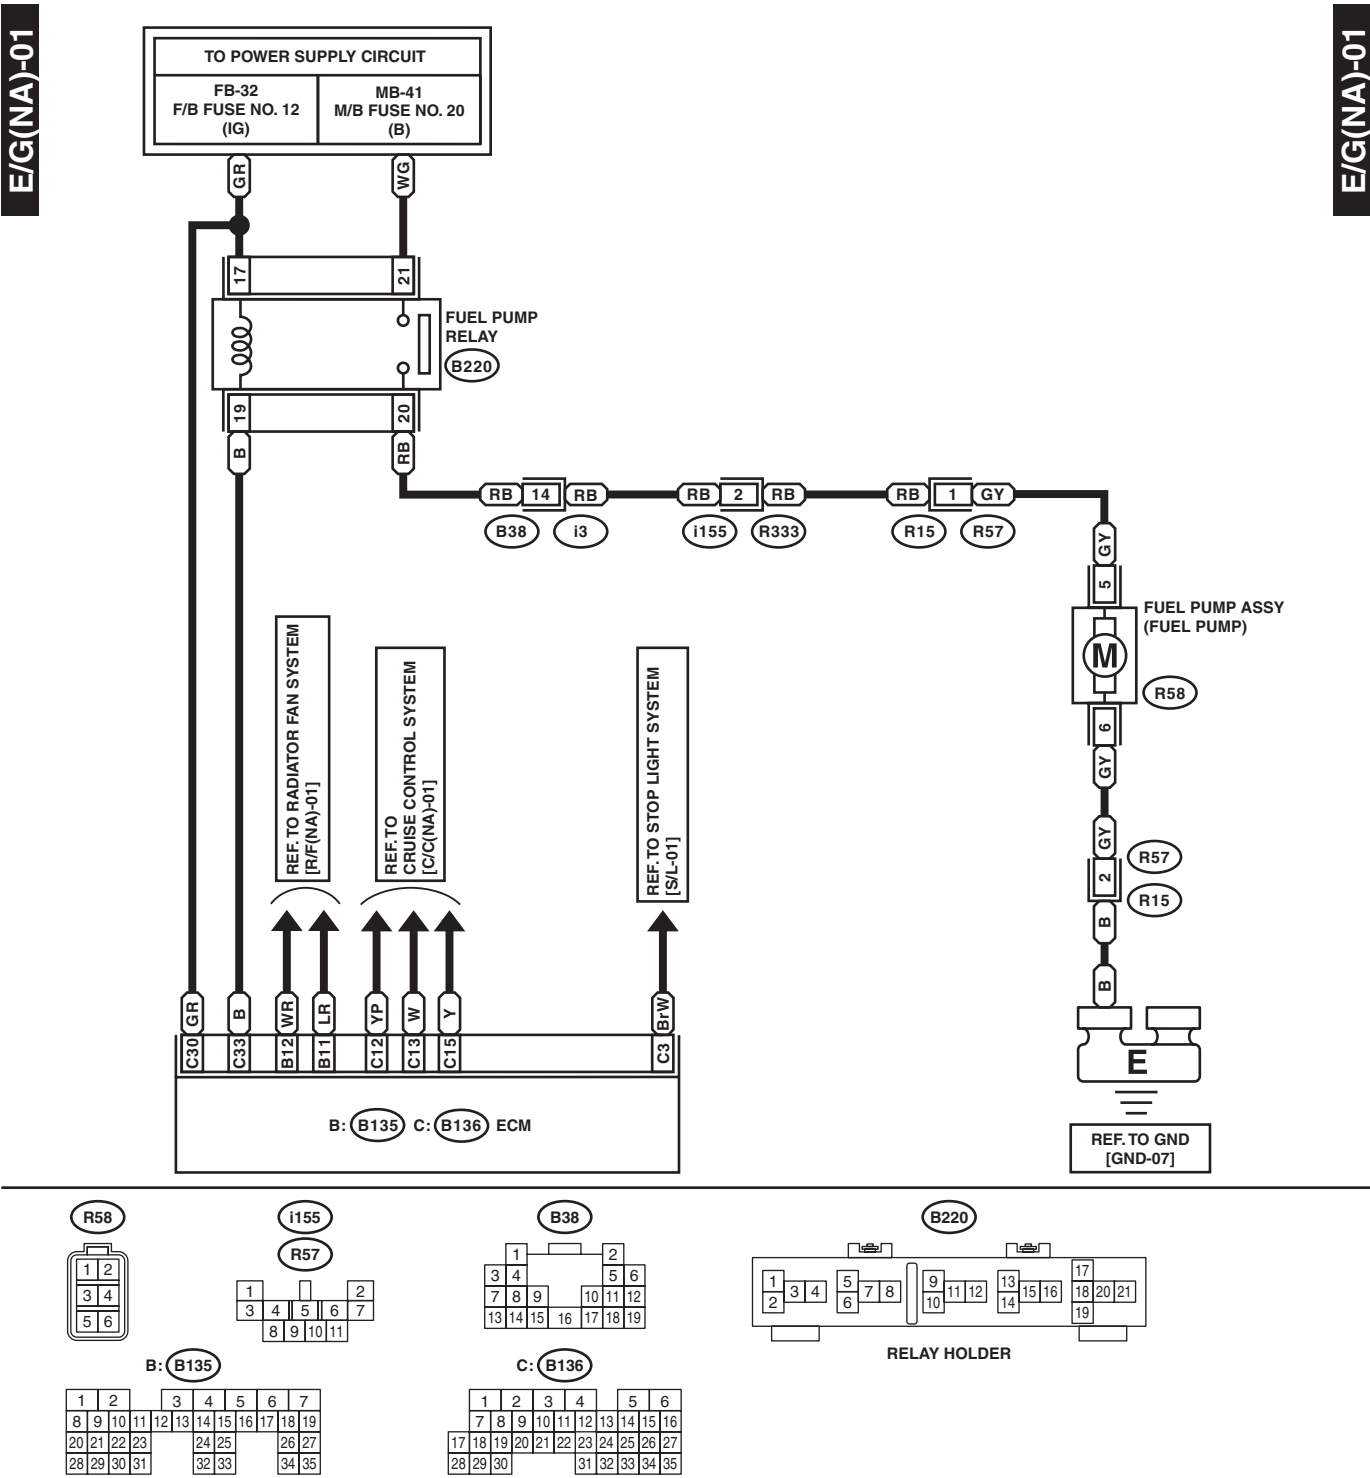


Engine Electrical System

WIRING SYSTEM

E/G(NA)-02


E/G(NA)-02

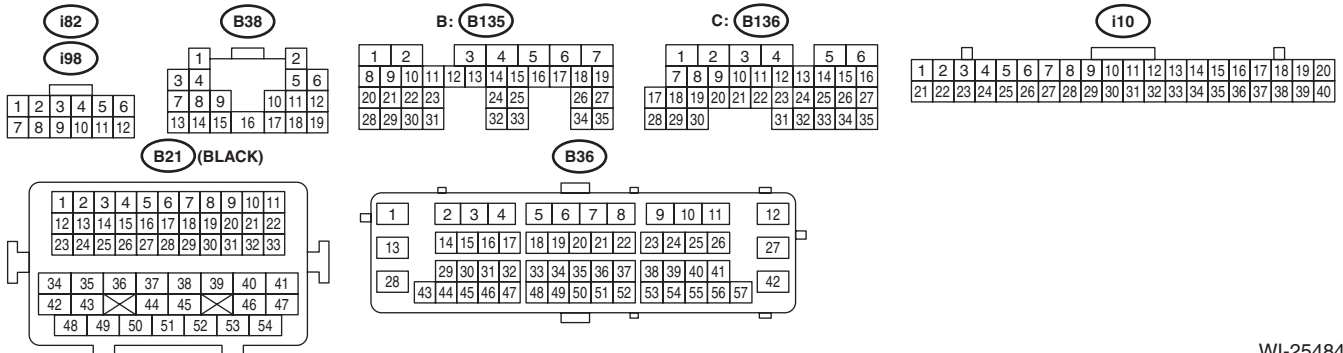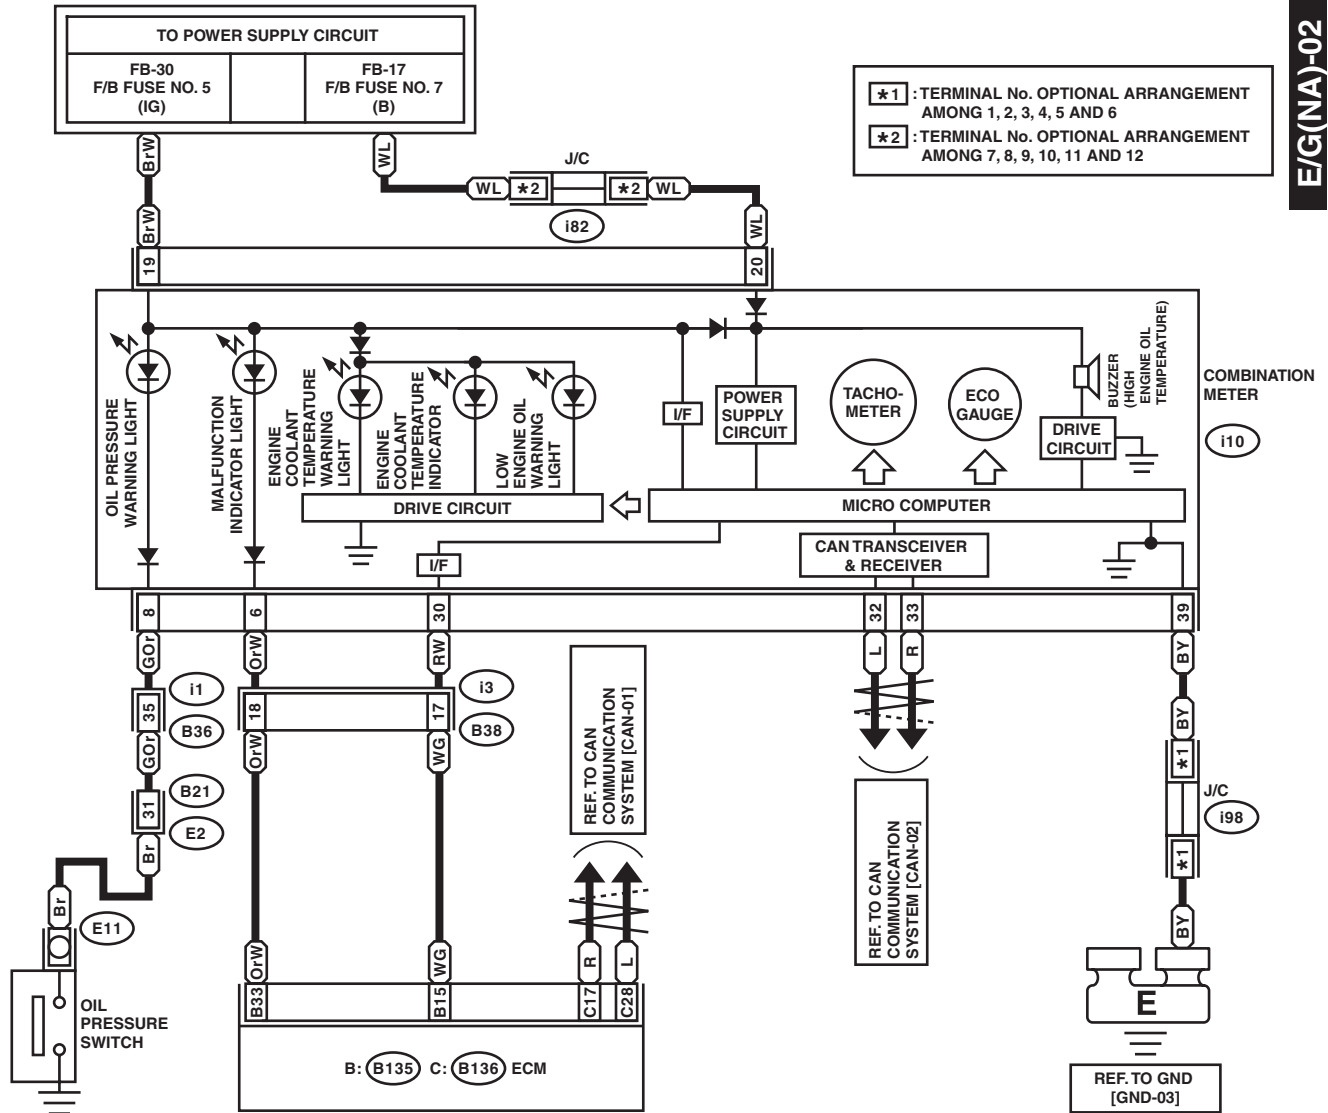






WI-25484

Engine Electrical System

WIRING SYSTEM

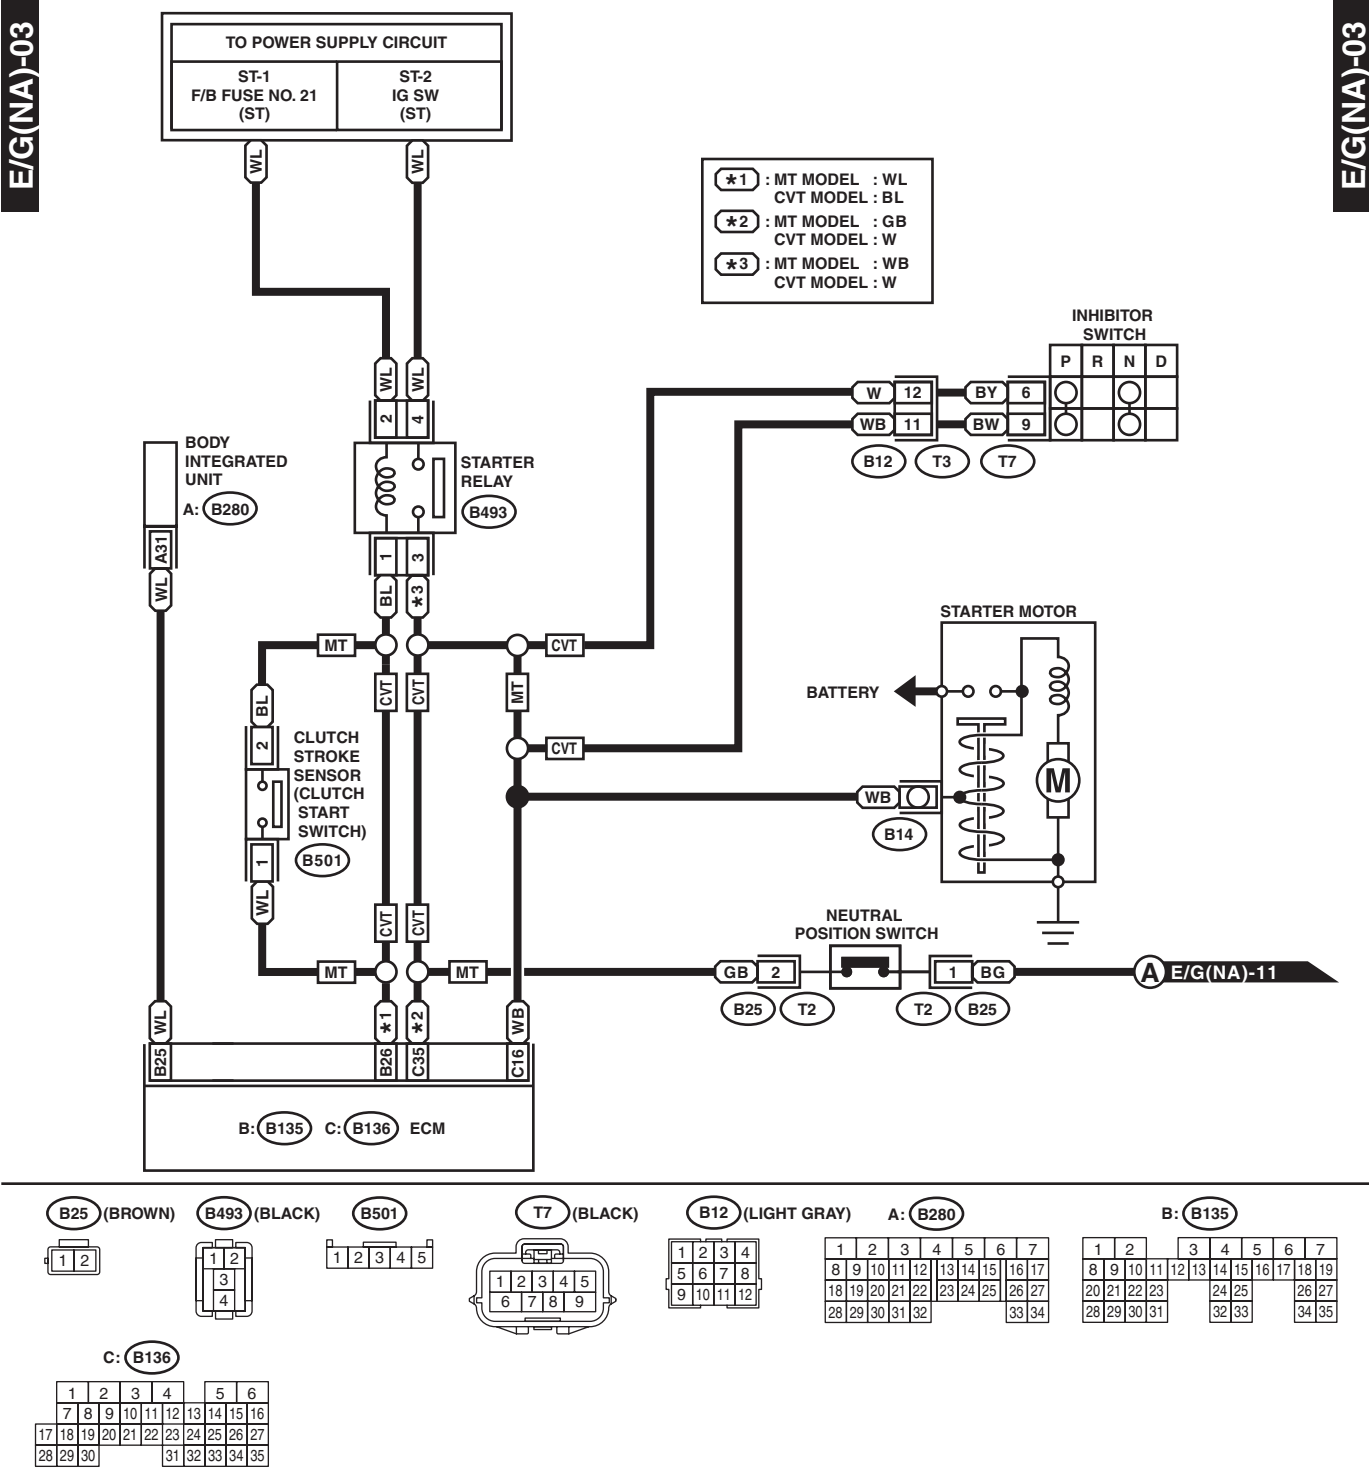


WI-25485

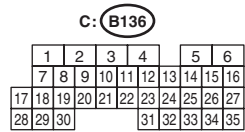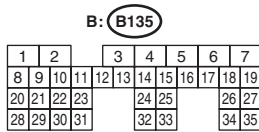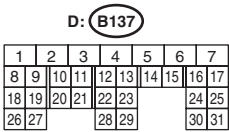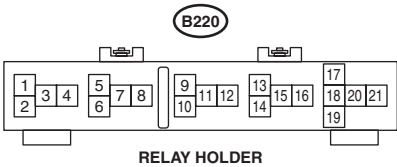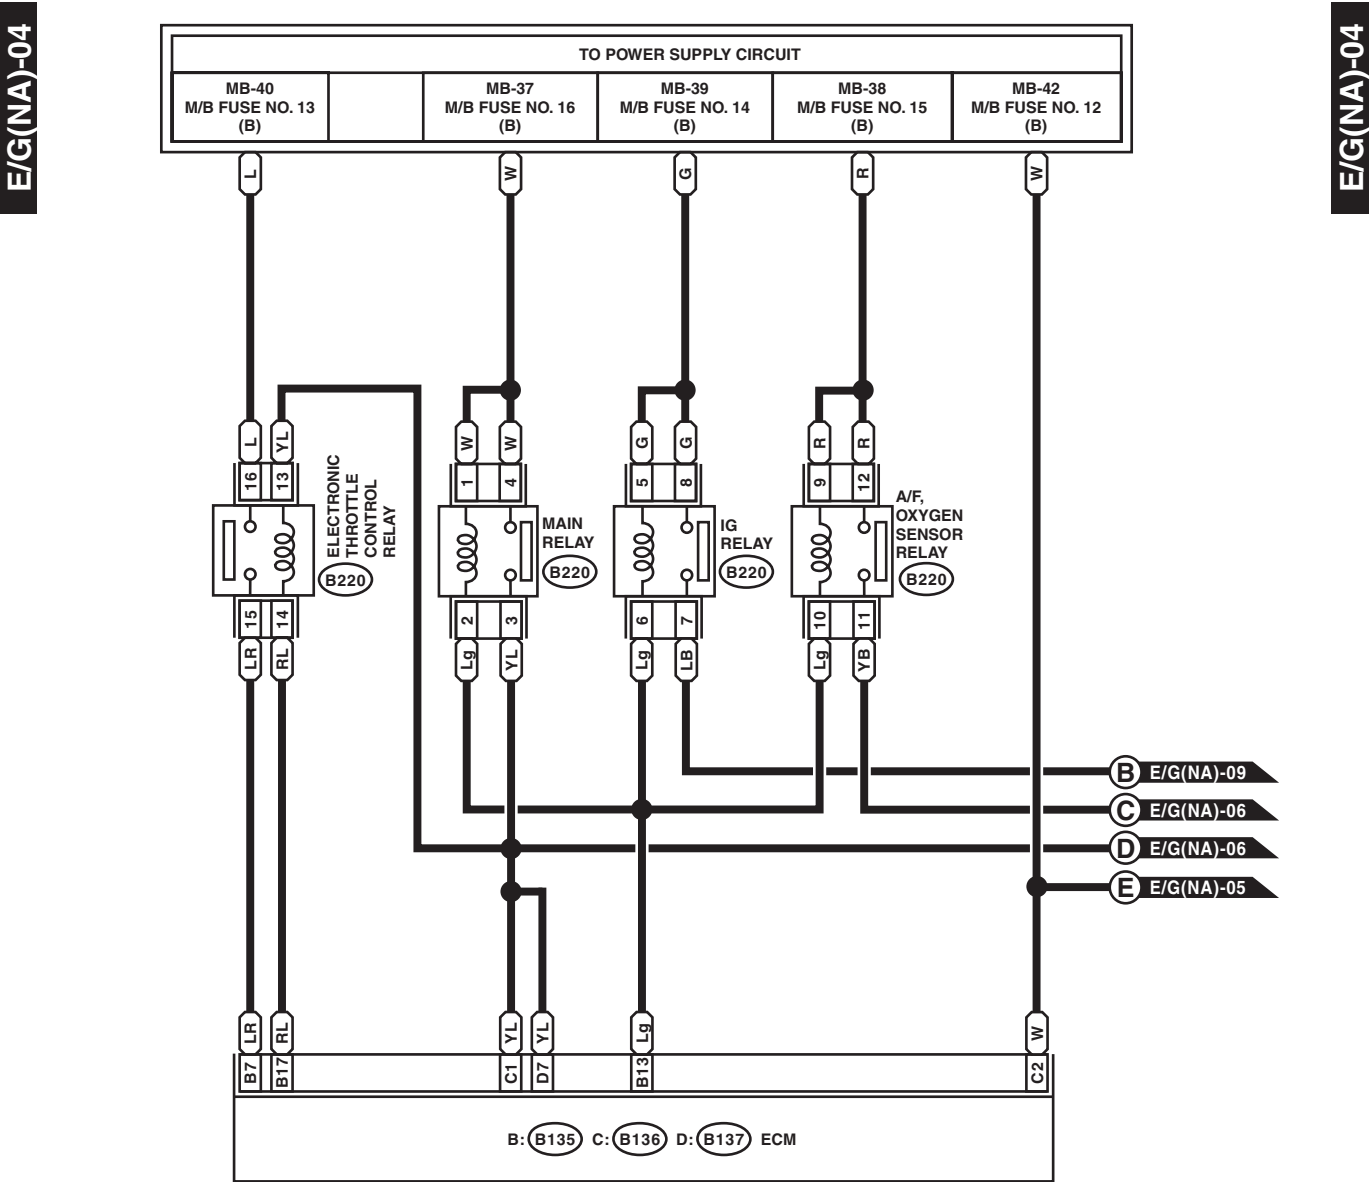

Engine Electrical System


WIRING SYSTEM

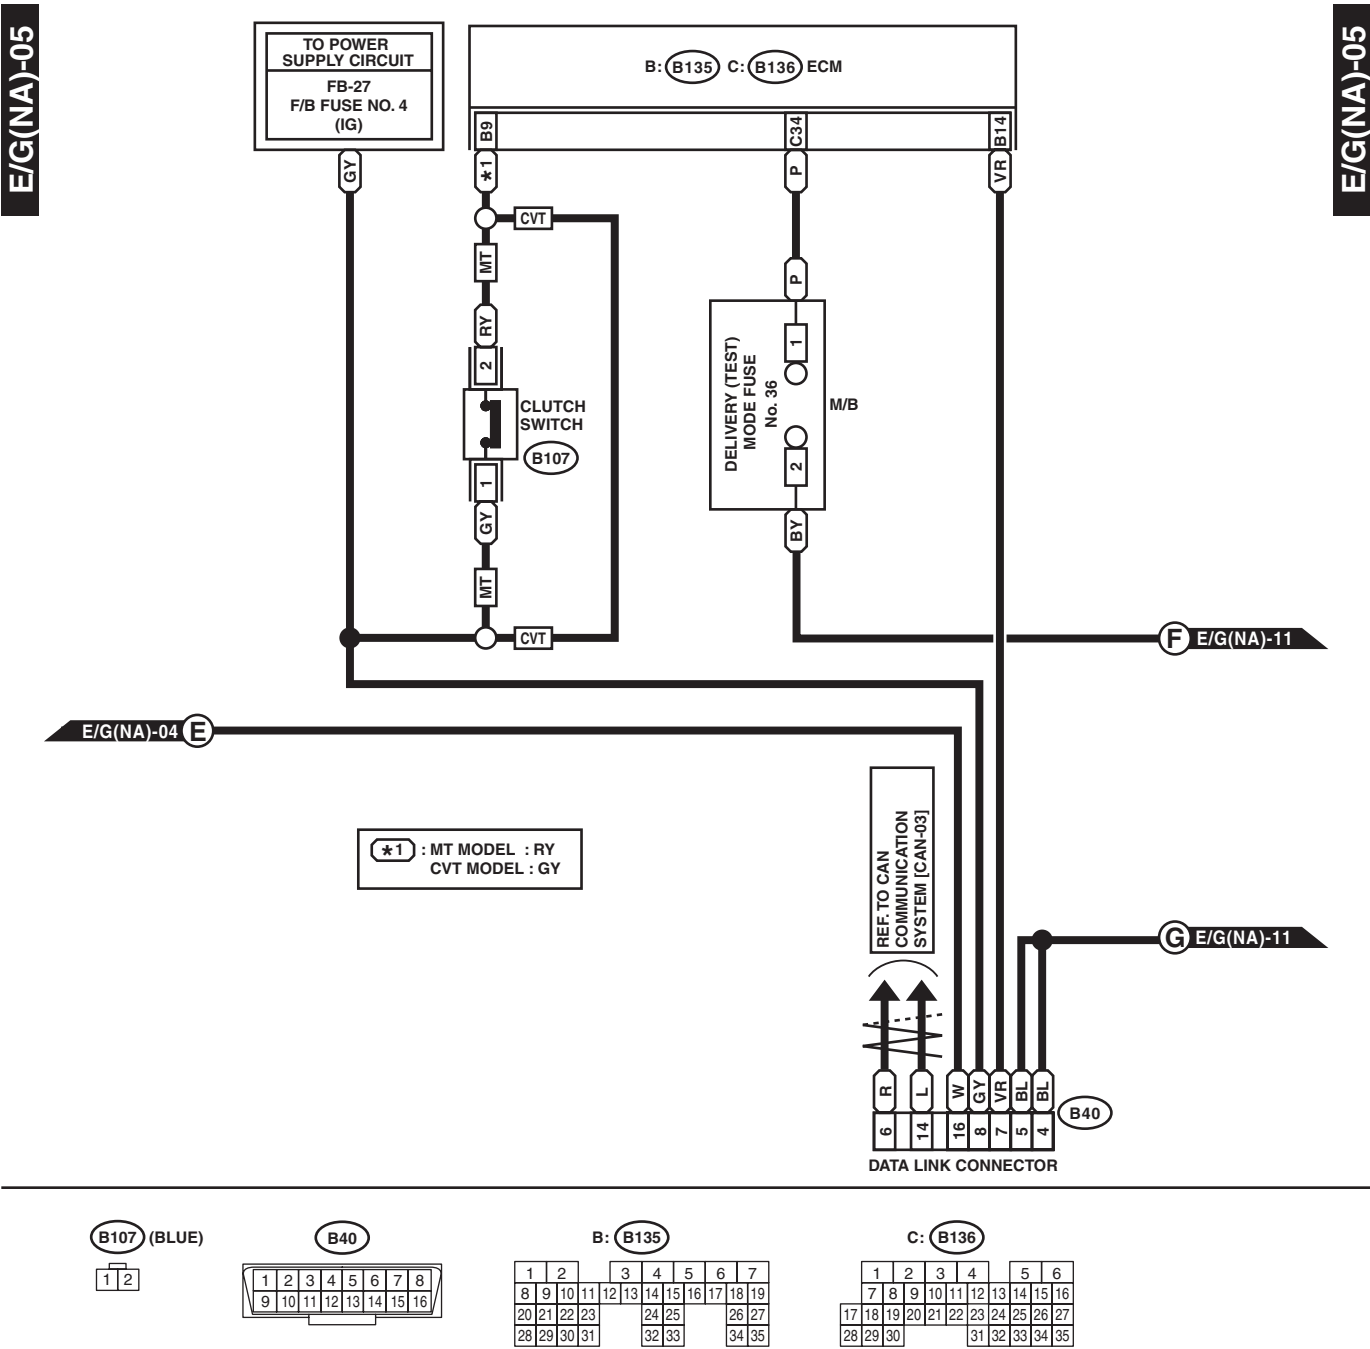

WI-25487

Engine Electrical System

WIRING SYSTEM

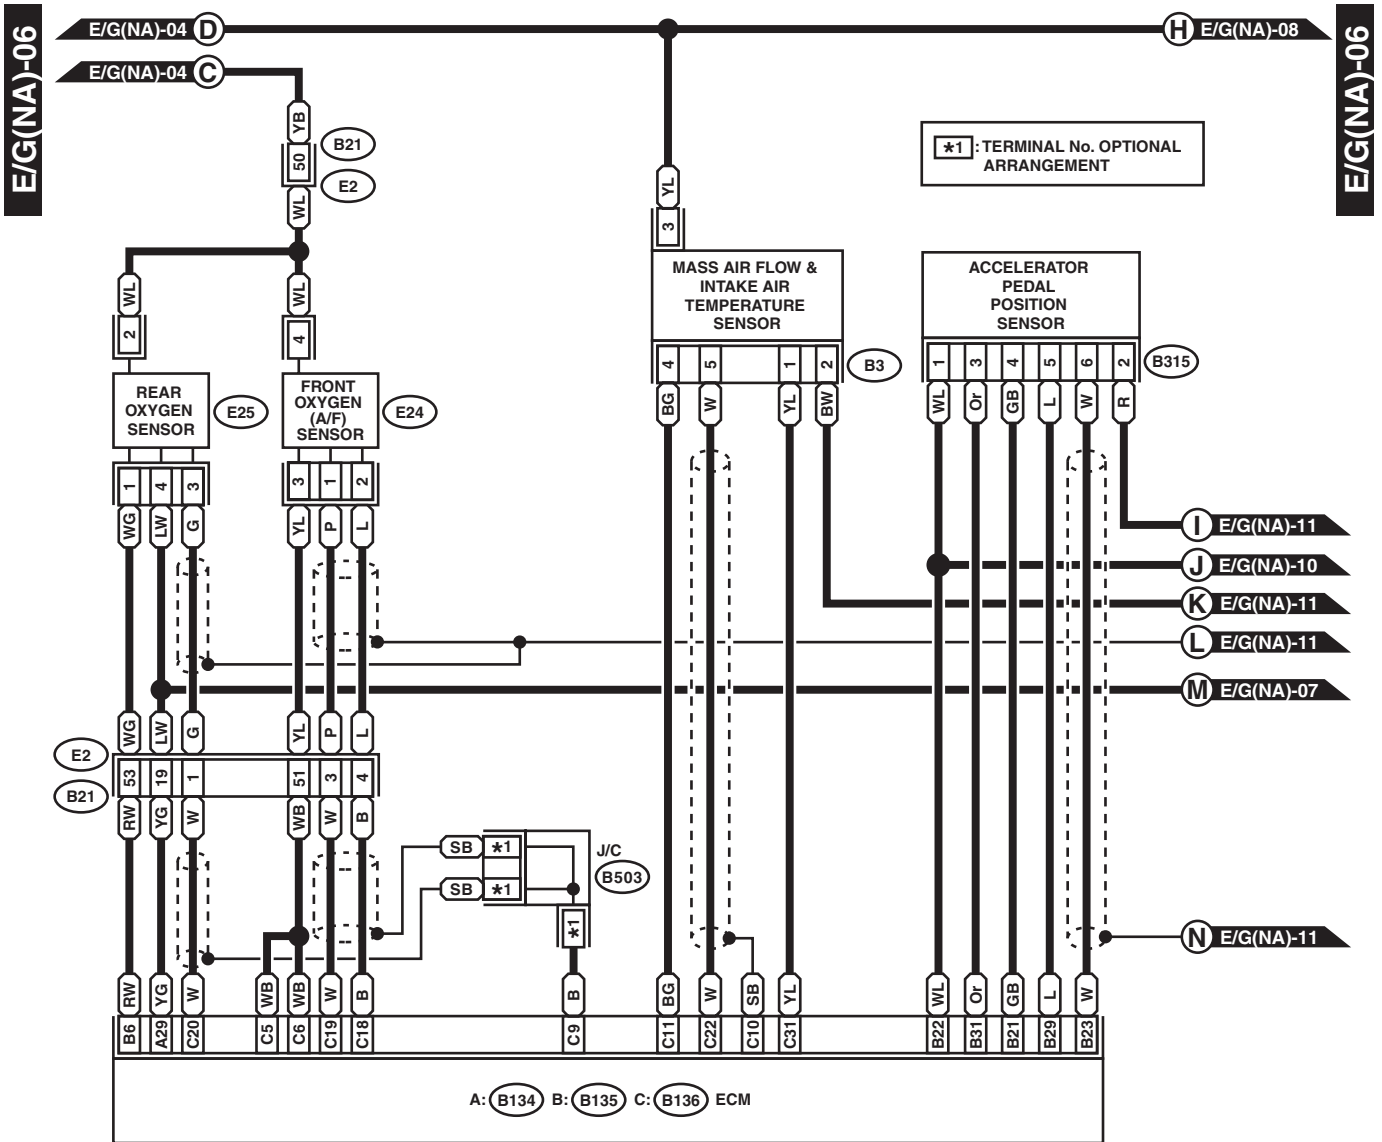

E24 (BLACK)



E25 (DARK GRAY)



 
B3 (BLACK)



B315 (BLACK)



B503



A: B134

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31	32	33	34	

B: B135

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31	32	33	34	35

C: B136

1	2	3	4	5	6
7	8	9	10	11	12
13	14	15	16	17	18
19	20	21	22	23	24
25	26	27	28	29	30
31	32	33	34	35	


B21 (BLACK)

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31	32	33
34	35	36	37	38	39	40	41	42	43	44
45	46	47	48	49	50	51	52	53	54	

WI-25488



Engine Electrical System

WIRING SYSTEM

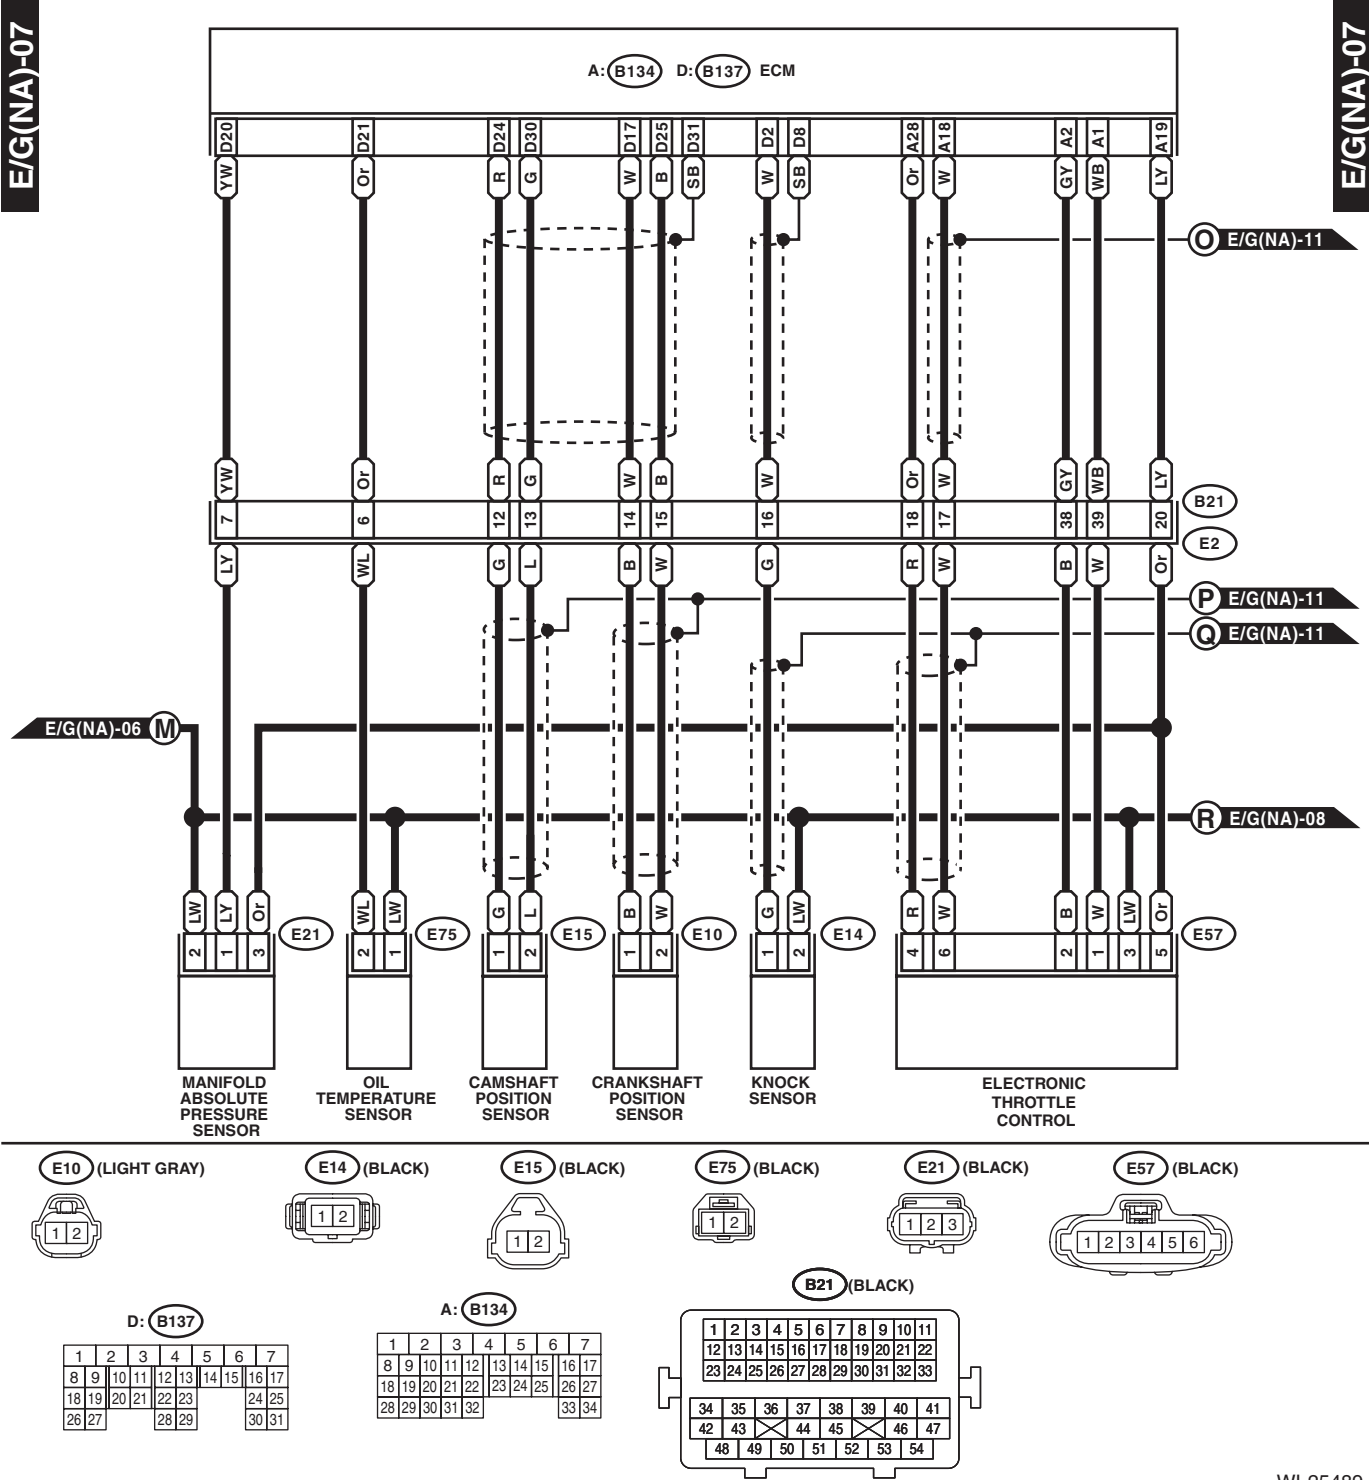

Engine Electrical System


WIRING SYSTEM

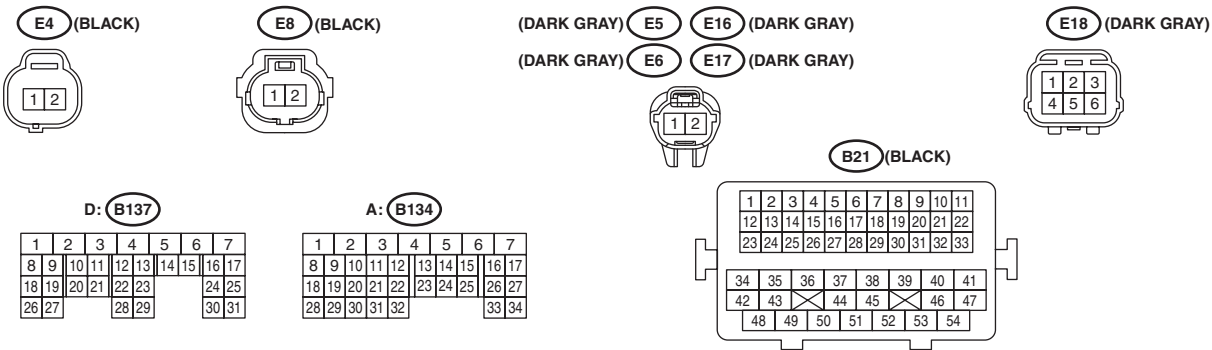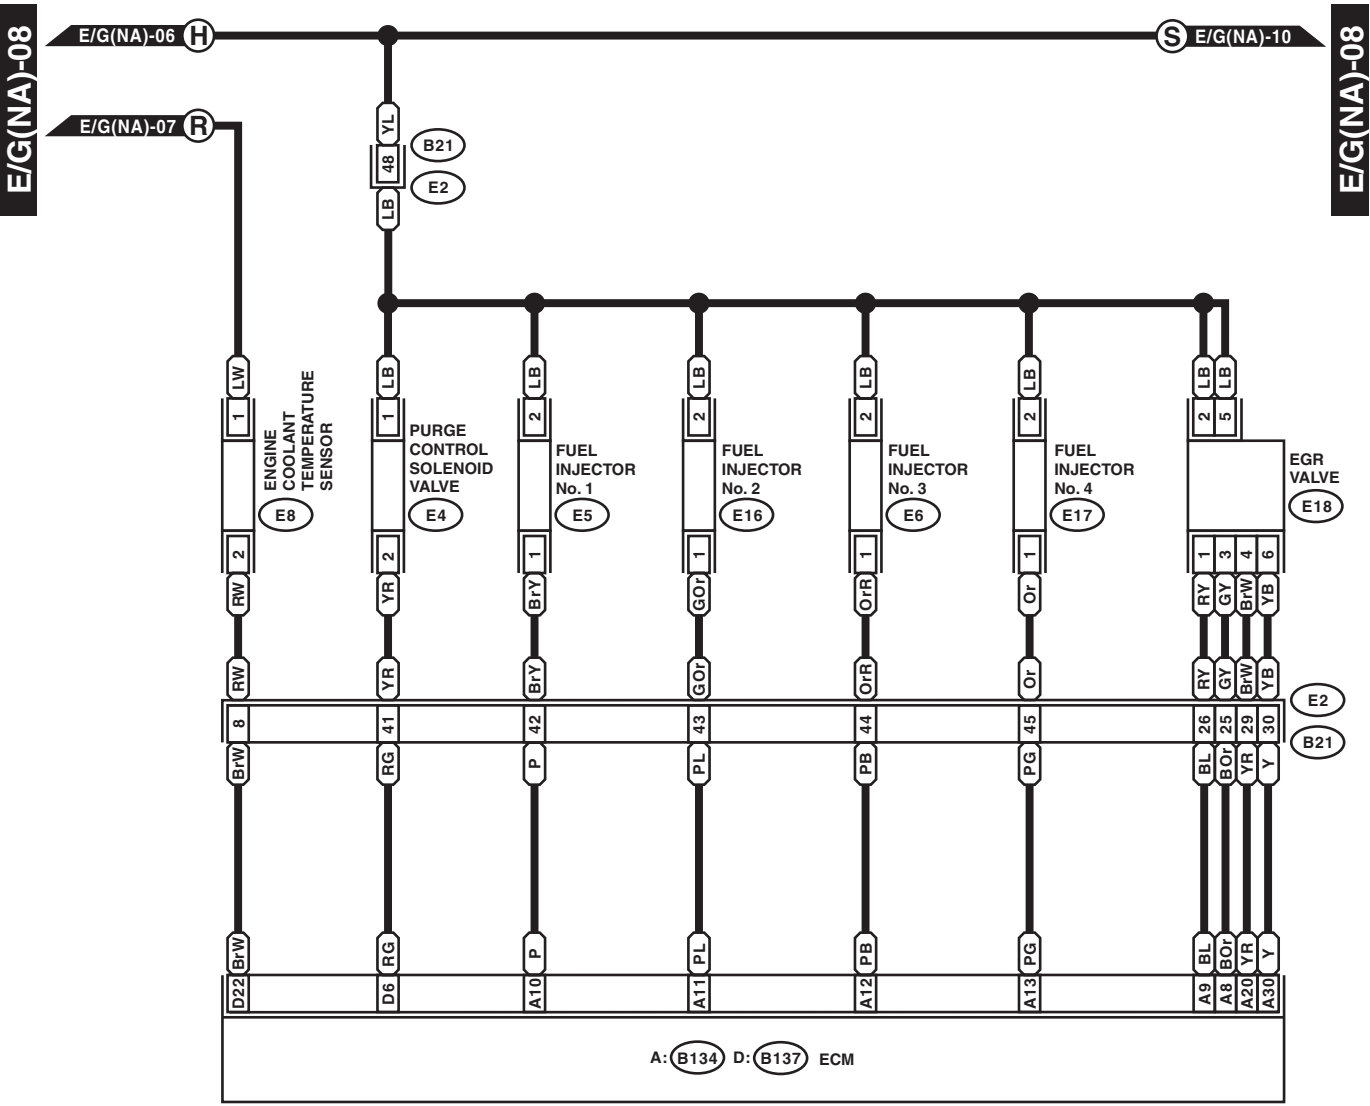


WI-25490

Engine Electrical System

WIRING SYSTEM

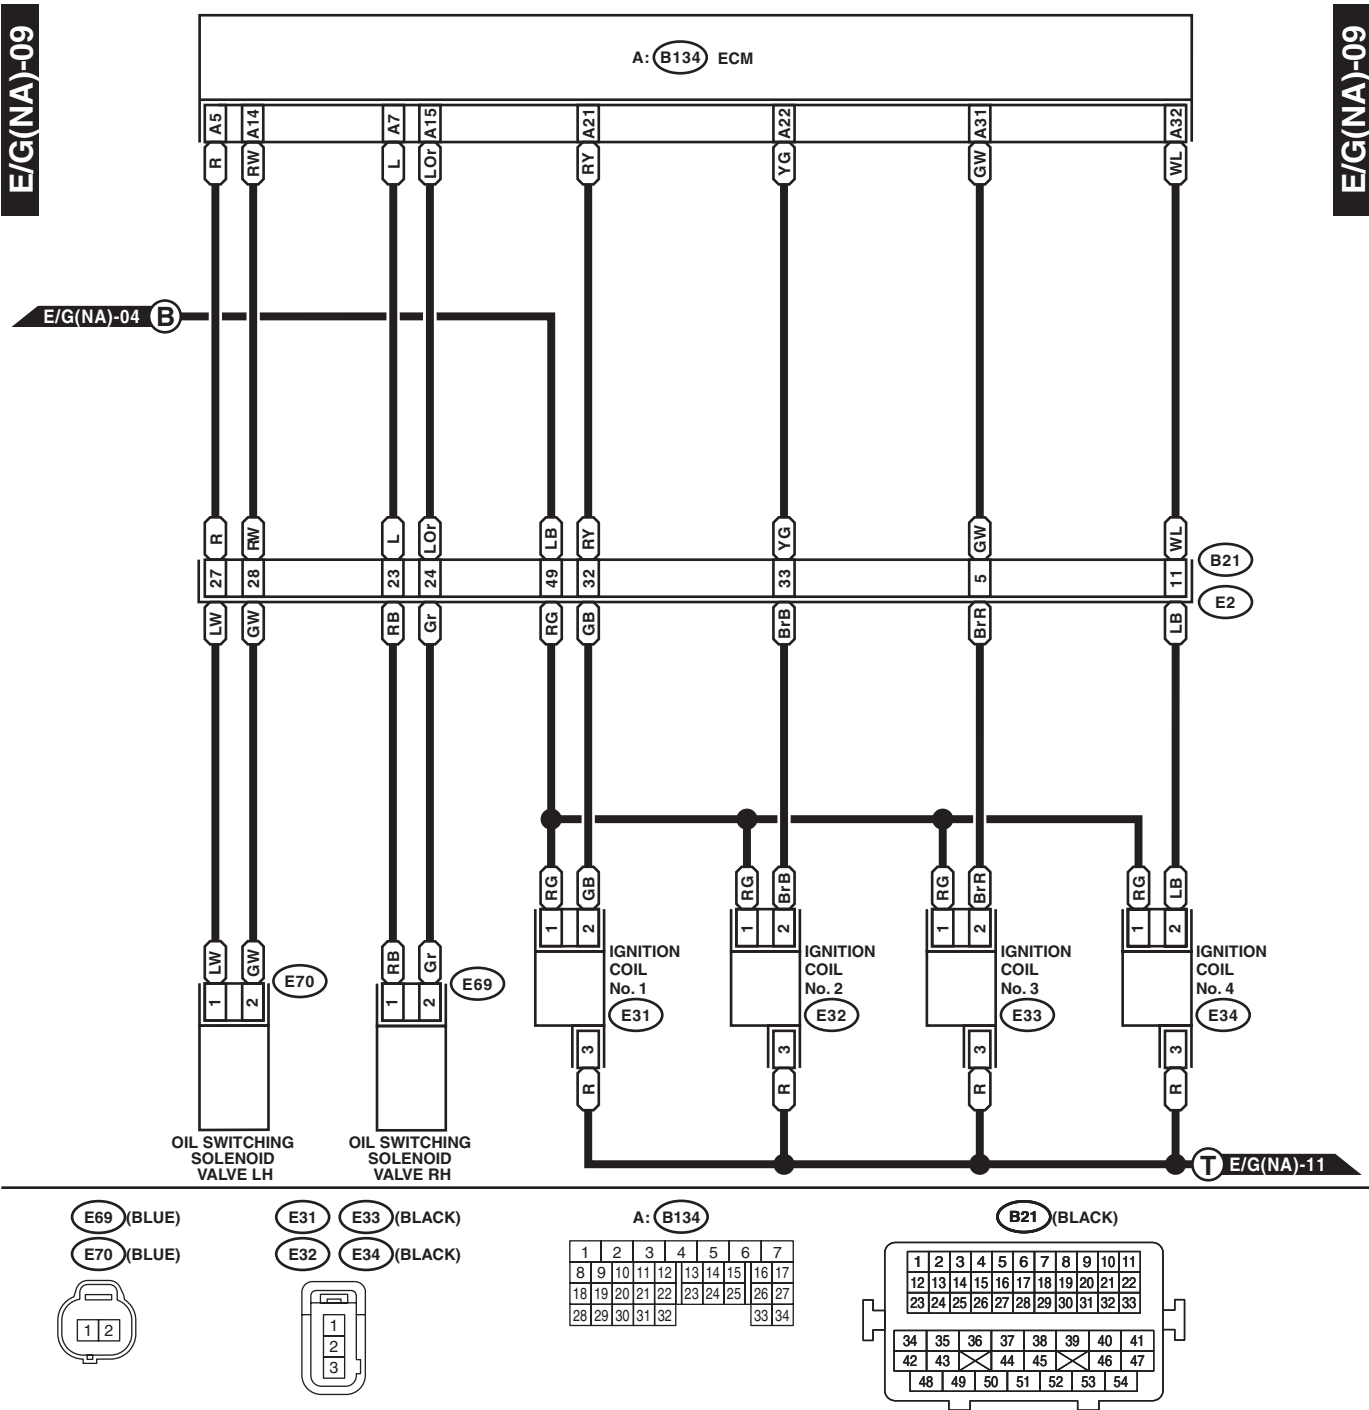


WI-25491

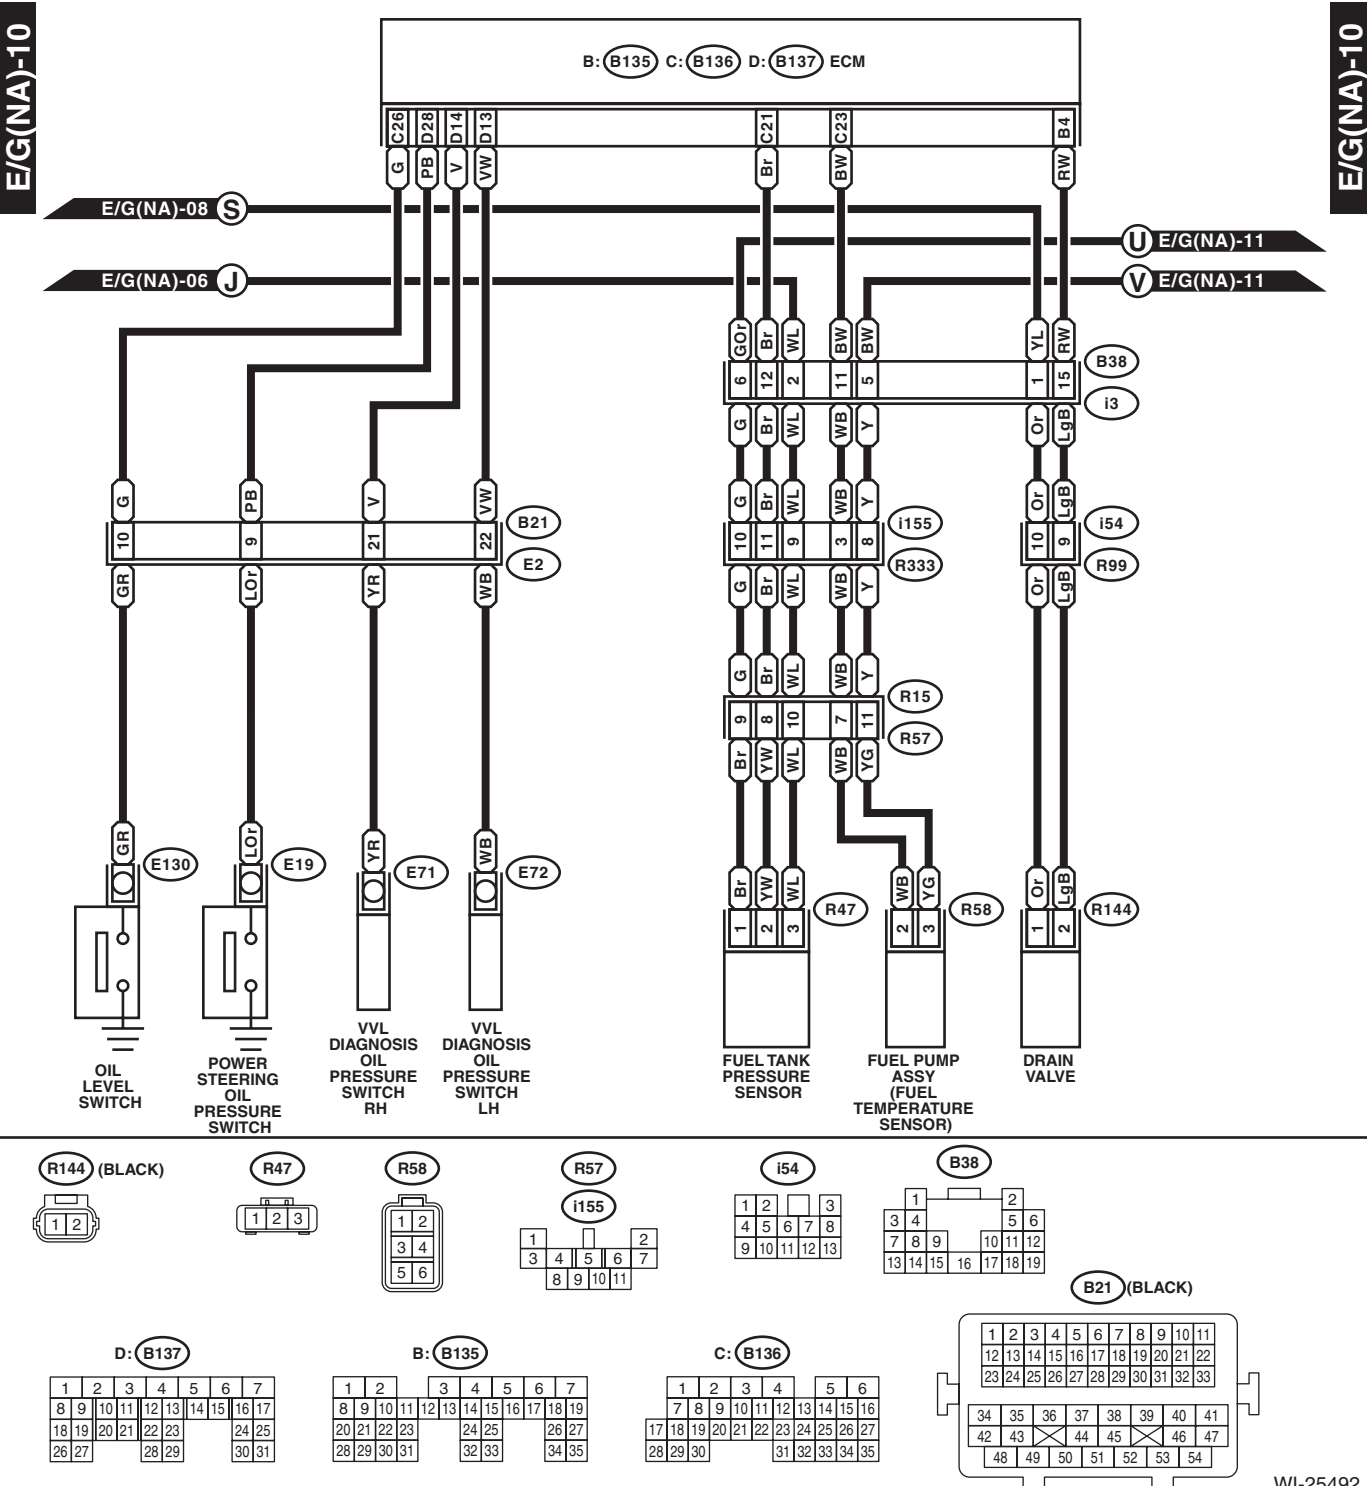

Engine Electrical System

WIRING SYSTEM

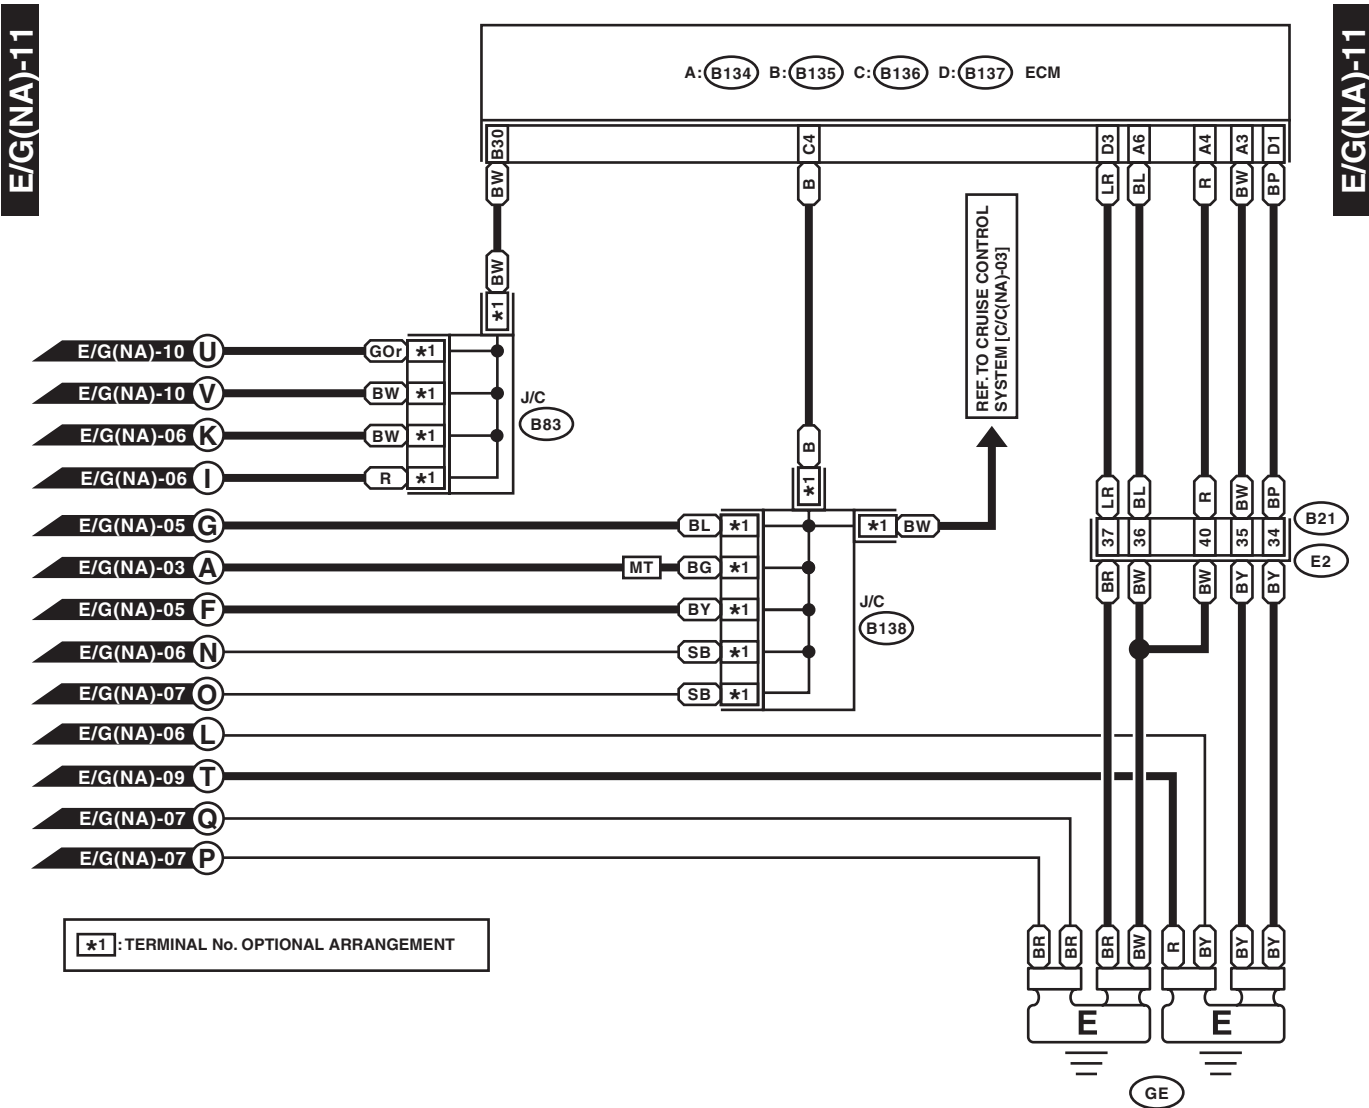

B83 B138

1	2	3	4
5	6	7	8

D: B137

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31	32	33	34	35

A: B134

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31	32	33	34	35

B: B135

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31	32	33	34	35

C: B136

1	2	3	4	5	6
7	8	9	10	11	12
13	14	15	16	17	18
19	20	21	22	23	24
25	26	27	28	29	30
31	32	33	34	35	36

B21 (BLACK)


1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31	32	33
34	35	36	37	38	39	40	41	42	43	44
45	46	47	48	49	50	51	52	53	54	55

WI-25493

Engine Electrical System

WIRING SYSTEM


2. 2.5 L TURBO MODEL

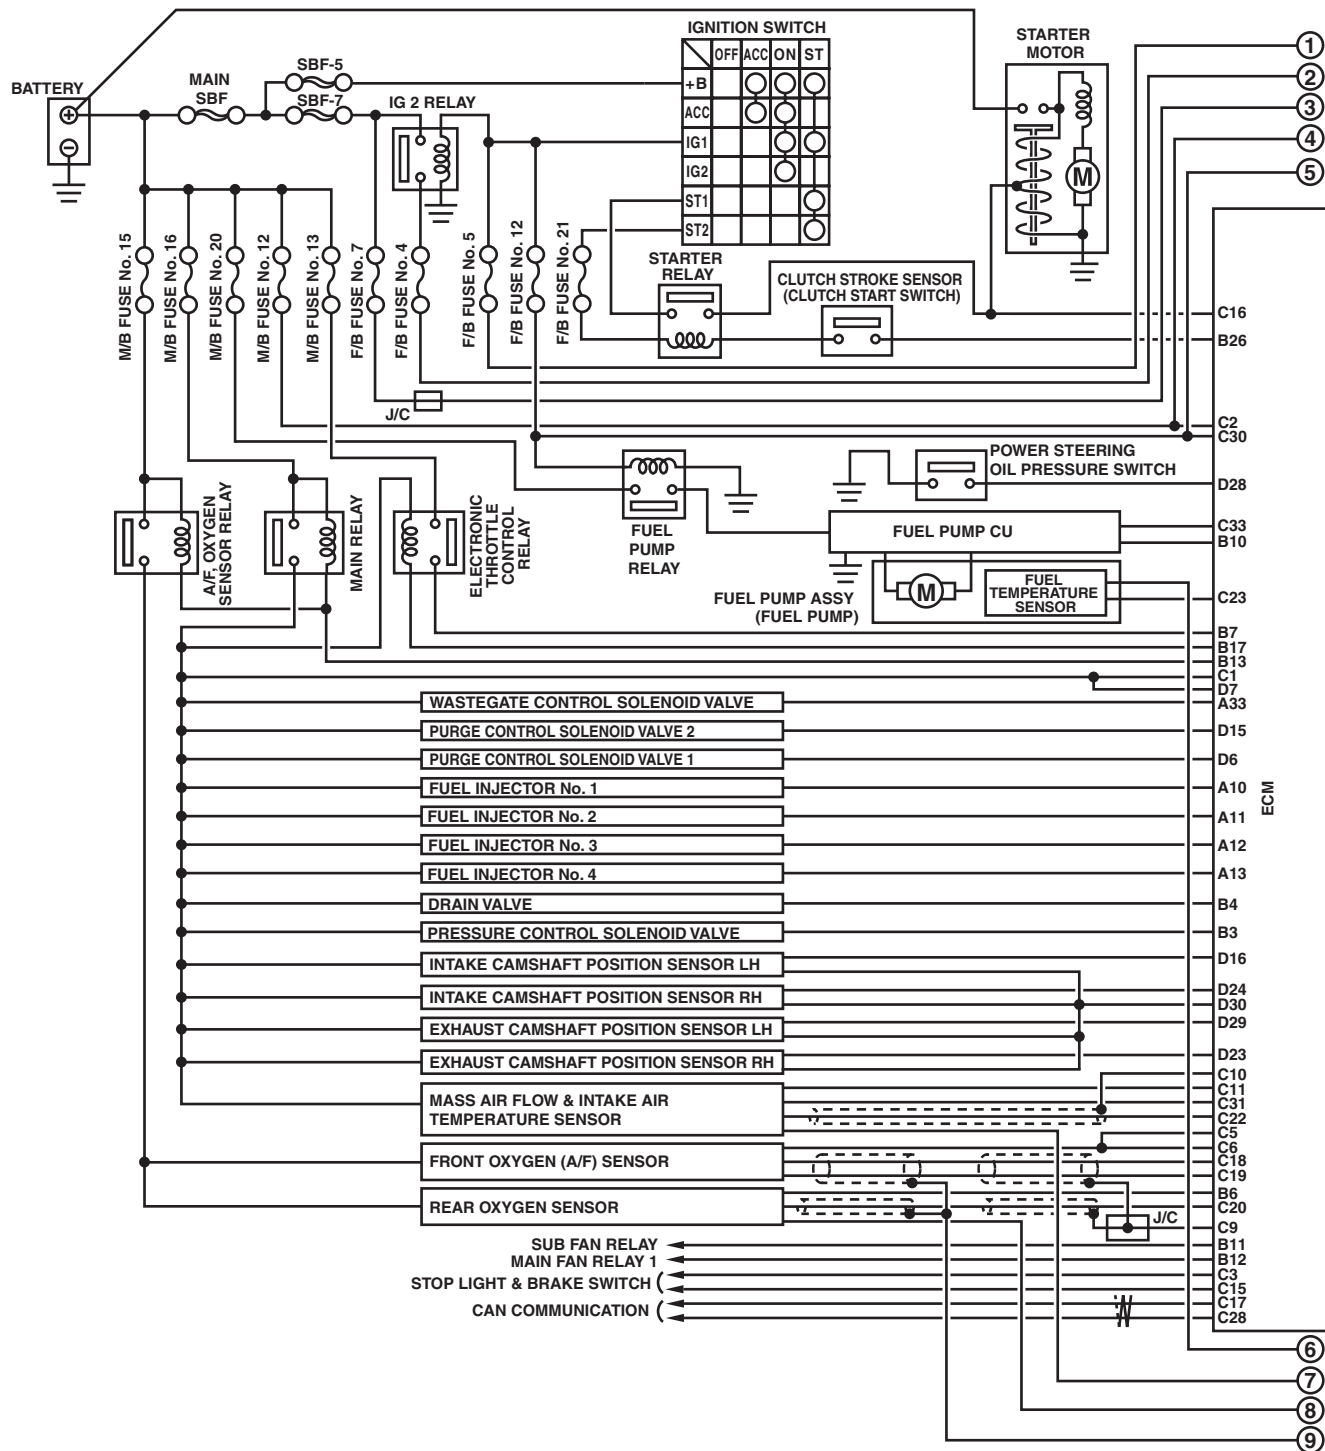

WI-25494

Engine Electrical System


WIRING SYSTEM

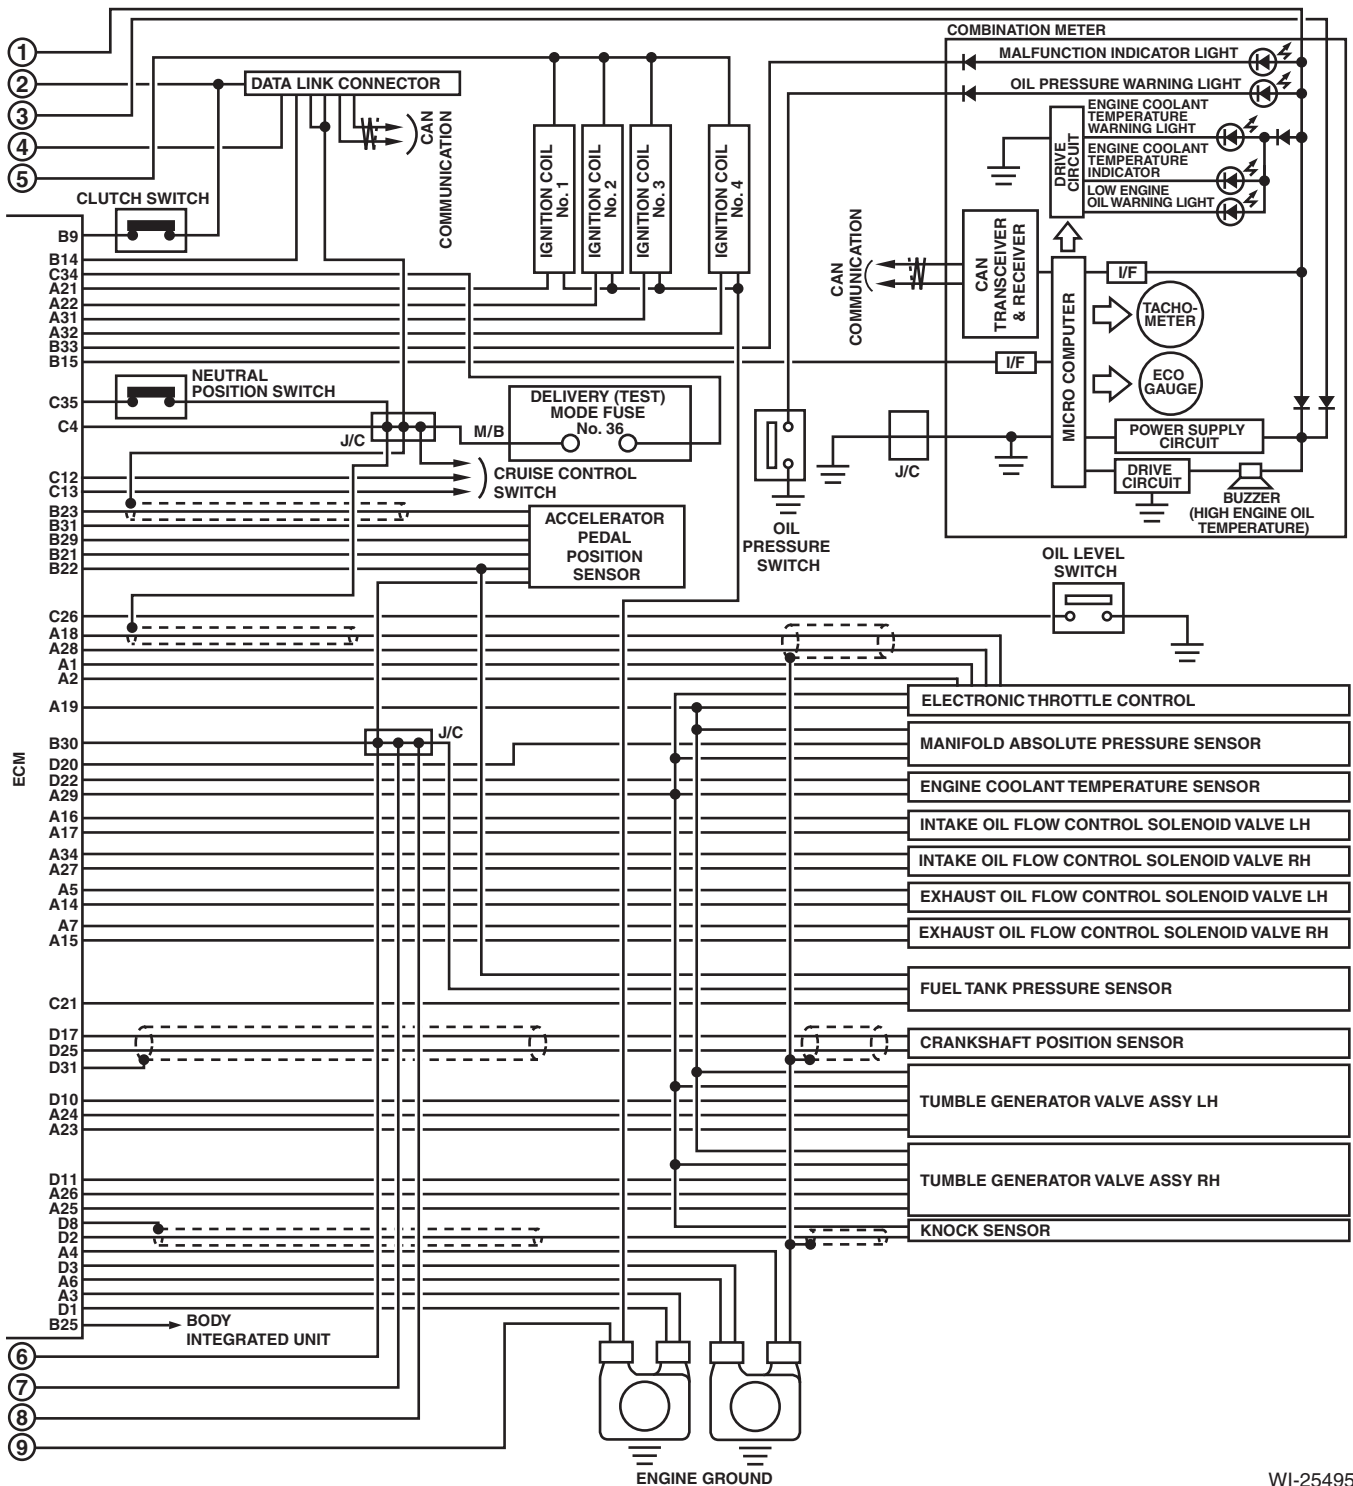

WI-25495


Engine Electrical System

WIRING SYSTEM

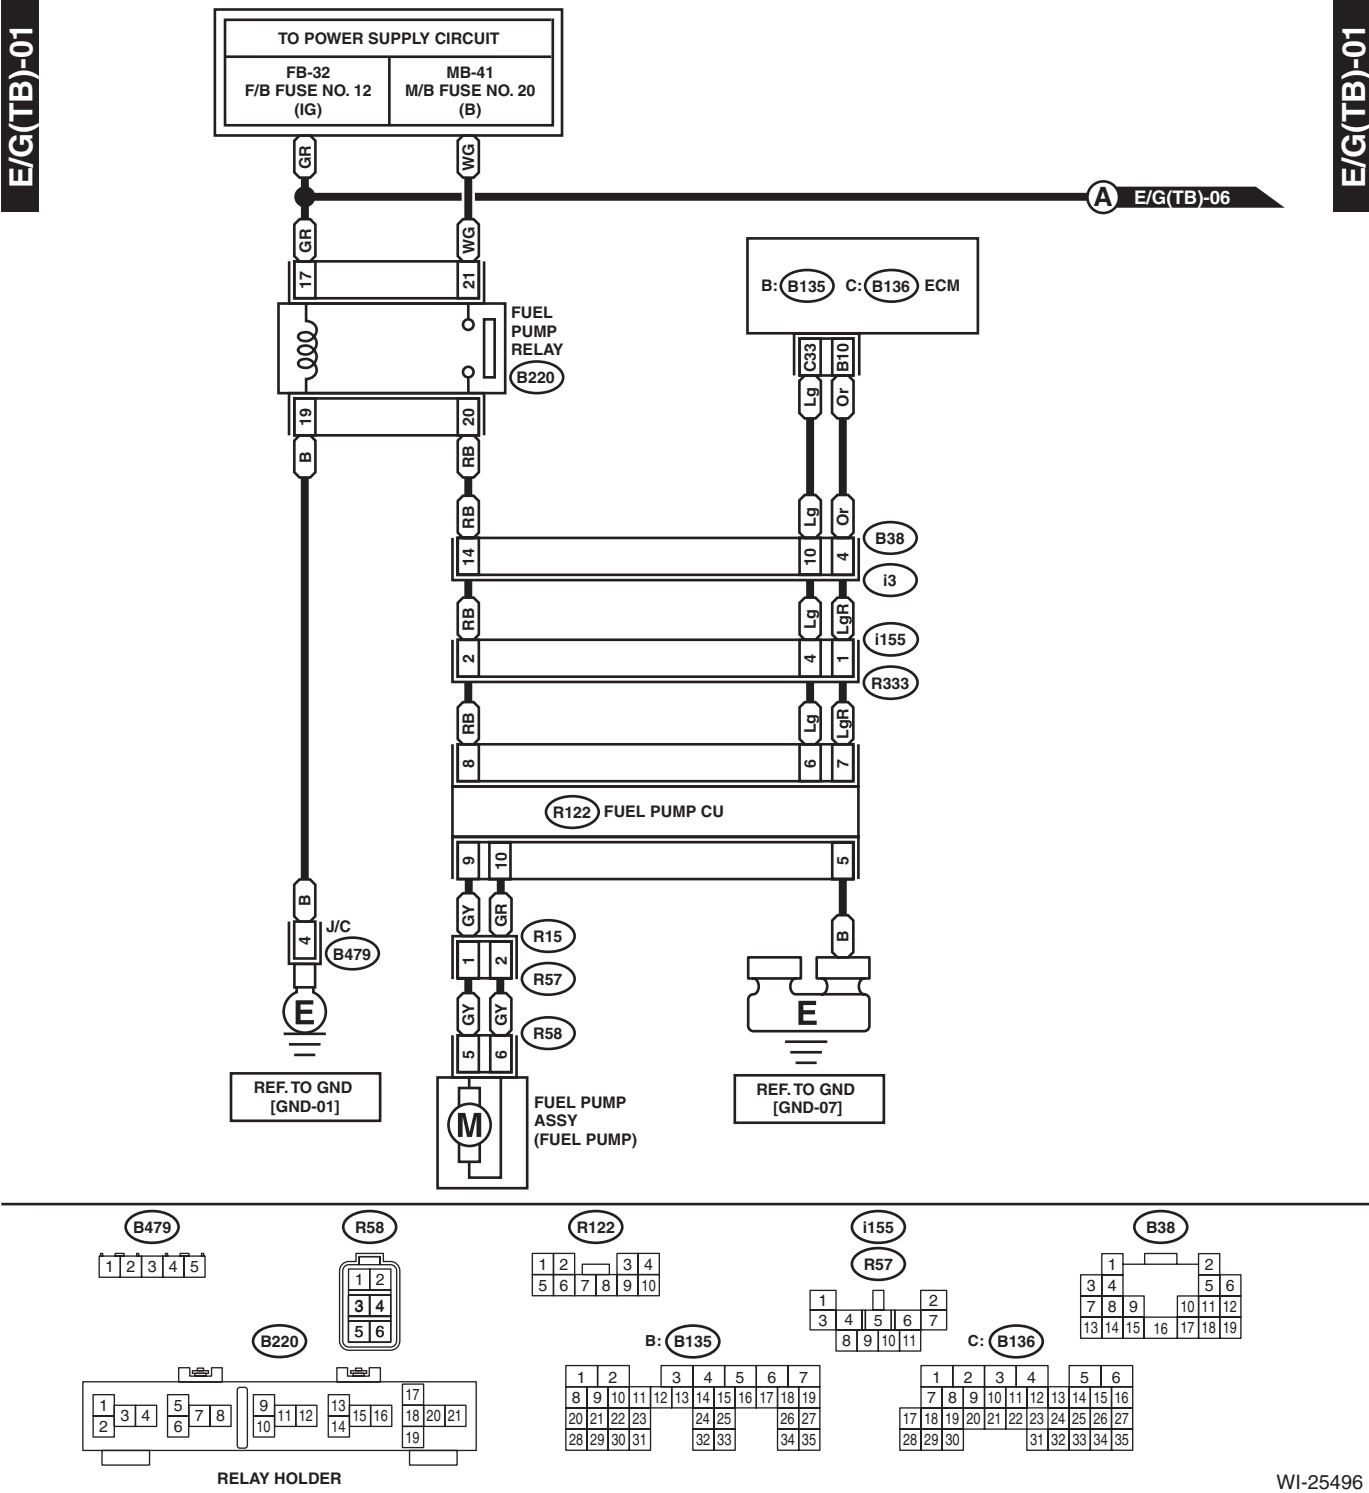

E/G(TB)-02

E/G(TB)-02

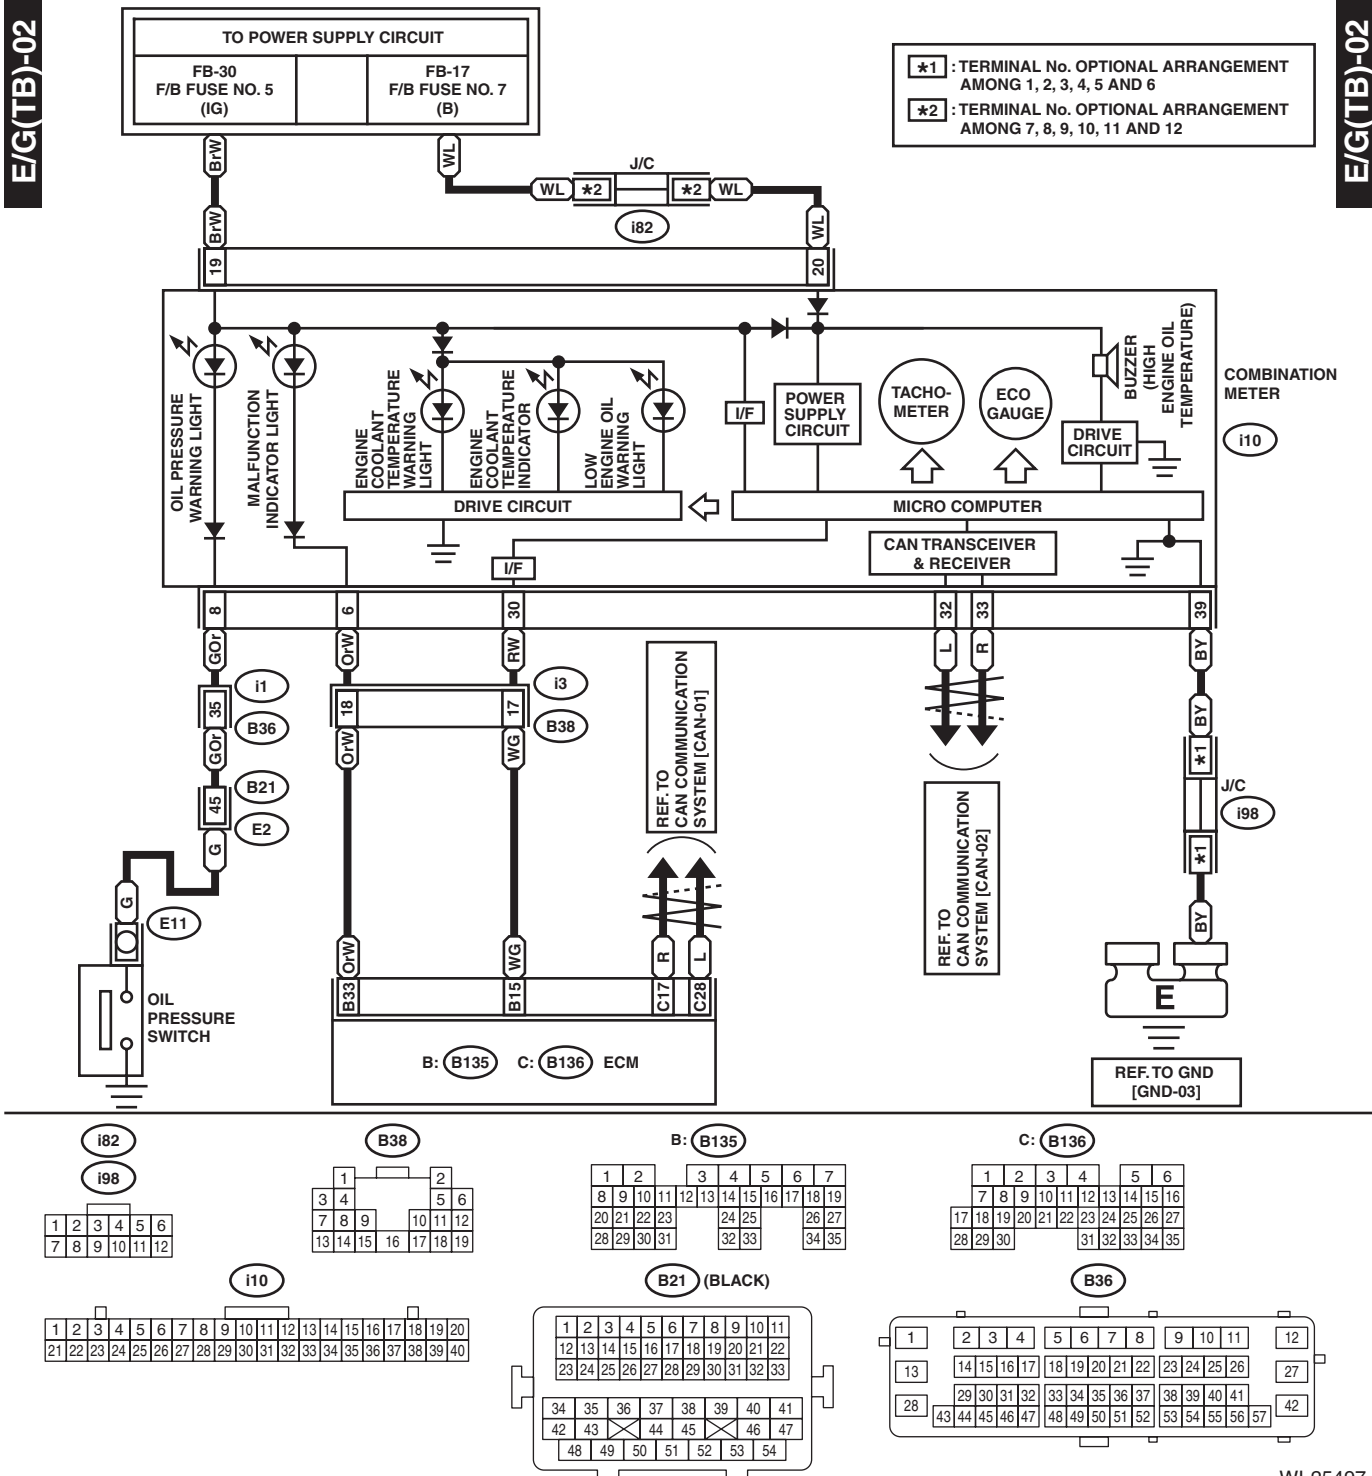


WI-25497

Engine Electrical System

WIRING SYSTEM

E/G(TB)-03

E/G(TB)-03

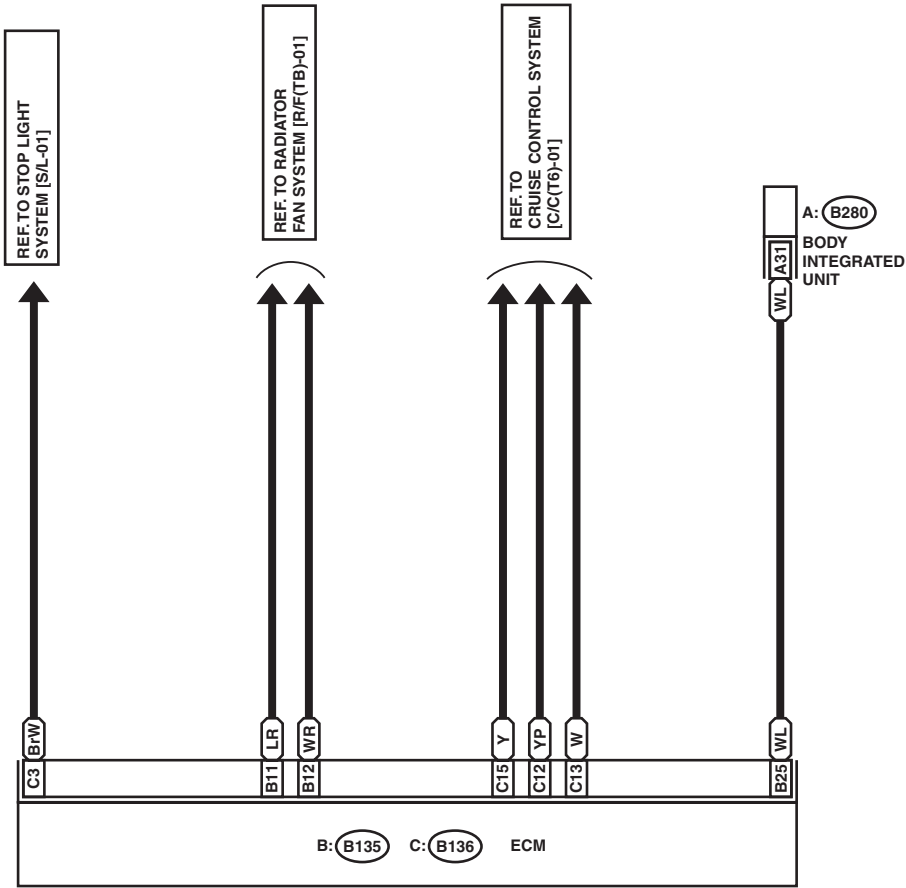

A: B280

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31	32	33	34	


B: B135

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31	32	33	34	35

C: B136

1	2	3	4	5	6
7	8	9	10	11	12
13	14	15	16	17	18
19	20	21	22	23	24
25	26	27	28	29	30
31	32	33	34	35	

WI-25498





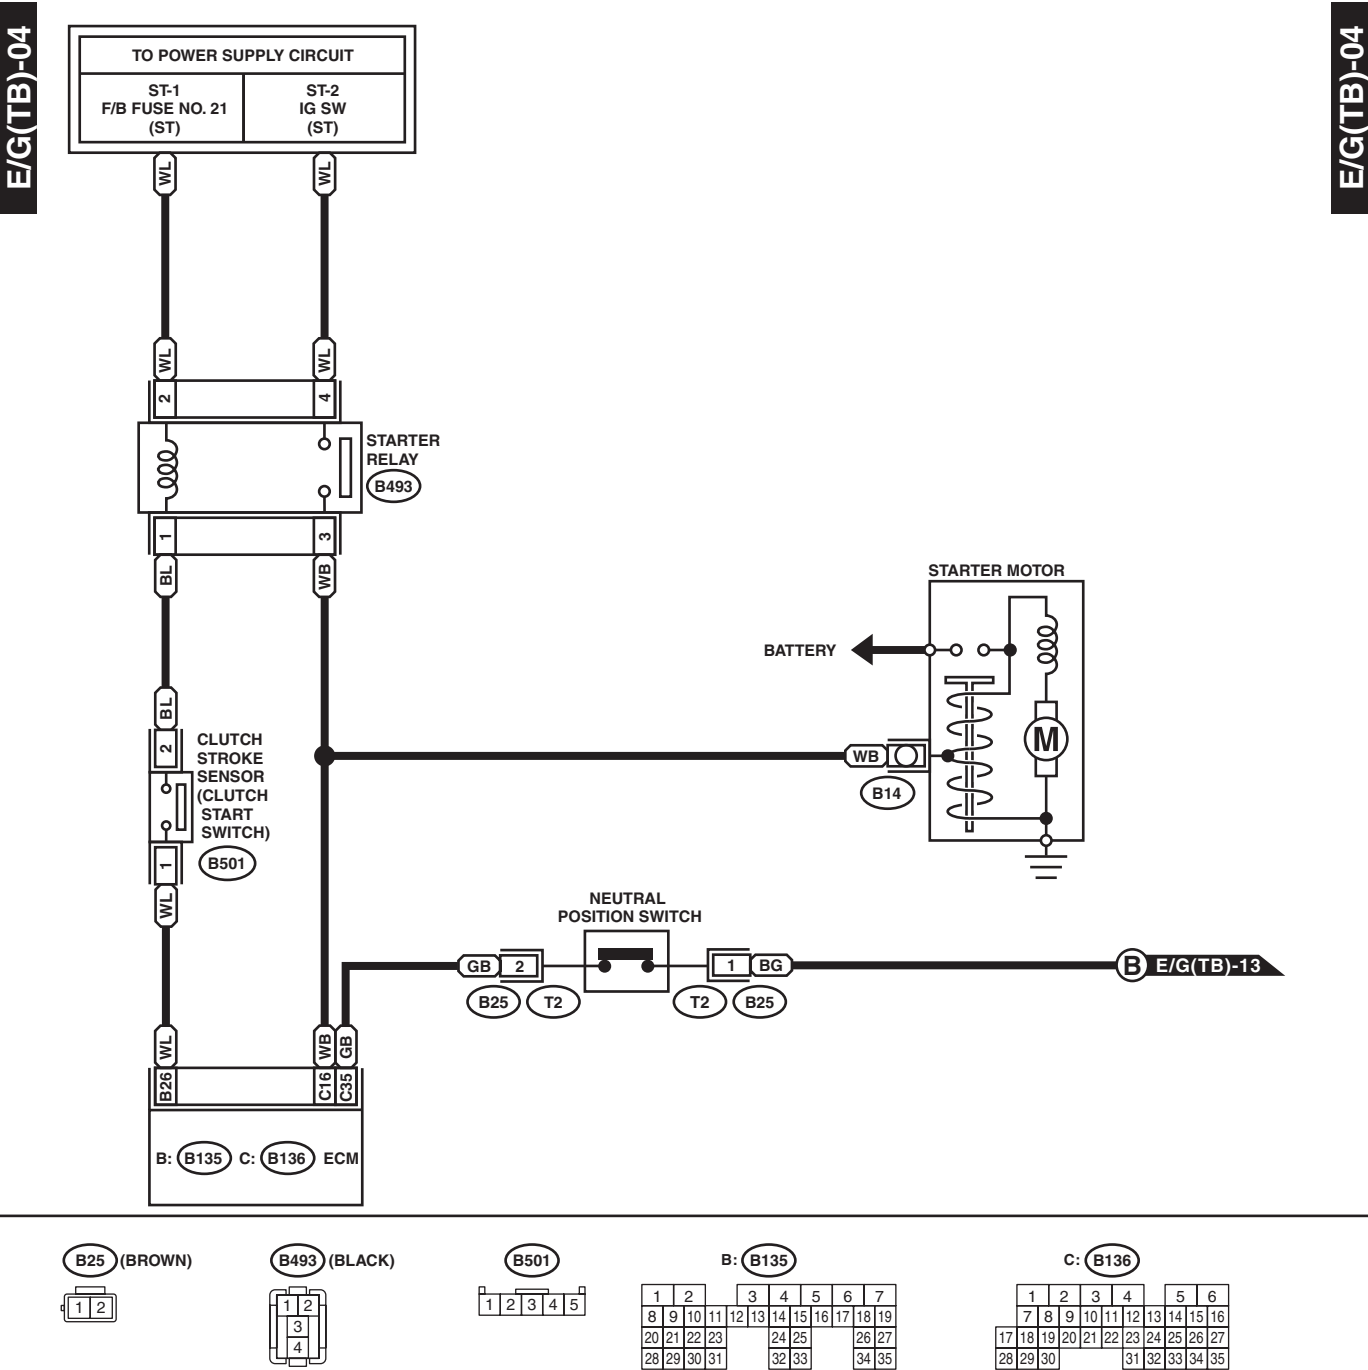


Engine Electrical System


WIRING SYSTEM

E/G(TB)-05

E/G(TB)-05

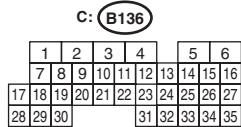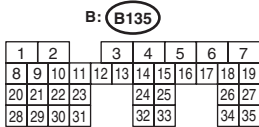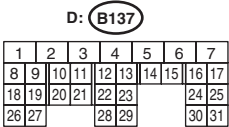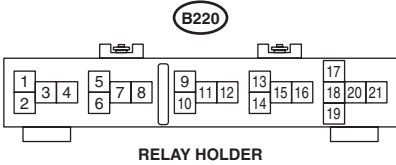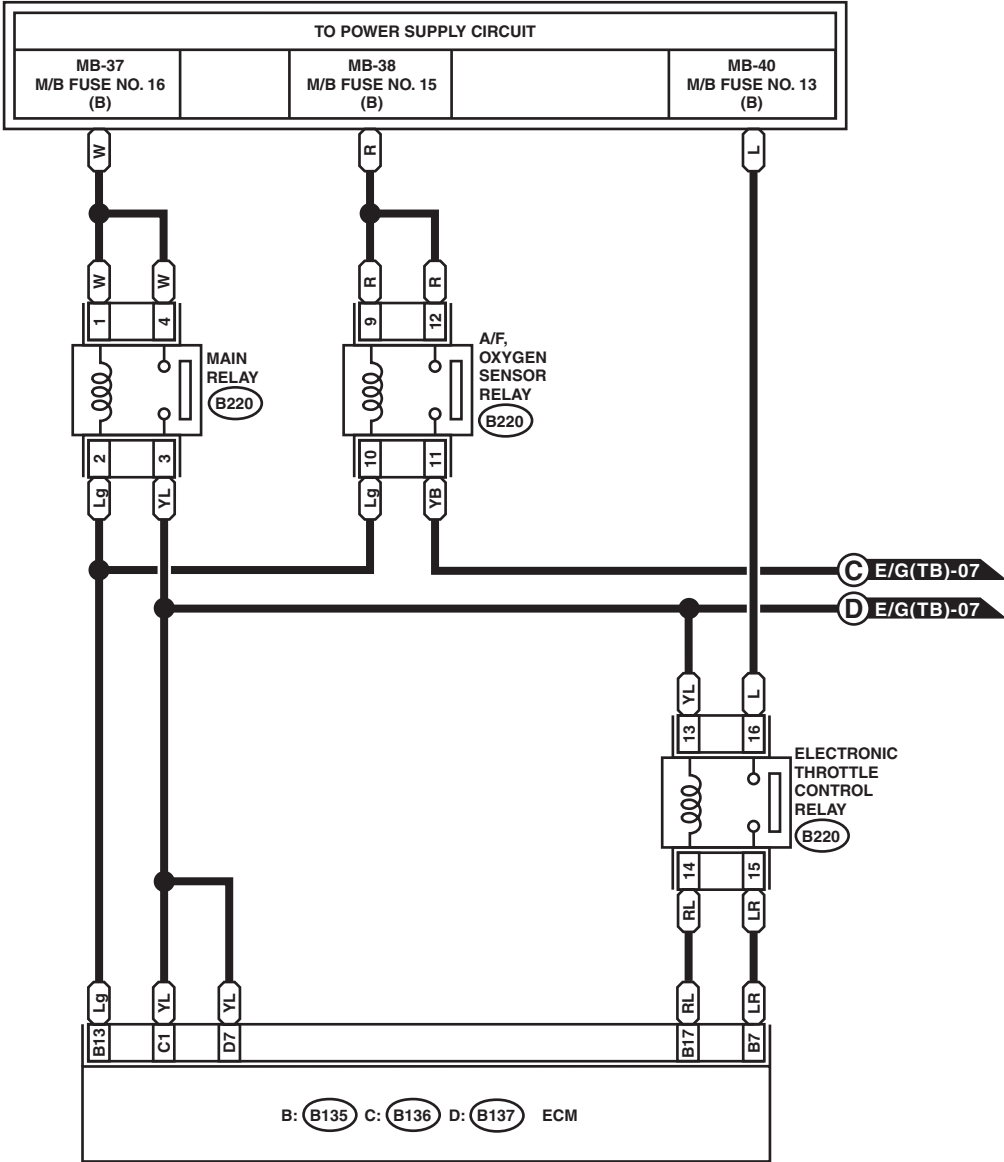


WI-25500

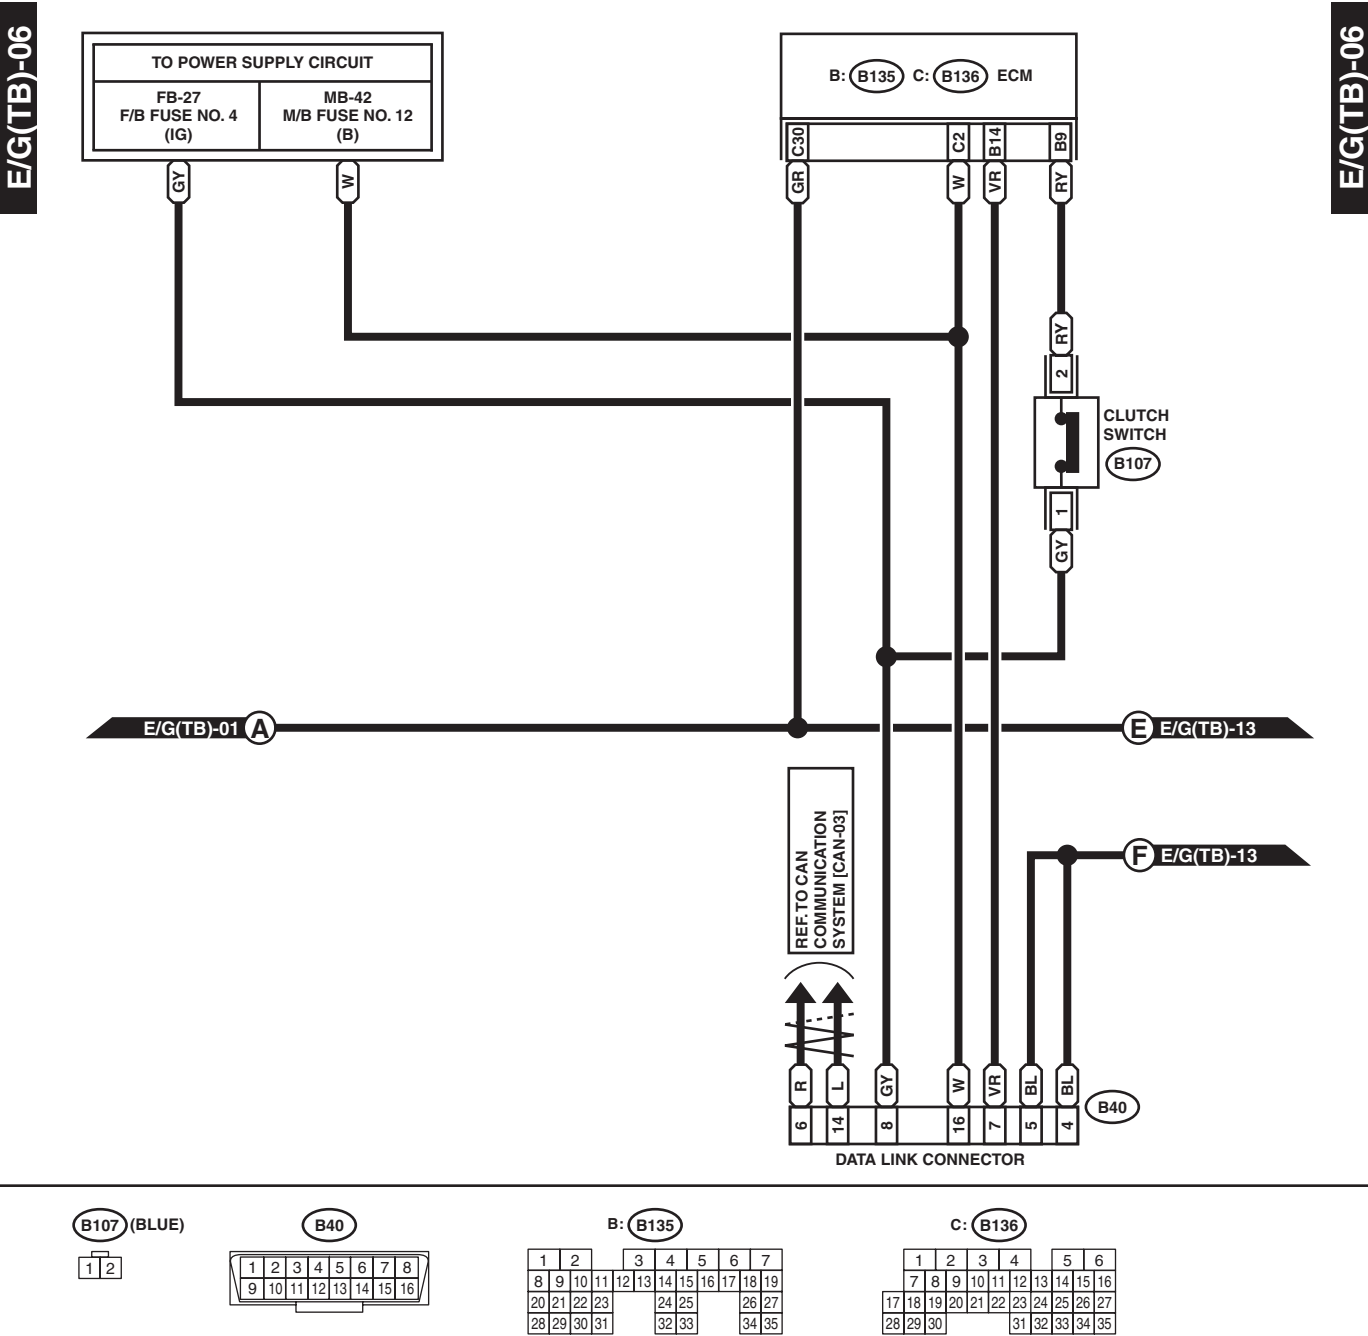

WI-25501

Engine Electrical System

WIRING SYSTEM

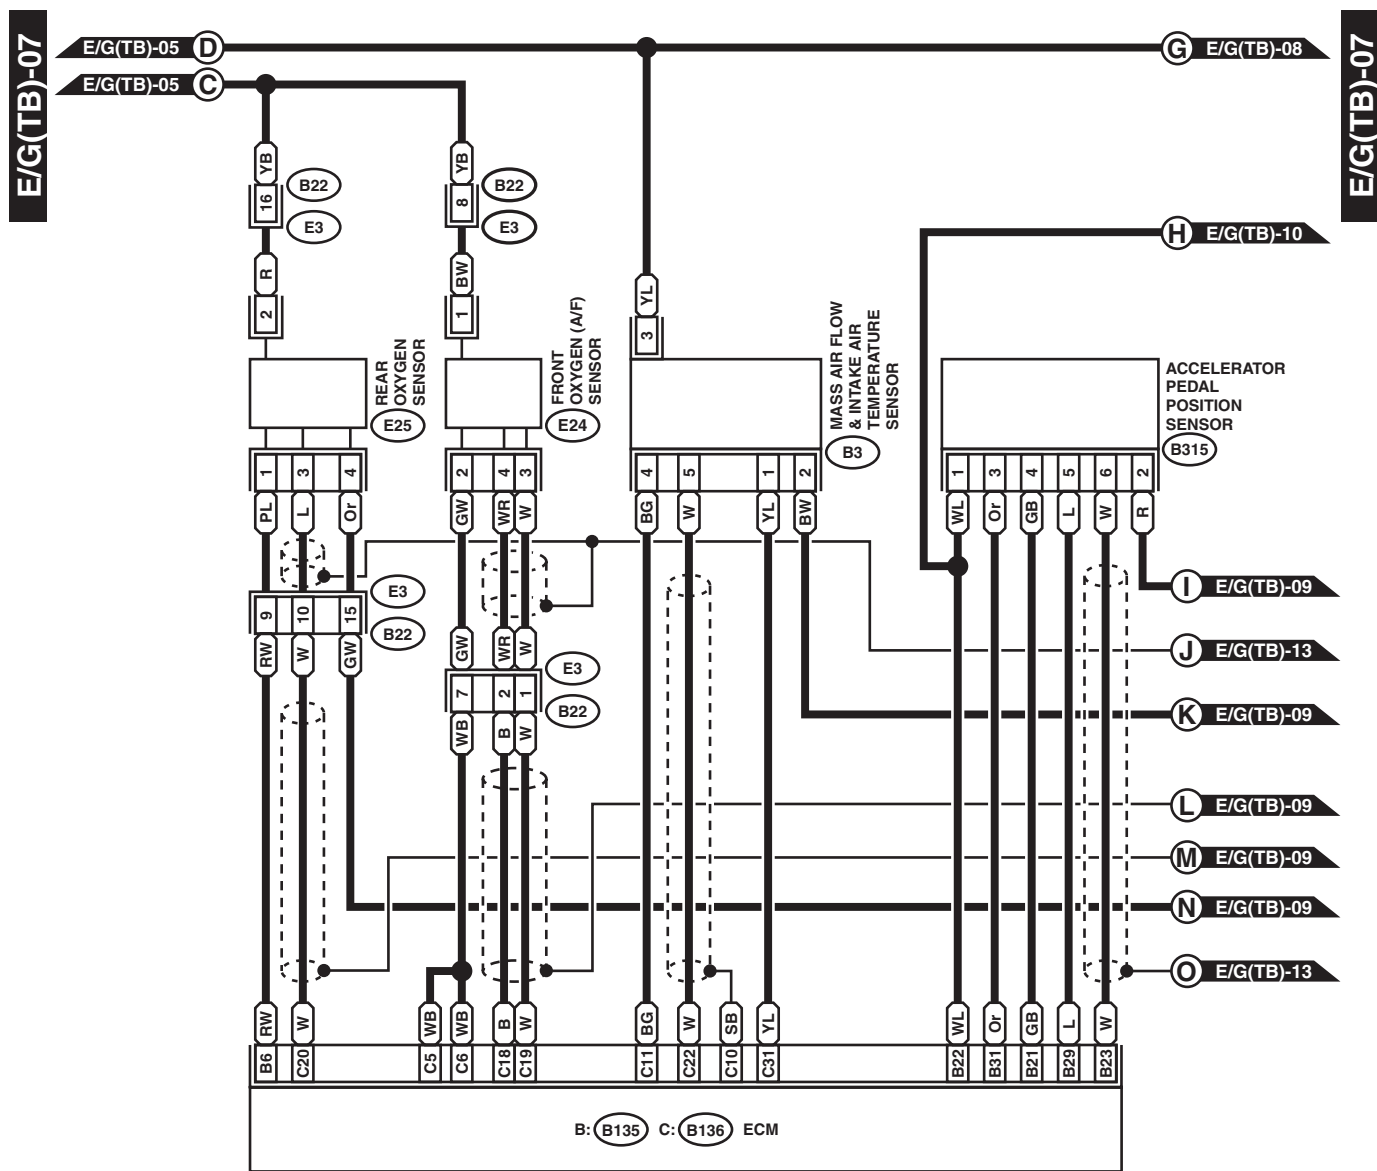

E24 (LIGHT GRAY)



 
E25 (BLACK)




B3 (BLACK)




B315 (BLACK)




B22

 


B: B135

 

C: B136

 


WI-25502

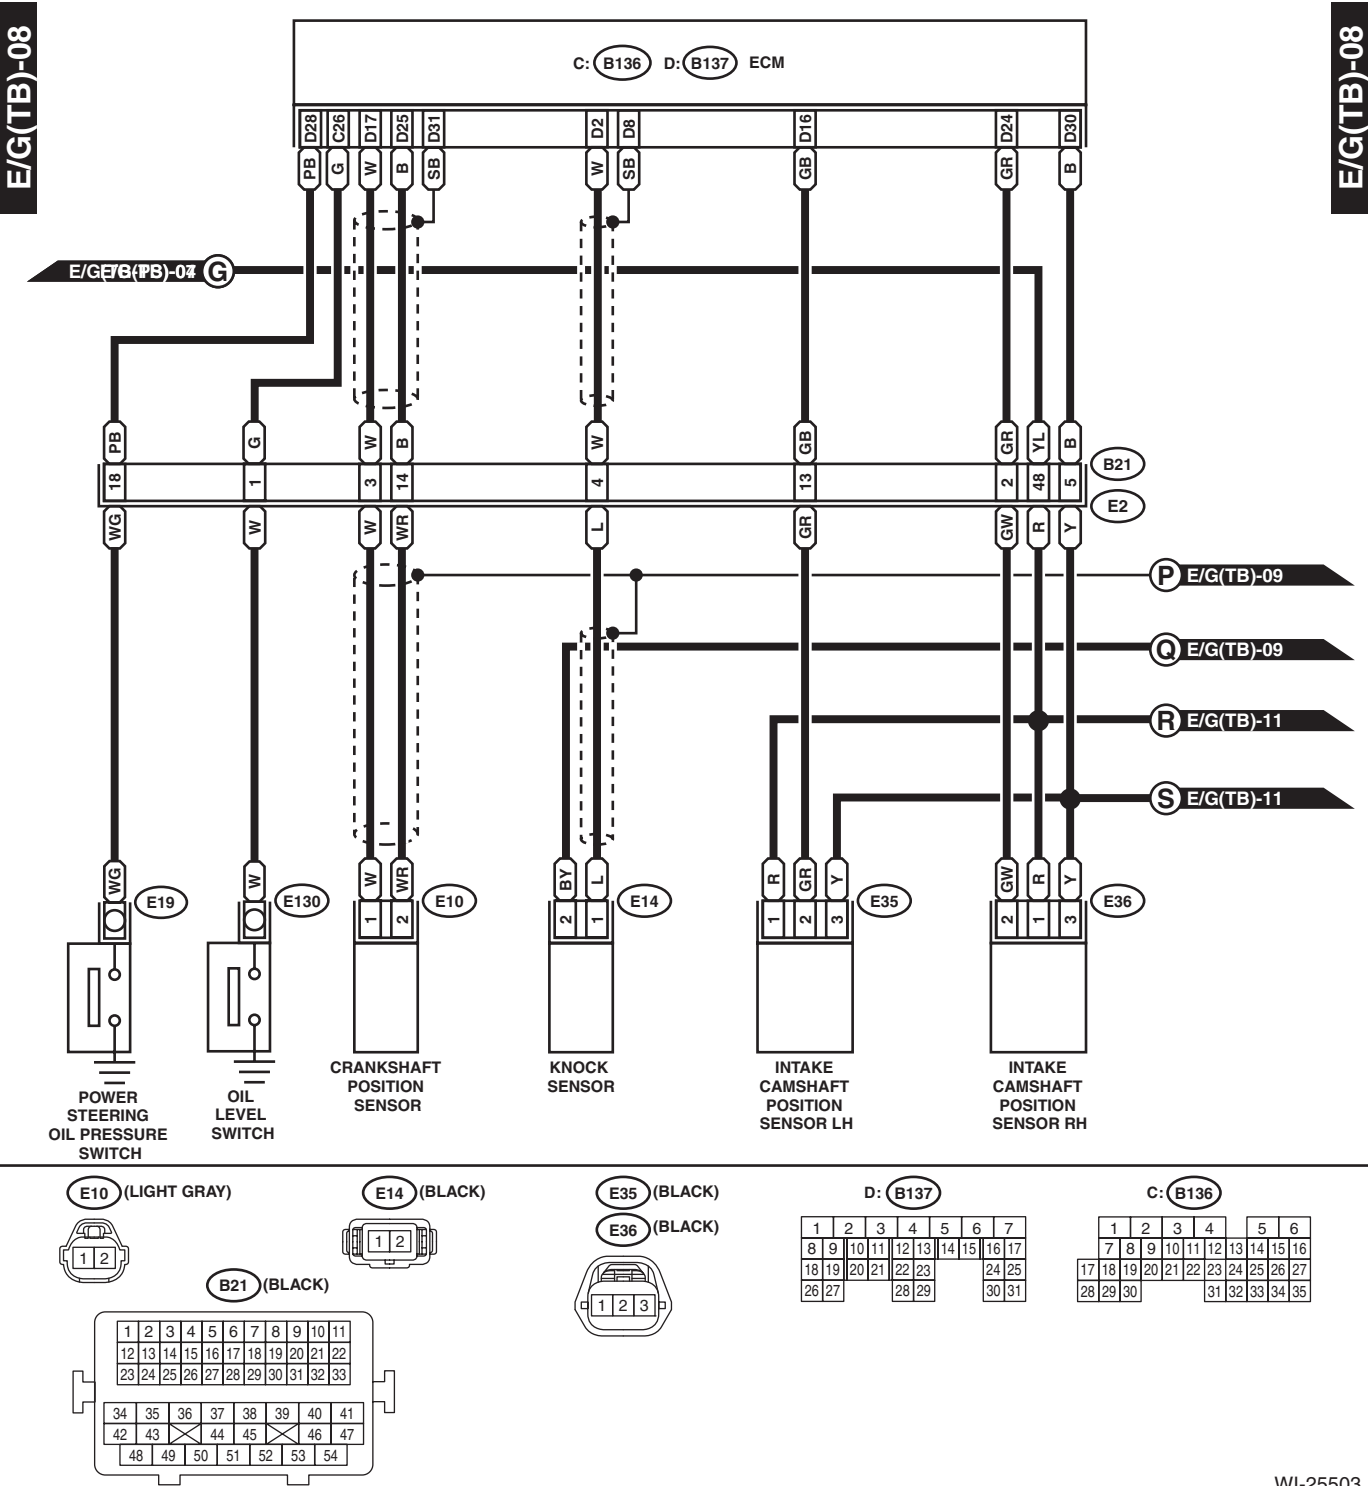

WI-25503

Engine Electrical System


WIRING SYSTEM

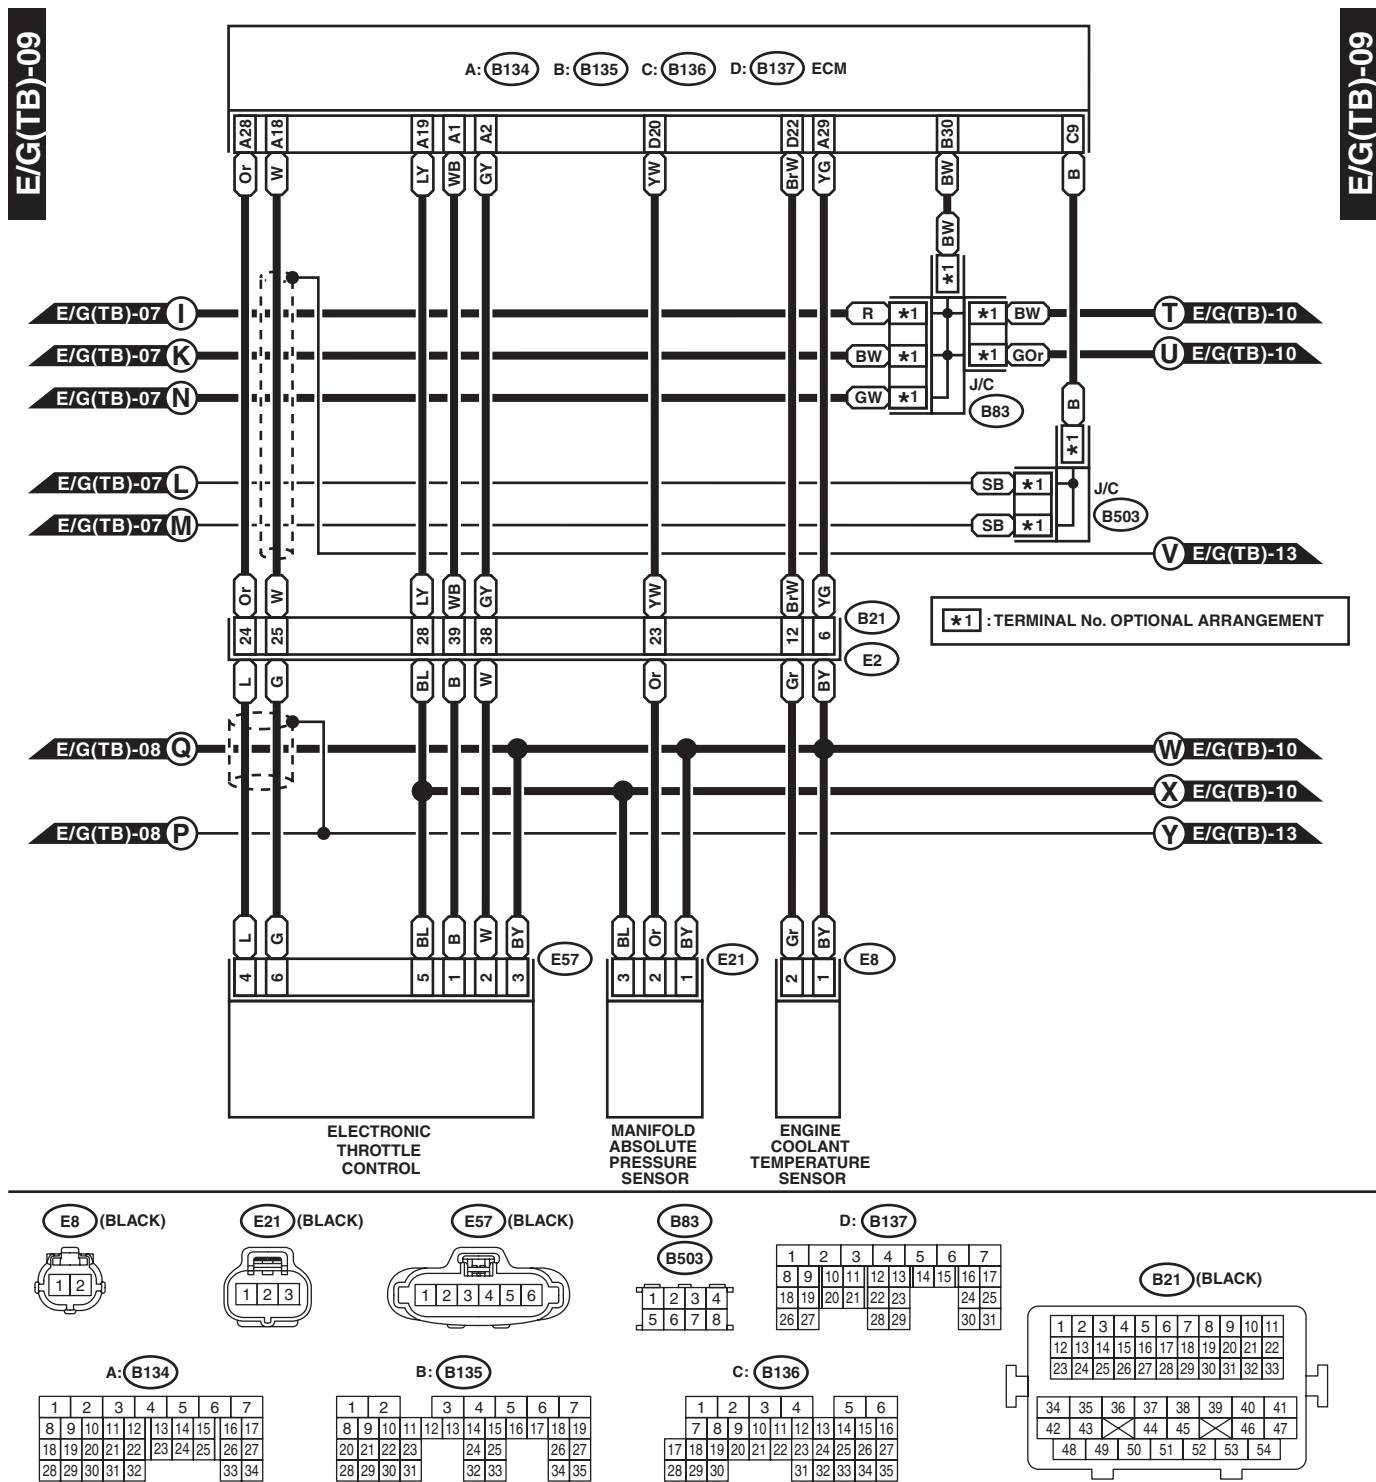

WI-25504


Engine Electrical System

WIRING SYSTEM

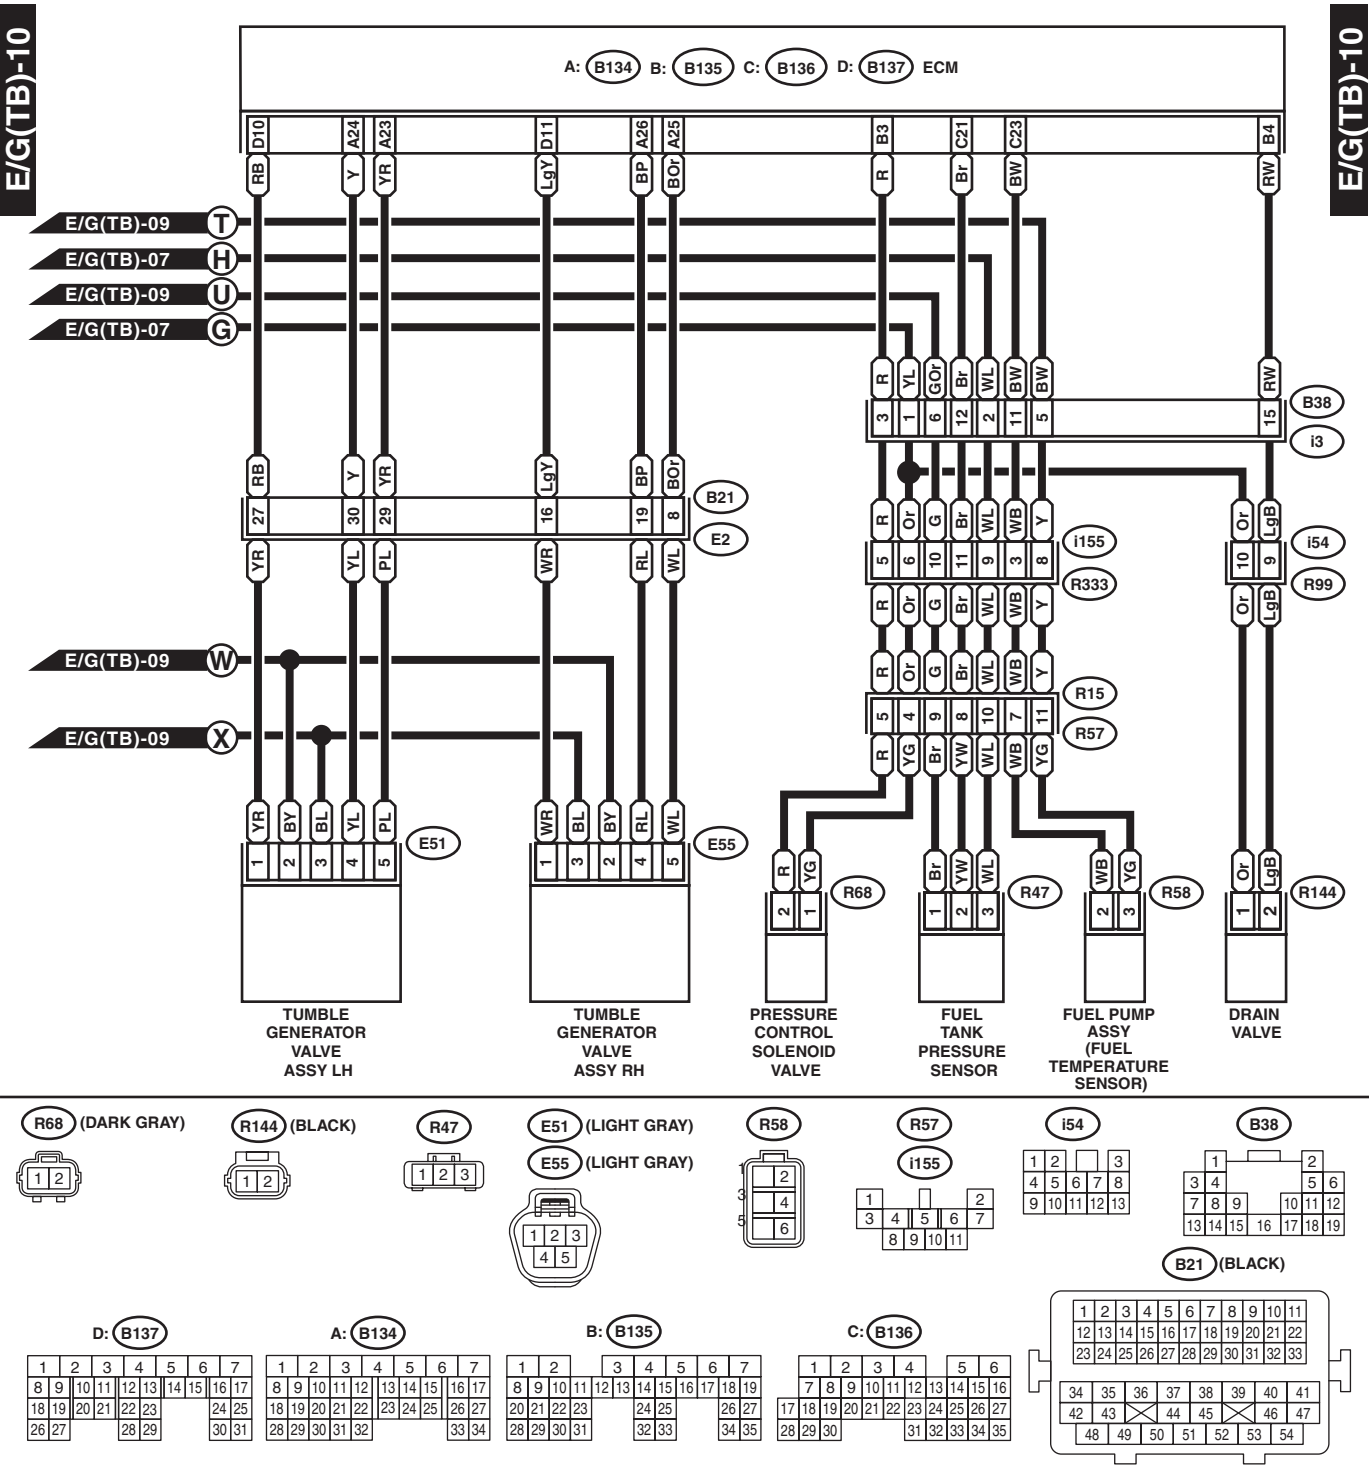

Engine Electrical System


WIRING SYSTEM

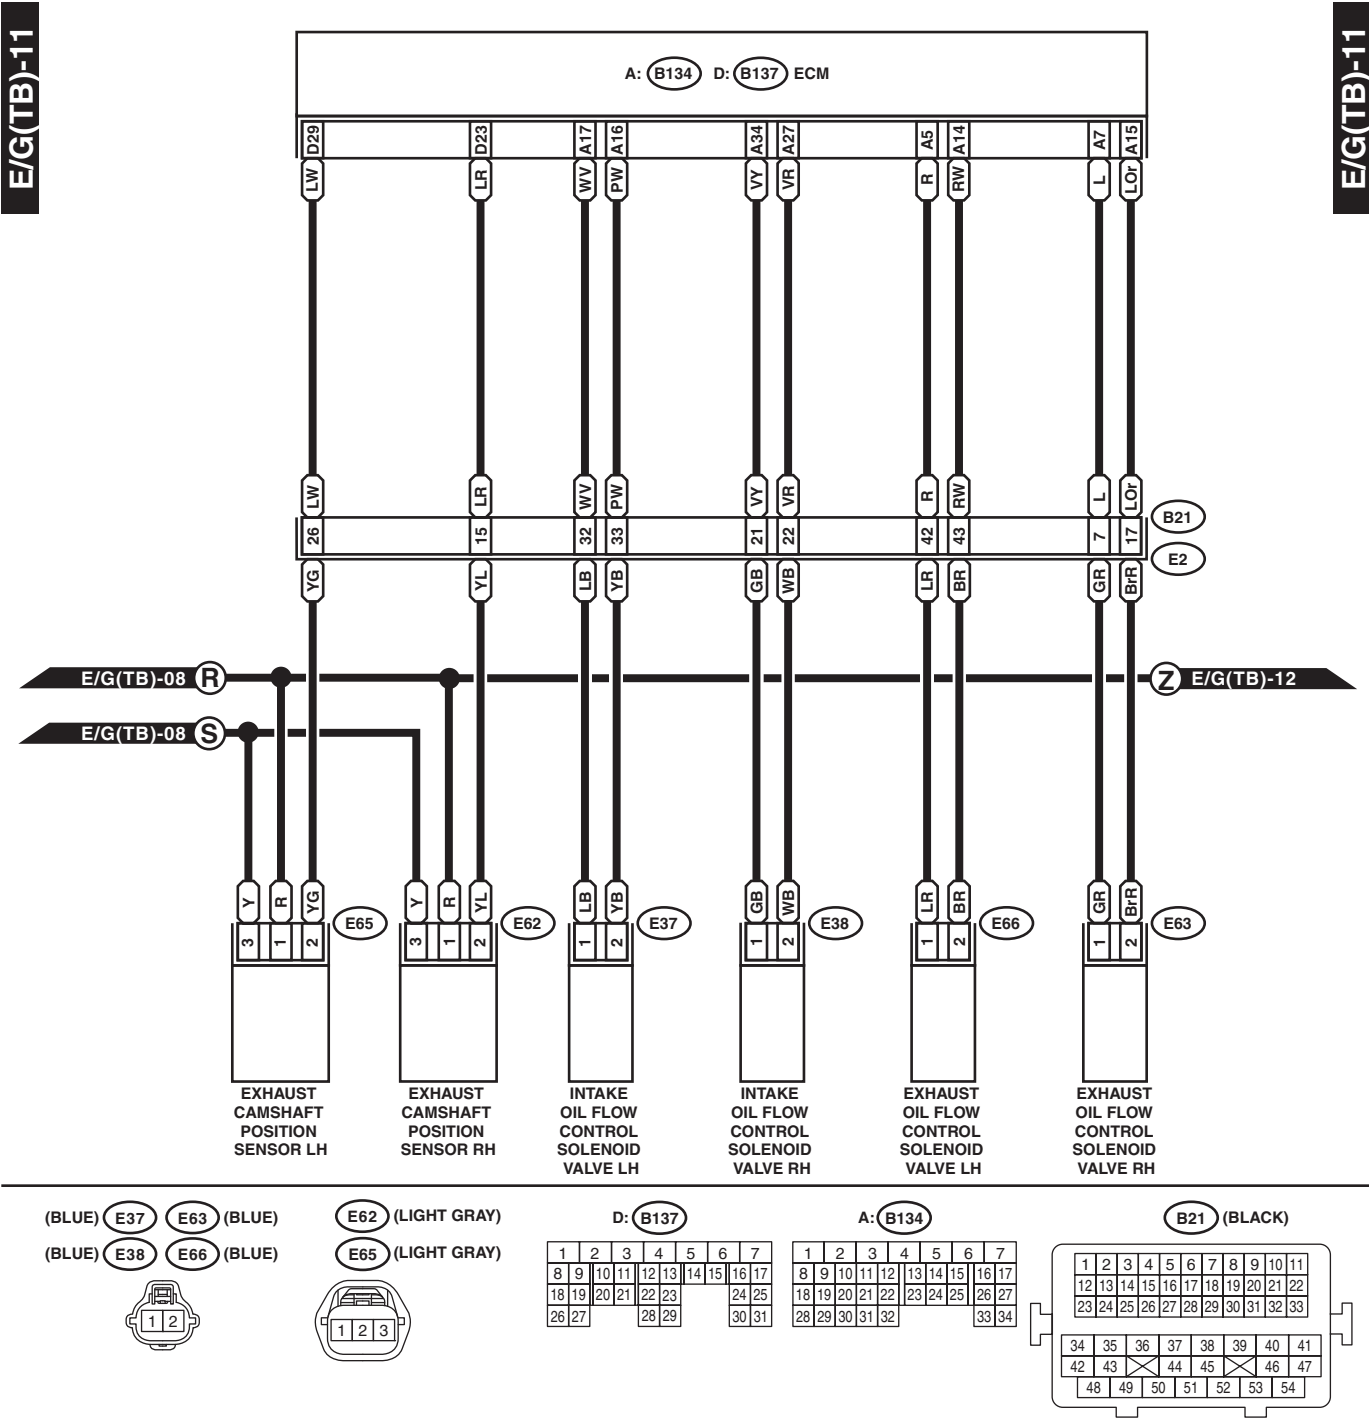

WI-25506

E/G(TB)-12

E/G(TB)-12

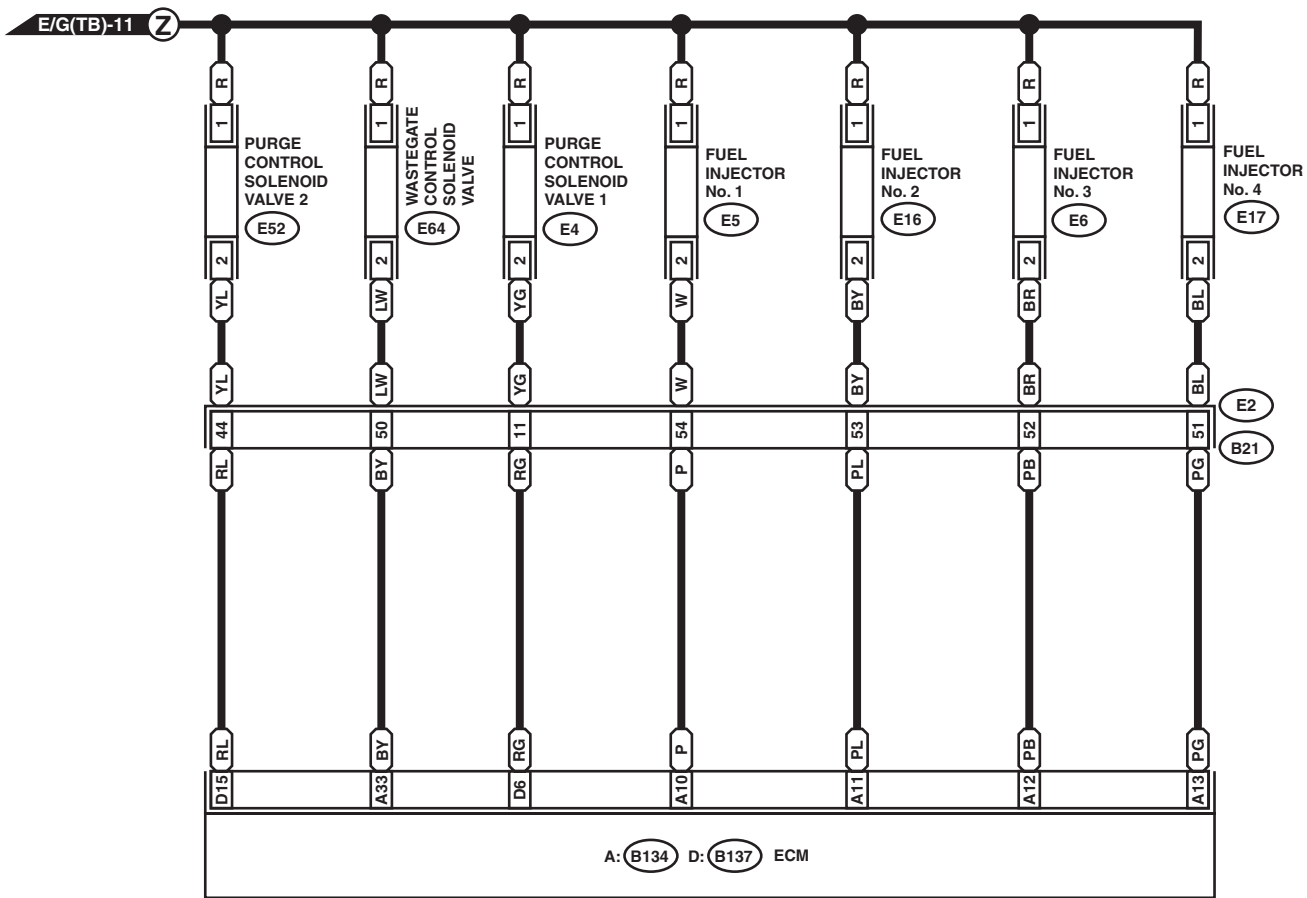

E4 (BLACK)

E52 (BLACK)

E64 (BLACK)

(DARK GRAY) E5

(DARK GRAY) E6

(DARK GRAY) E16

(DARK GRAY) E17

D: B137

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31	32	33	34	

A: B134


1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31	32	33	34	

B21 (BLACK)

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31	32	33
34	35	36	37	38	39	40	41	42	43	44
45	46	47	48	49	50	51	52	53	54	

Engine Electrical System


WIRING SYSTEM

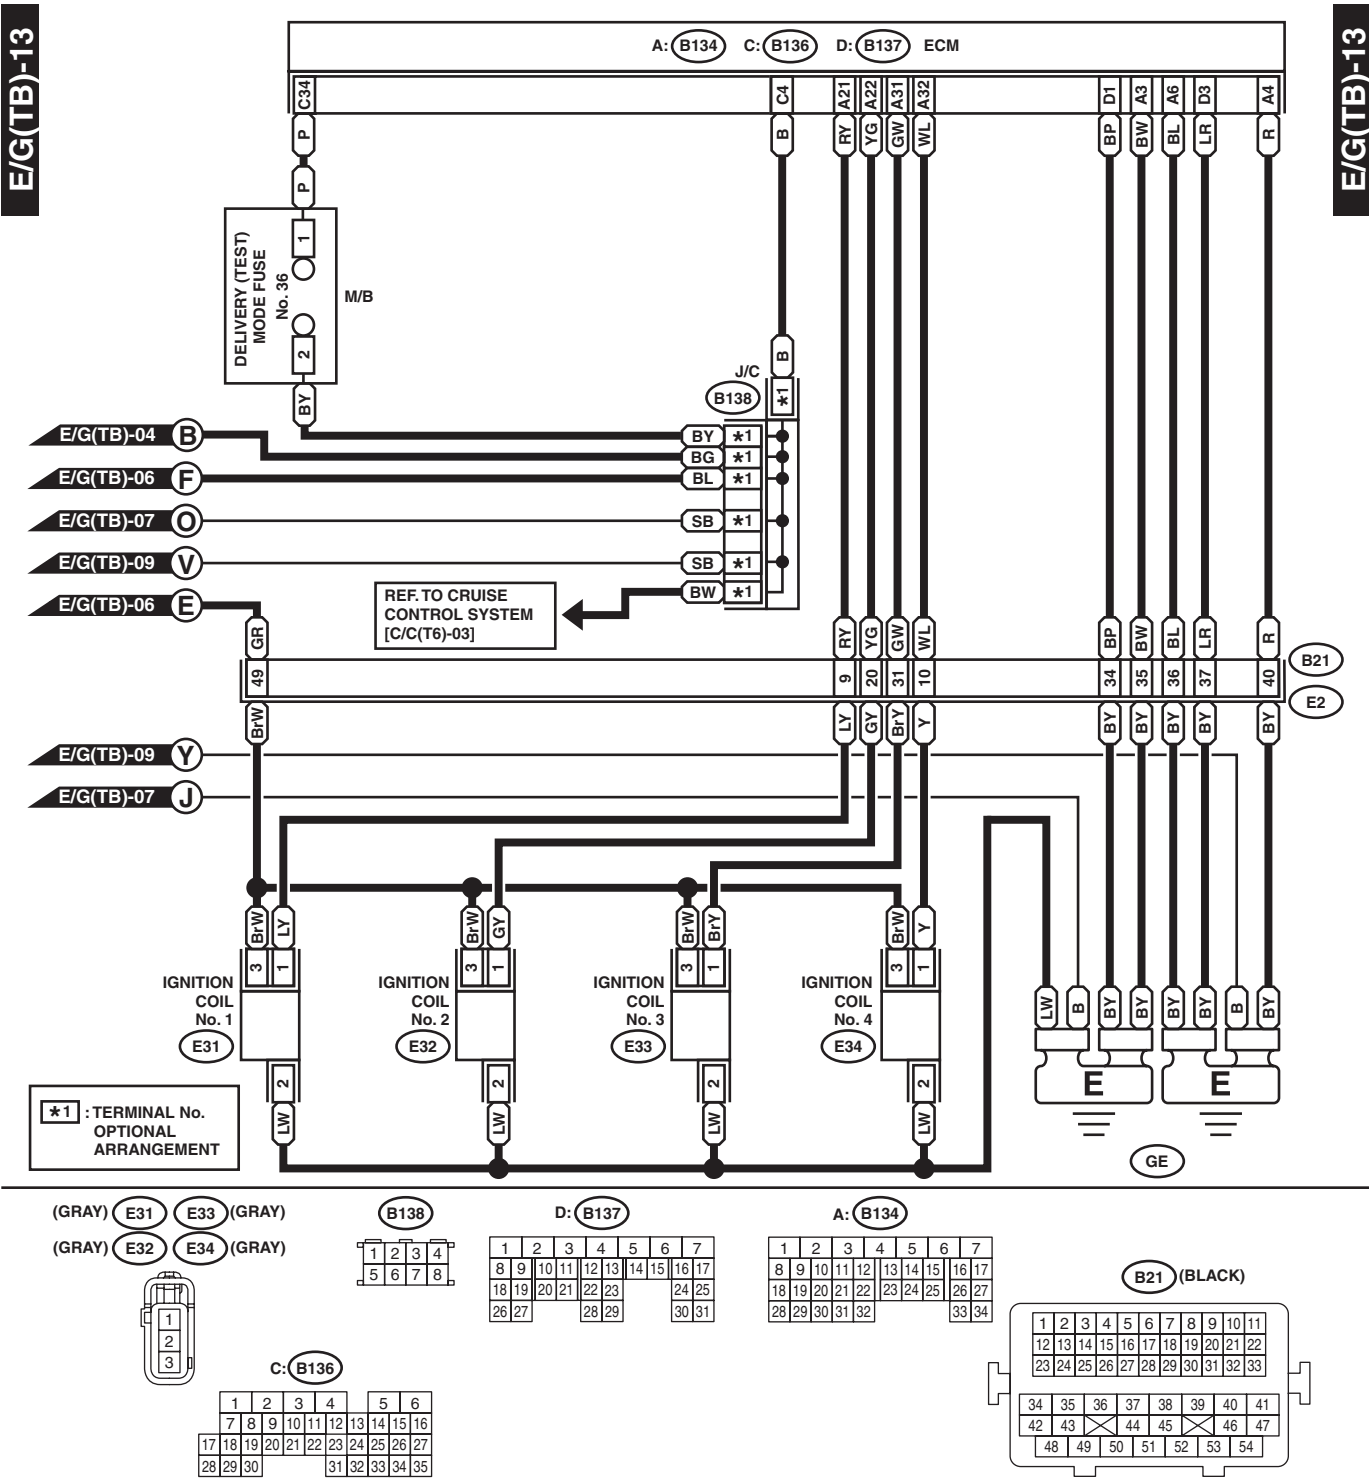


Engine Electrical System

WIRING SYSTEM

3. 3.6 L MODEL

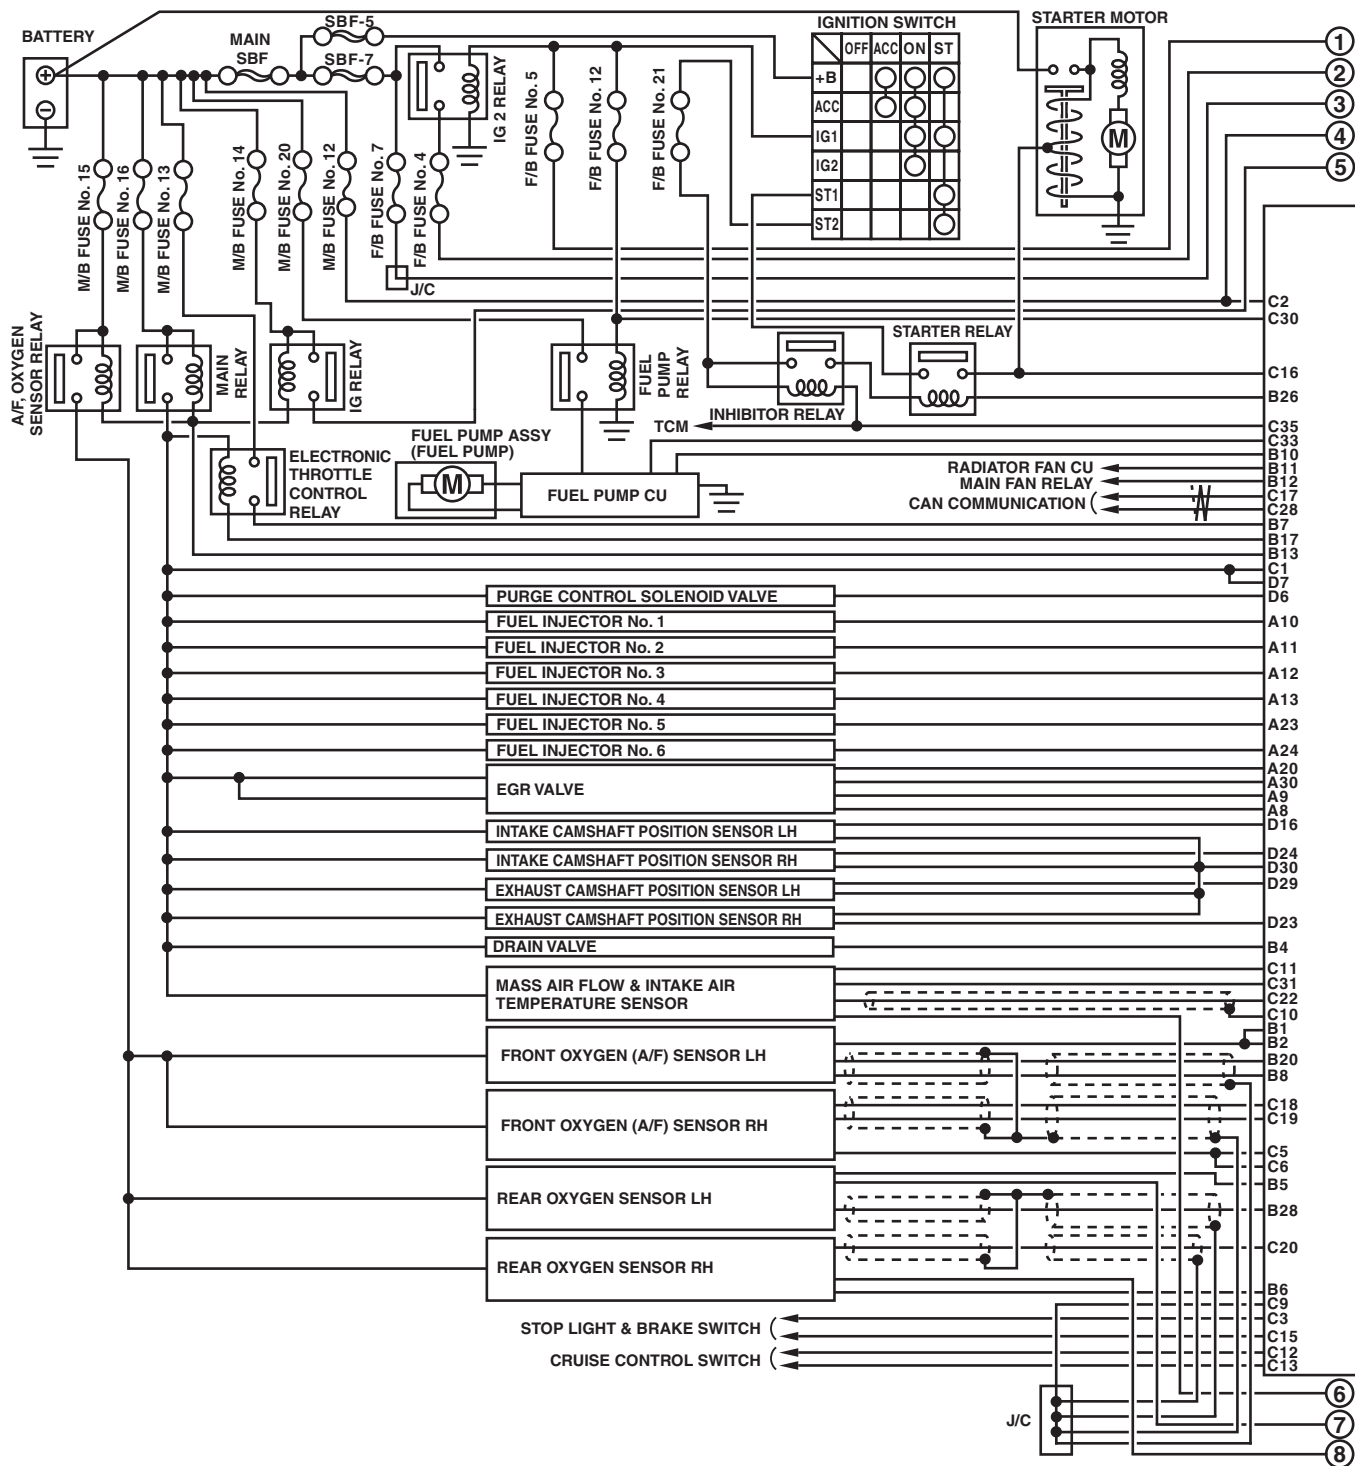


WI-25509

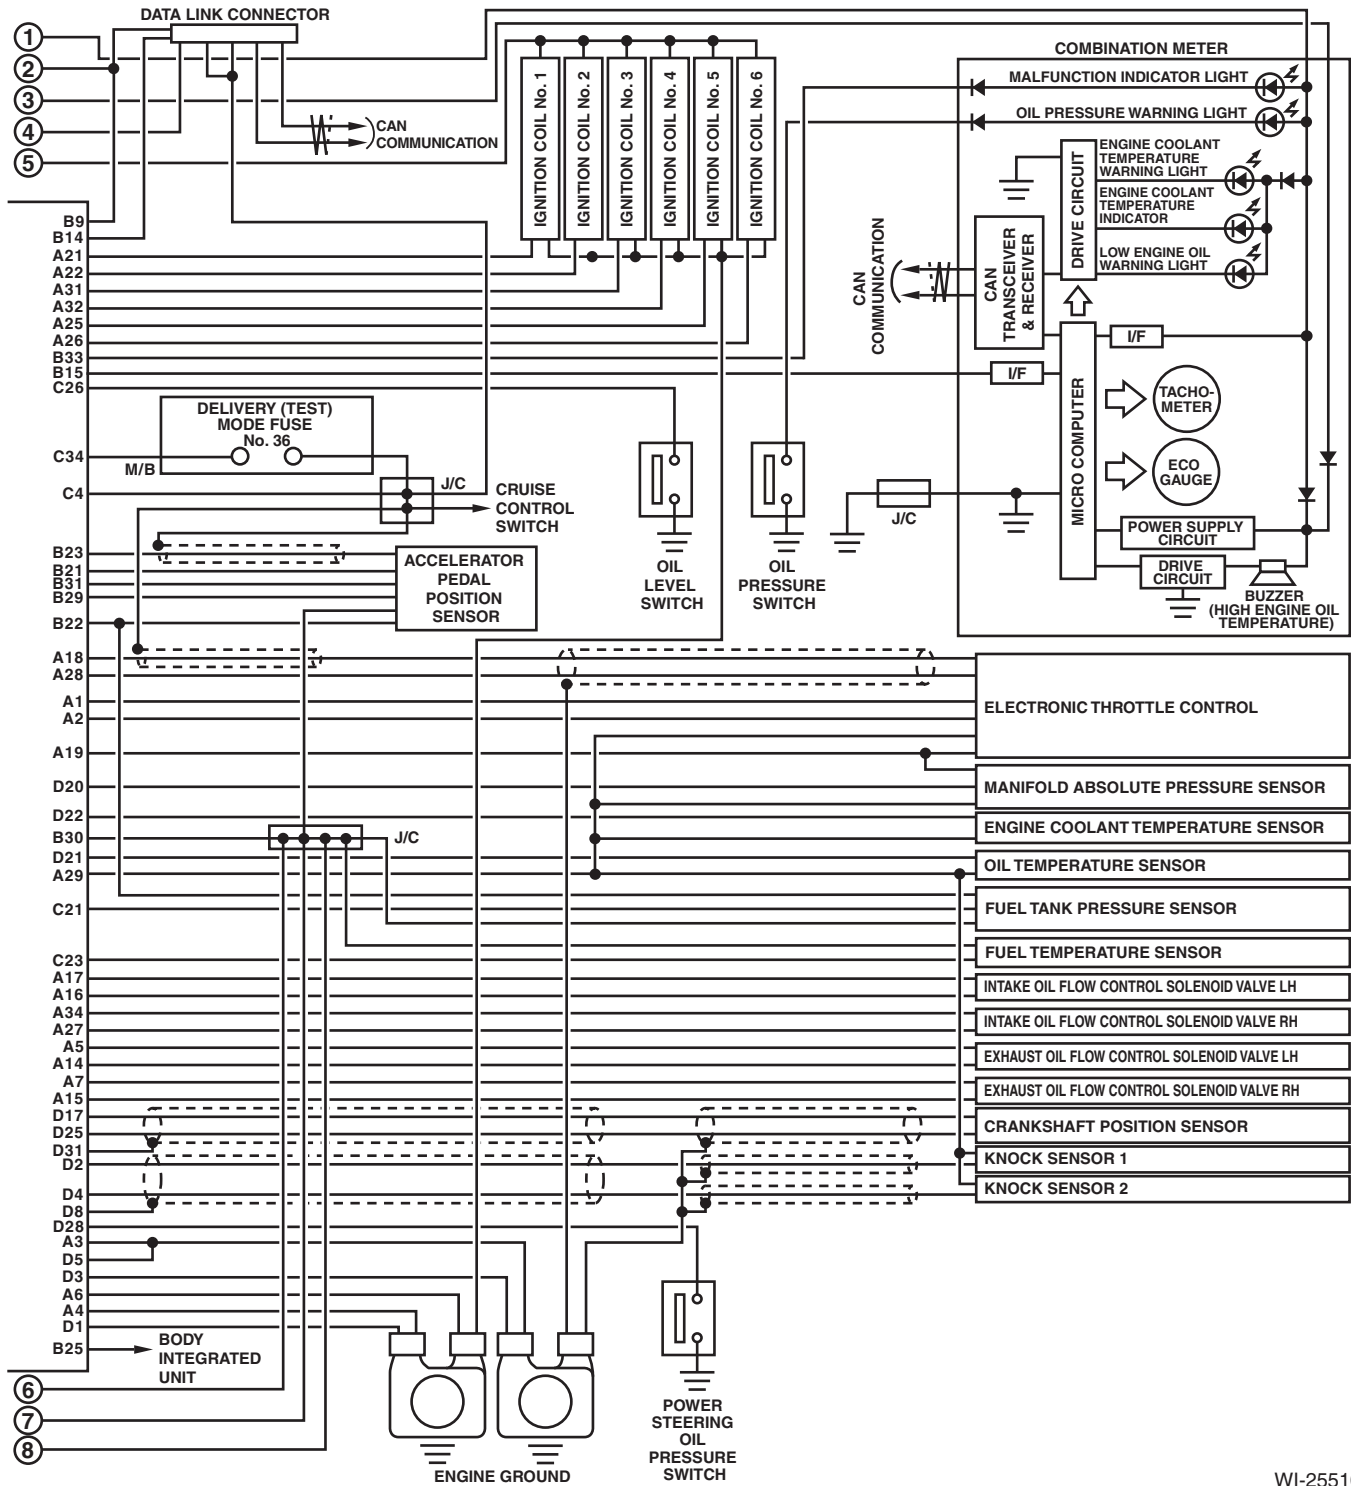

WI-25510


Engine Electrical System

WIRING SYSTEM

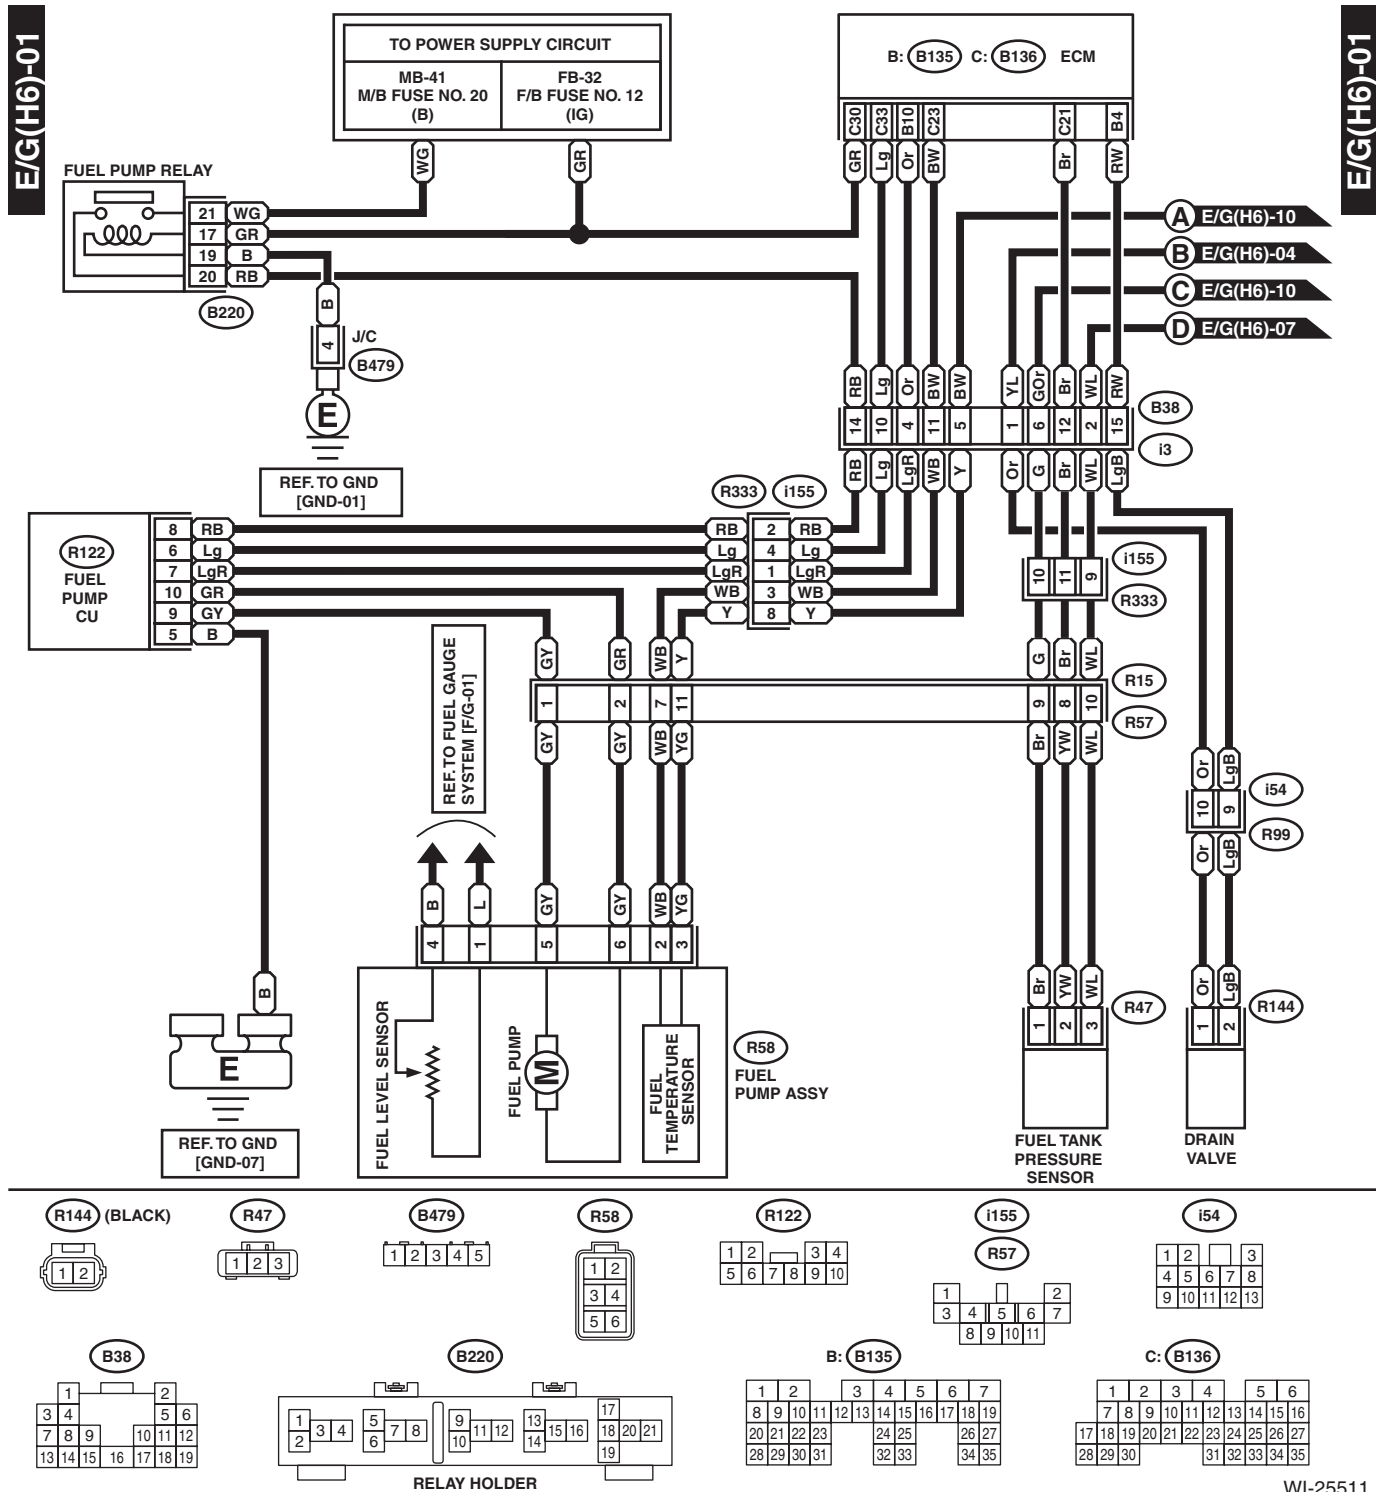

E/G(H6)-02


E/G(H6)-02

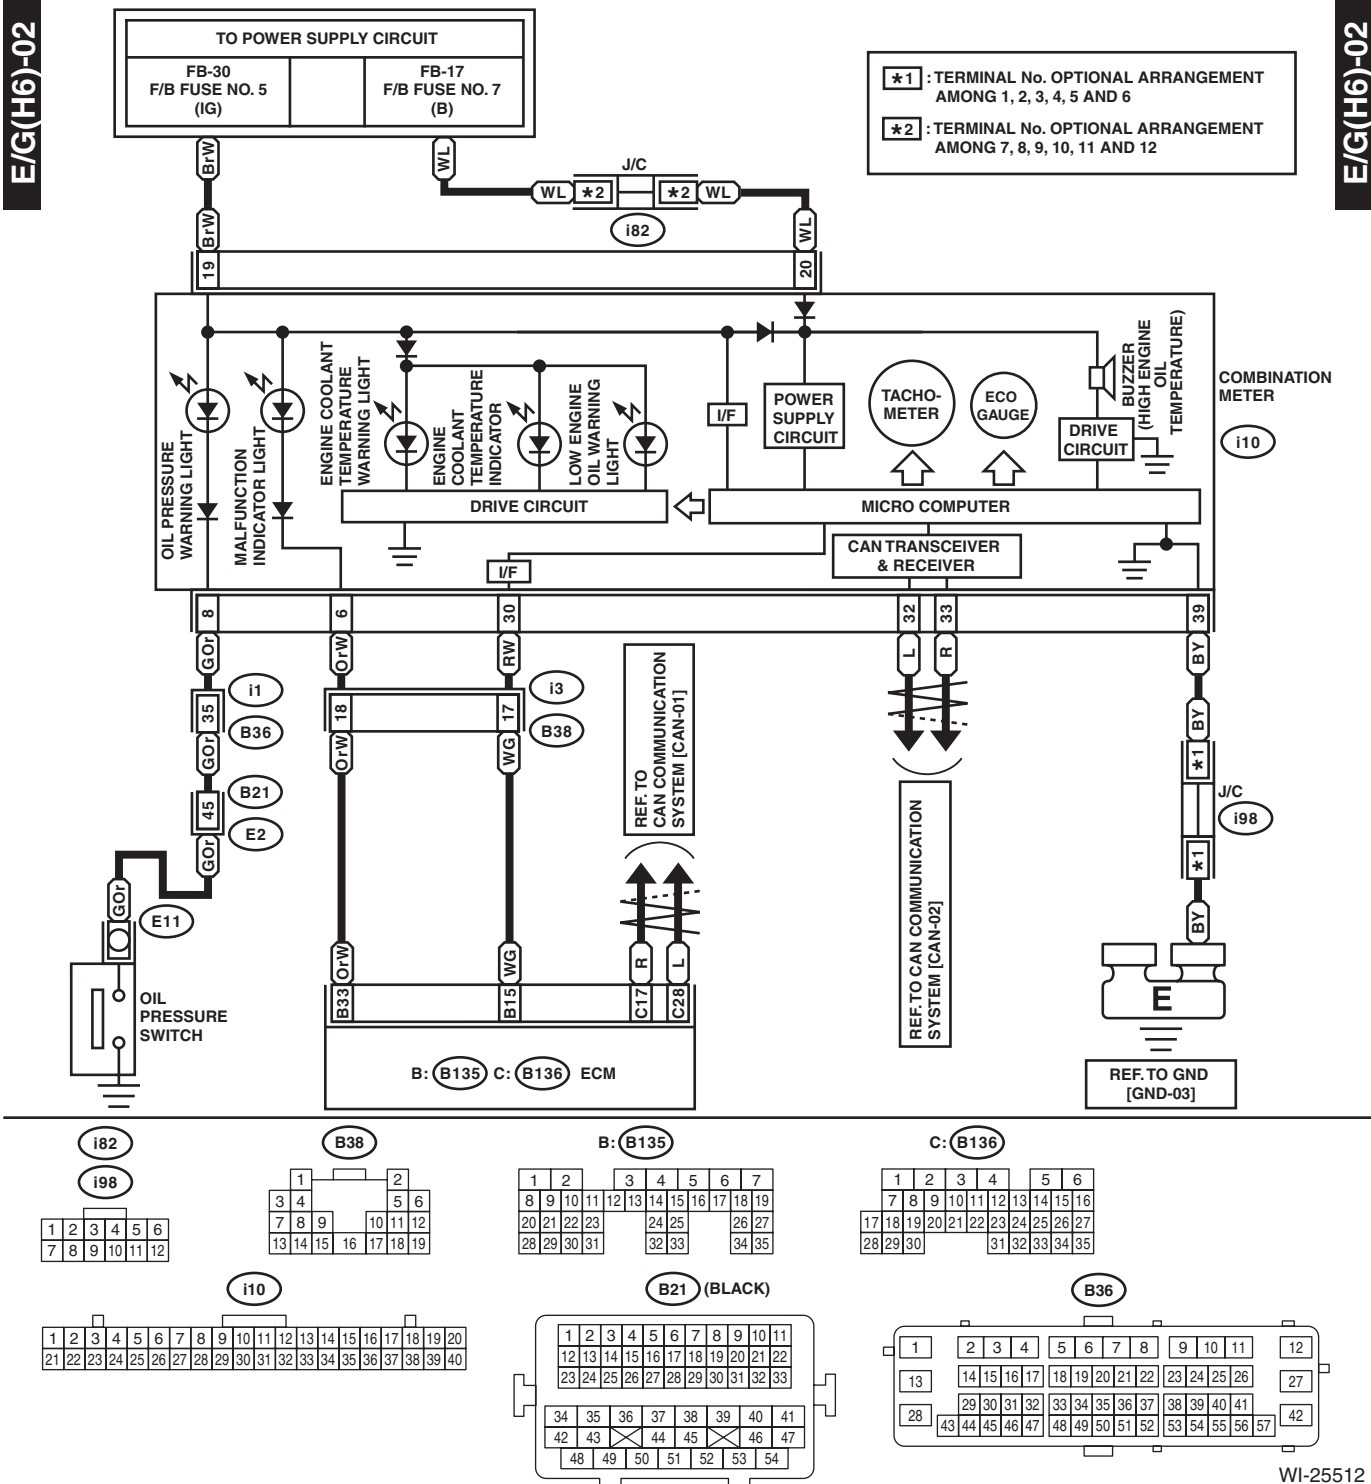


WI-25512

Engine Electrical System

WIRING SYSTEM

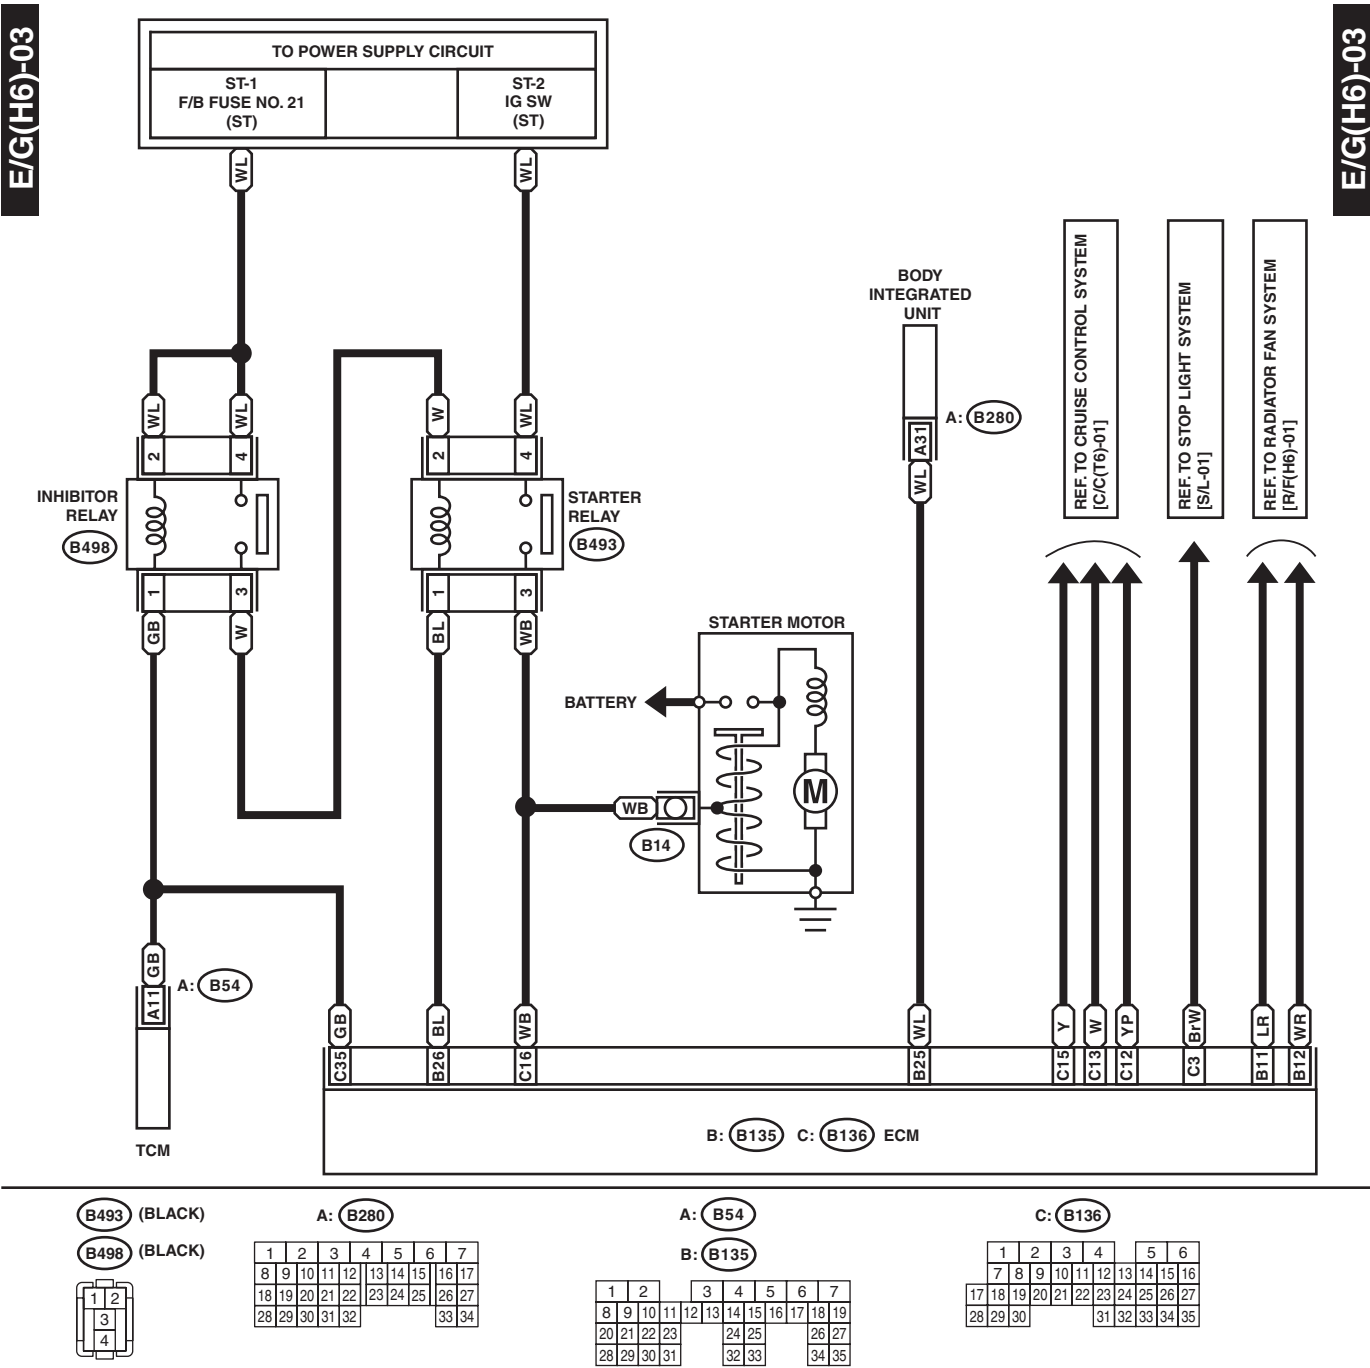

WI-25513

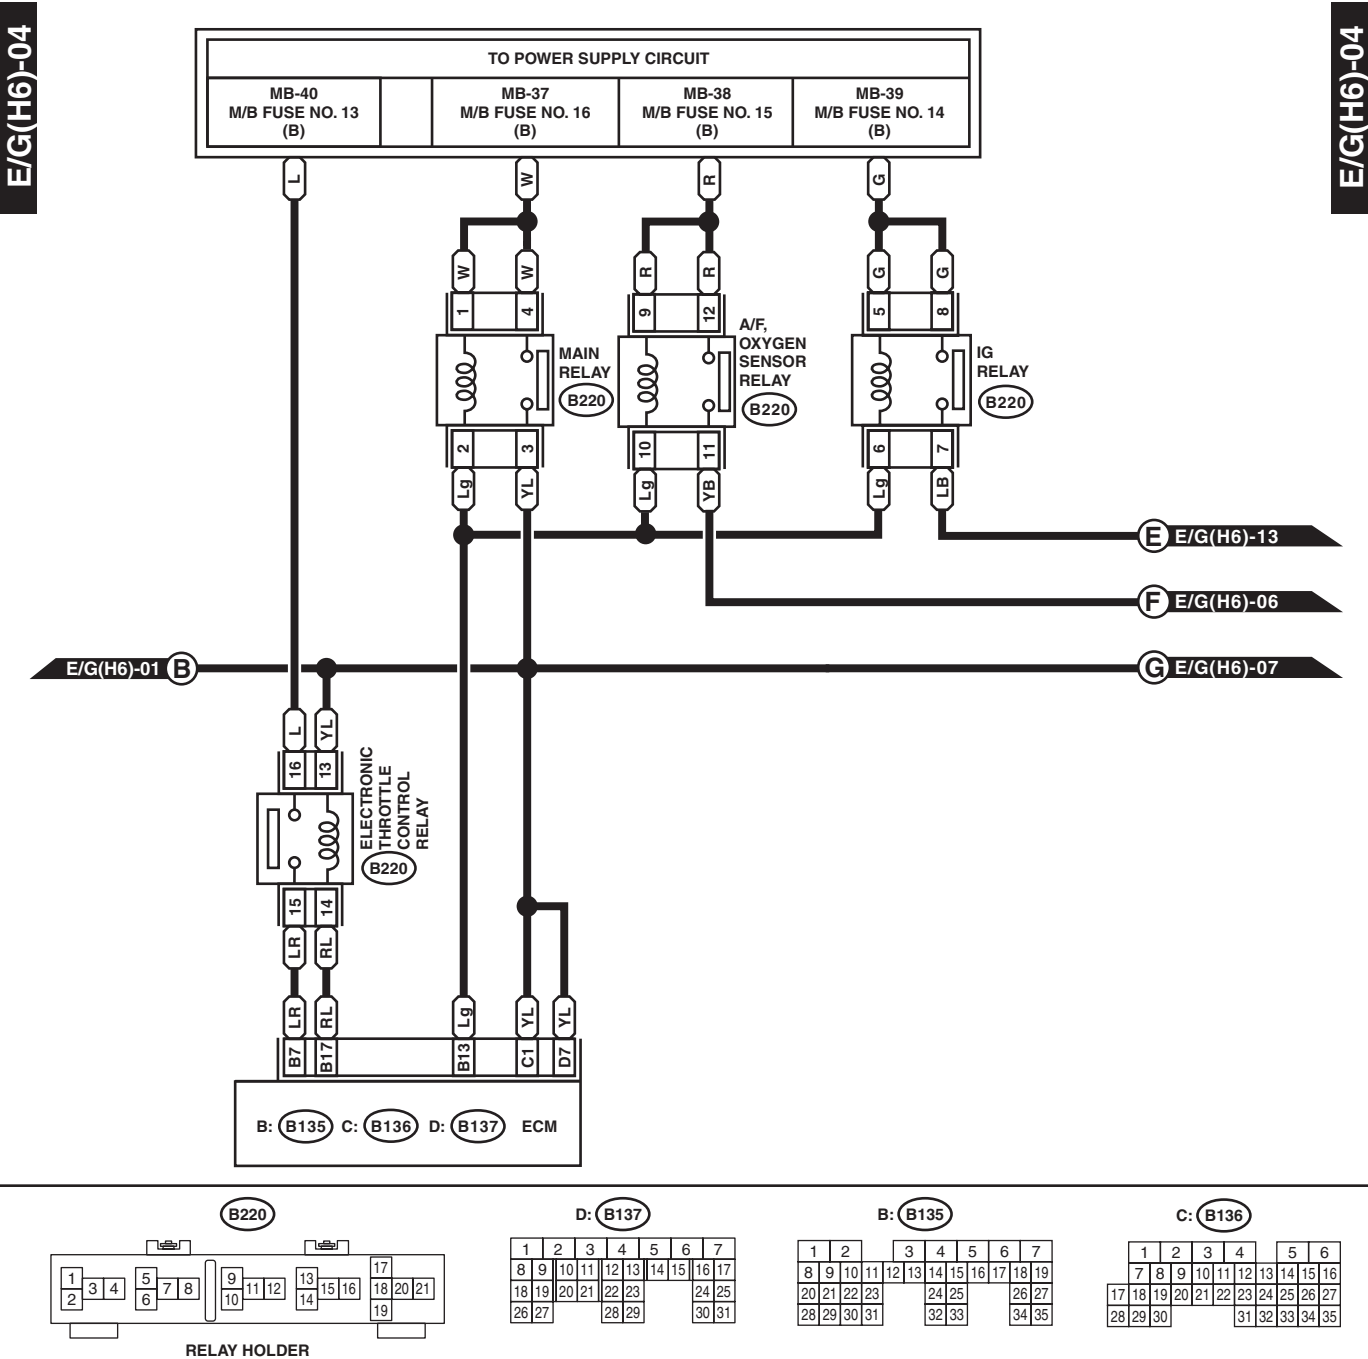

B220

D: B137


B: B135

C: B136

RELAY HOLDER

Engine Electrical System







WIRING SYSTEM

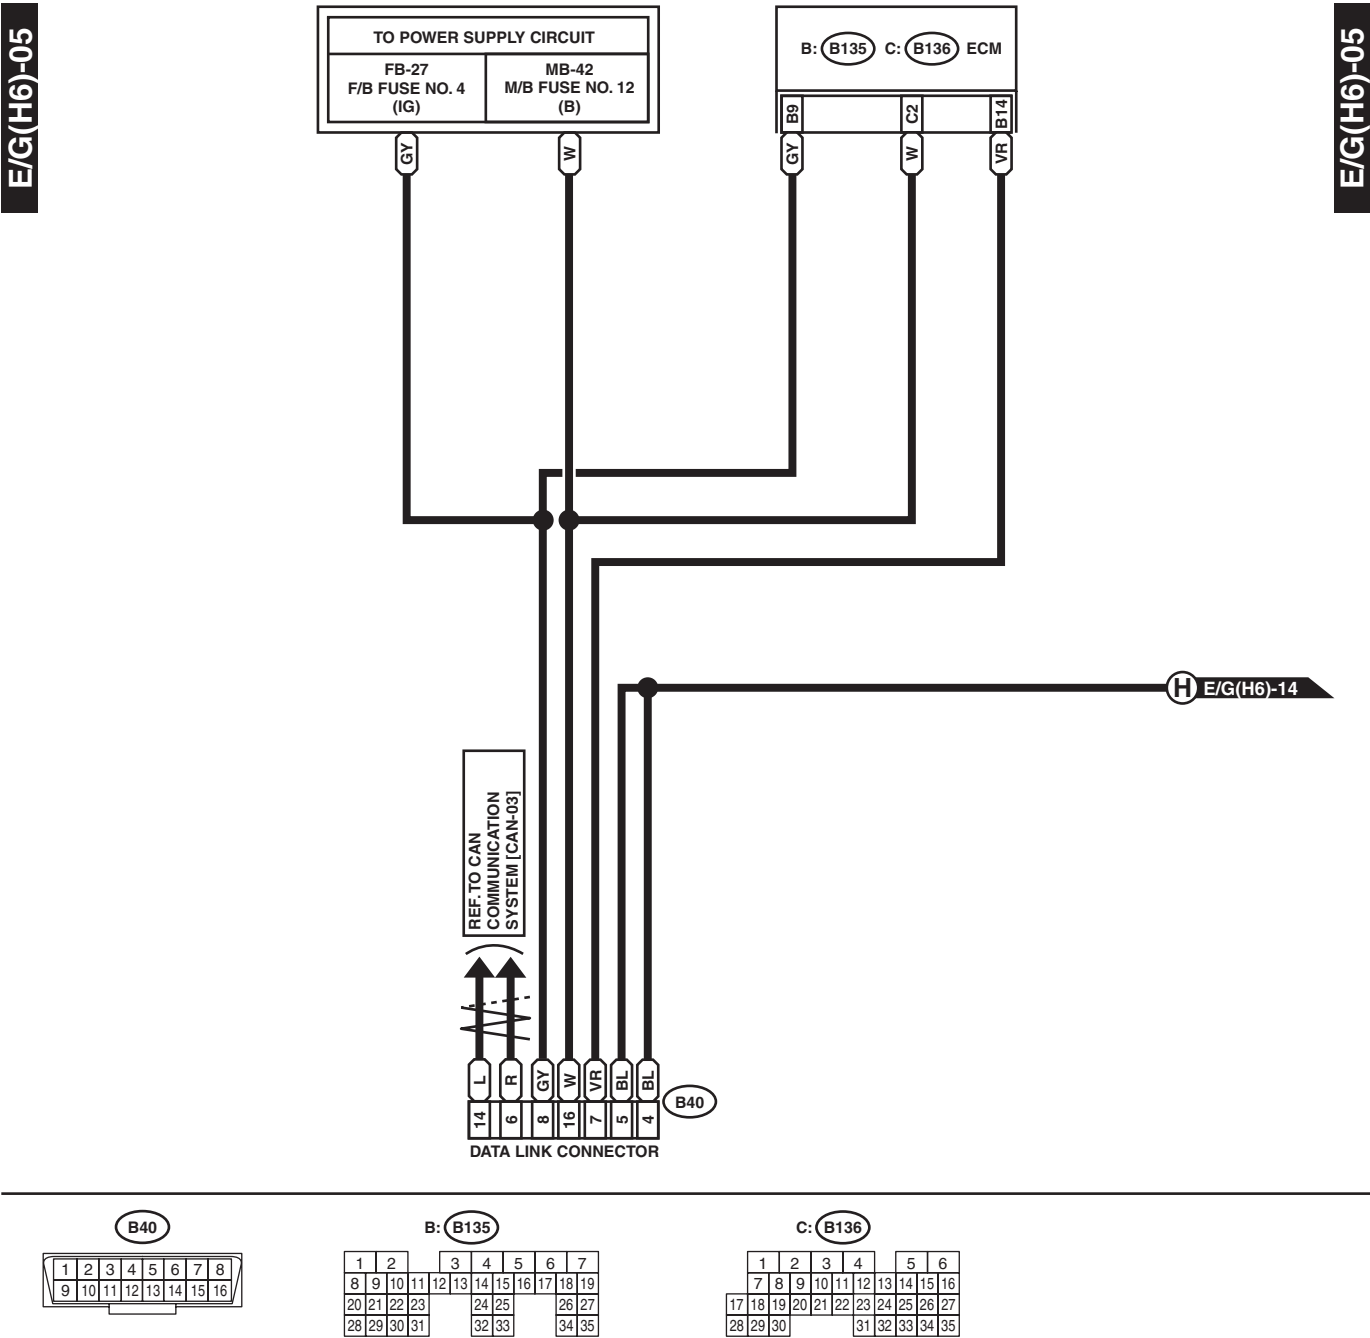

WI-25515

Engine Electrical System

  
WIRING SYSTEM

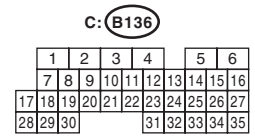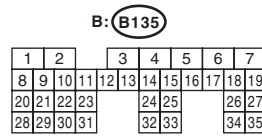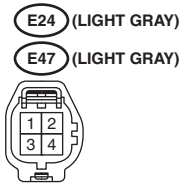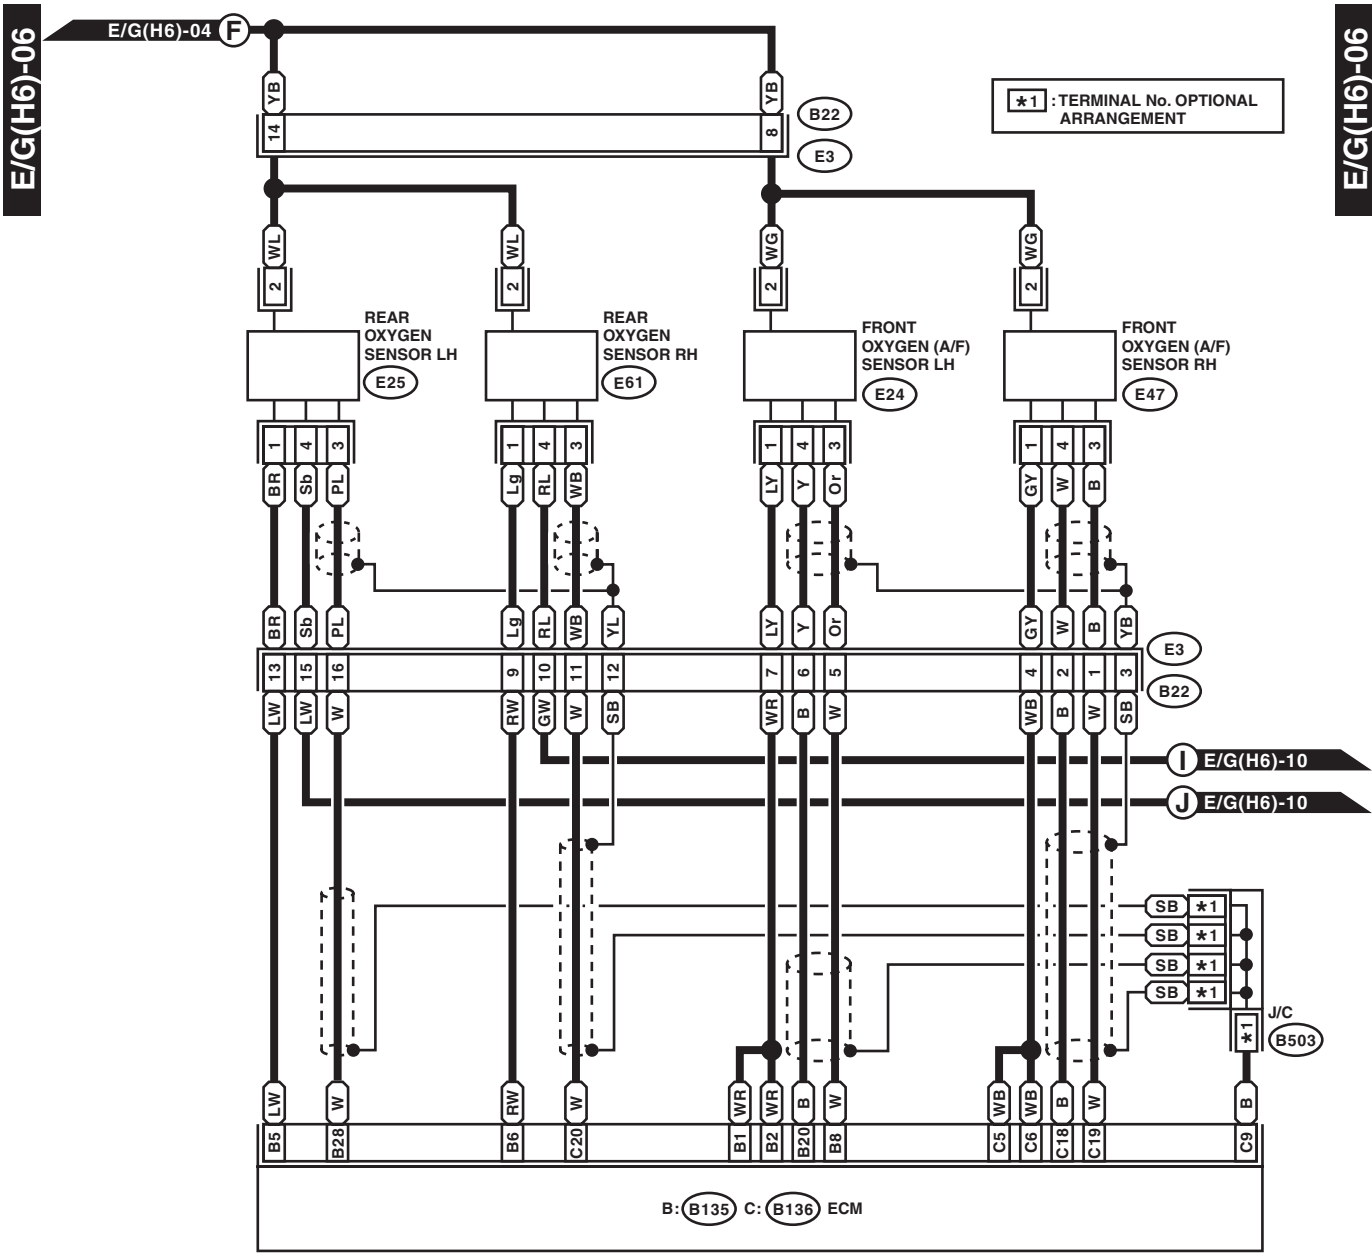




WI-25516

Engine Electrical System

WIRING SYSTEM

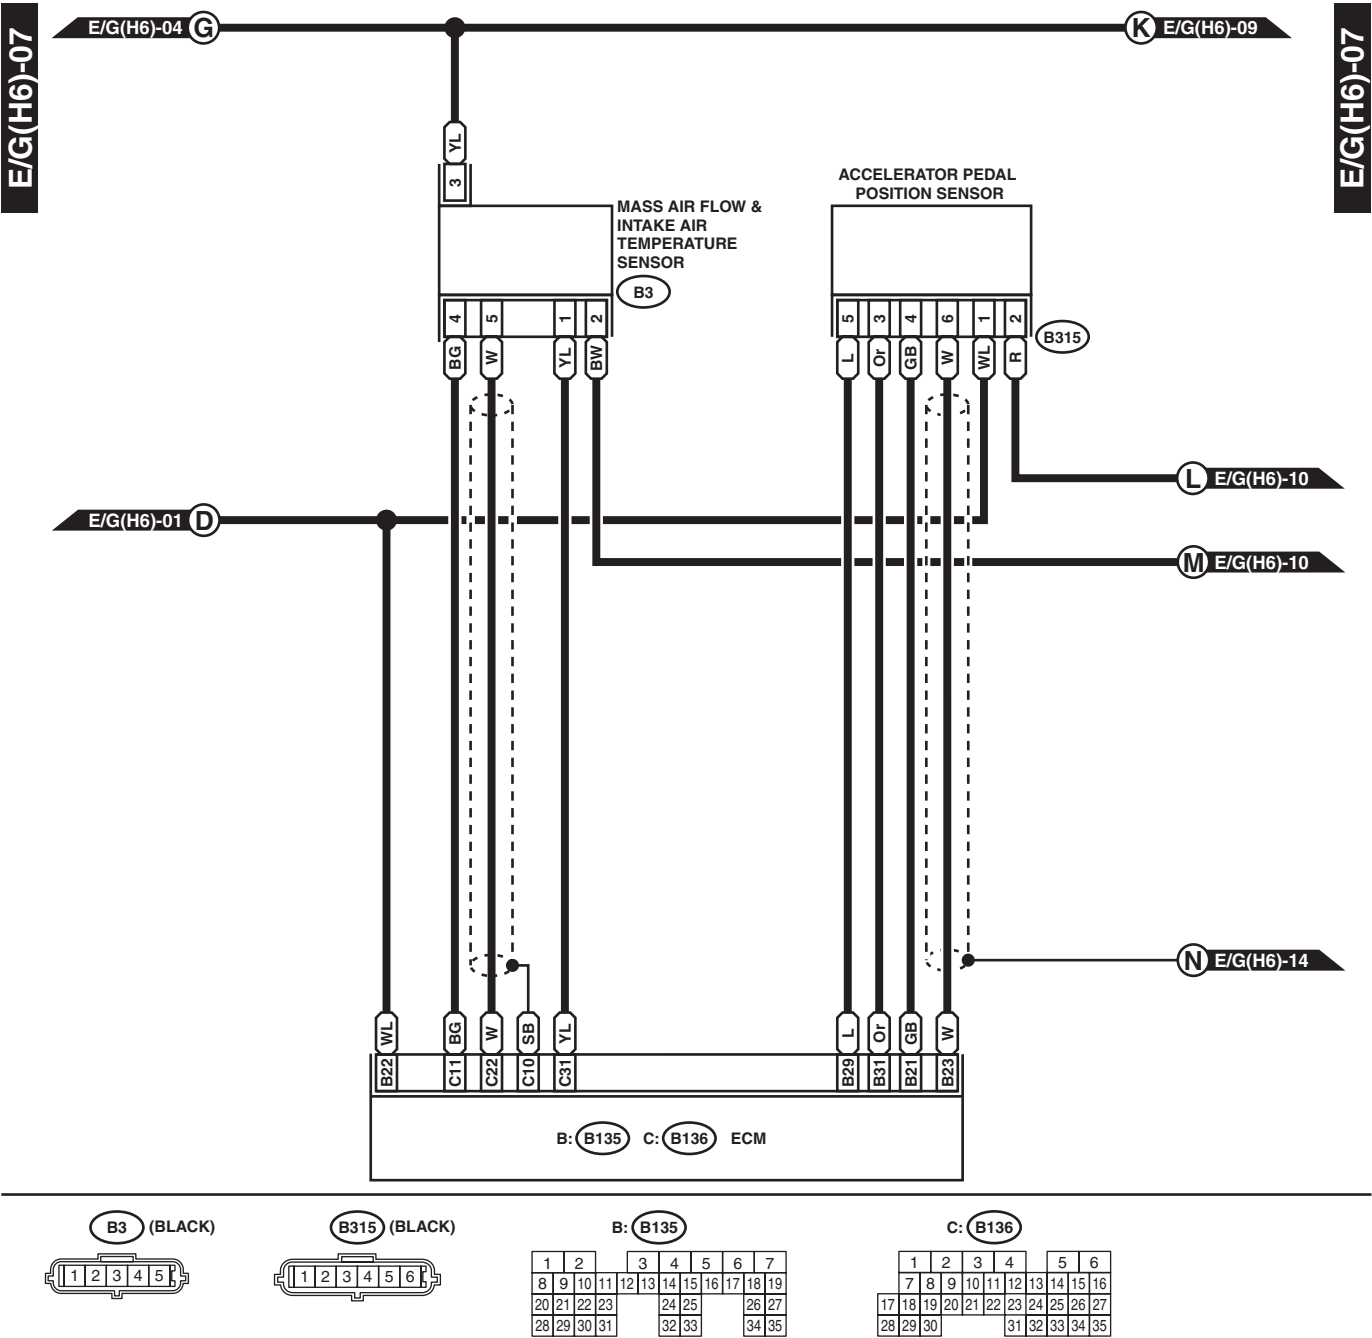

WI-25517

 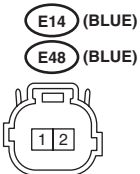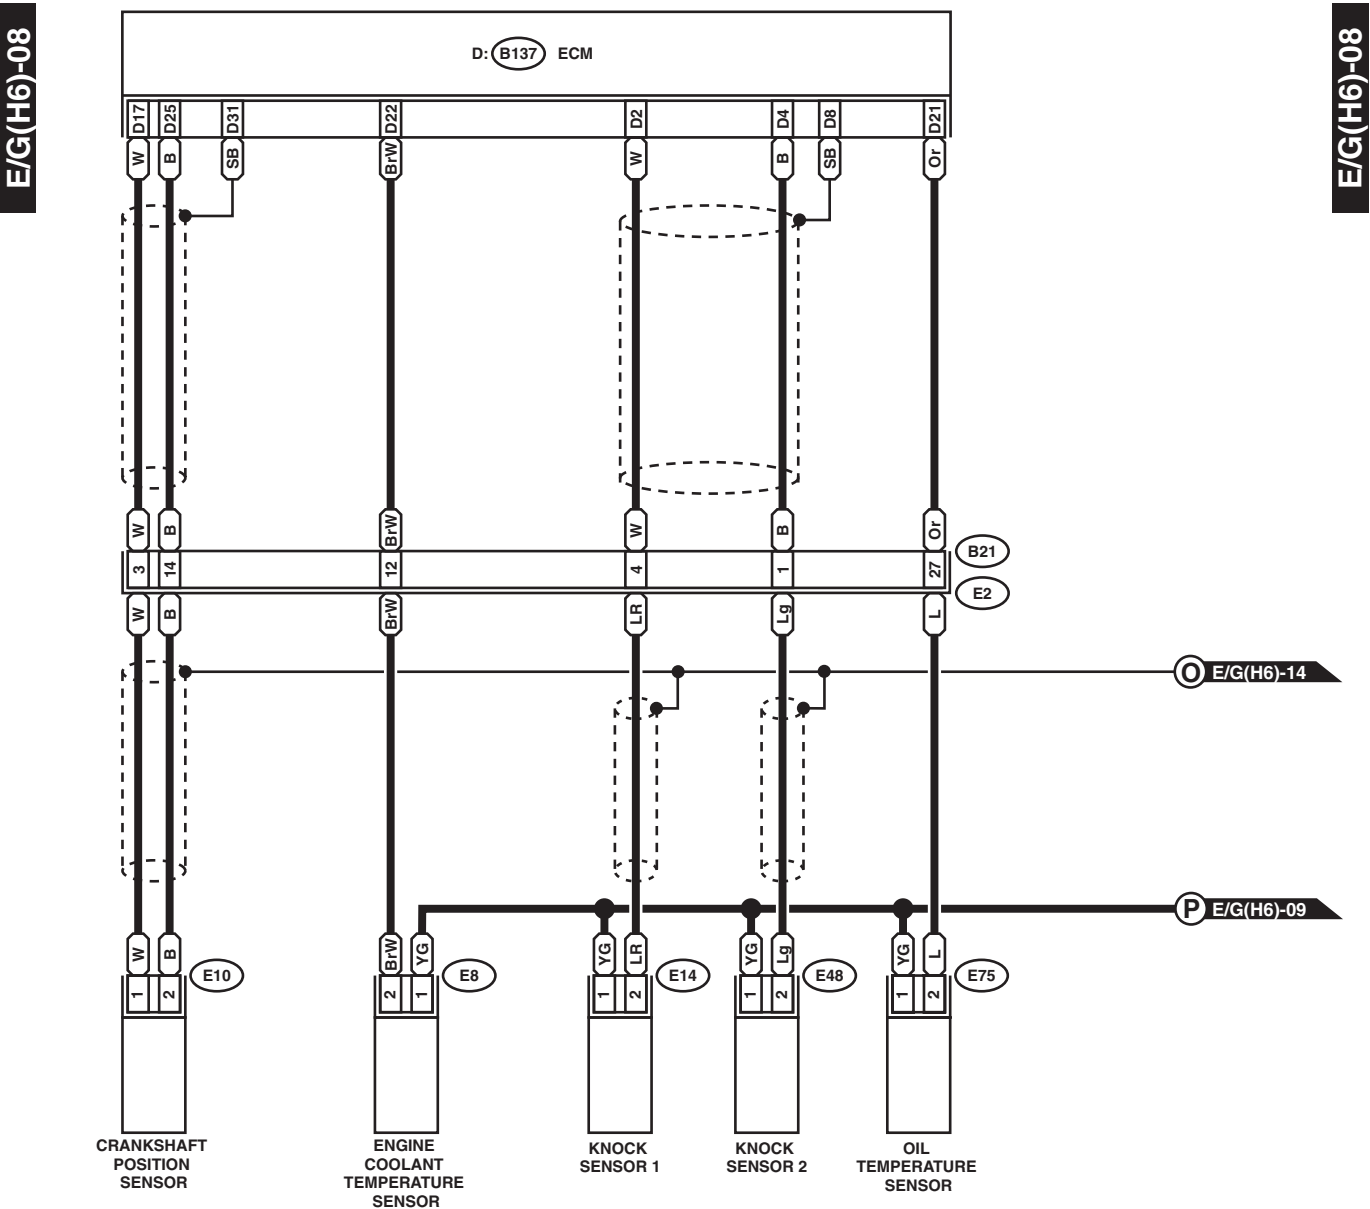

D: B137

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31				


B21 (Black)

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31	32	33
34	35	36	37	38	39	40	41			
42	43	44	45	46	47					
48	49	50	51	52	53	54				

WI-25518


Engine Electrical System

WIRING SYSTEM

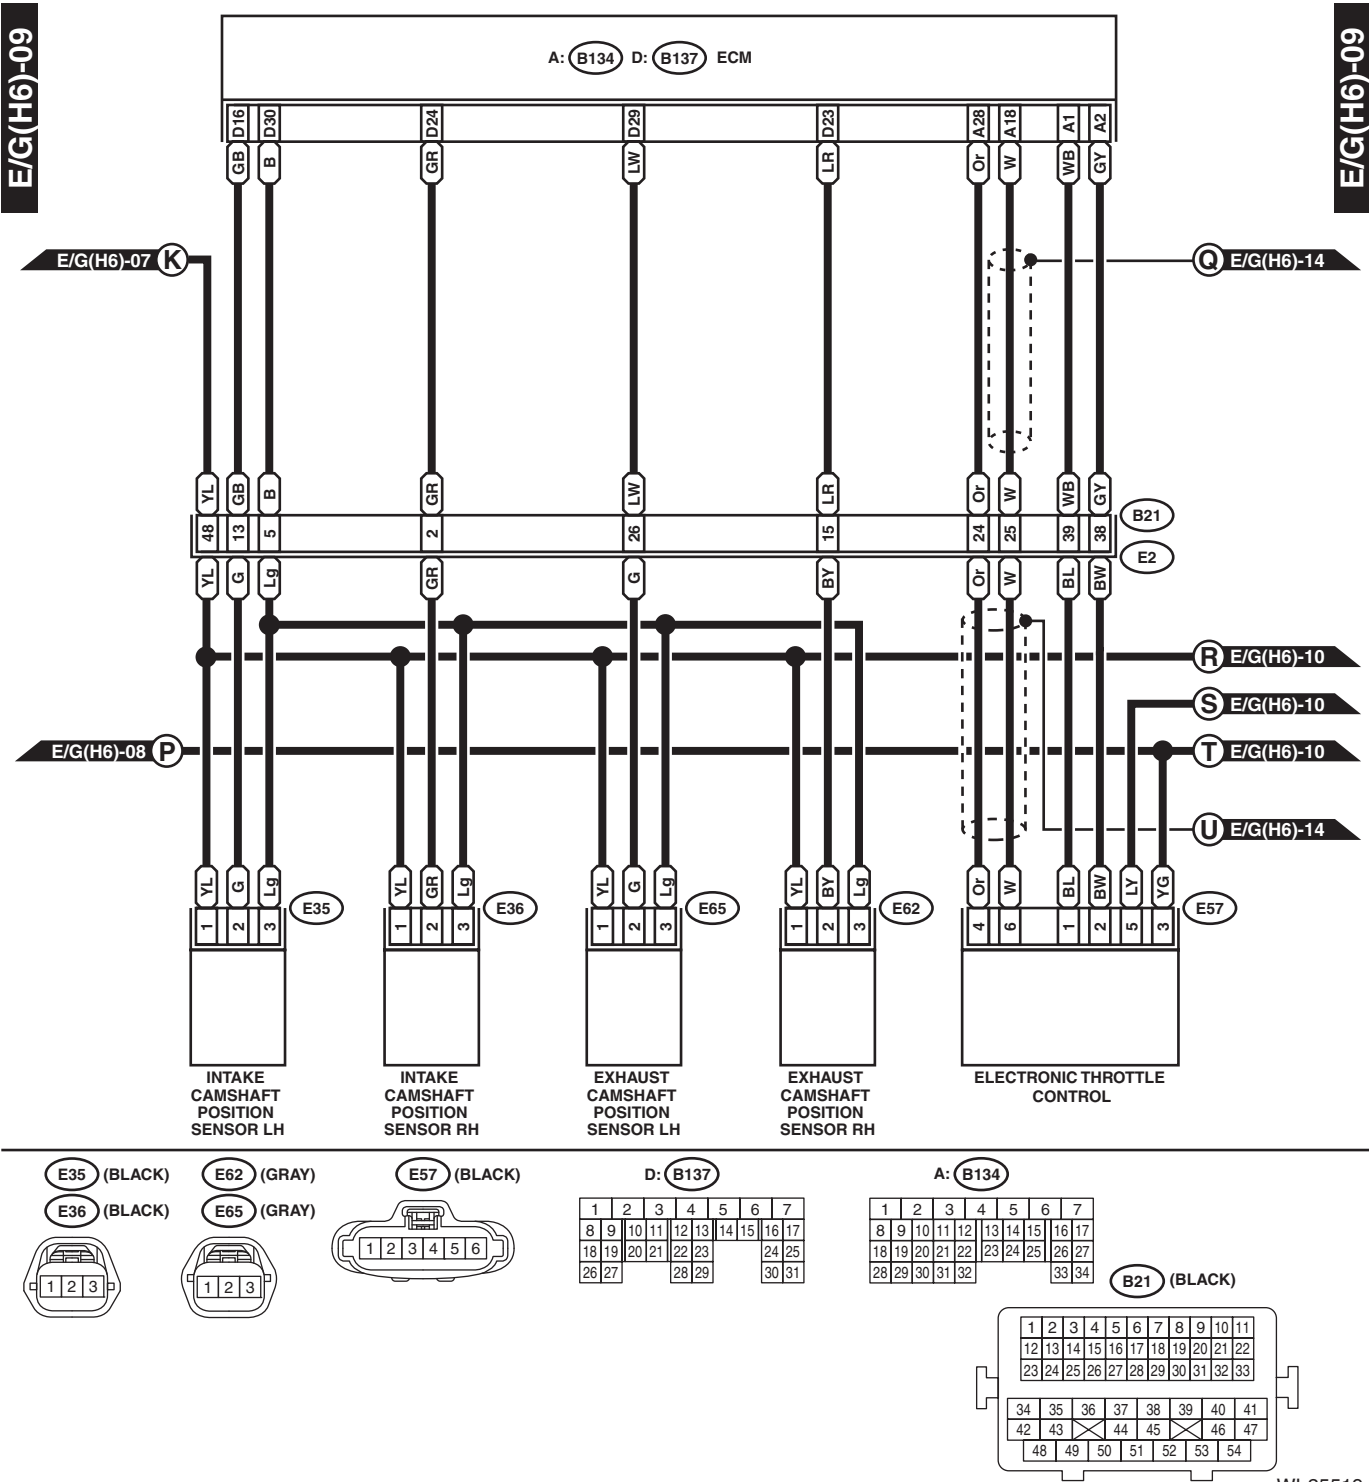


Engine Electrical System

WIRING SYSTEM

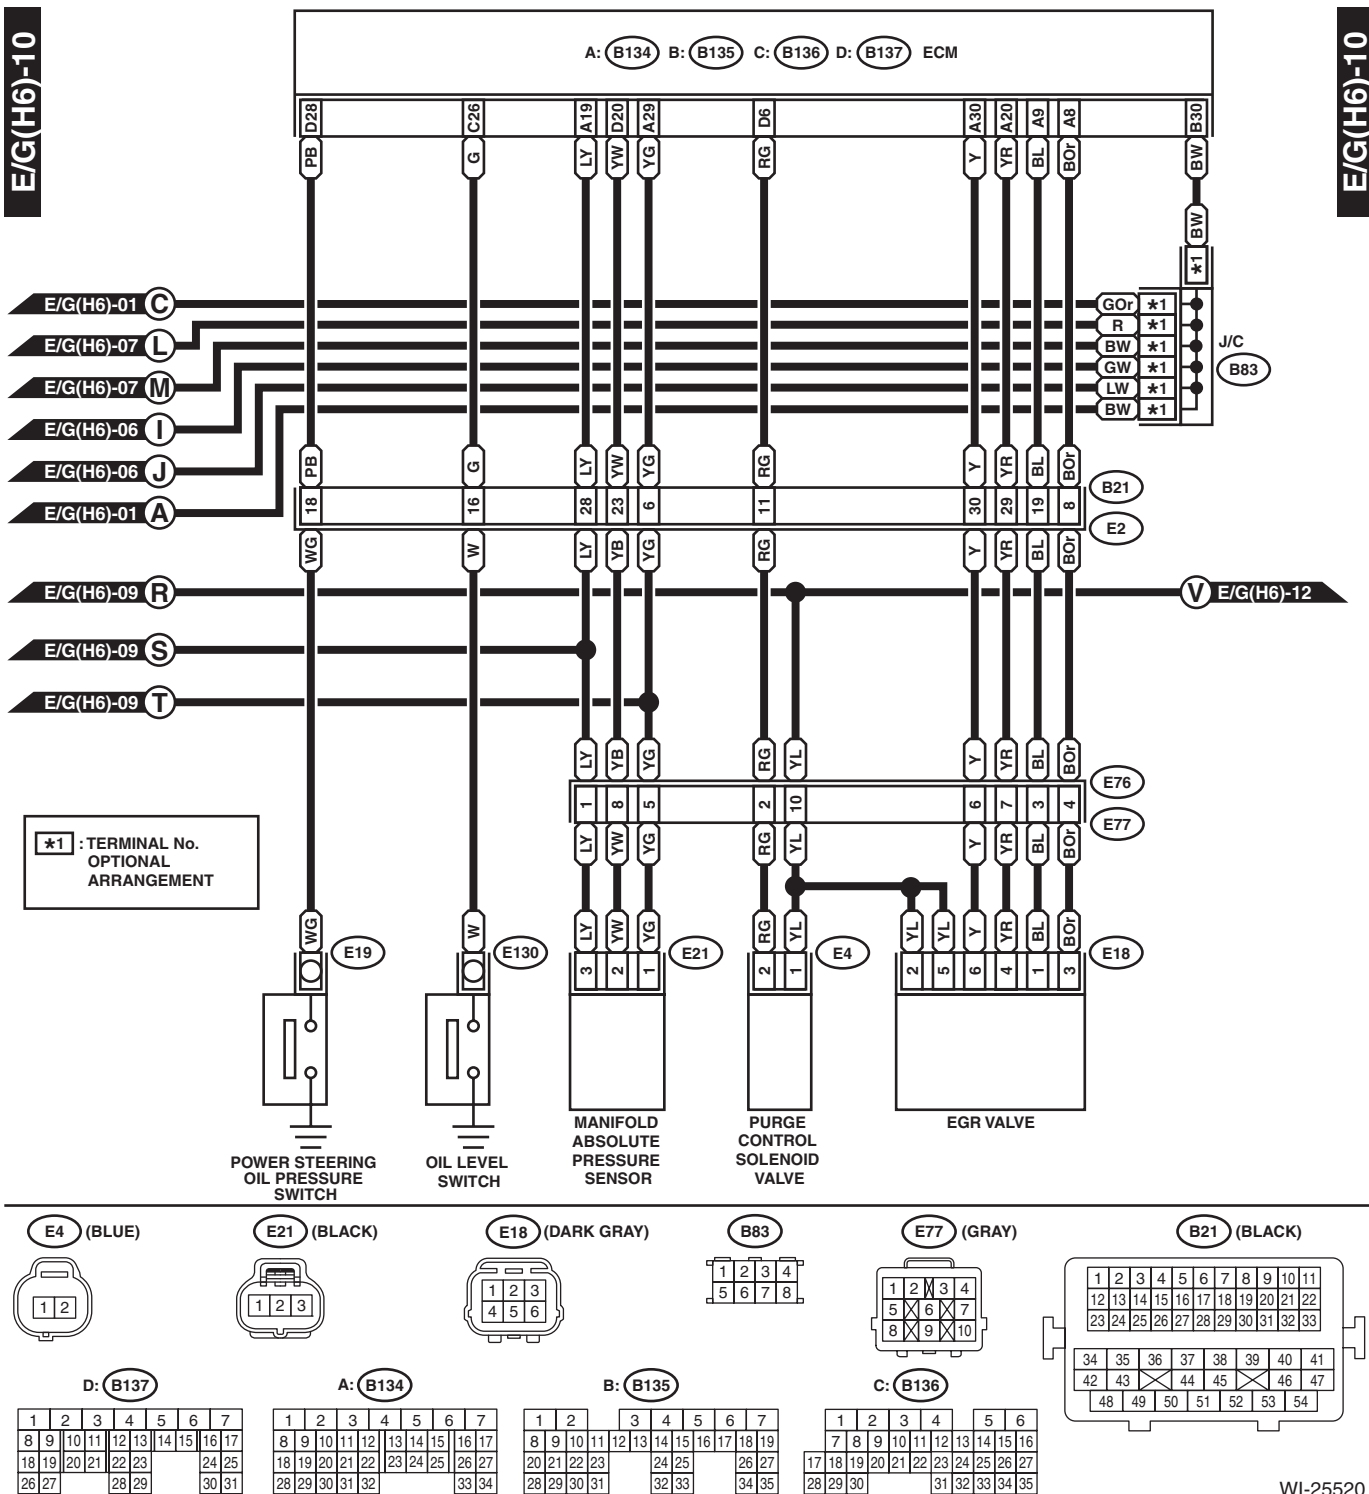

Engine Electrical System


WIRING SYSTEM

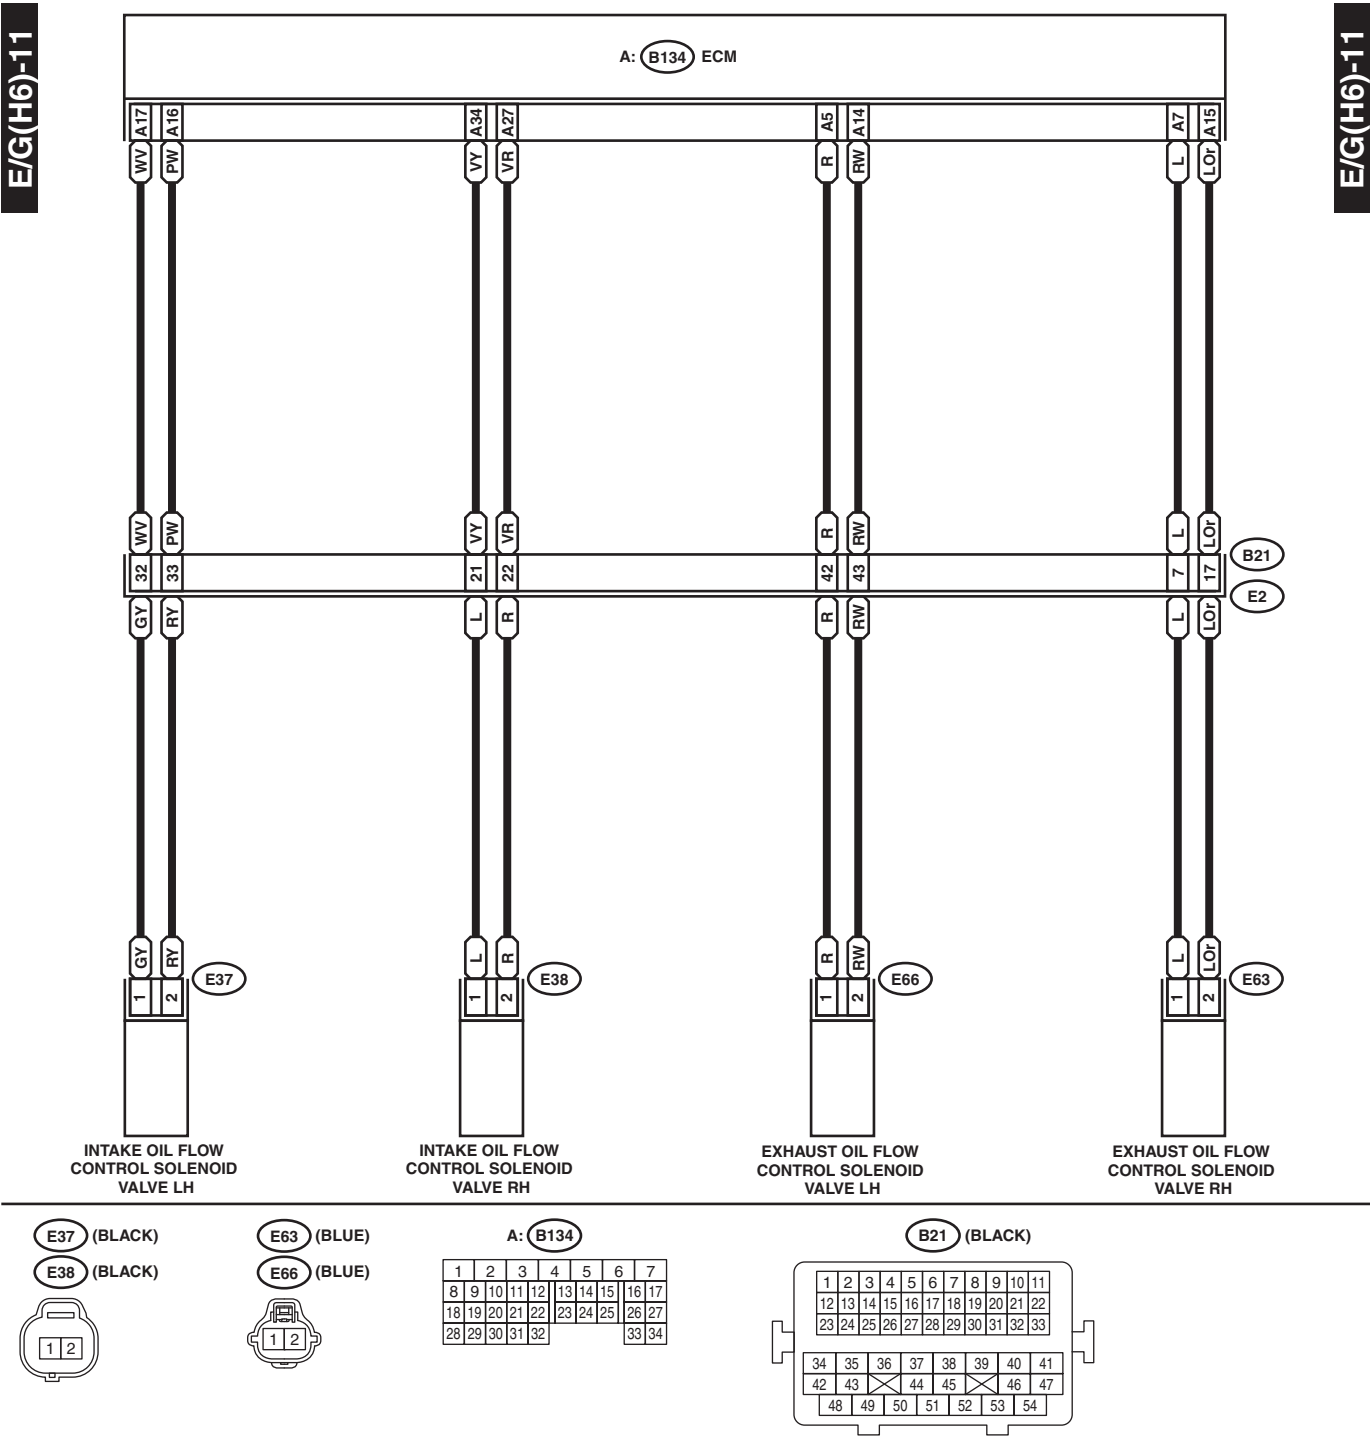

WI-25521

E/G(H6)-12

E/G(H6)-12

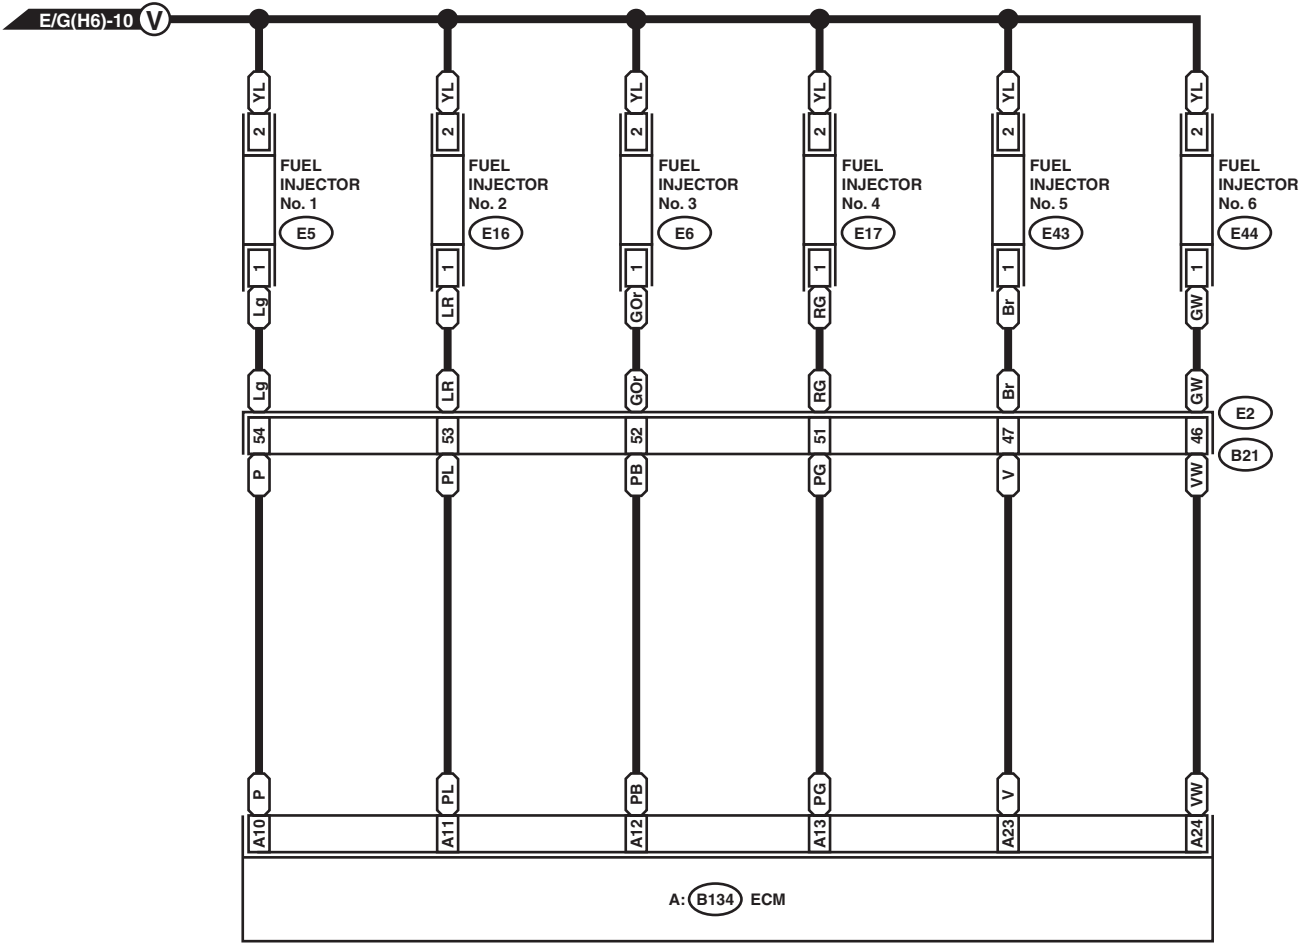

(DARK GRAY) E5 E17 (DARK GRAY)
(DARK GRAY) E6 E43 (DARK GRAY)
(DARK GRAY) E16 E44 (DARK GRAY)



A: B134


1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31	32	33	34	

B21 (BLACK)


1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31	32	33
34	35	36	37	38	39	40	41			
42	43	44	45	46	47					
48	49	50	51	52	53	54				

Engine Electrical System

WIRING SYSTEM

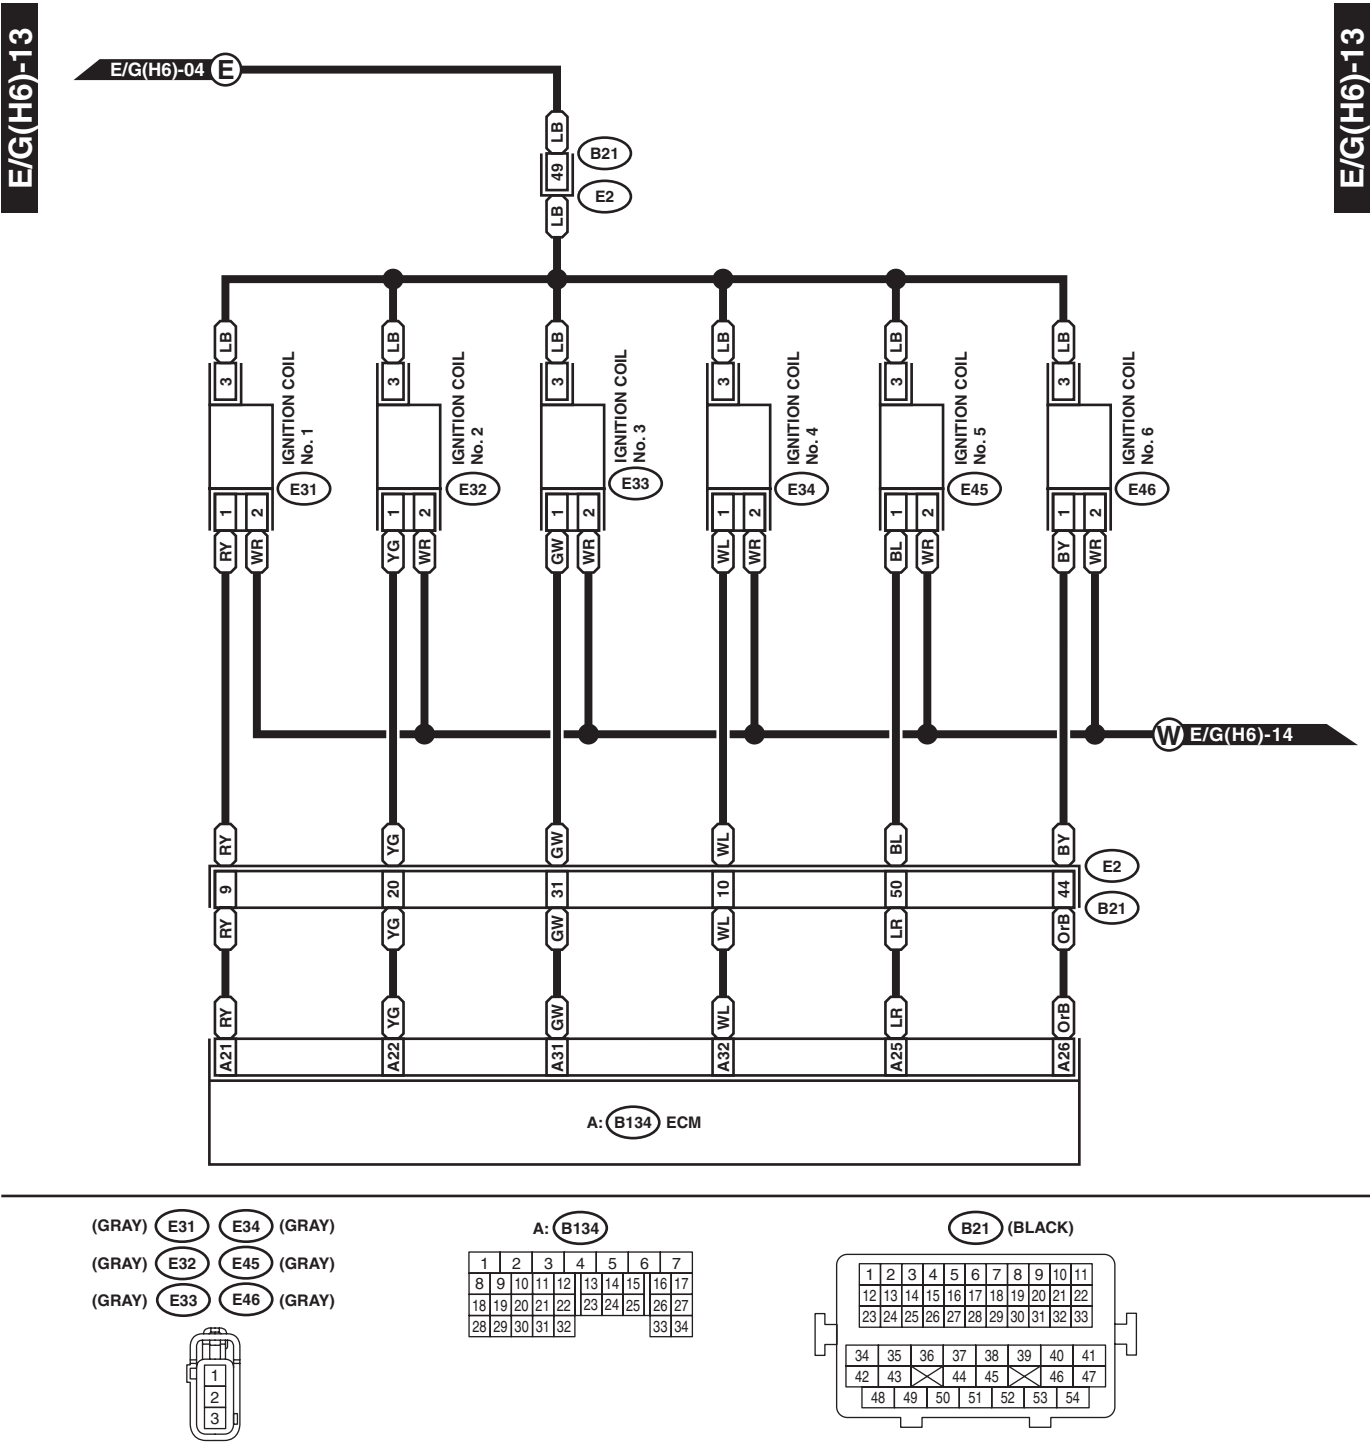

WI-25523

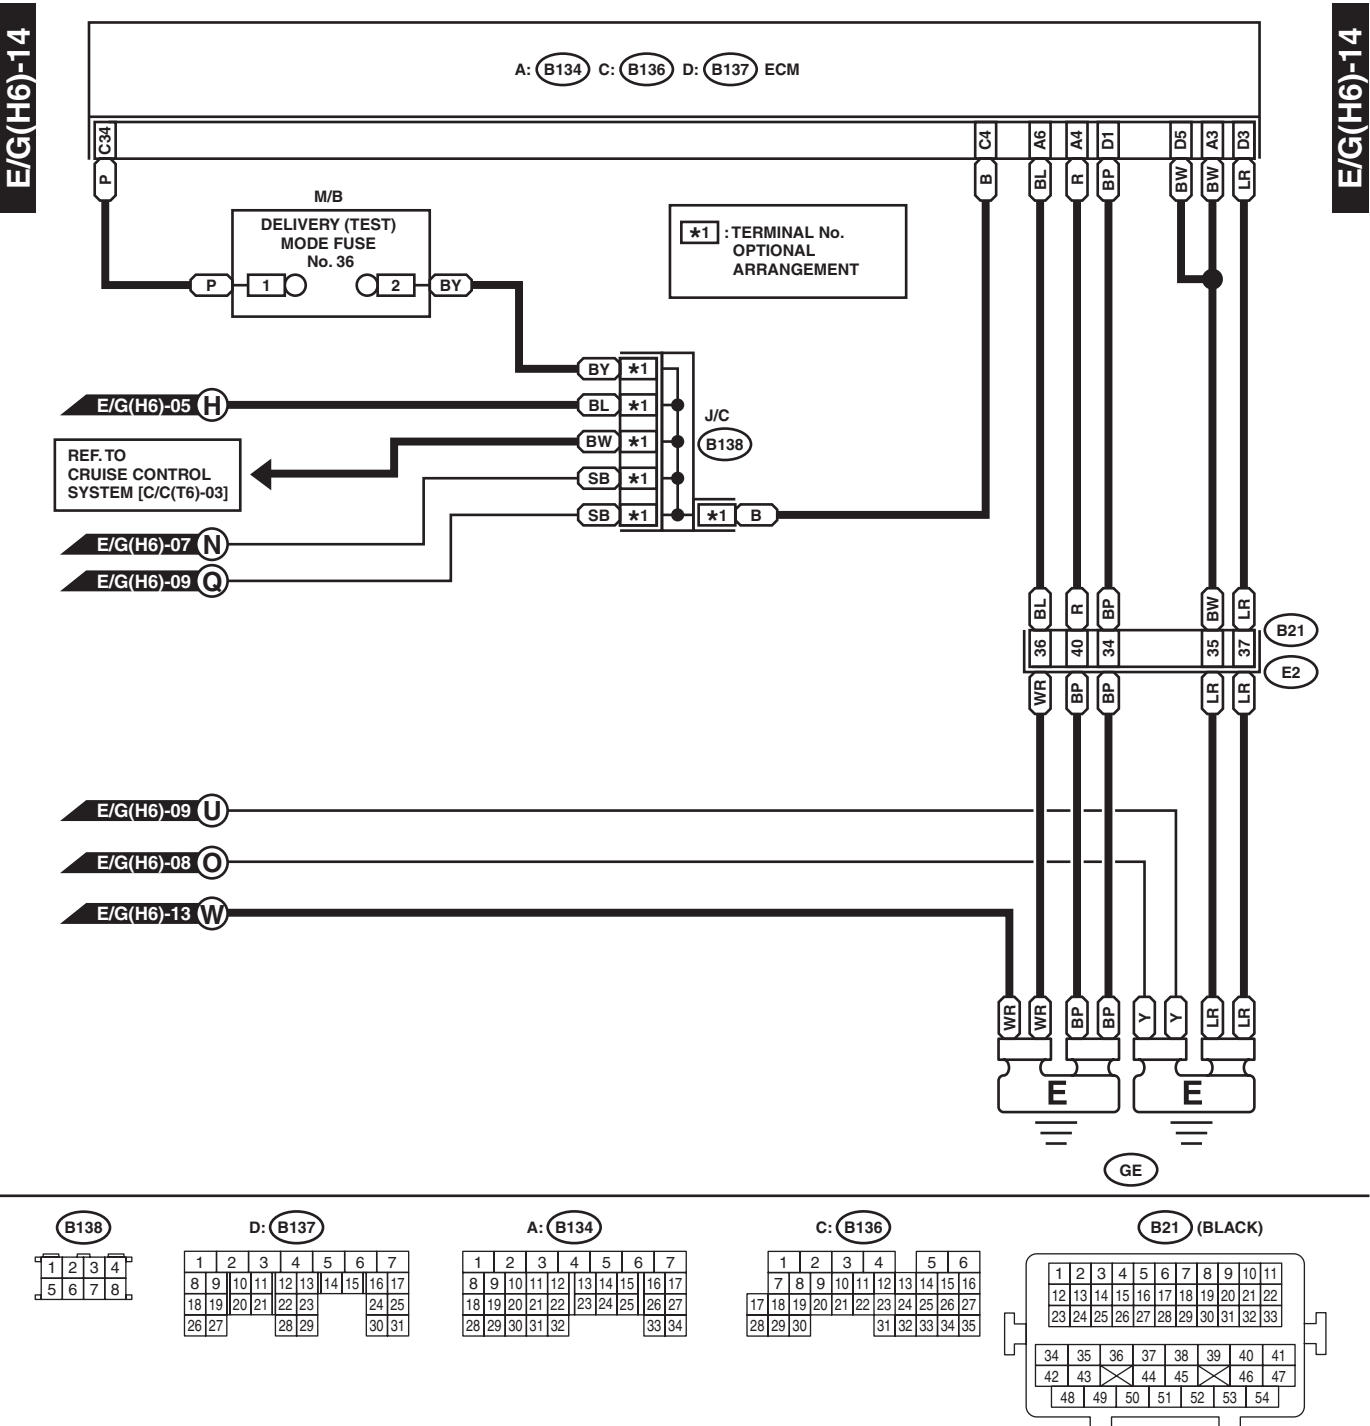

WI-25524

Front Accessory Power Supply Socket System



WIRING SYSTEM

20.Front Accessory Power Supply Socket System

A: WIRING DIAGRAM

FAPS-01

FAPS-01

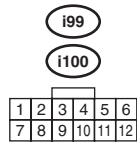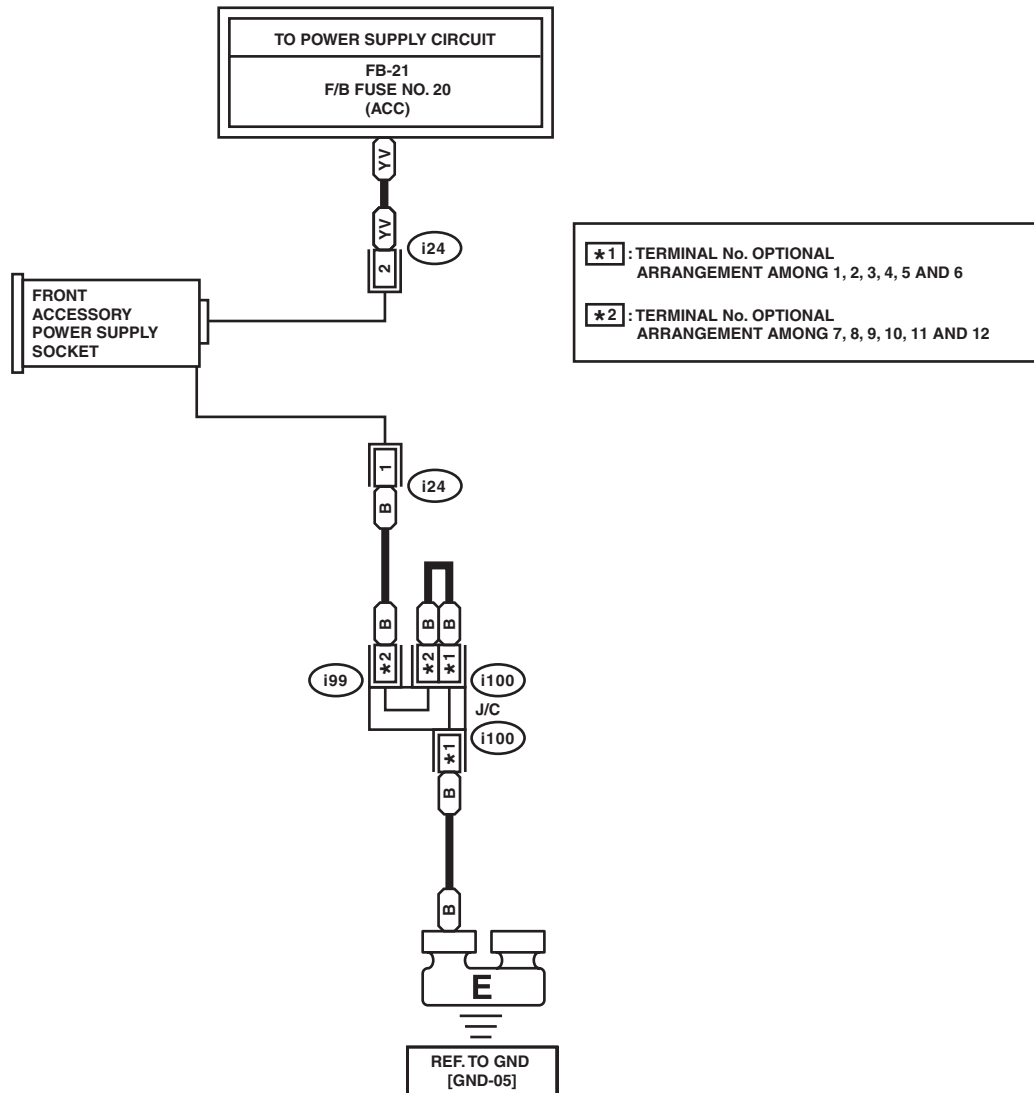

WI-25525

A: WIRING DIAGRAM




Front Fog Light System

WIRING SYSTEM

FOG-02


FOG-02

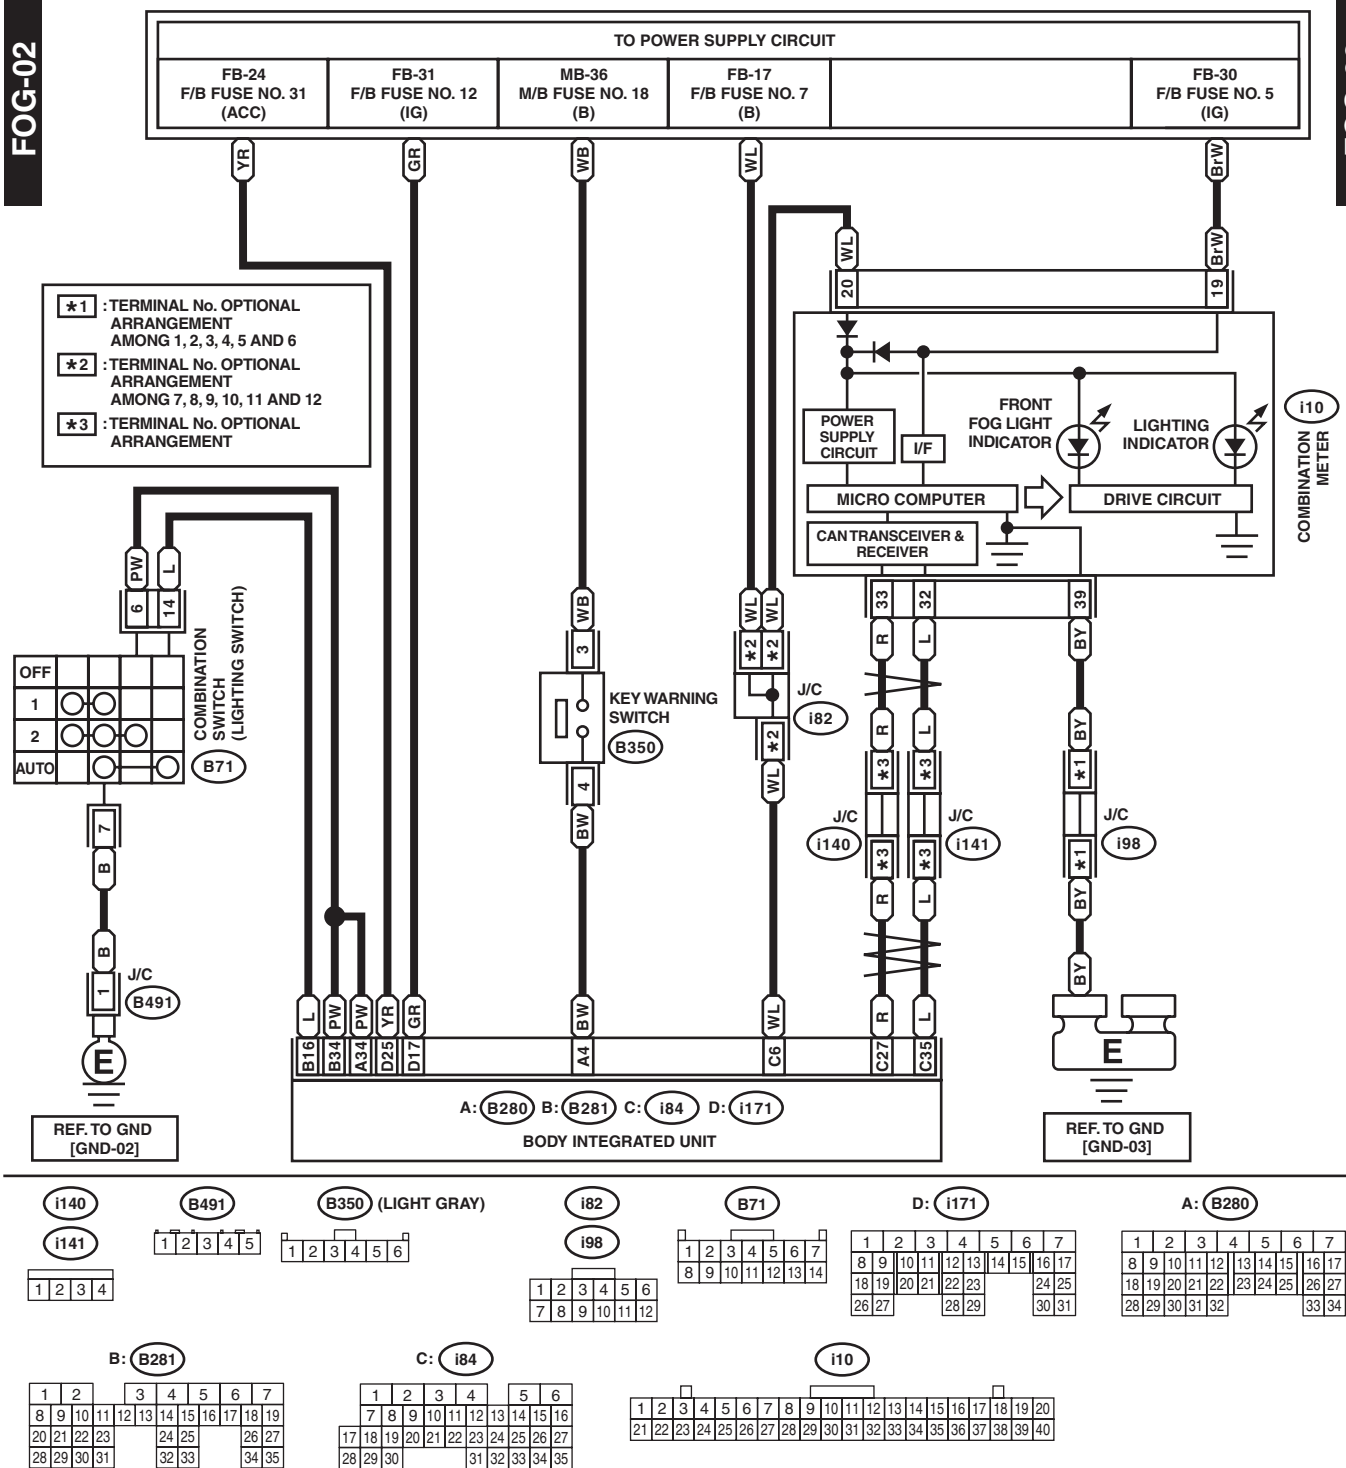

WI-25527


22.Front Wiper and Washer System

A: WIRING DIAGRAM

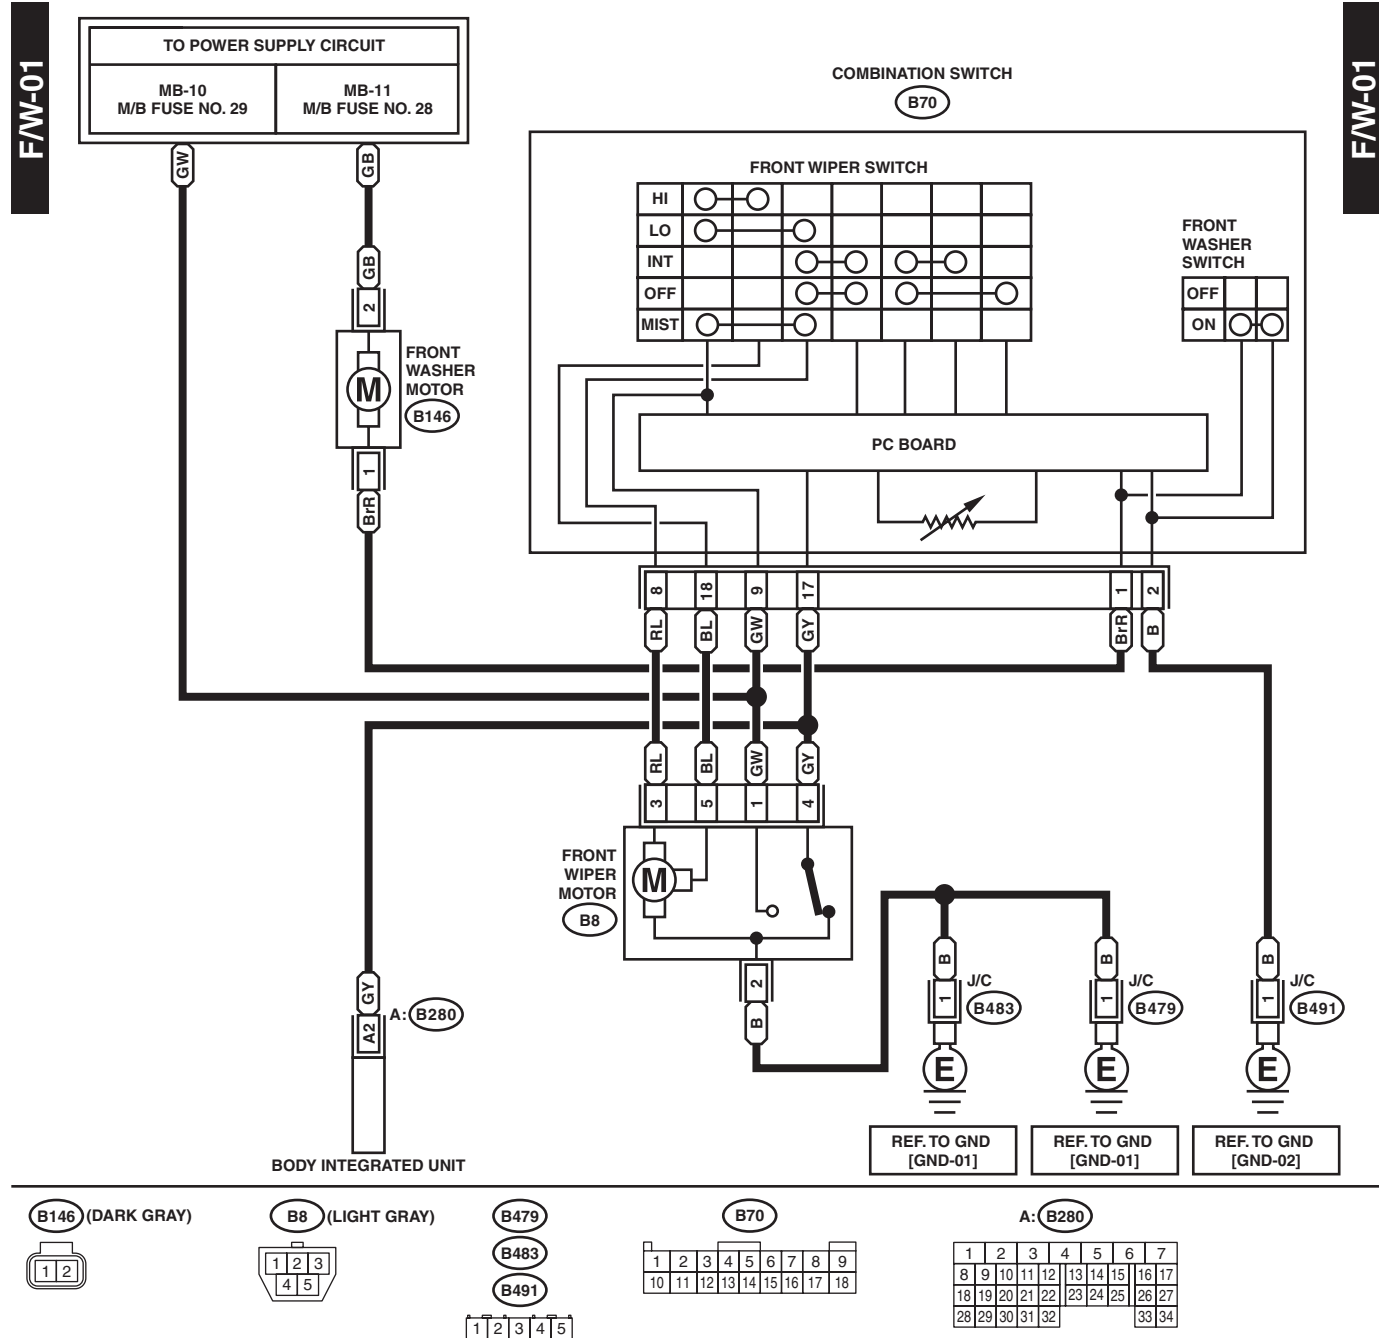


WIRING SYSTEM

 F/W-02



23. Fuel Gauge System


A: WIRING DIAGRAM

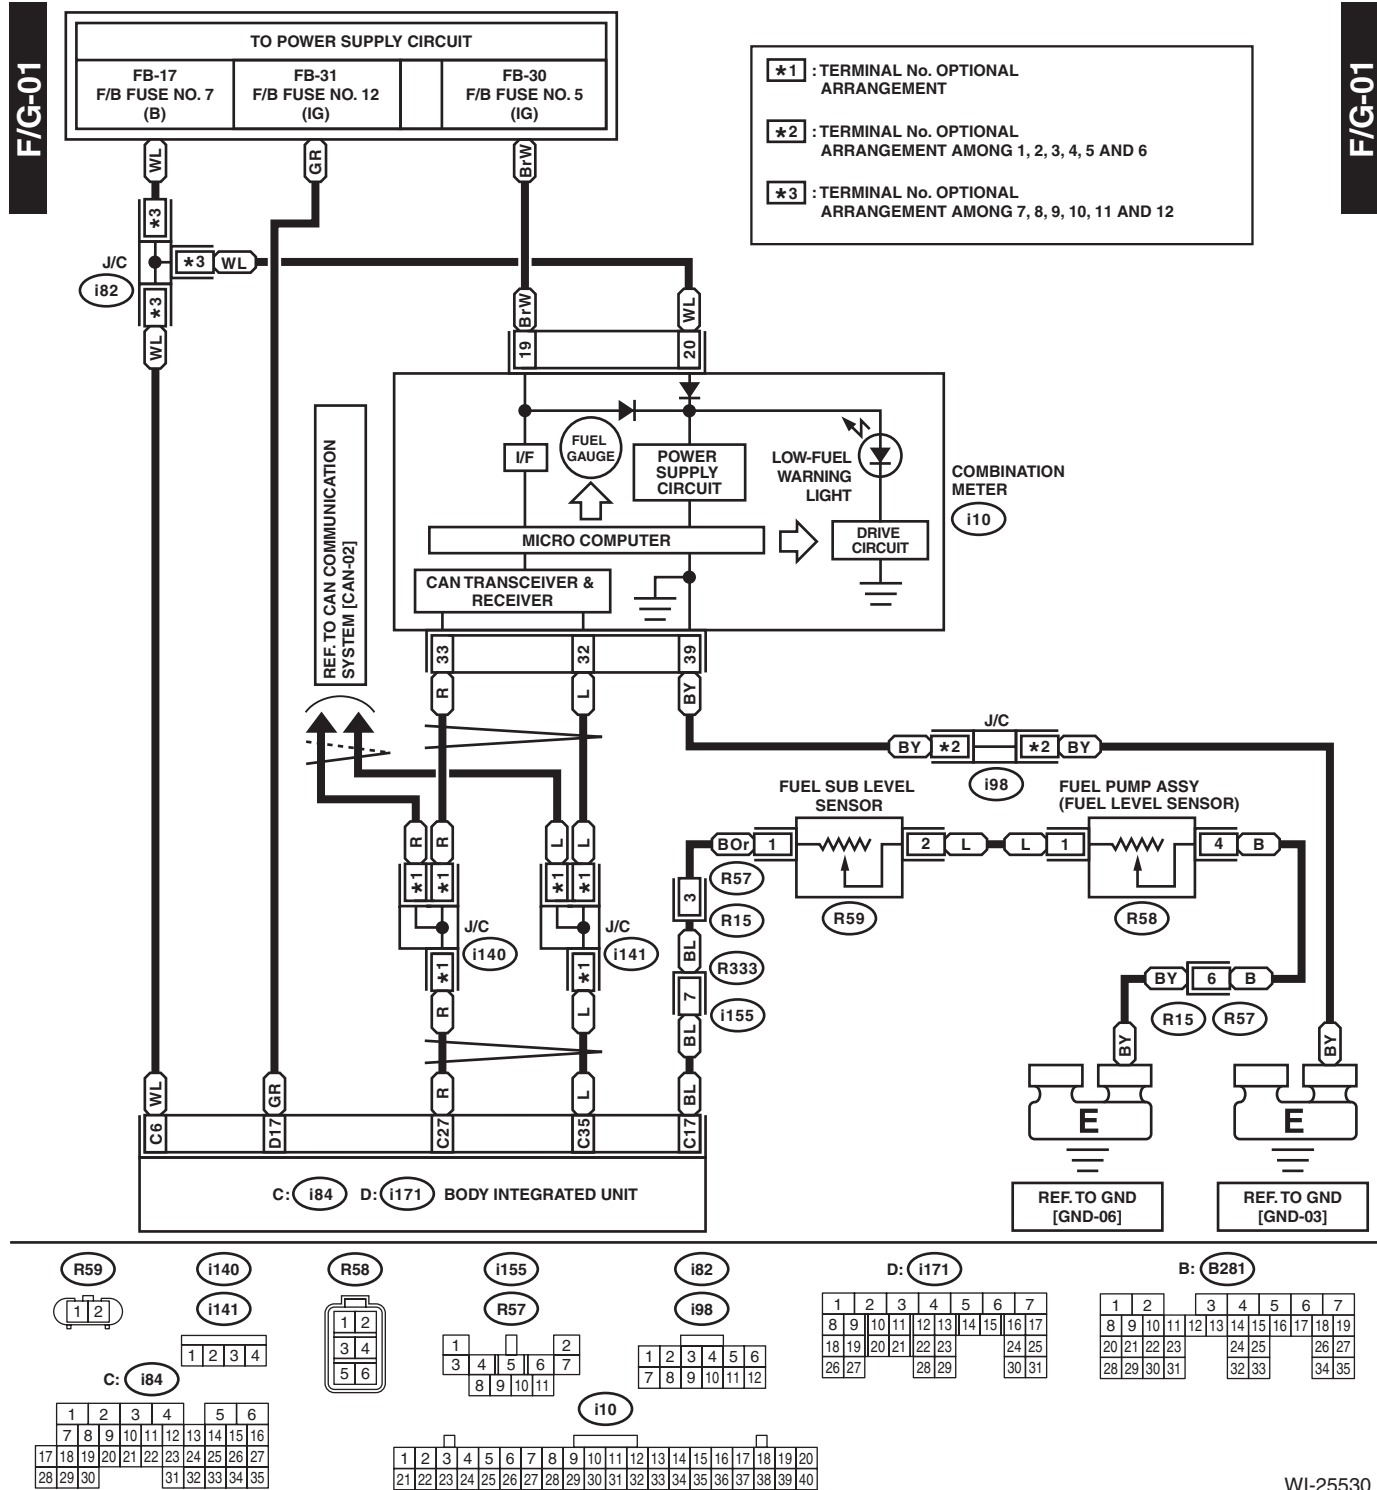

WIRING SYSTEM

24. Headlight System

A: WIRING DIAGRAM

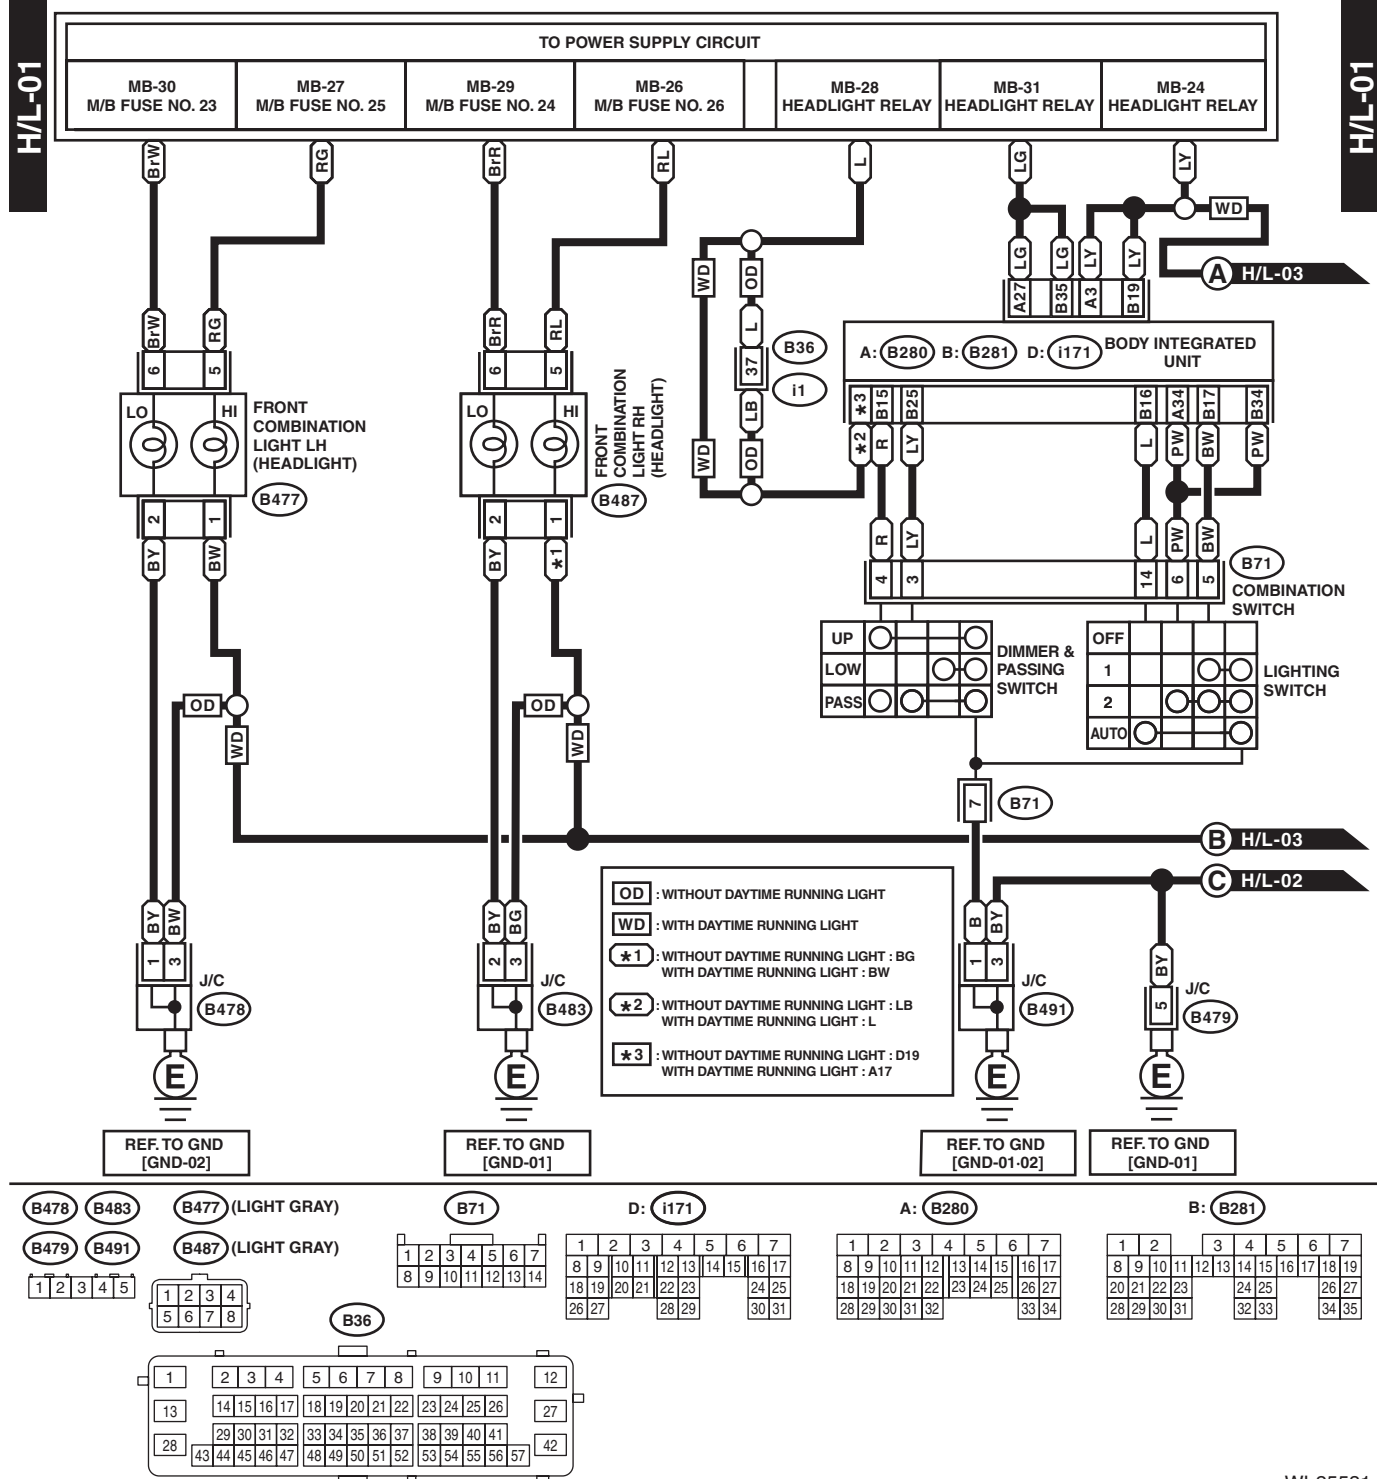


H/L-01

WI-25531


Headlight System

WIRING SYSTEM

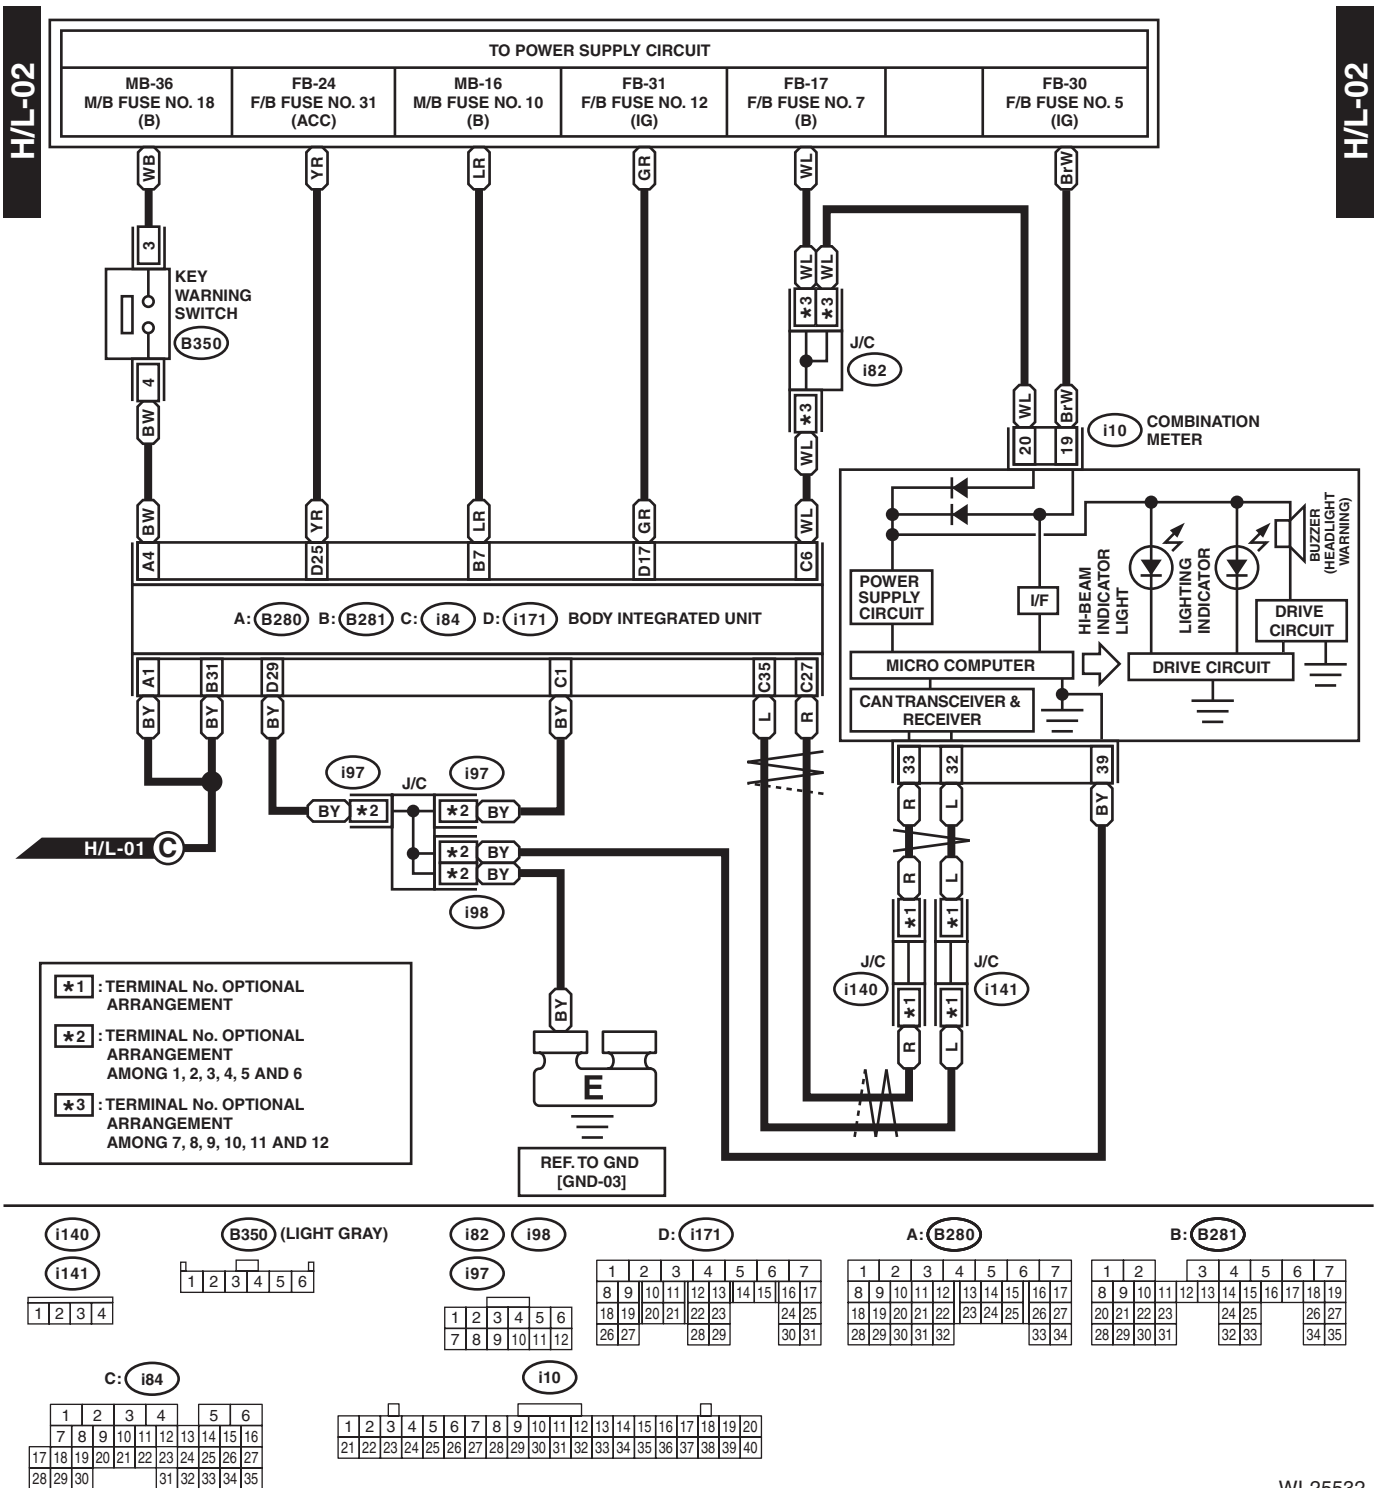


WI-25532

WIRING SYSTEM

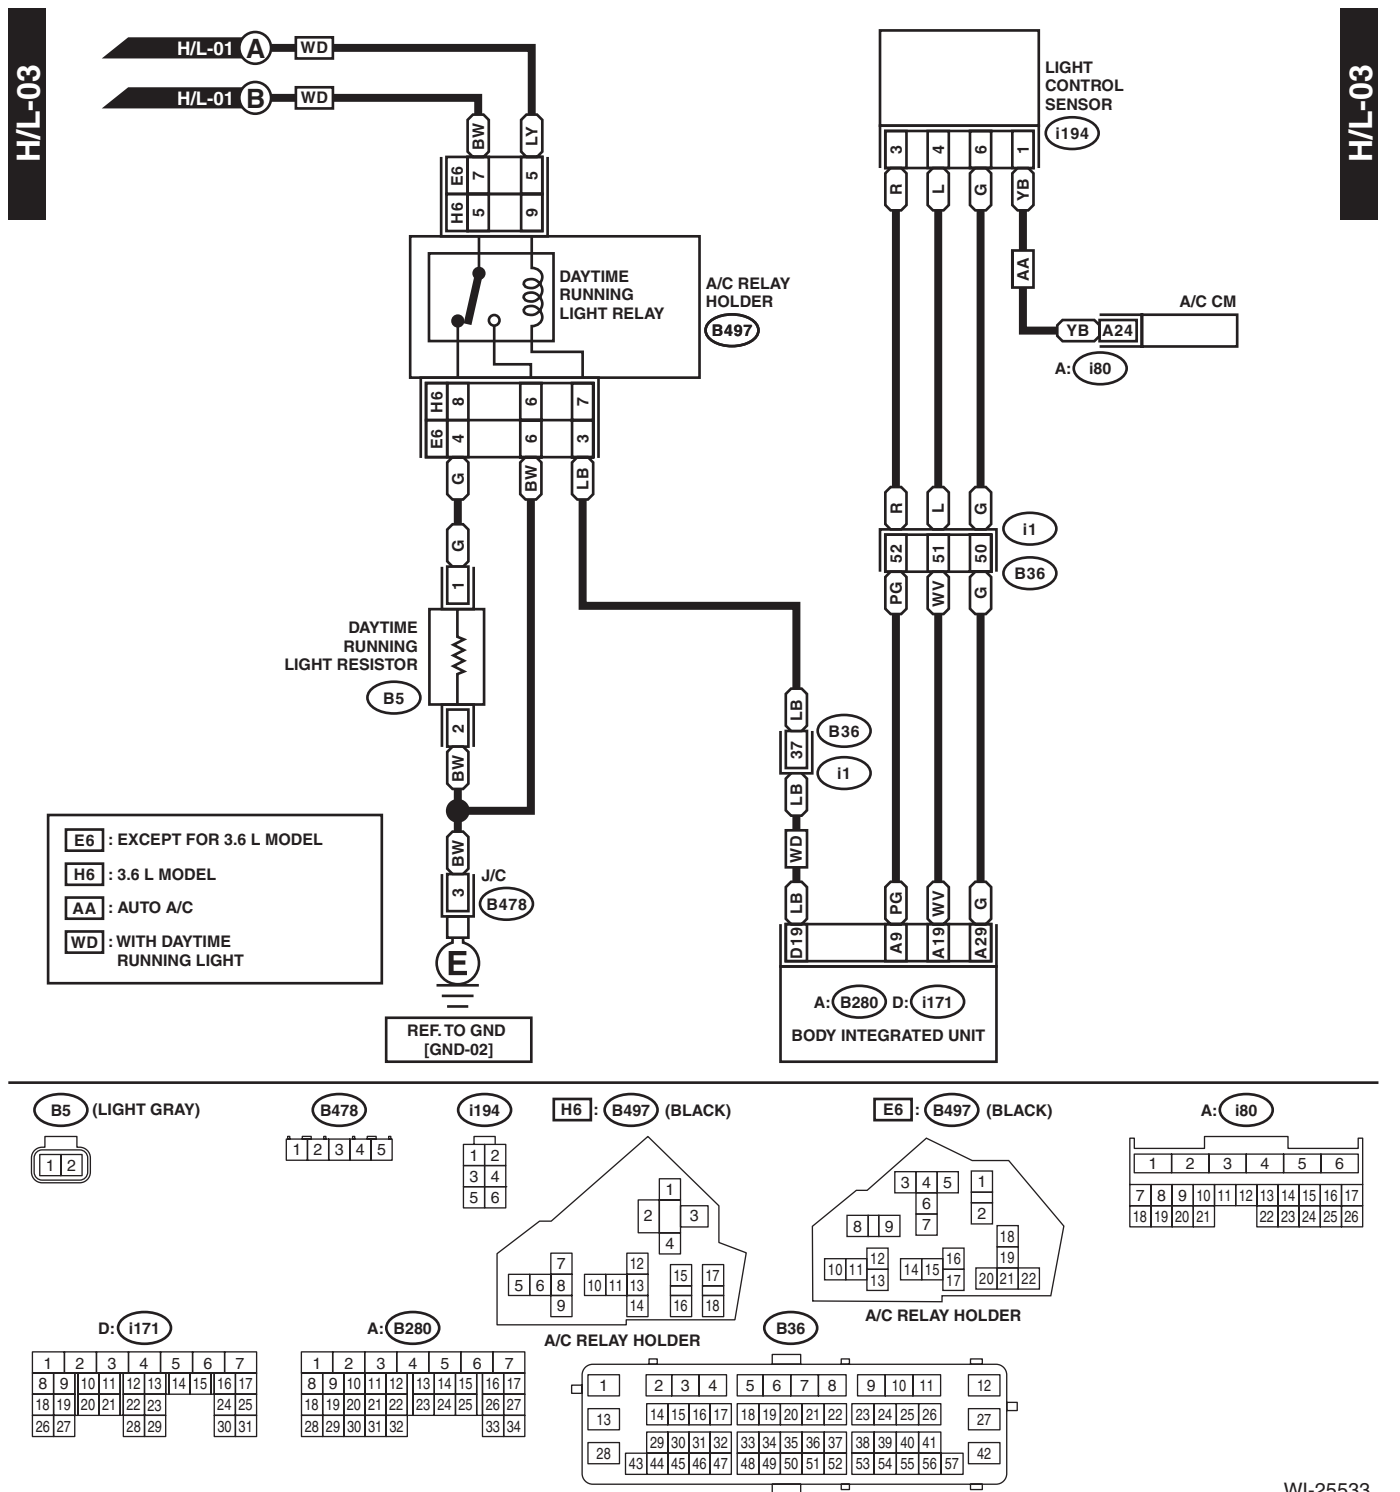

A: WIRING DIAGRAM

HORN-01

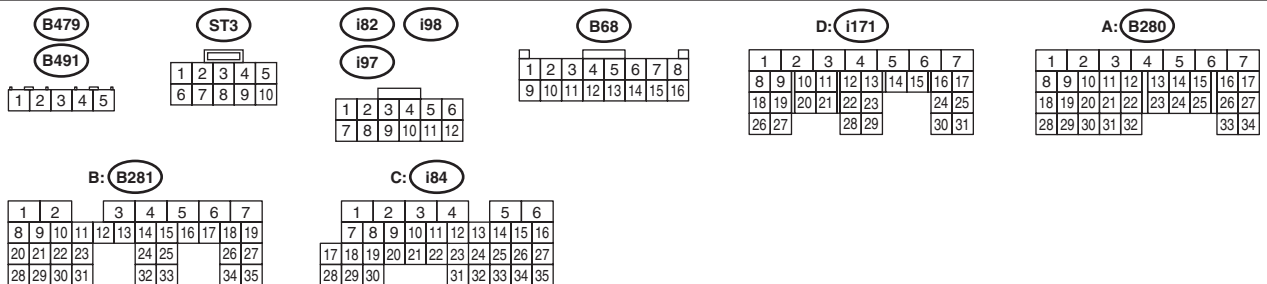
**WI-157**

Immobilizer System

WIRING SYSTEM


26. Immobilizer System

A: WIRING DIAGRAM

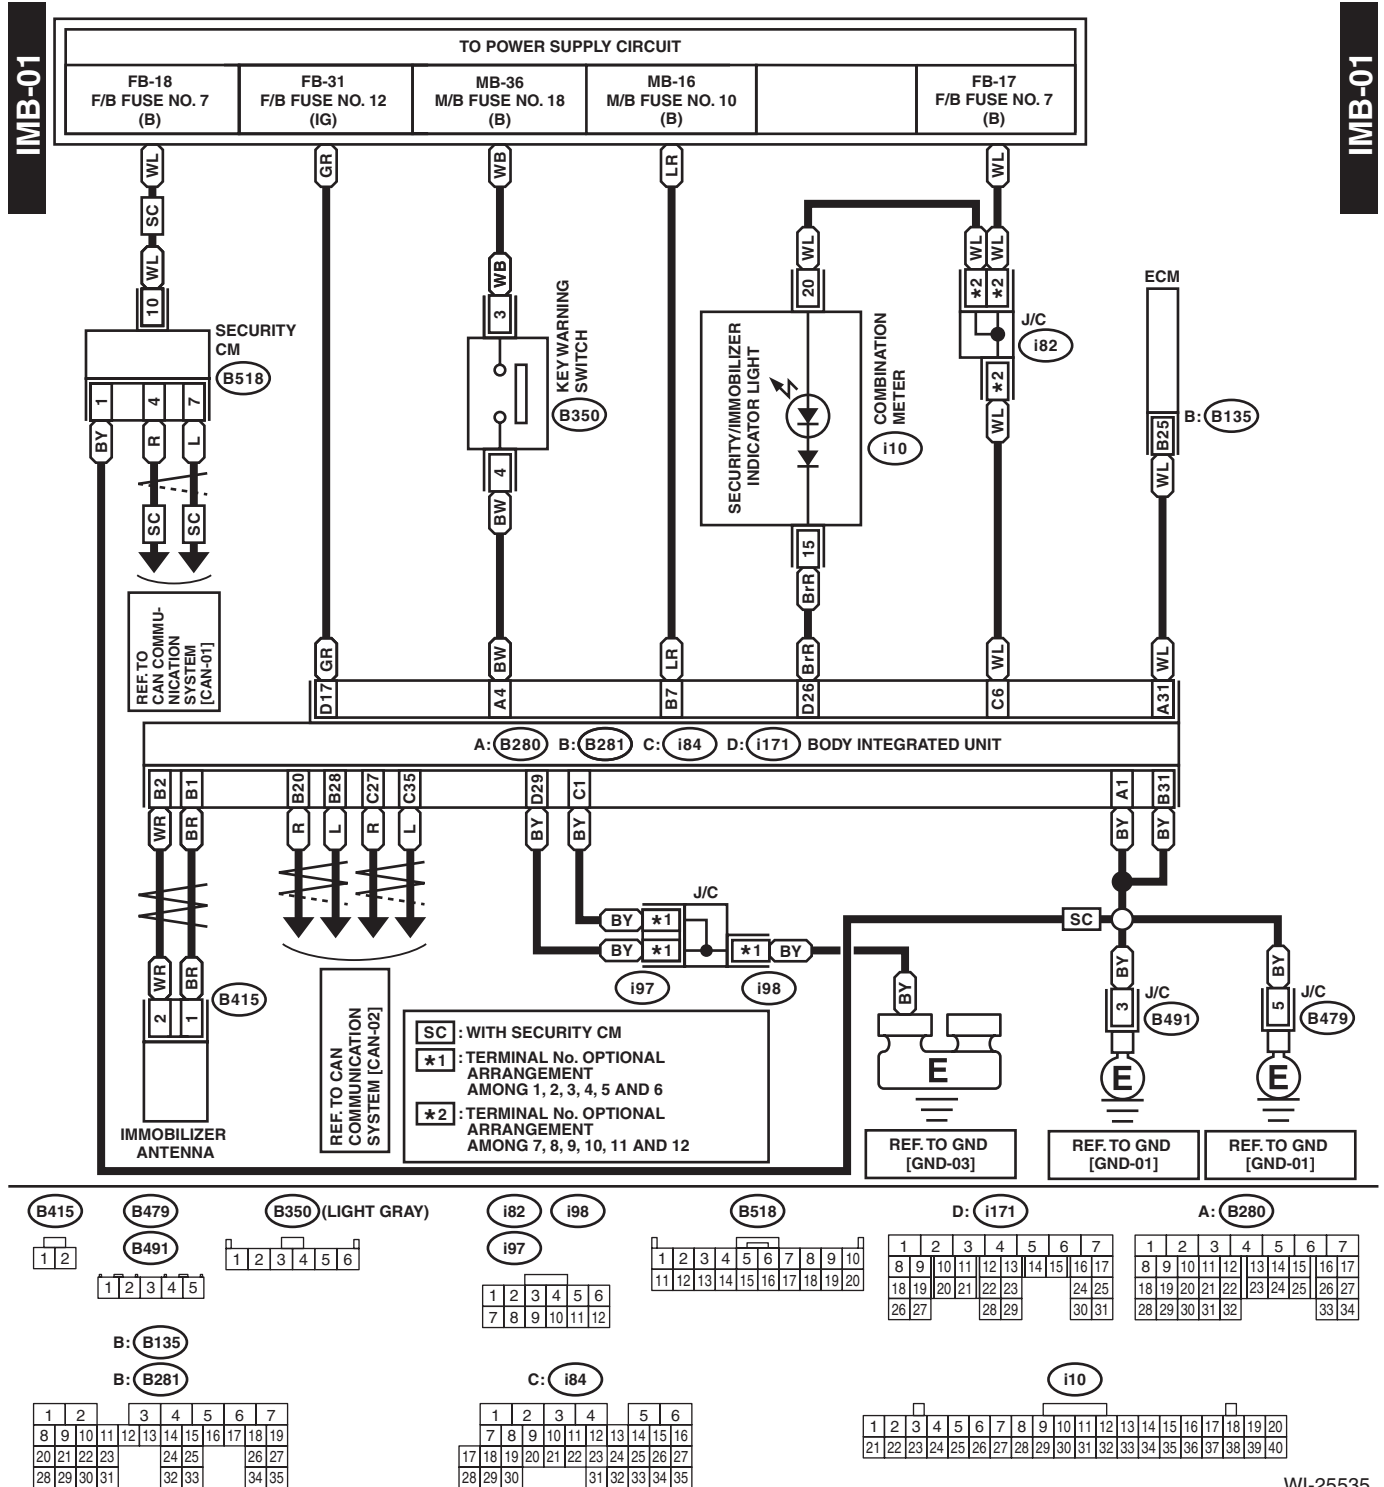




27. Interior Light System

A: WIRING DIAGRAM

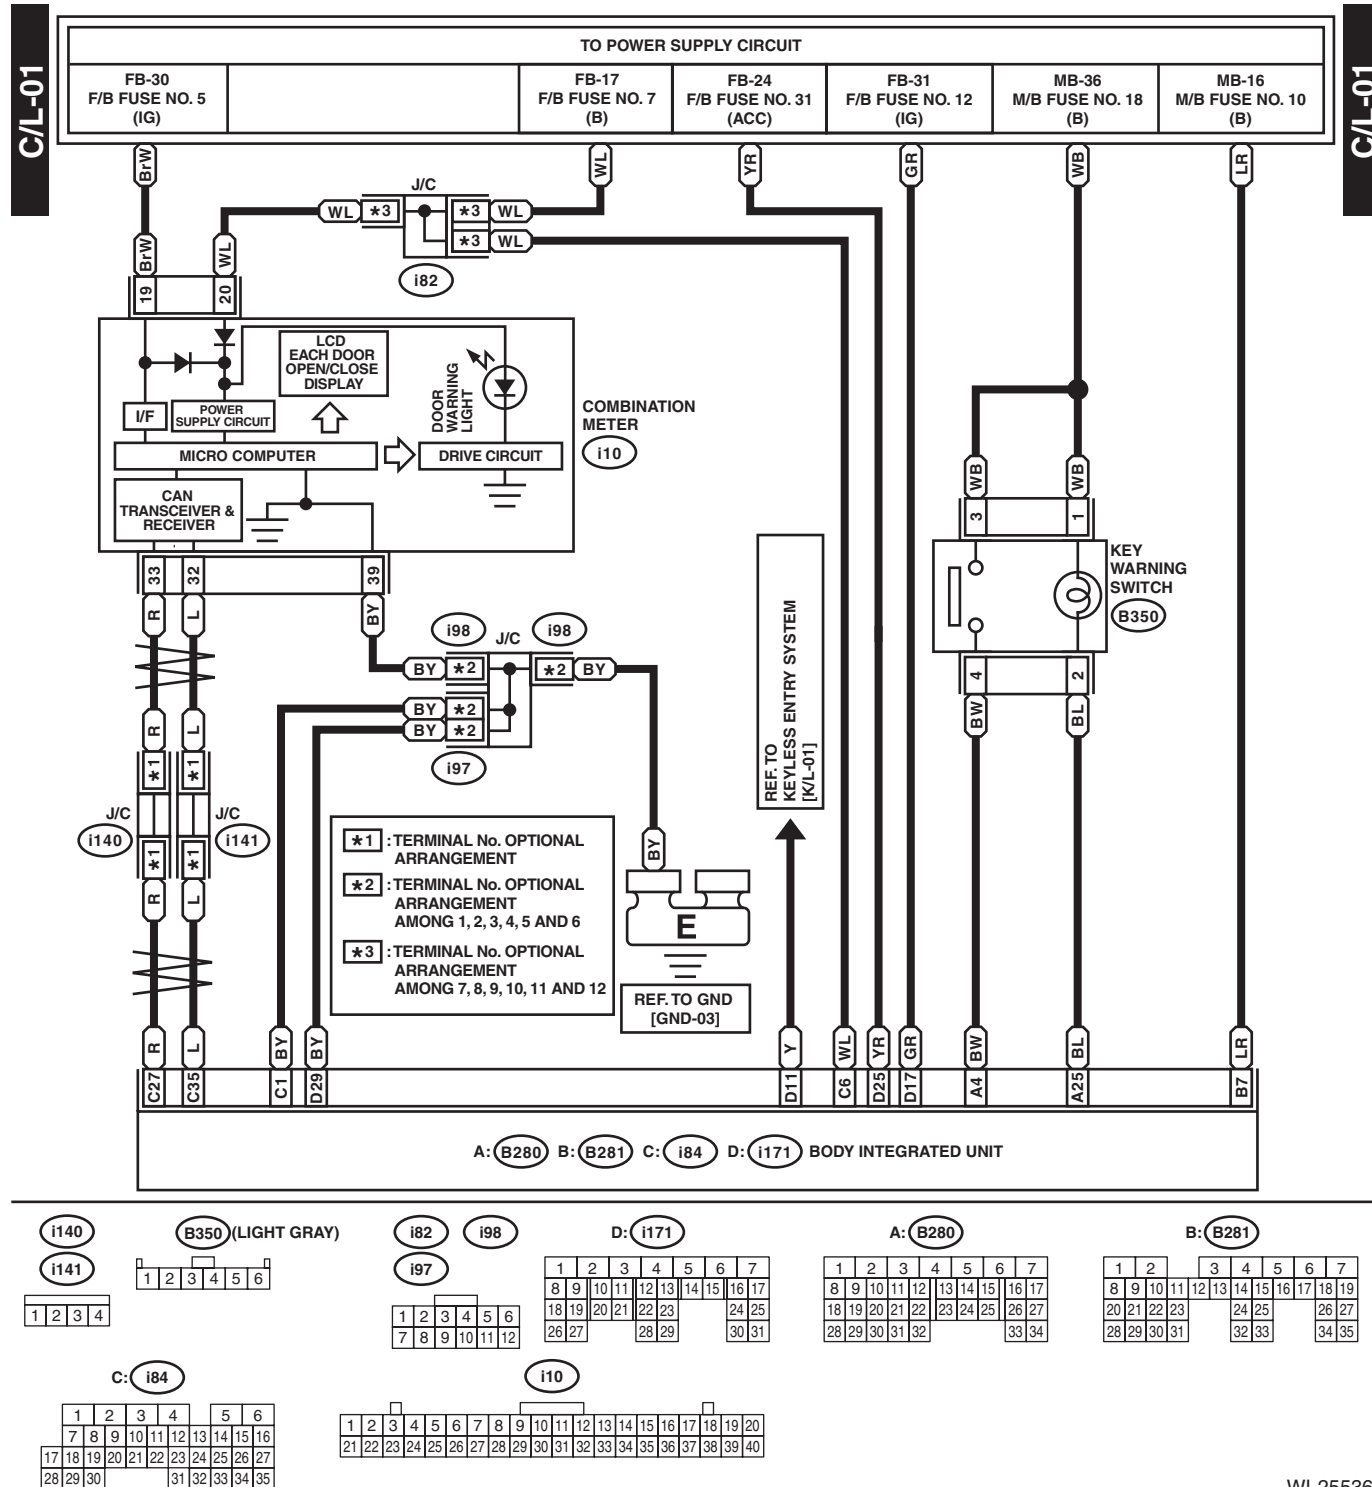

WI-25536

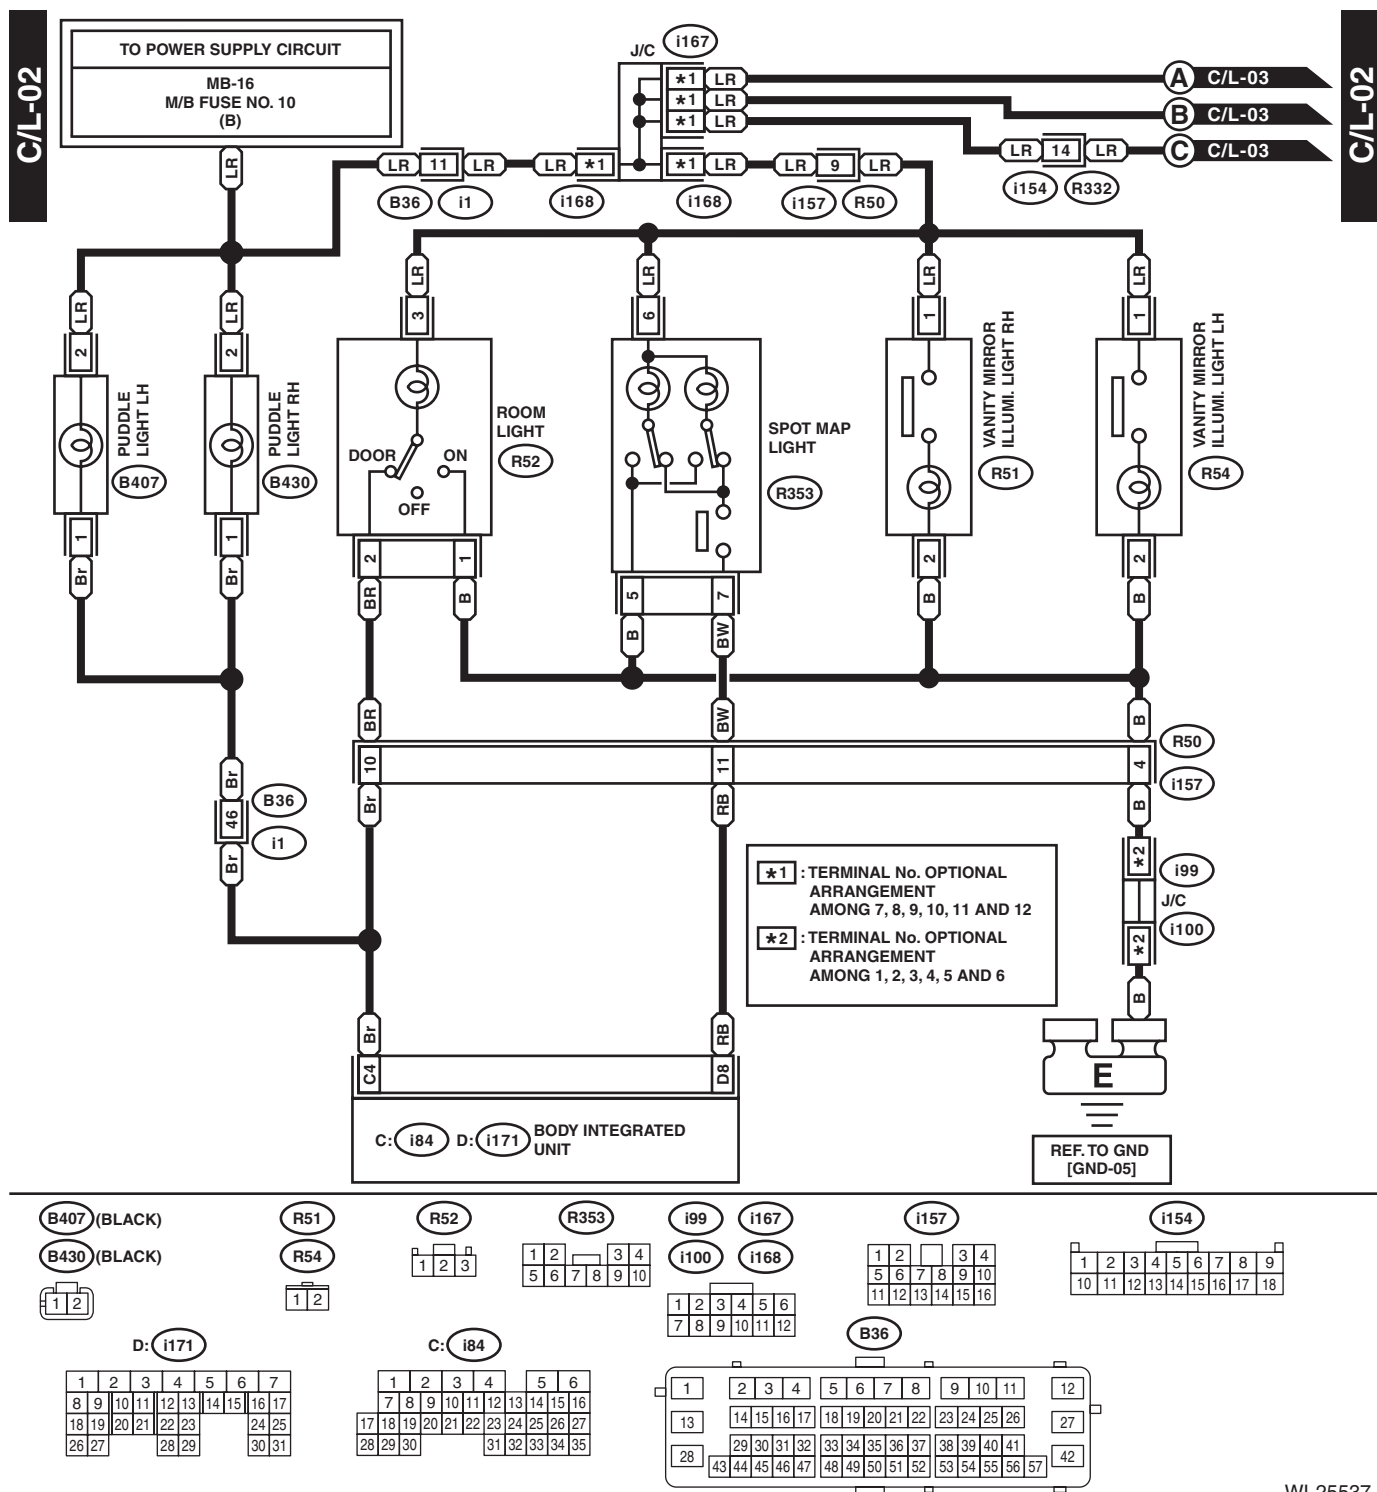


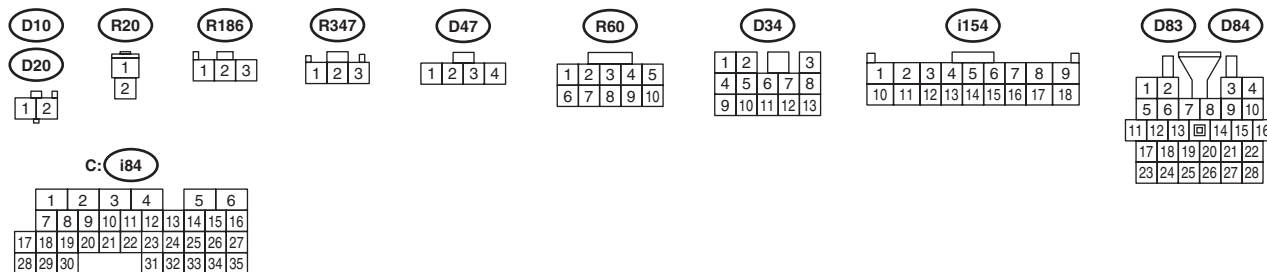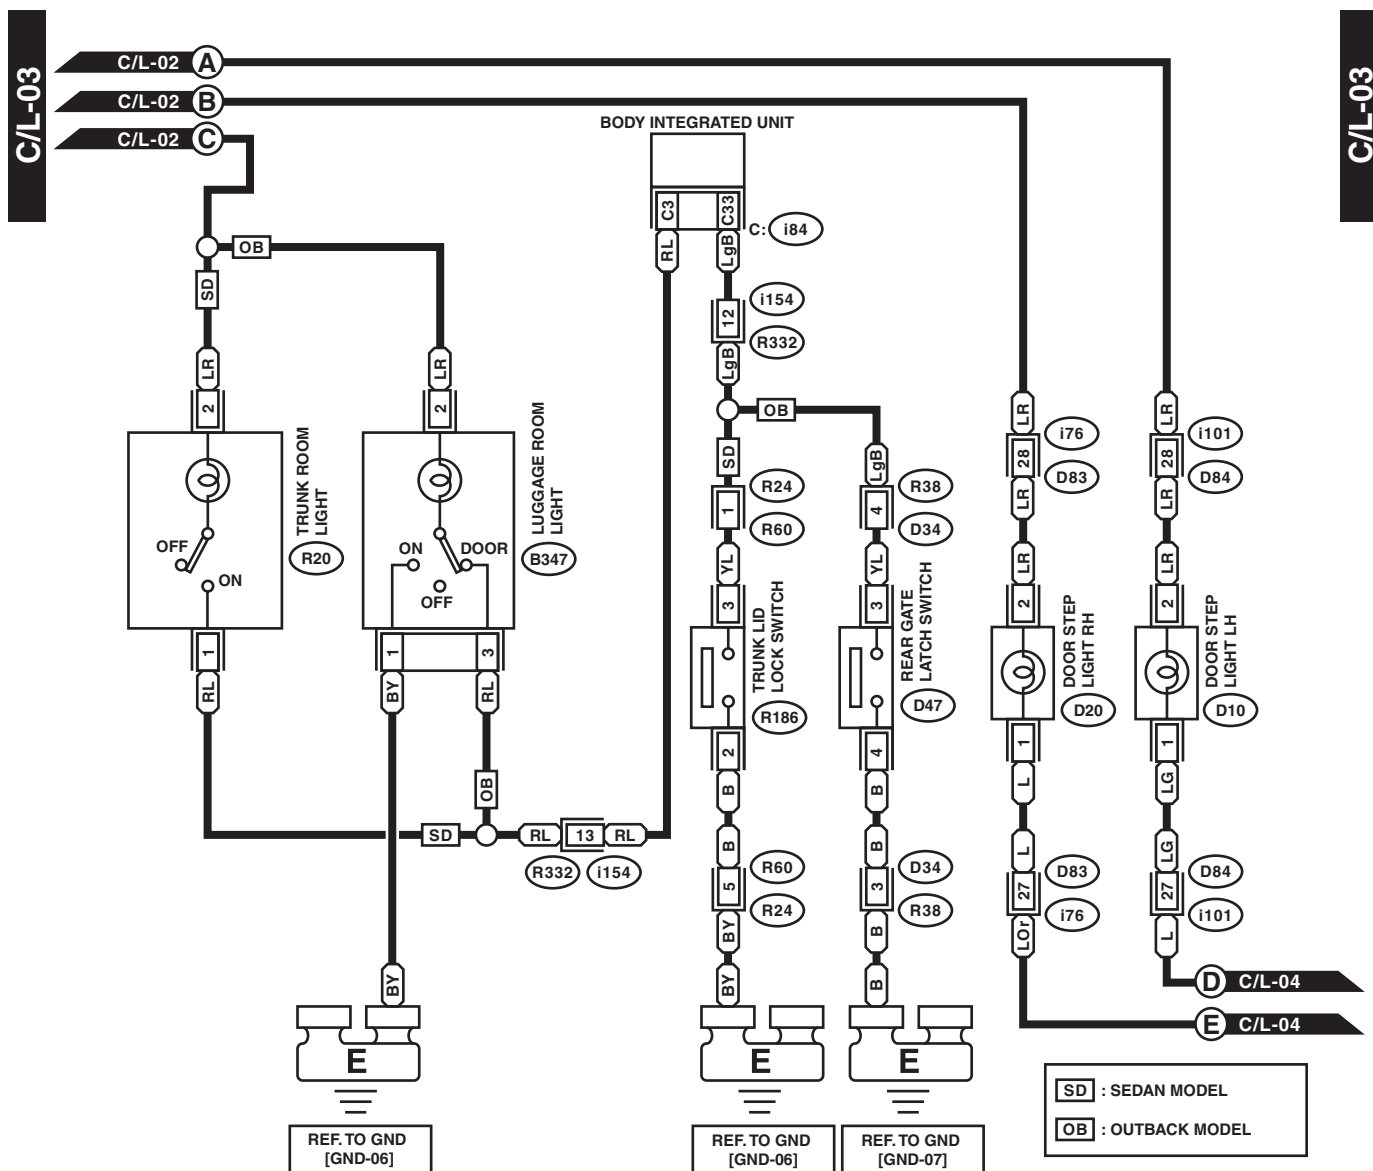

WI-25538

Interior Light System


WIRING SYSTEM


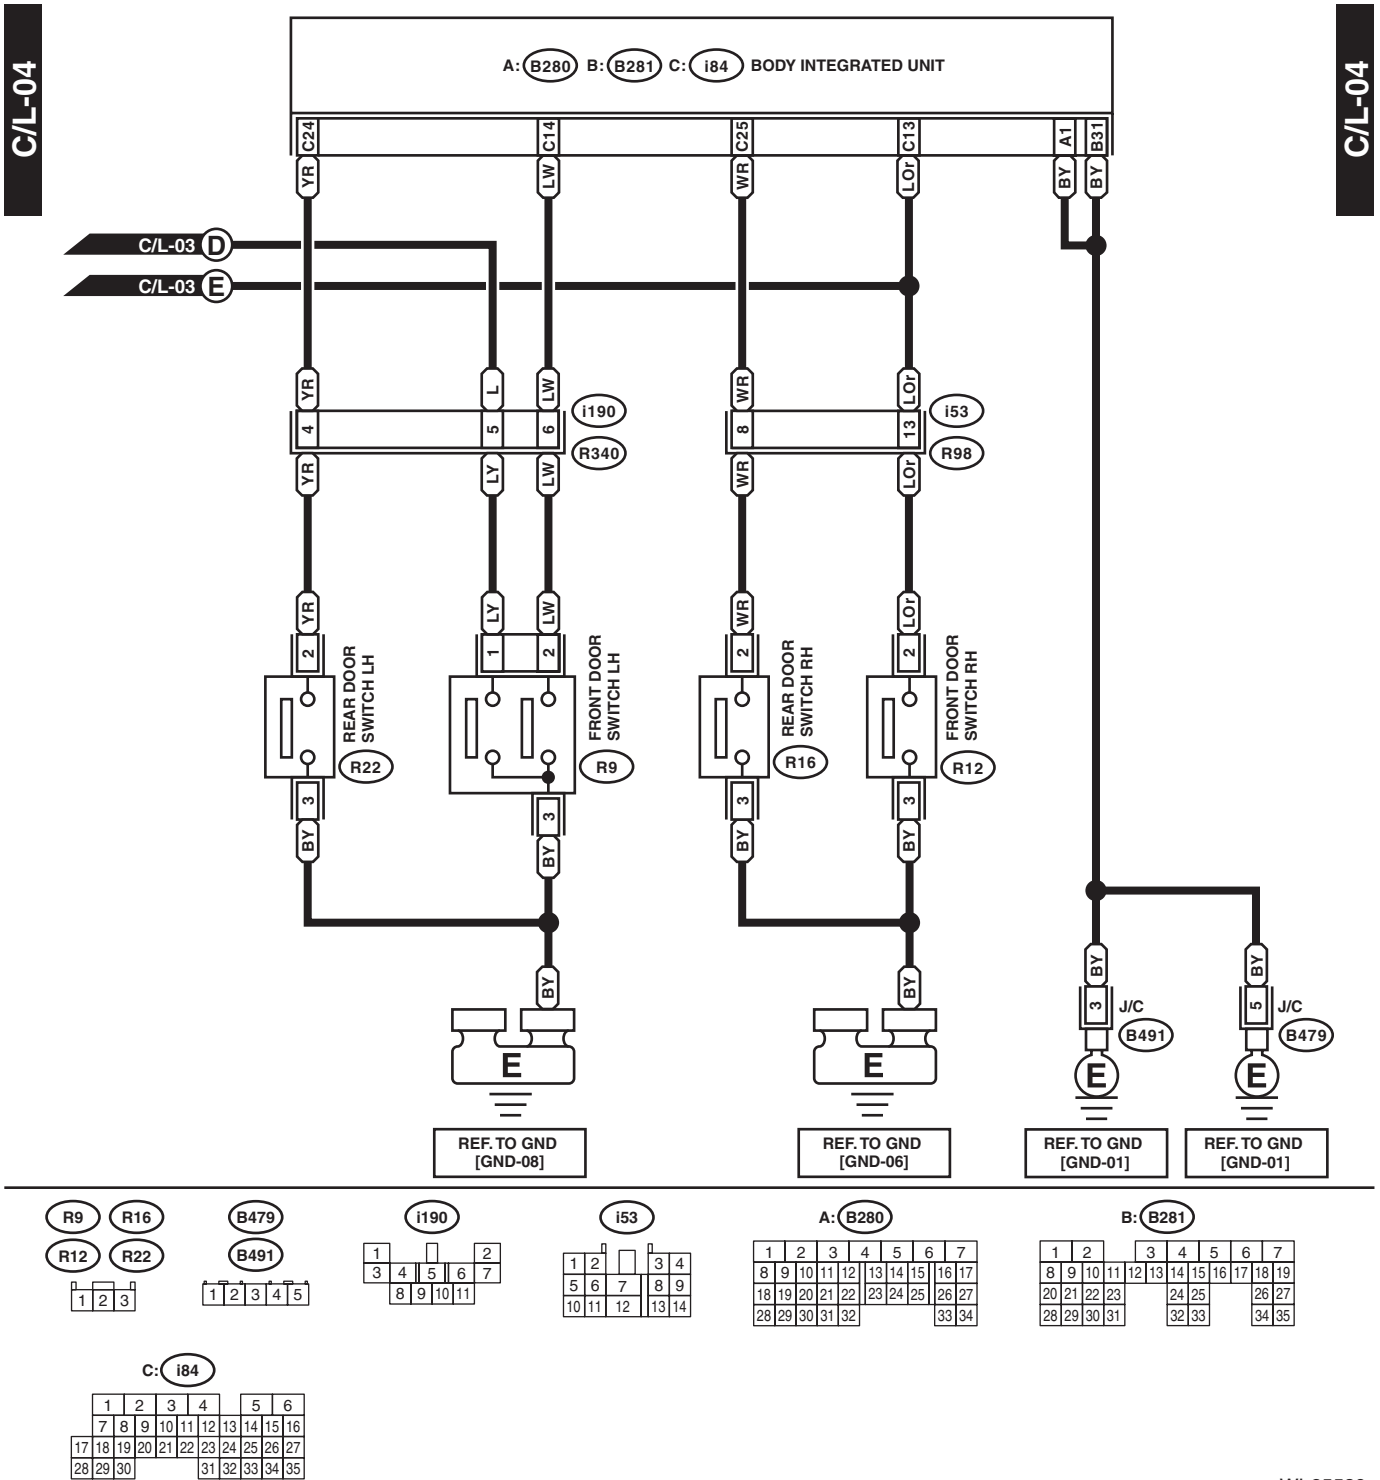


WI-25539

28.Keyless Entry System

A: WIRING DIAGRAM


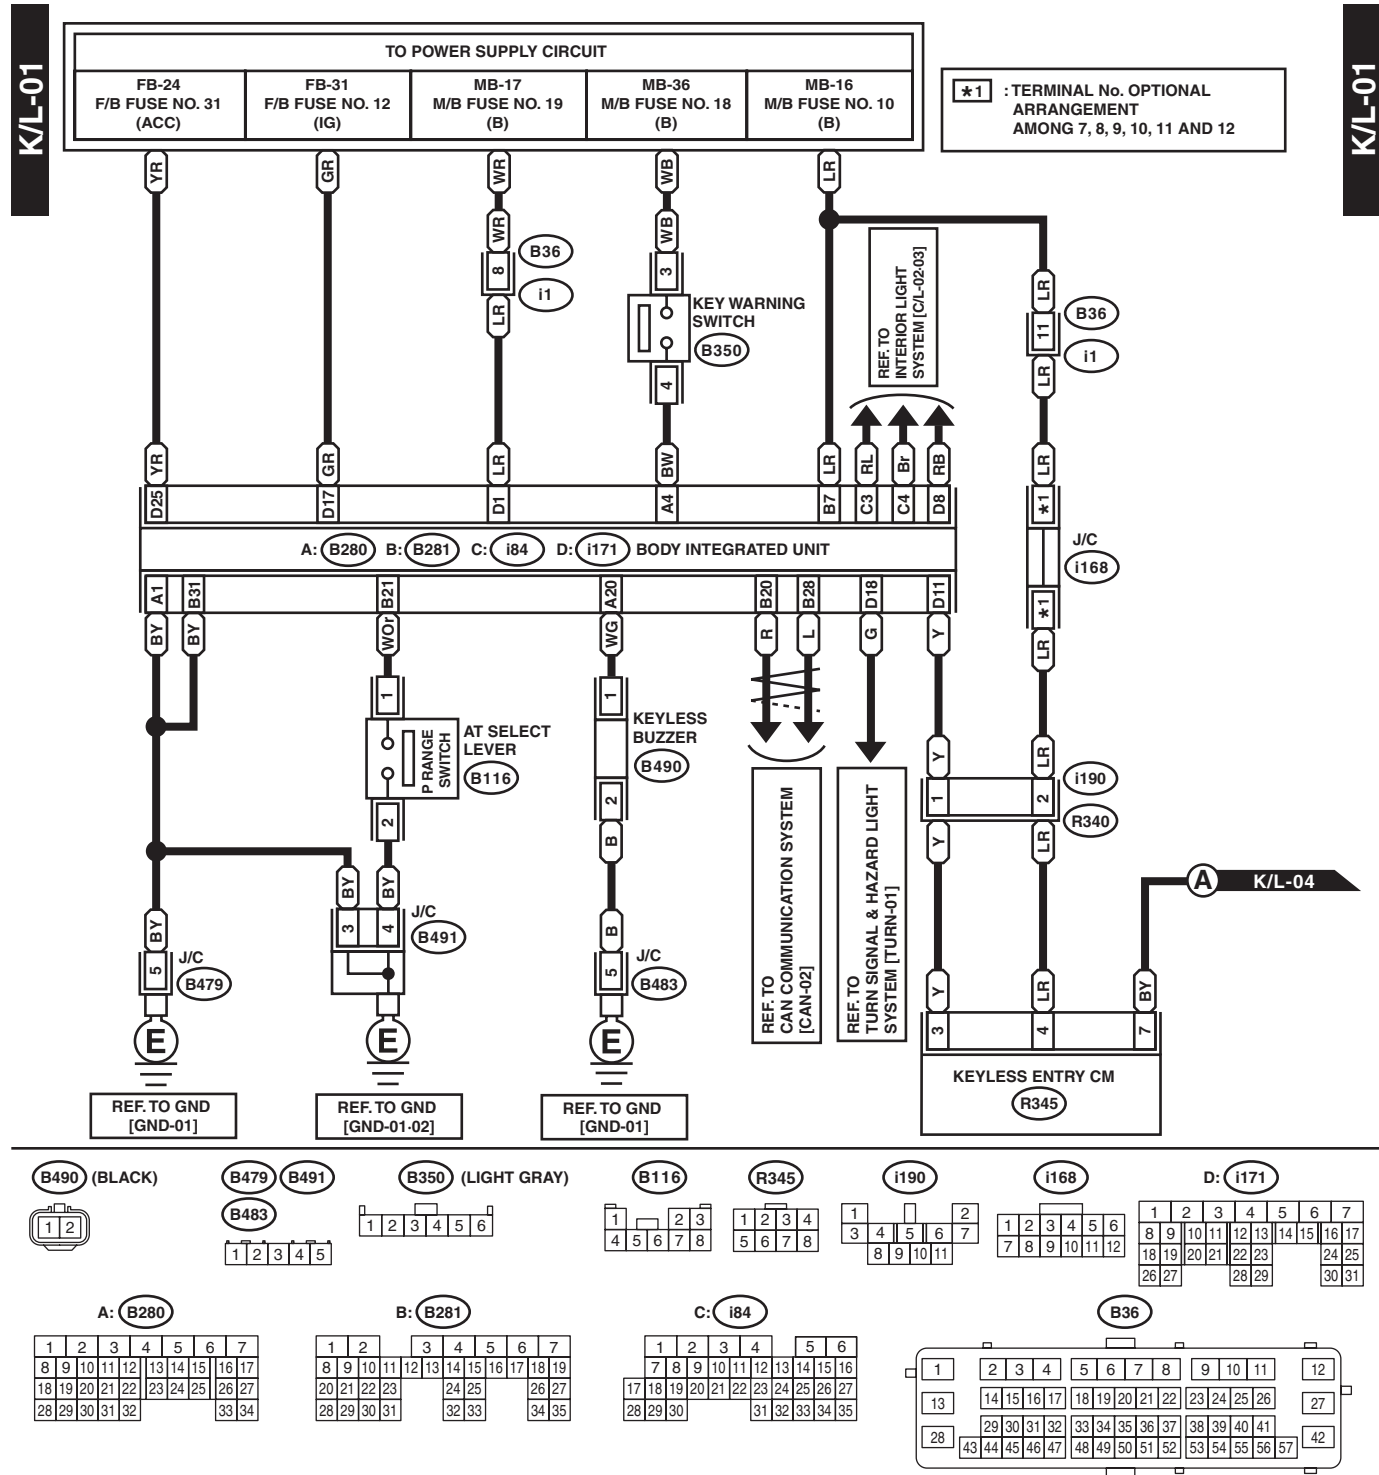


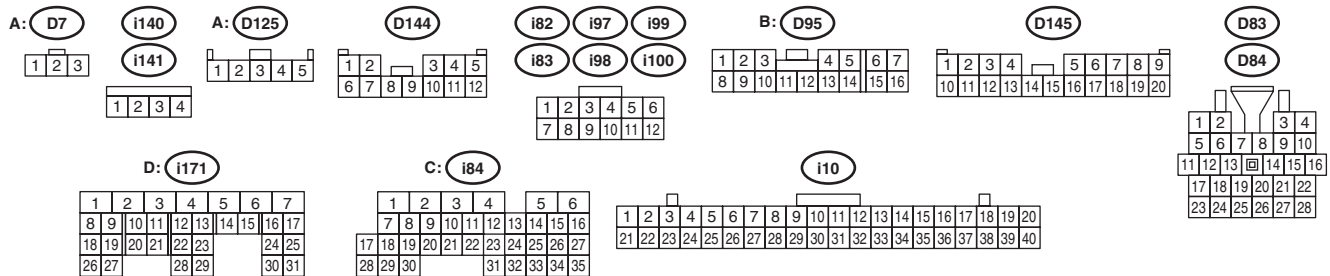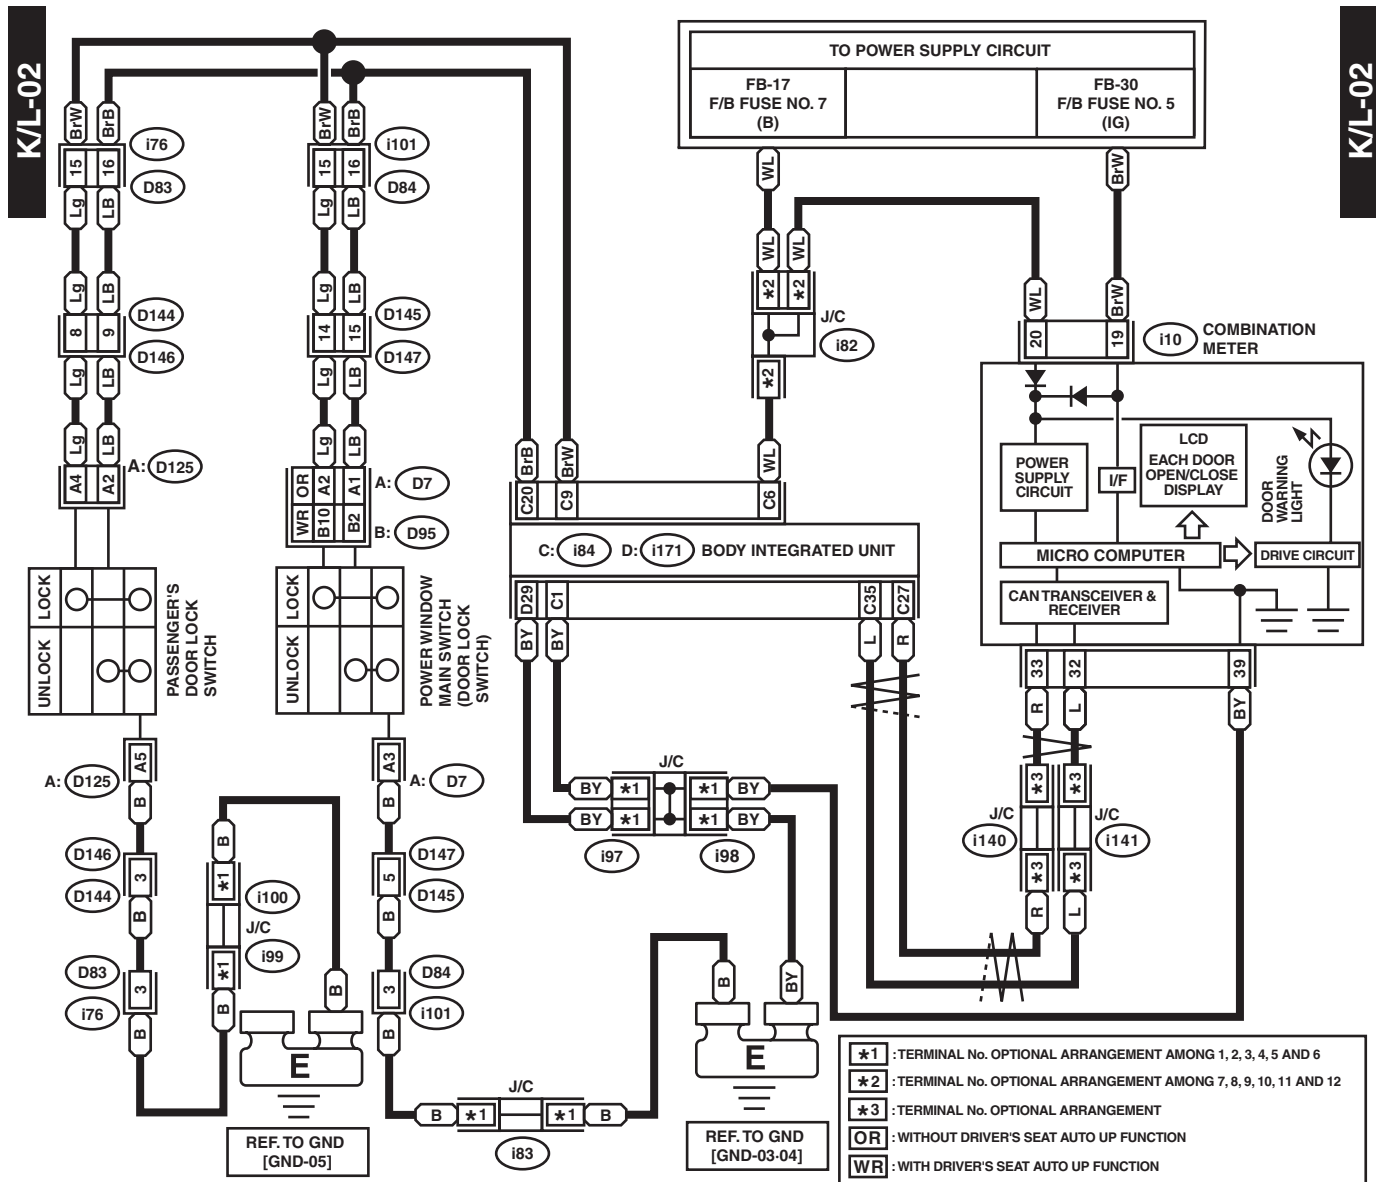

WI-25542

K/L-03


K/L-03

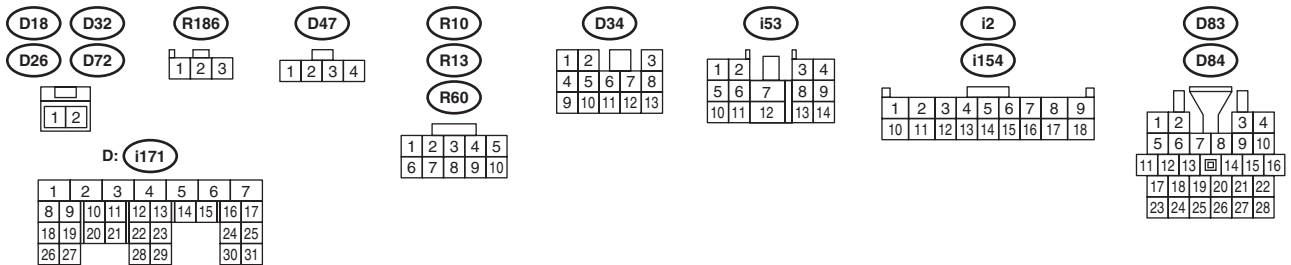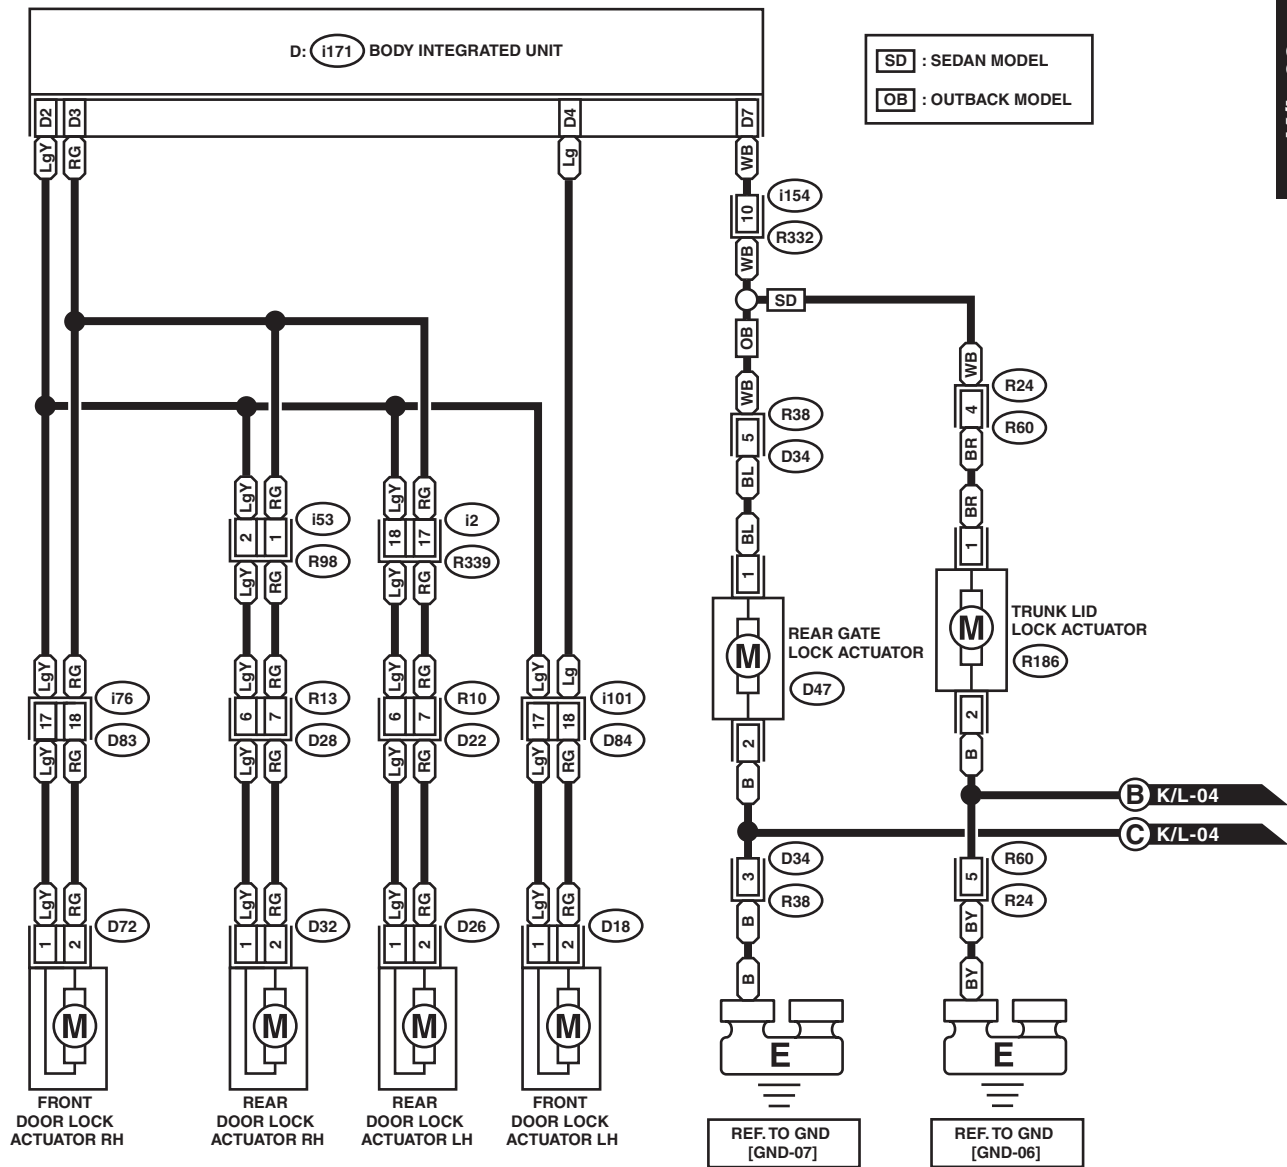

WI-25543

Keyless Entry System

WIRING SYSTEM

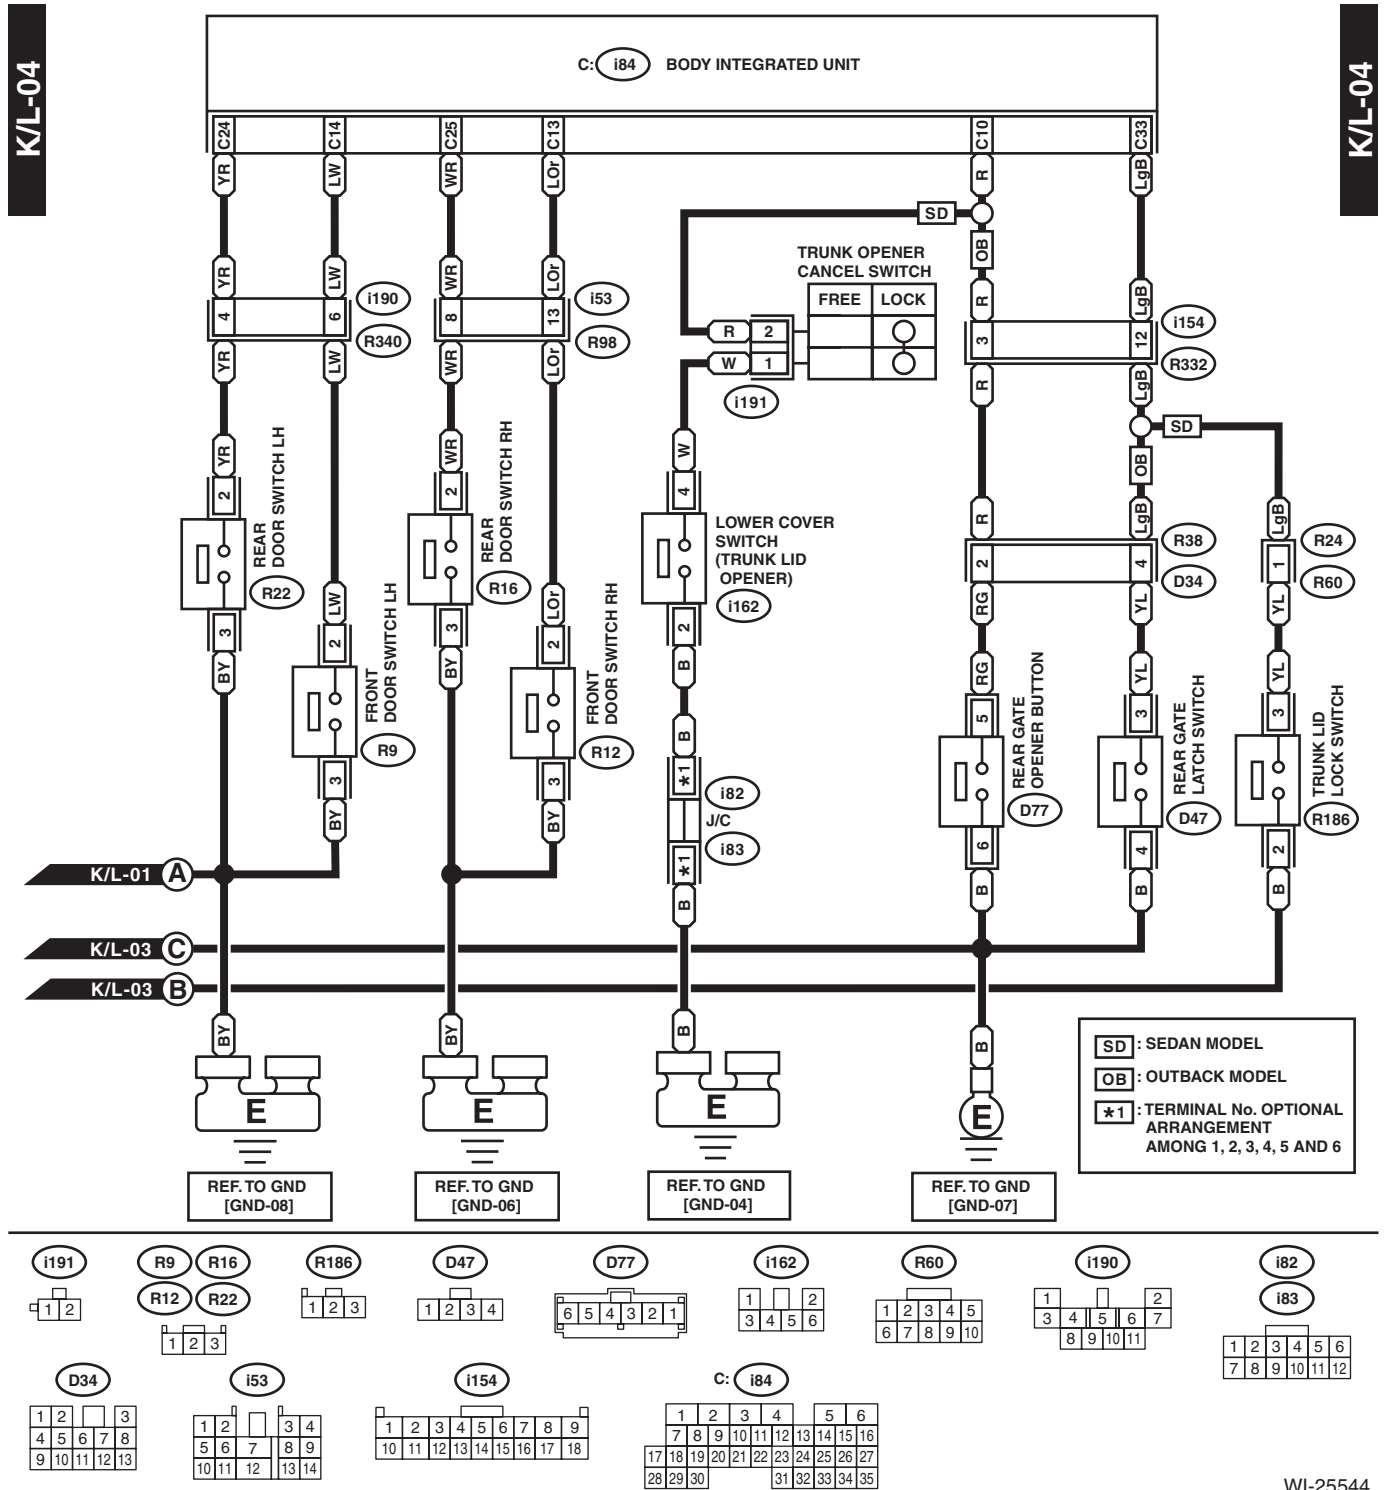


WI-25544

A: WIRING DIAGRAM







Navigation System

WIRING SYSTEM

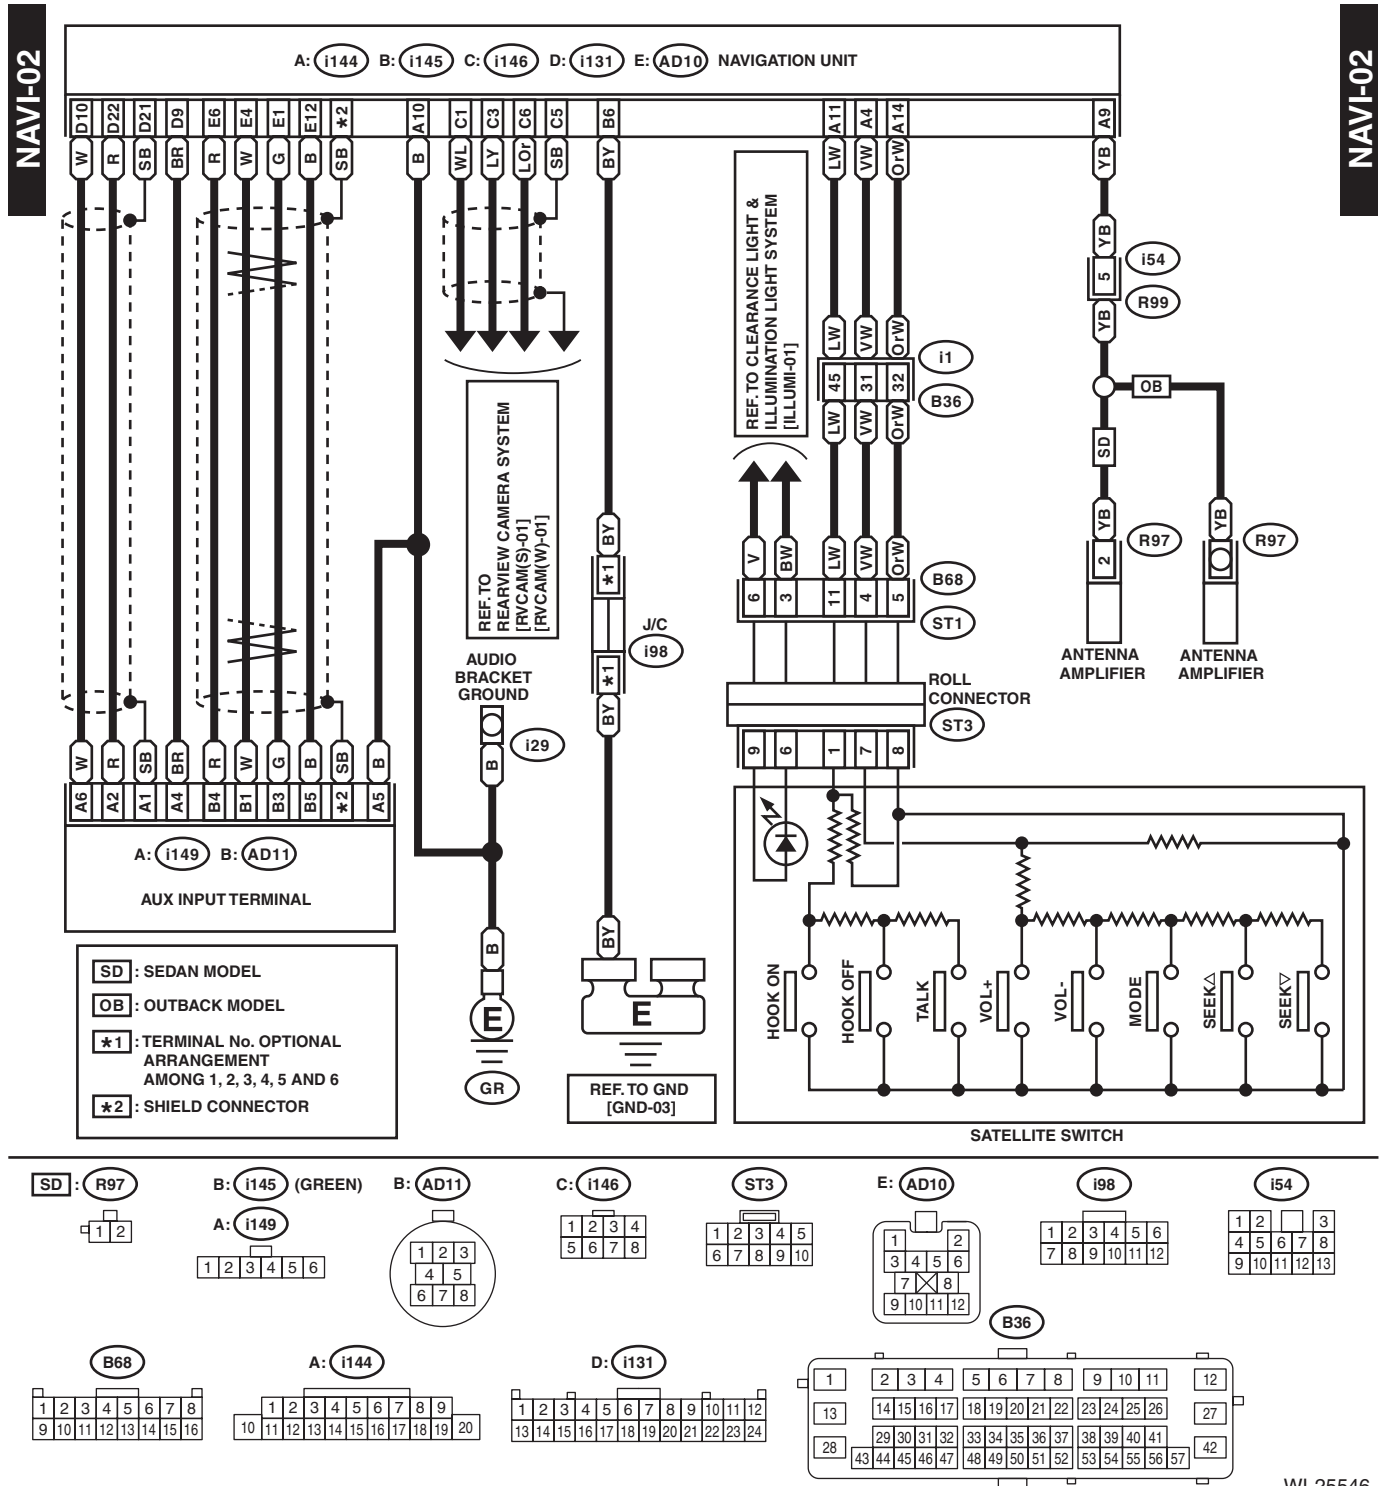

NAVI-03

   NAVI-03

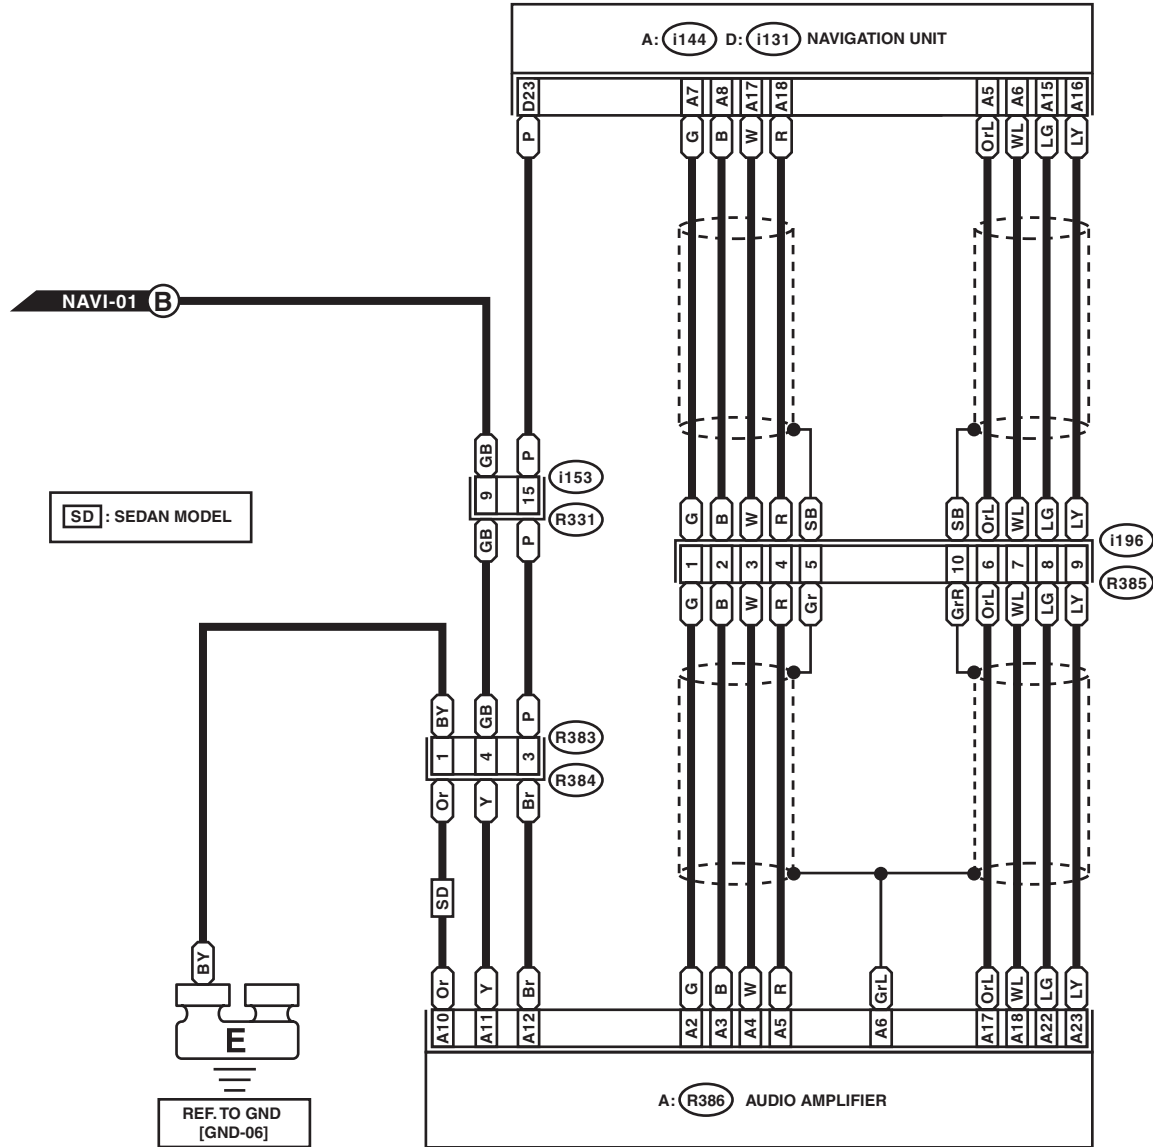






WI-25547

Navigation System

WIRING SYSTEM

NAVI-04



 
 
 

NAVI-04

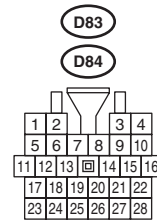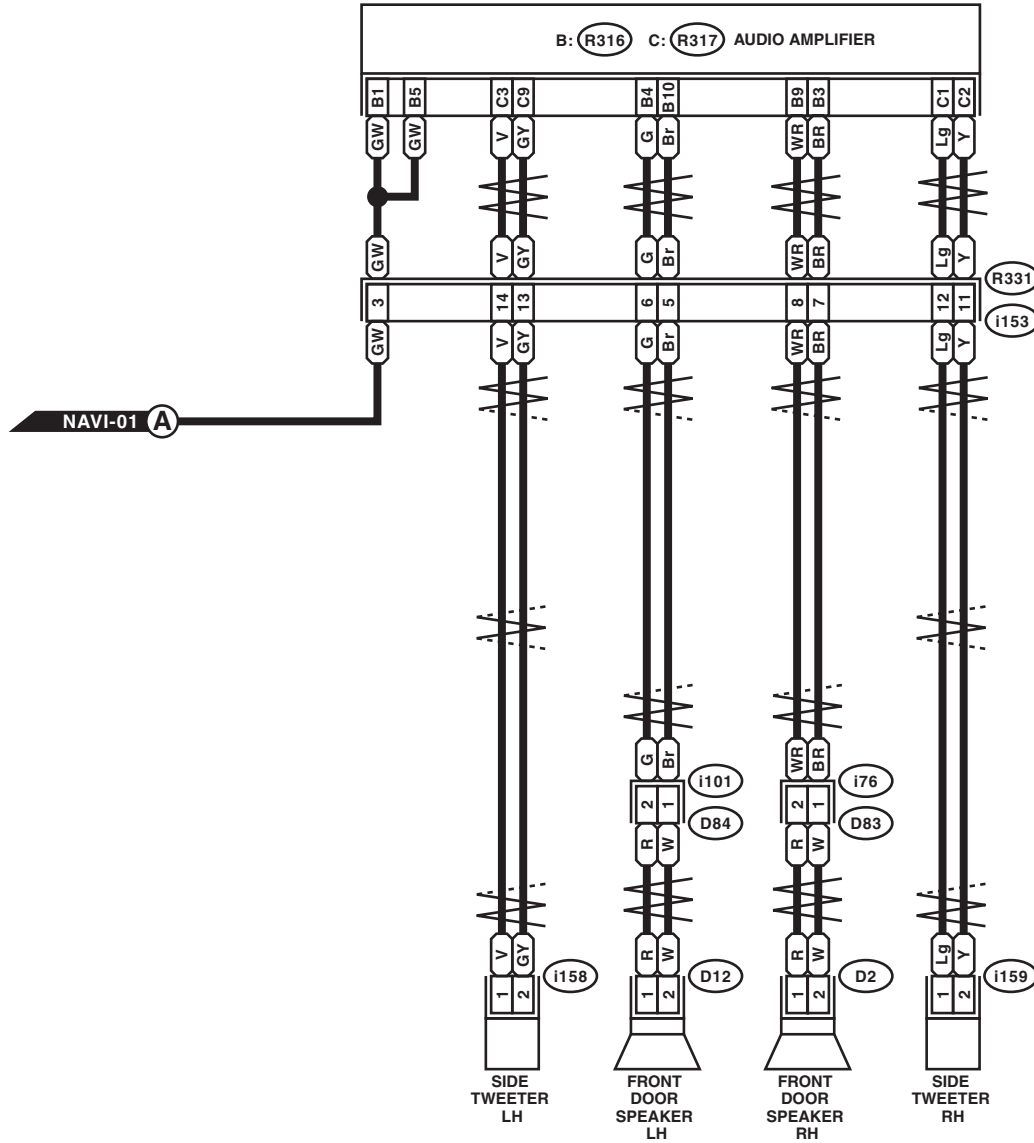

WI-25548

NAVI-05

     NAVI-05

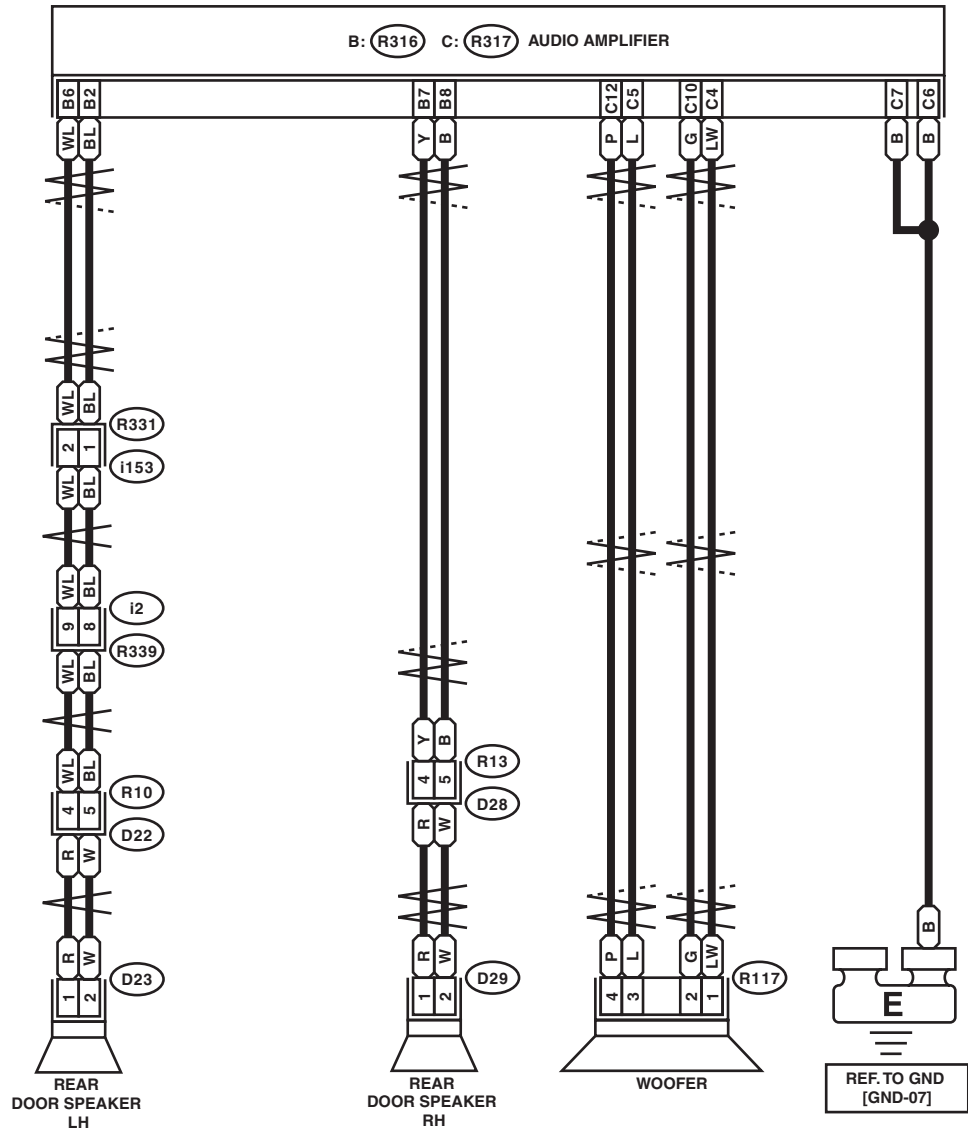

Occupant Detection System



WIRING SYSTEM

30. Occupant Detection System

A: WIRING DIAGRAM

ODS-01

ODS-01

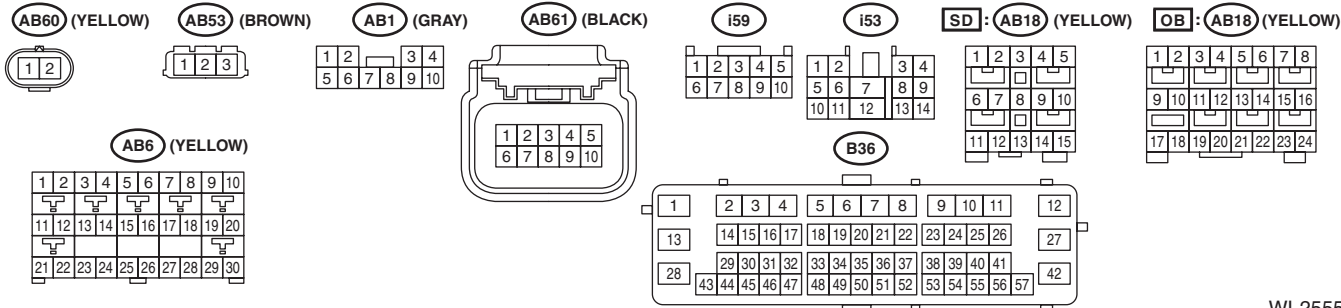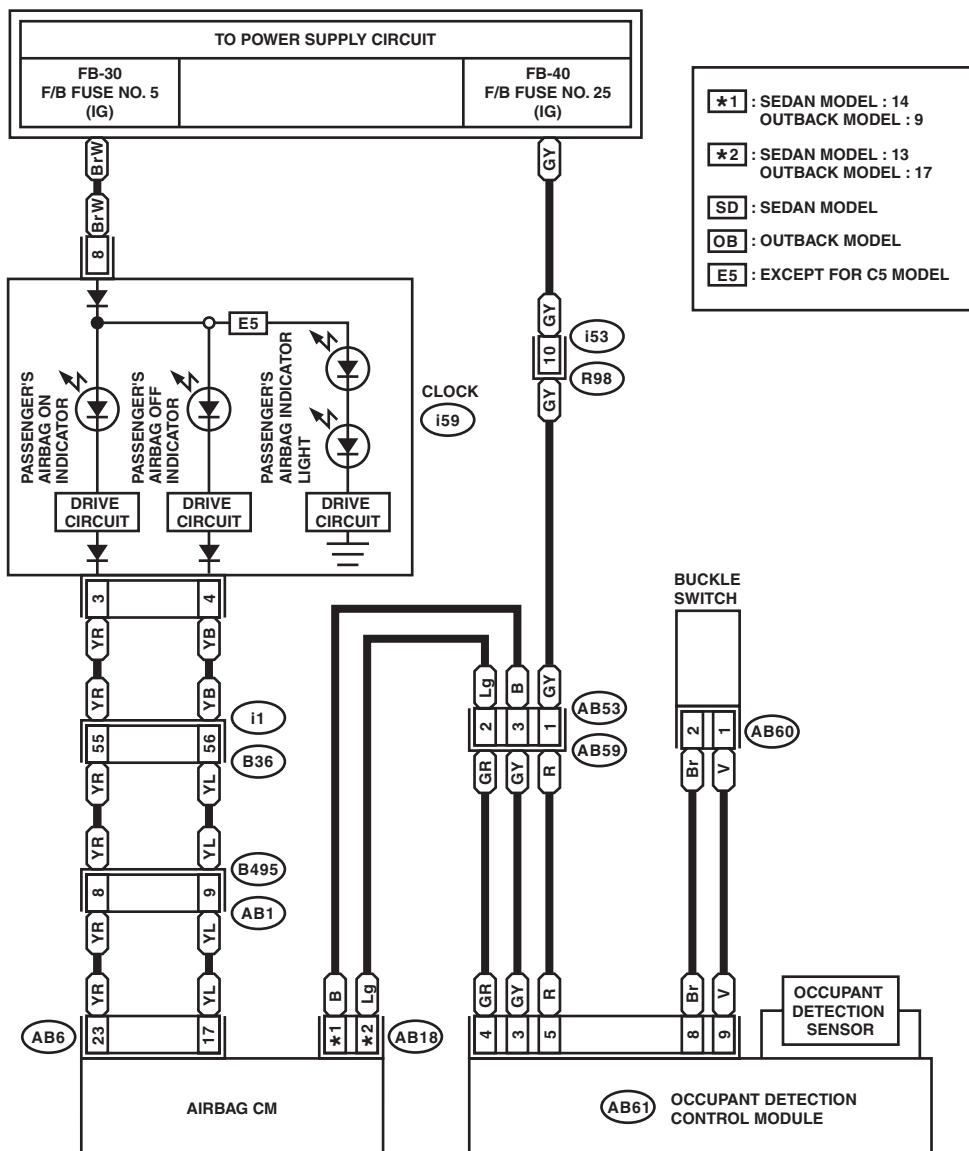


WI-25550

31.Oil Pressure Warning Light System




A: WIRING DIAGRAM

OIL/P-01

OIL/P-01

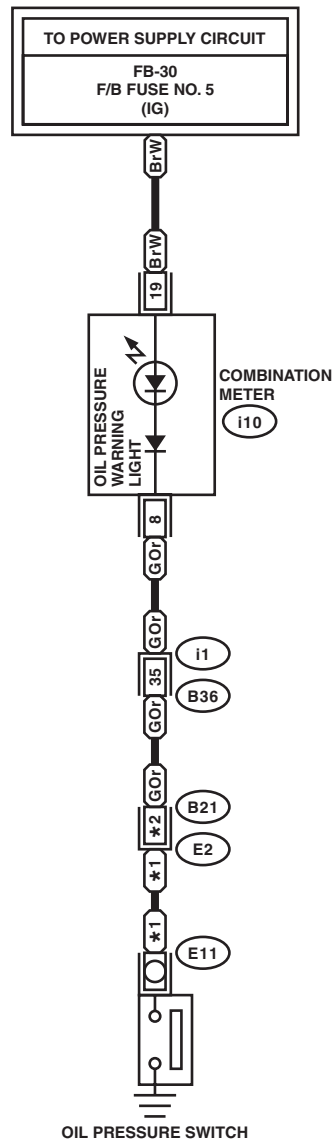

*1	: 2.5 L NON-TURBO MODEL : Br
	TURBO MODEL : G
	3.6 L MODEL : GOr
*2	: 2.5 L NON-TURBO MODEL : 31
	TURBO MODEL : 45
	3.6 L MODEL : 45

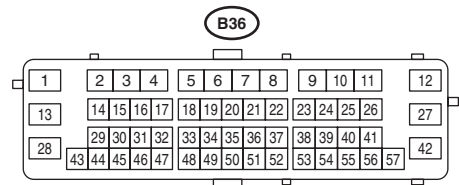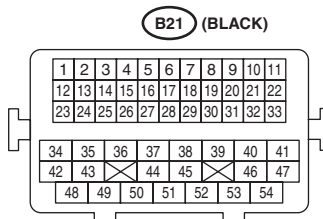 


WI-25551

Parking Brake / Brake Fluid Level Warning Light System

WIRING SYSTEM

32. Parking Brake / Brake Fluid Level Warning Light System

A: WIRING DIAGRAM

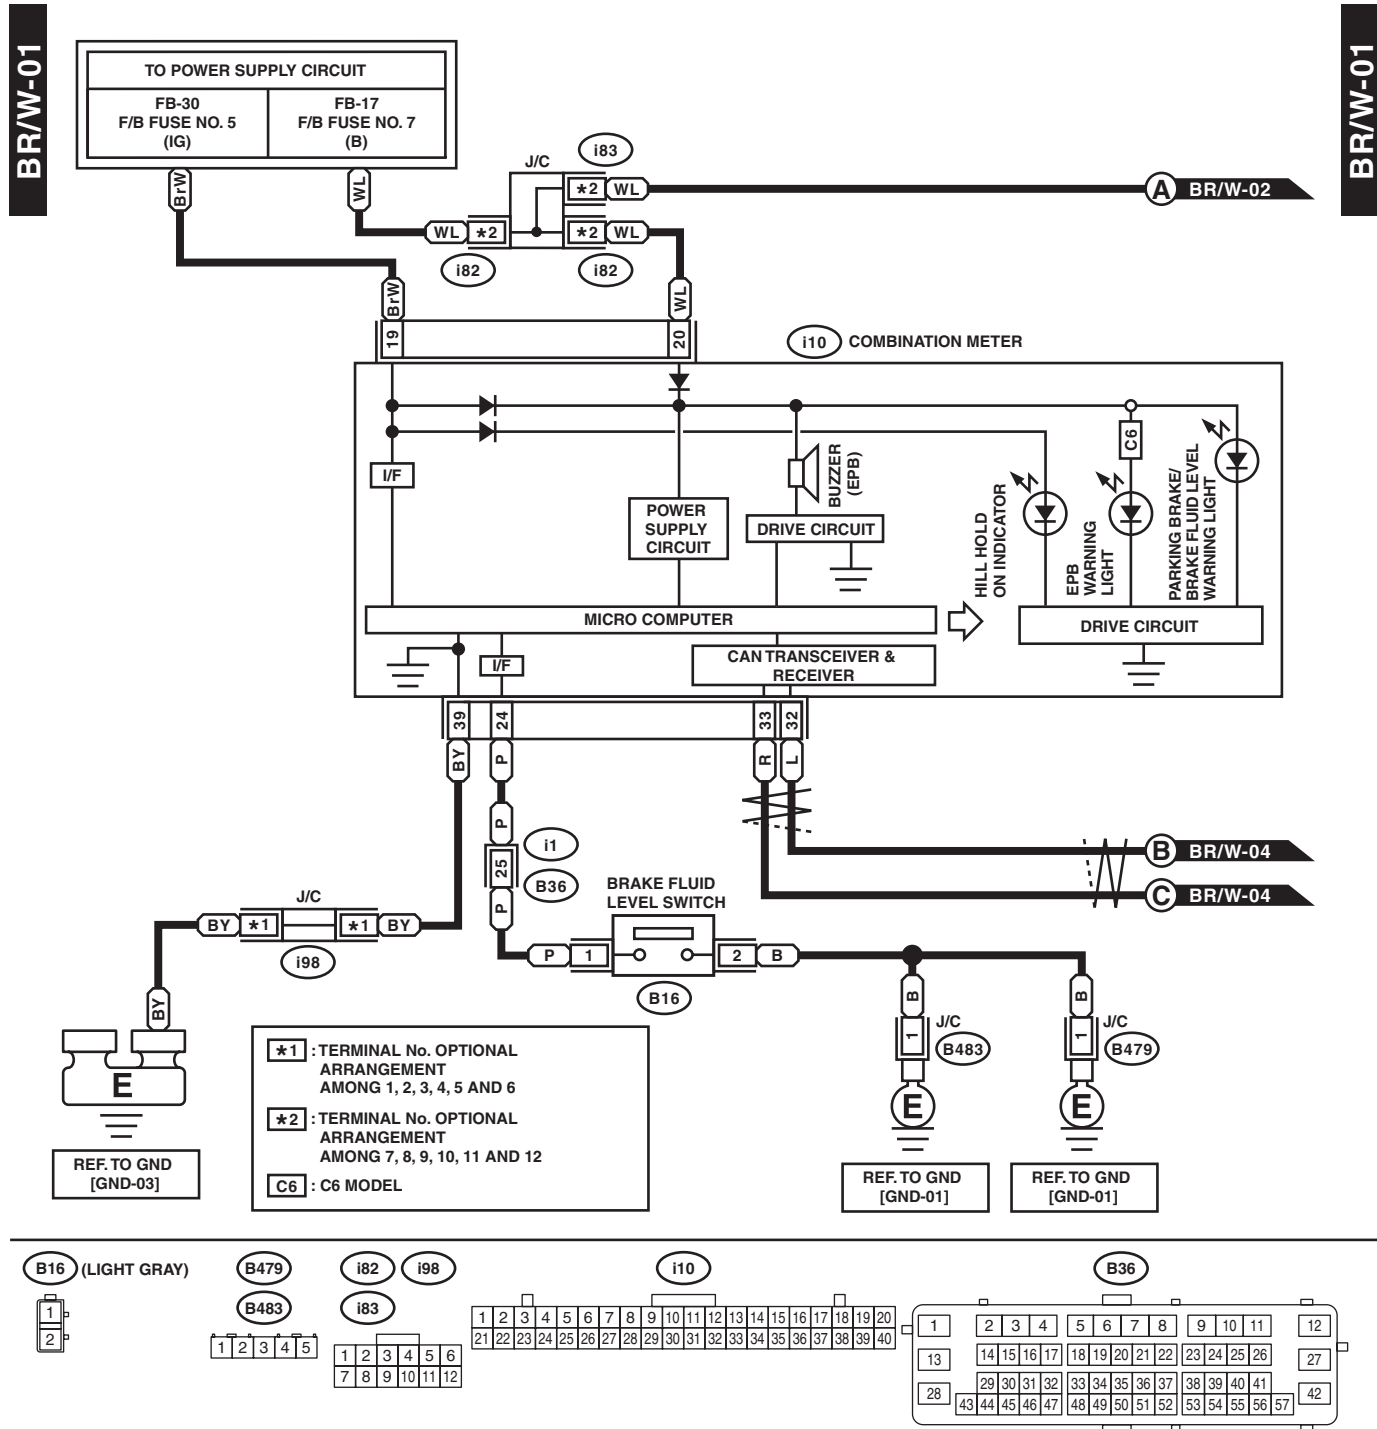


WI-25552

Parking Brake / Brake Fluid Level Warning Light System

WIRING SYSTEM

BR/W-02

BR/W-02

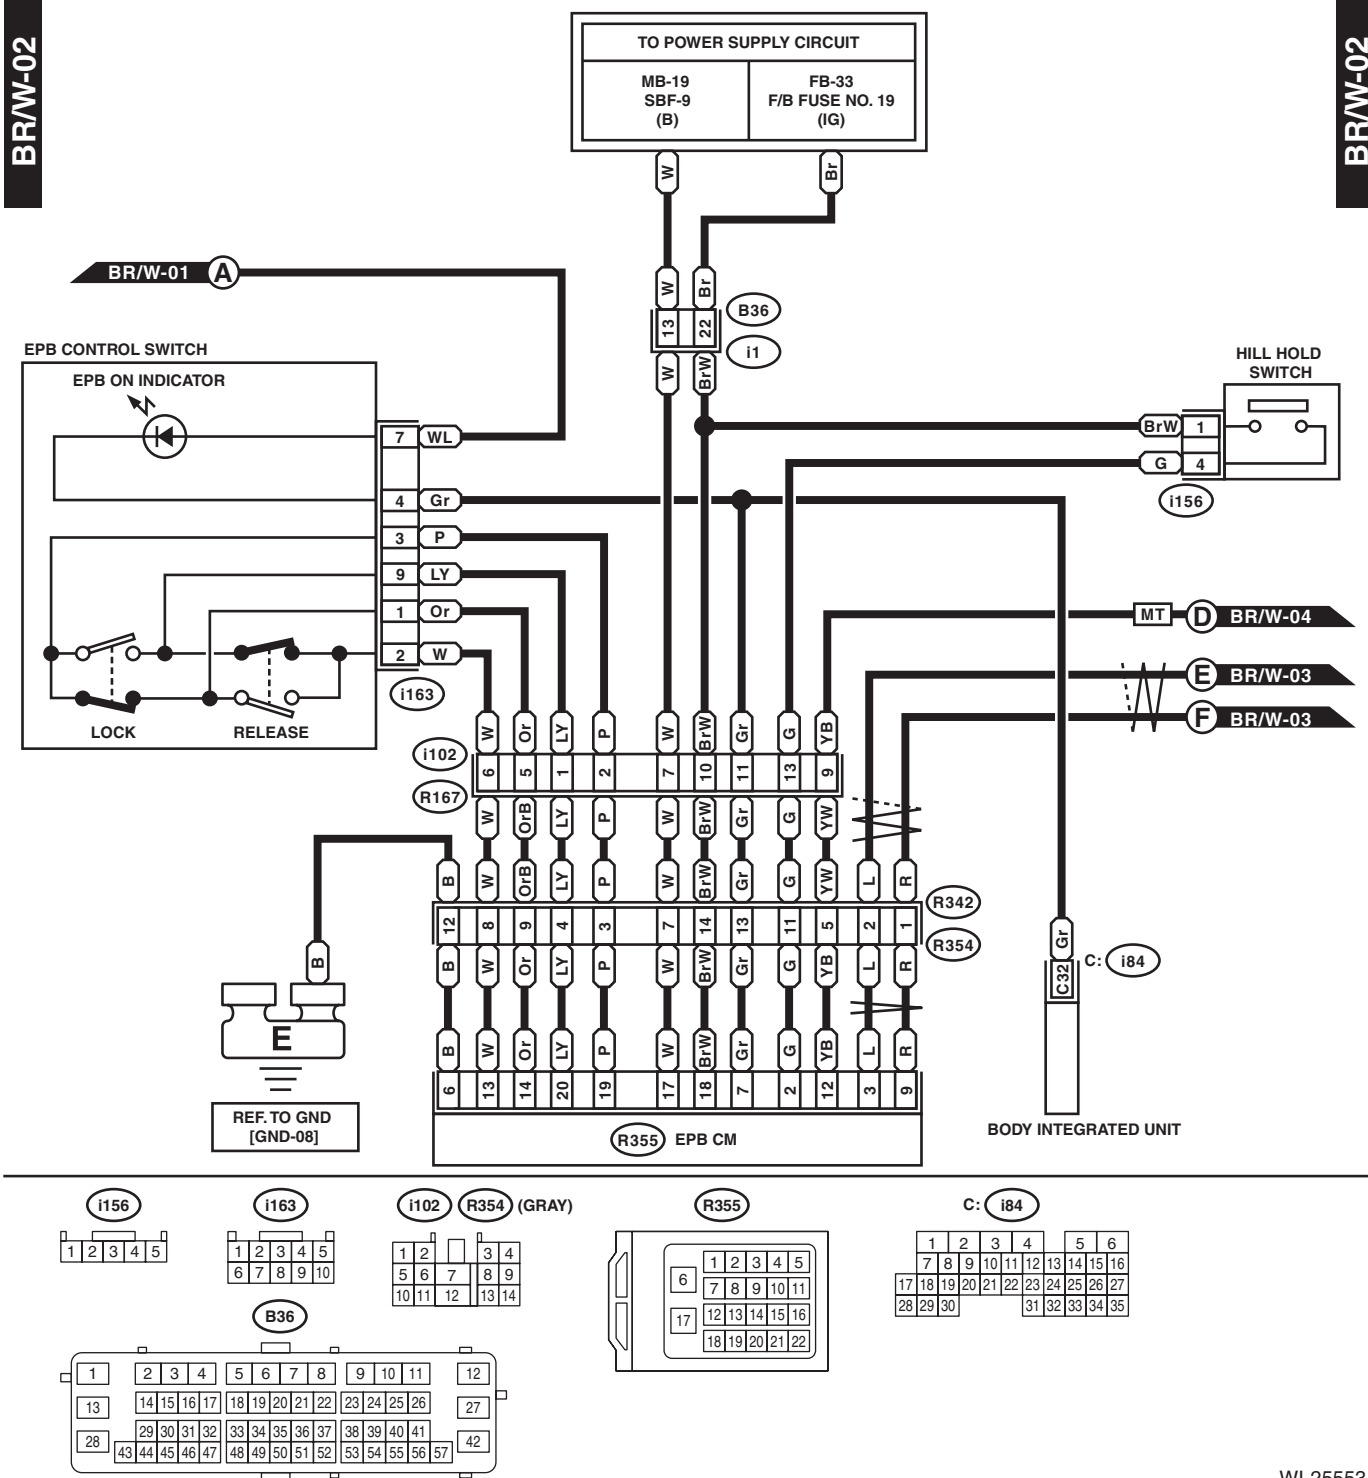

WI-25553




 

Parking Brake / Brake Fluid Level Warning Light System

WIRING SYSTEM

BR/W-03

BR/W-03


*1: TERMINAL No. OPTIONAL ARRANGEMENT

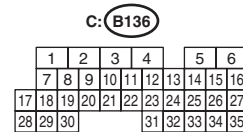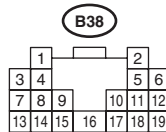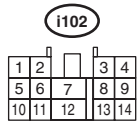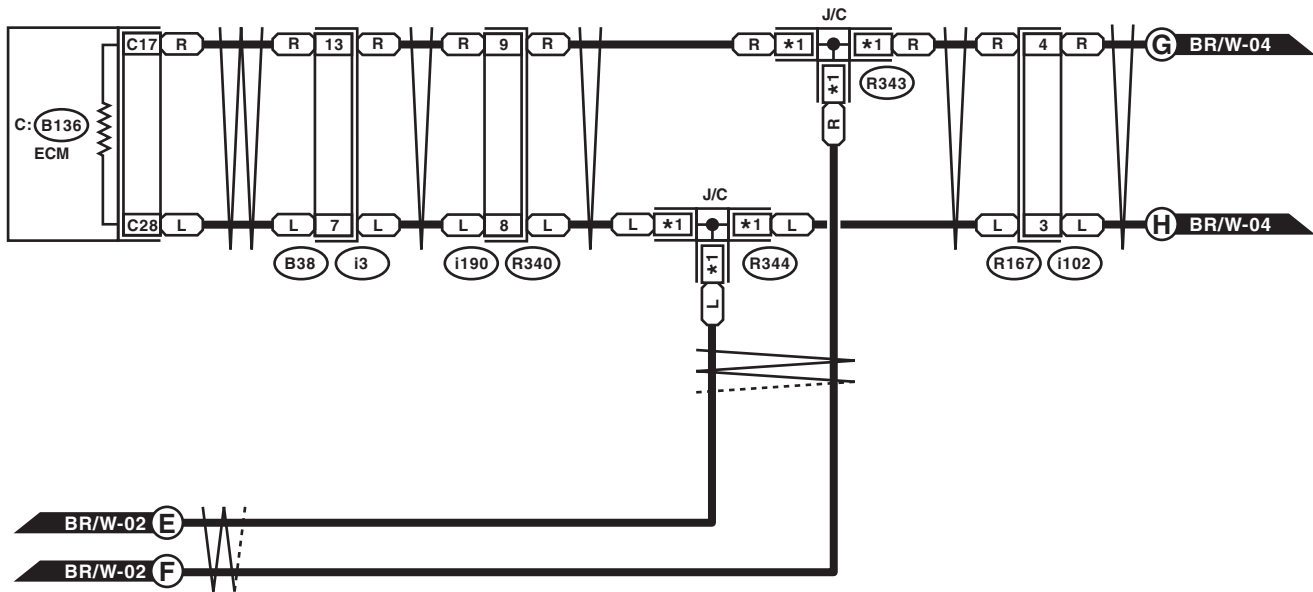

WI-25554

Parking Brake / Brake Fluid Level Warning Light System

WIRING SYSTEM

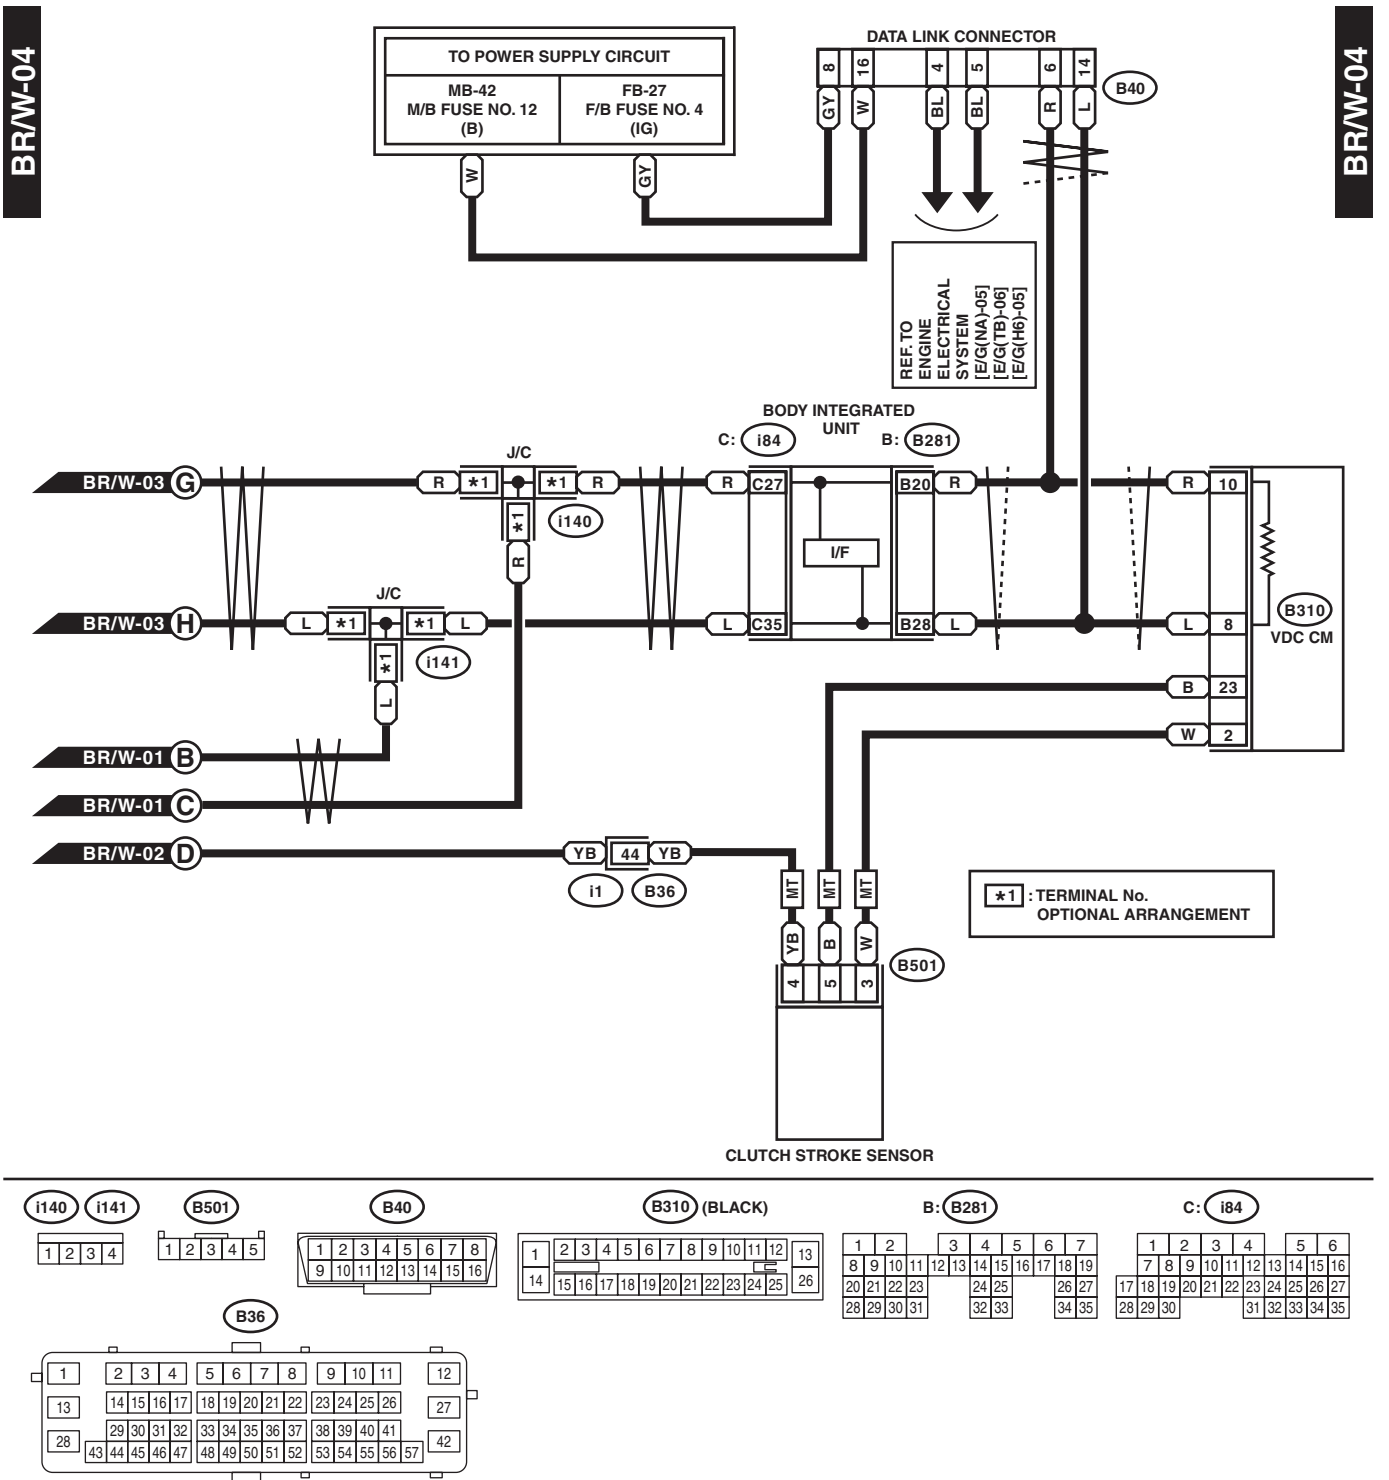


WI-25555

Power Seat System


WIRING SYSTEM

33. Power Seat System

A: WIRING DIAGRAM

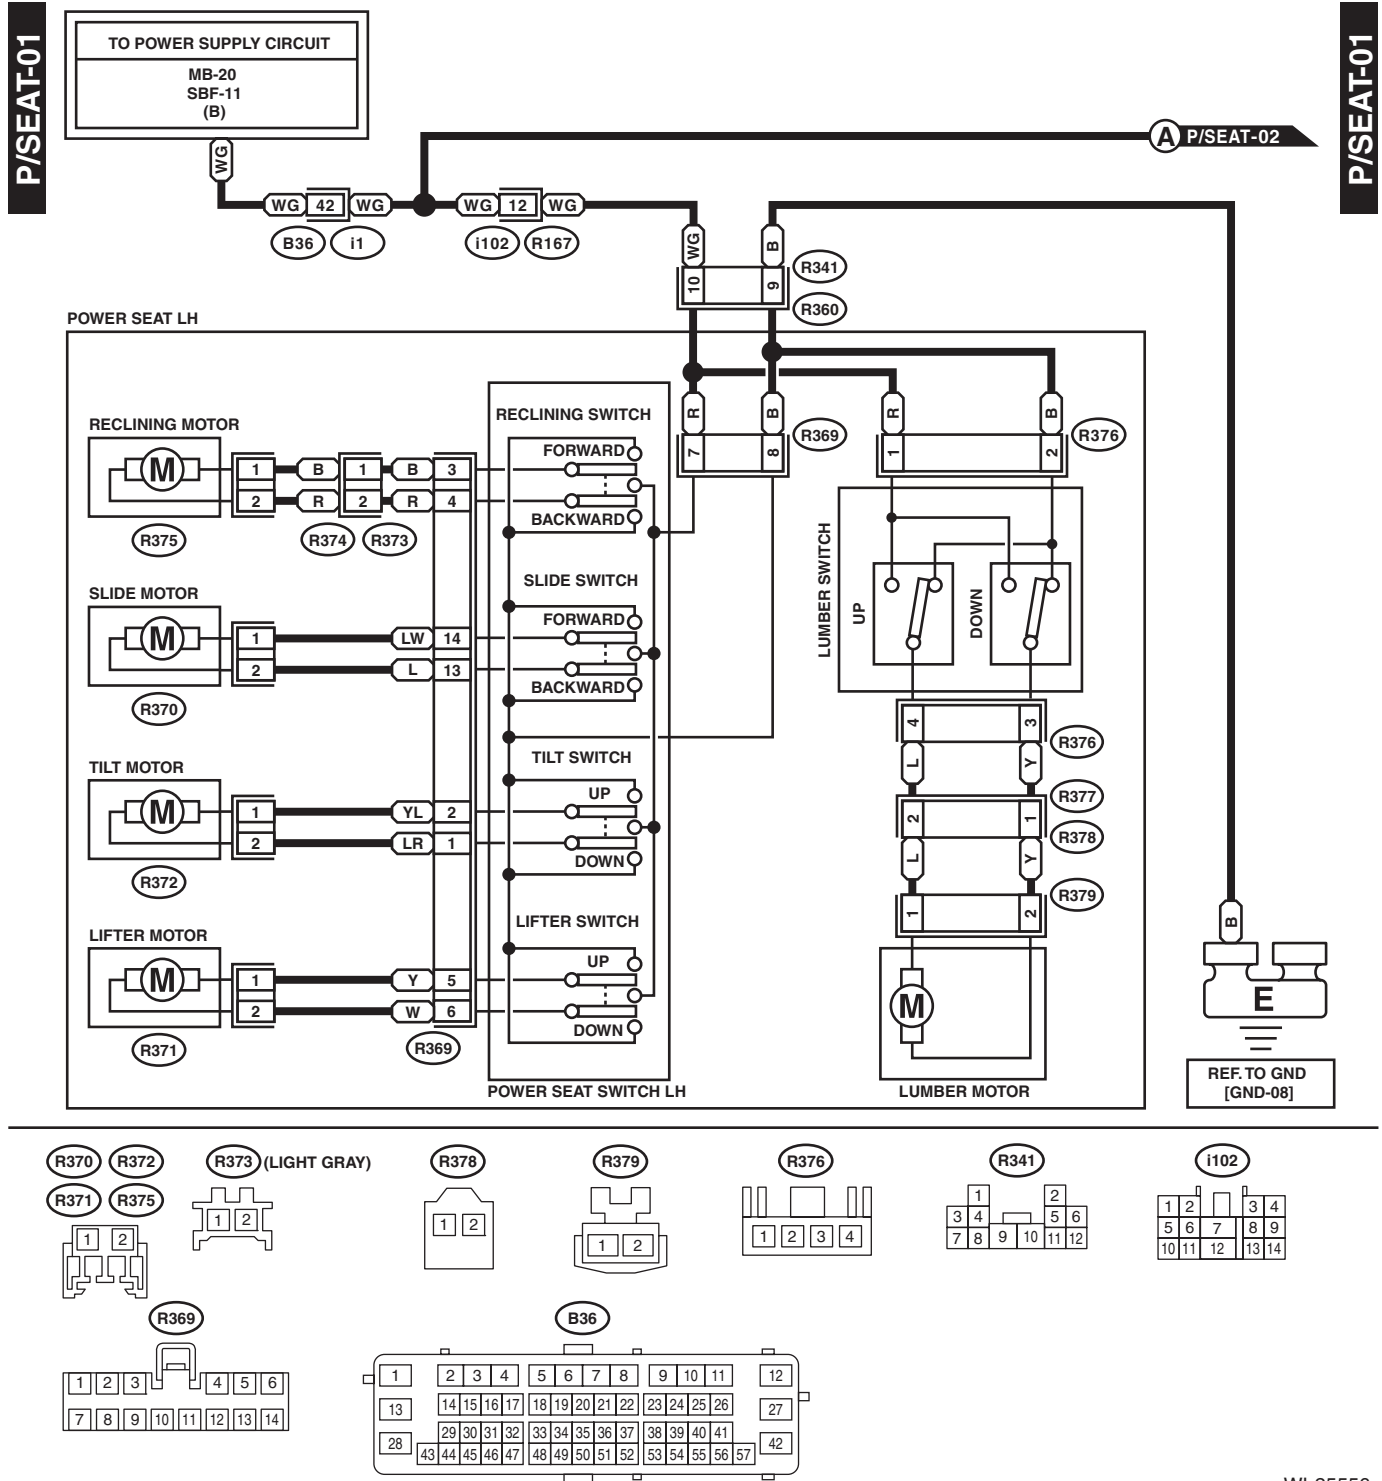

WI-25556

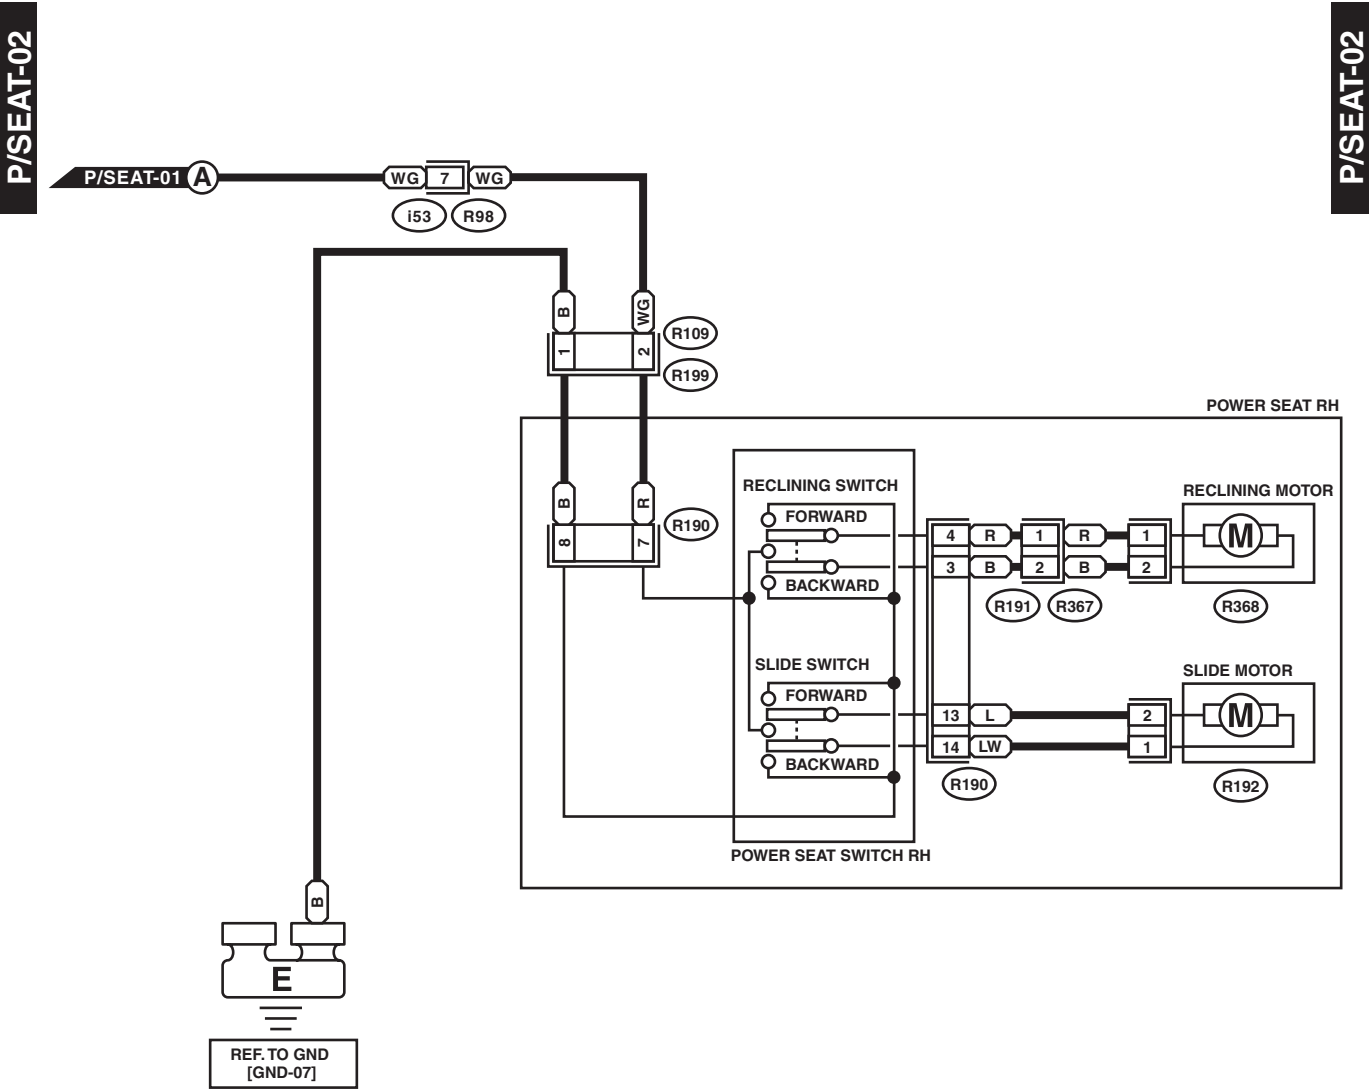


R109 (BLACK)




R191 (LIGHT GRAY)



 
R192 **R368**



i53

 

R190

 


Power Window System

WIRING SYSTEM

34. Power Window System

A: WIRING DIAGRAM








1. WITHOUT DRIVER'S SEAT AUTO UP FUNCTION

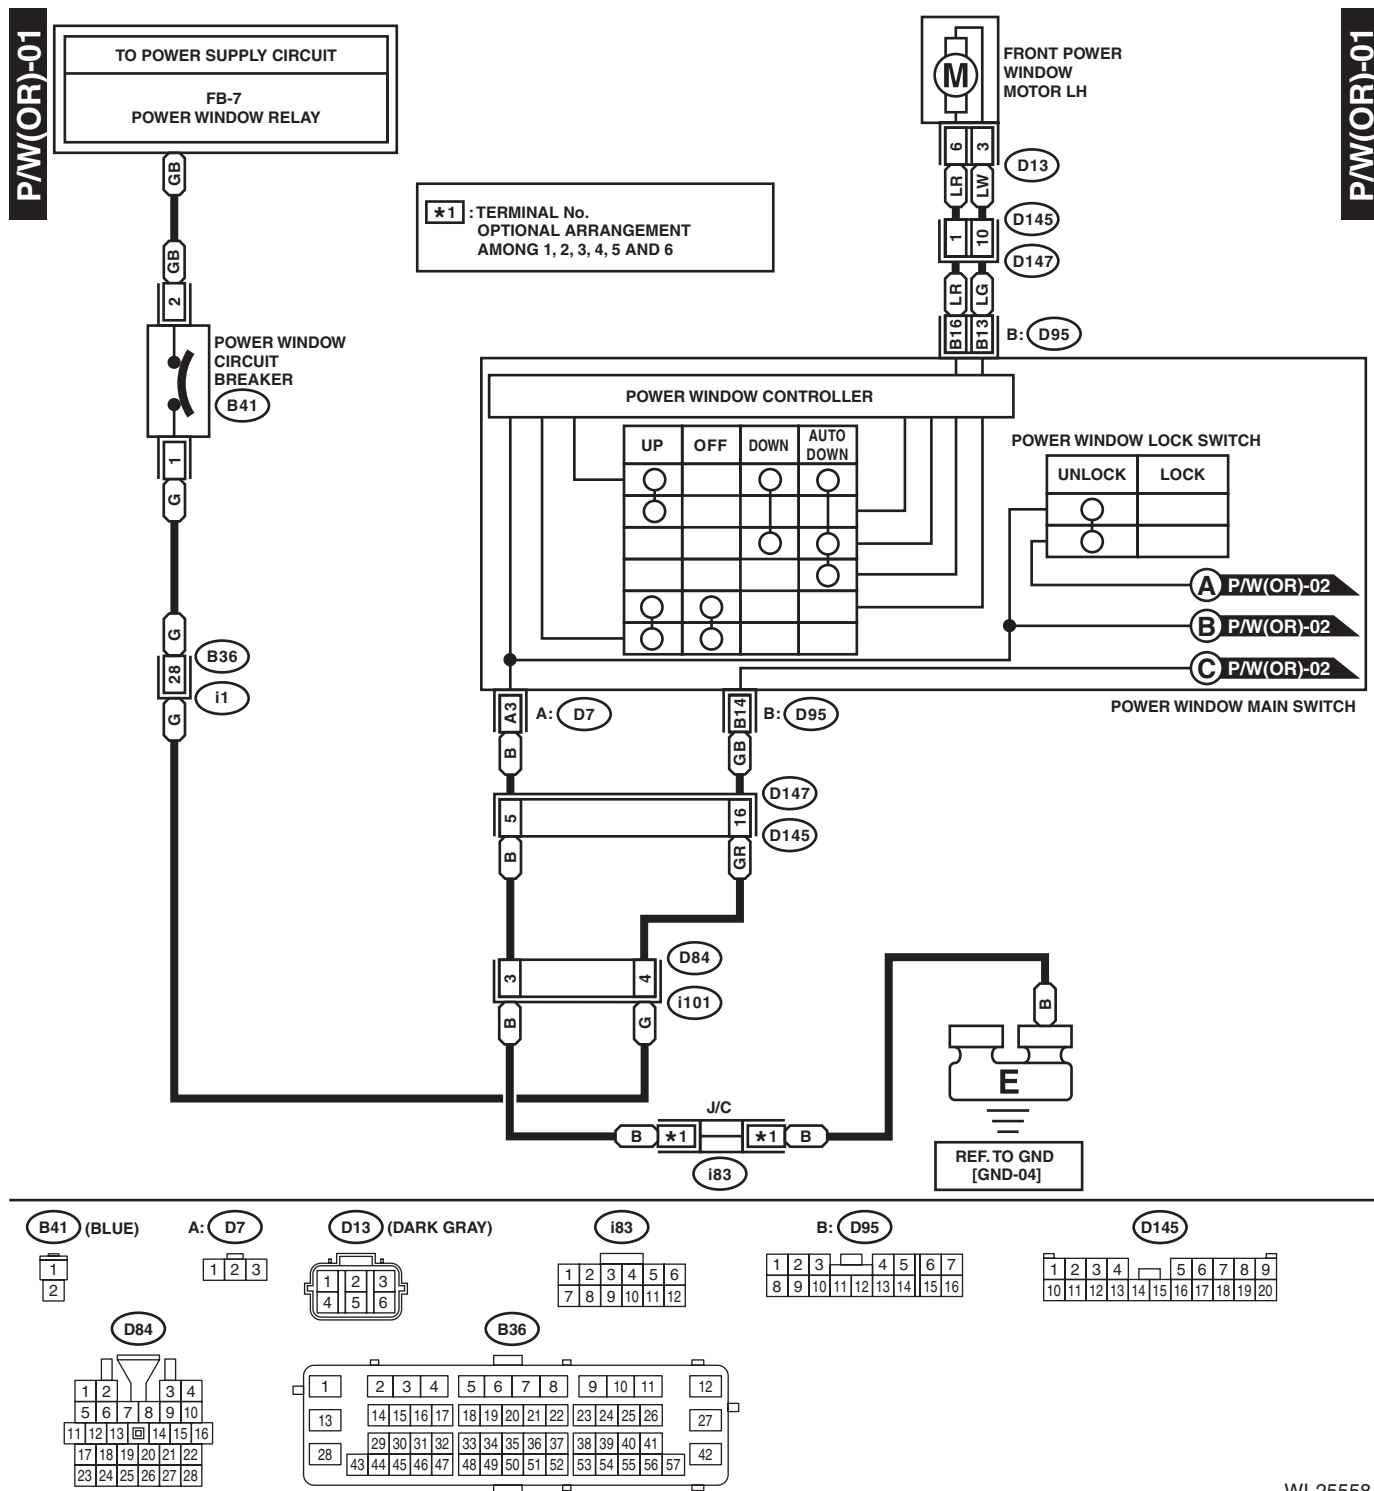

WI-25558

Power Window System

    
WIRING SYSTEM

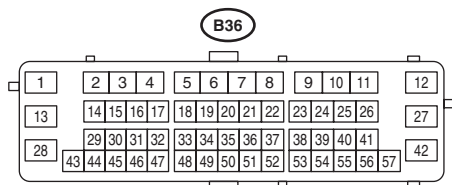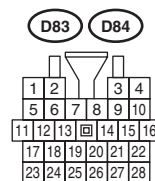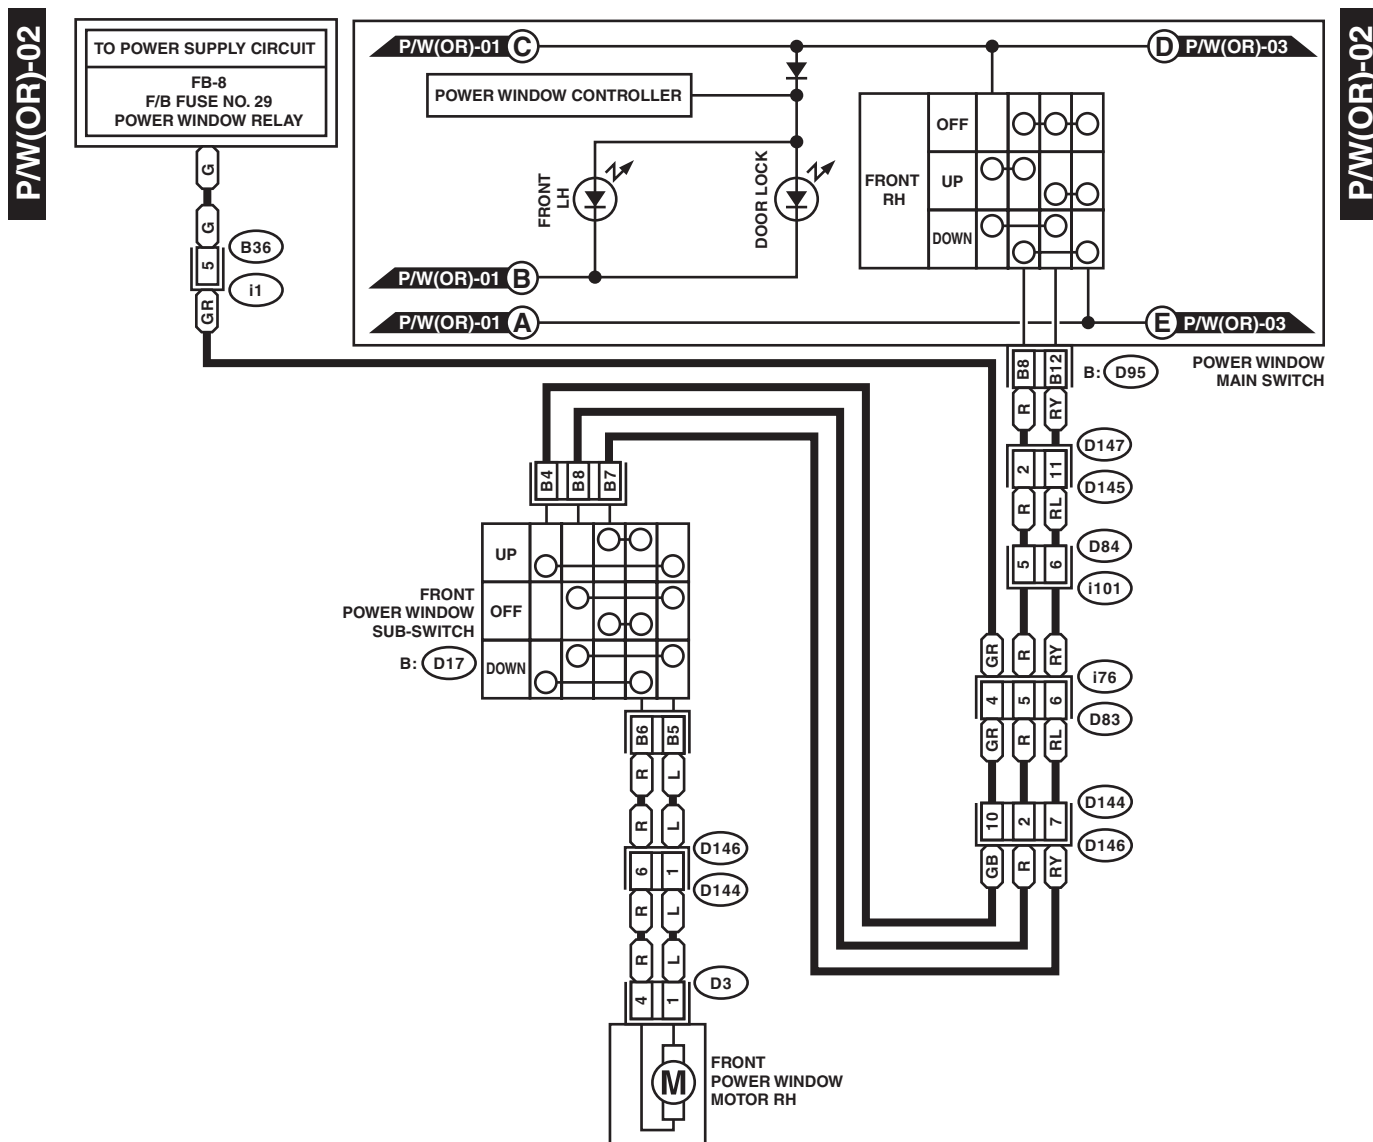

WI-25559

Power Window System


WIRING SYSTEM

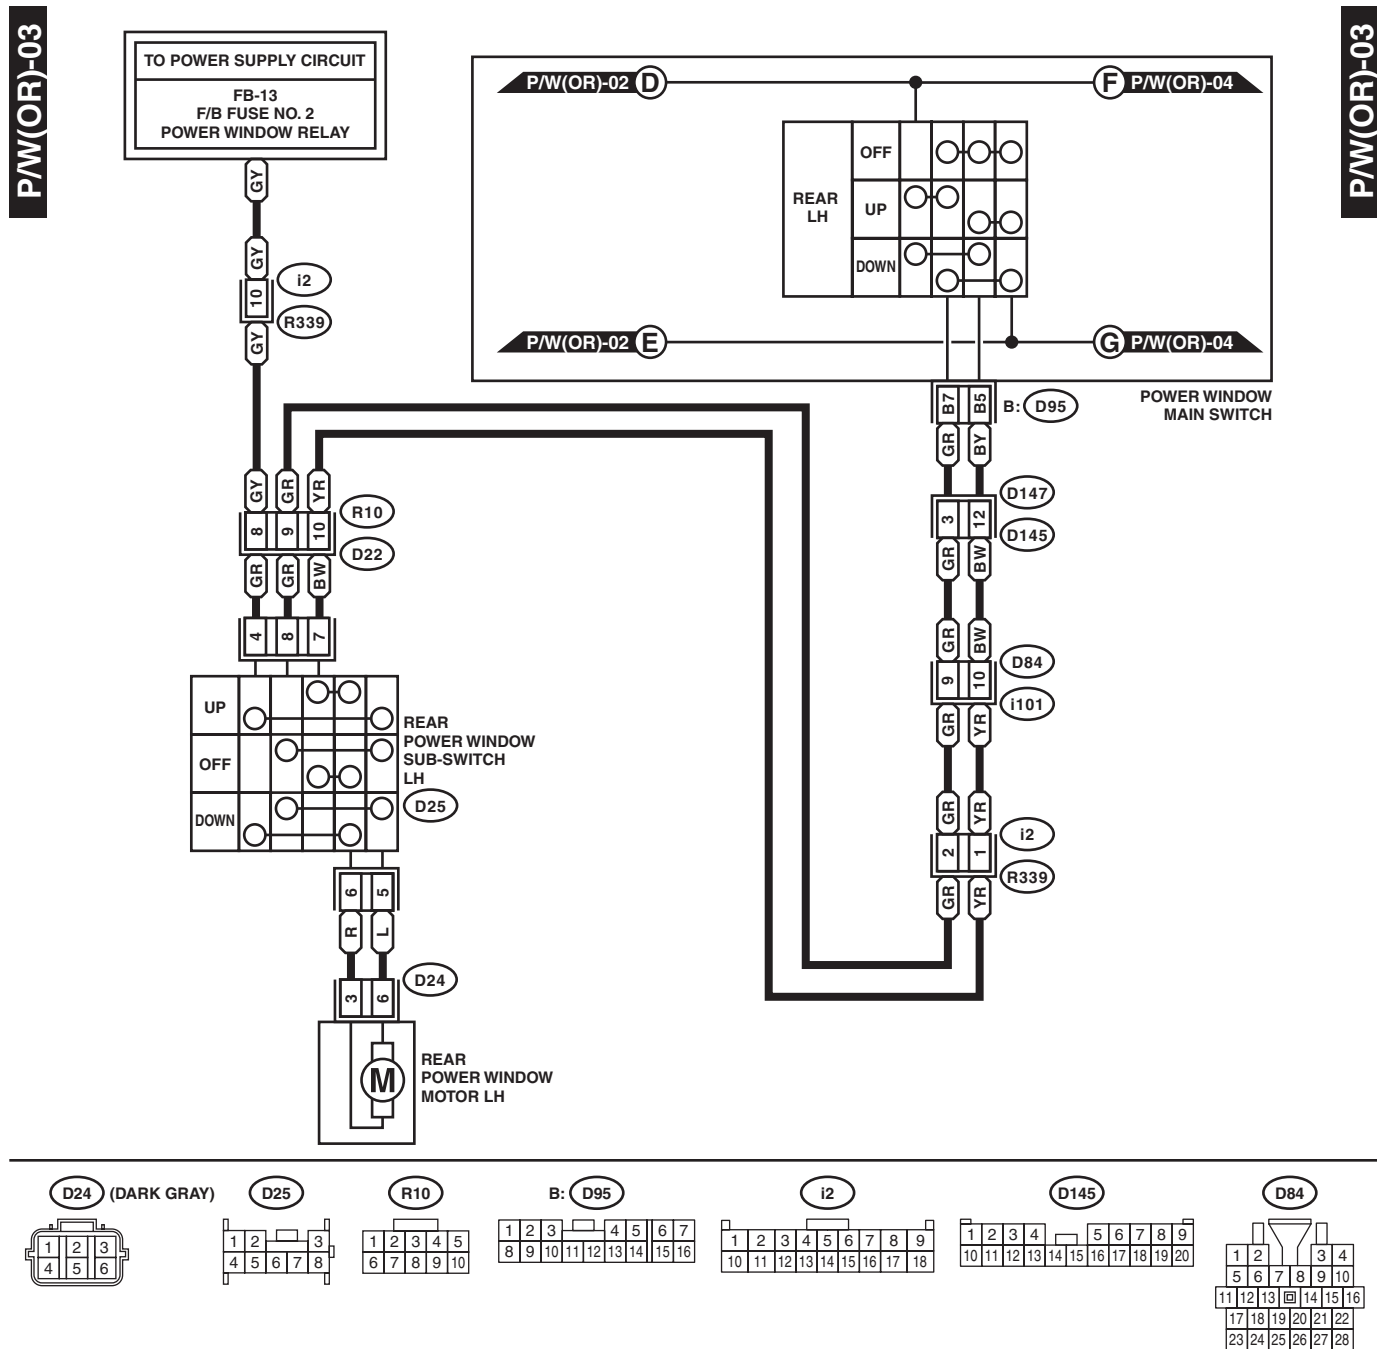

WI-25560

Power Window System

WIRING SYSTEM

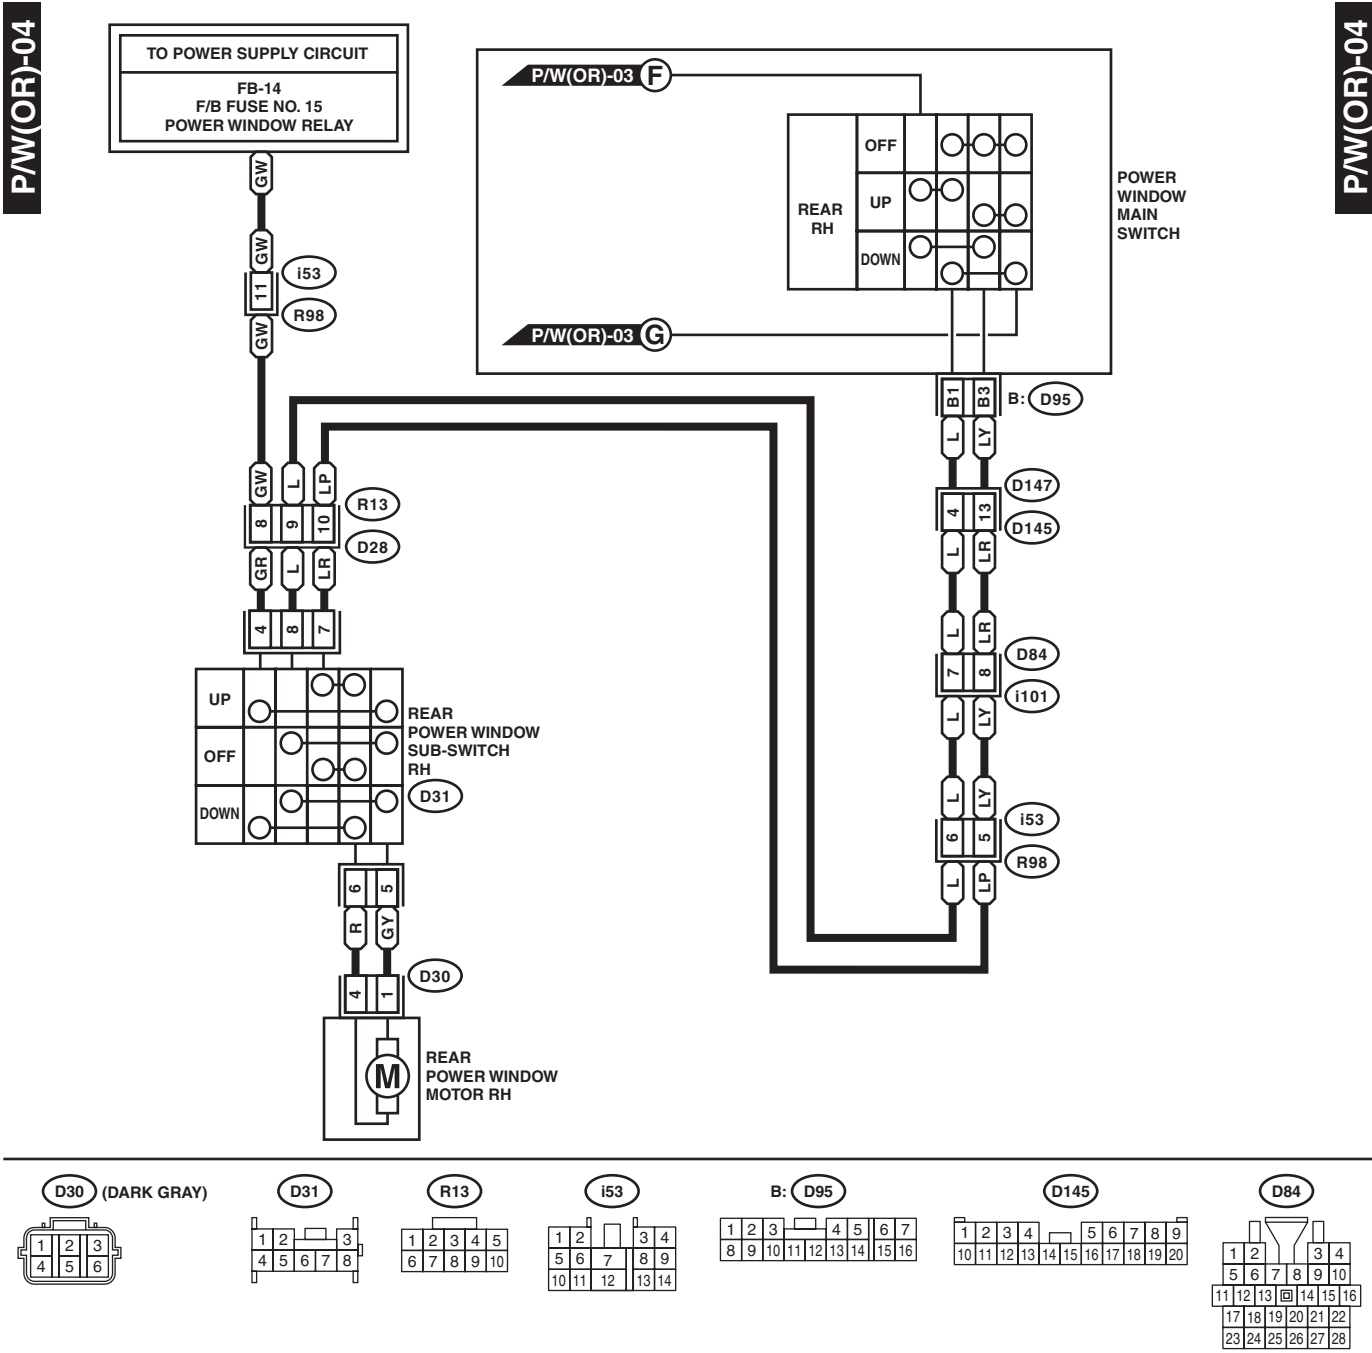


WI-25561

Power Window System

WIRING SYSTEM


2. WITH DRIVER'S SEAT AUTO UP FUNCTION

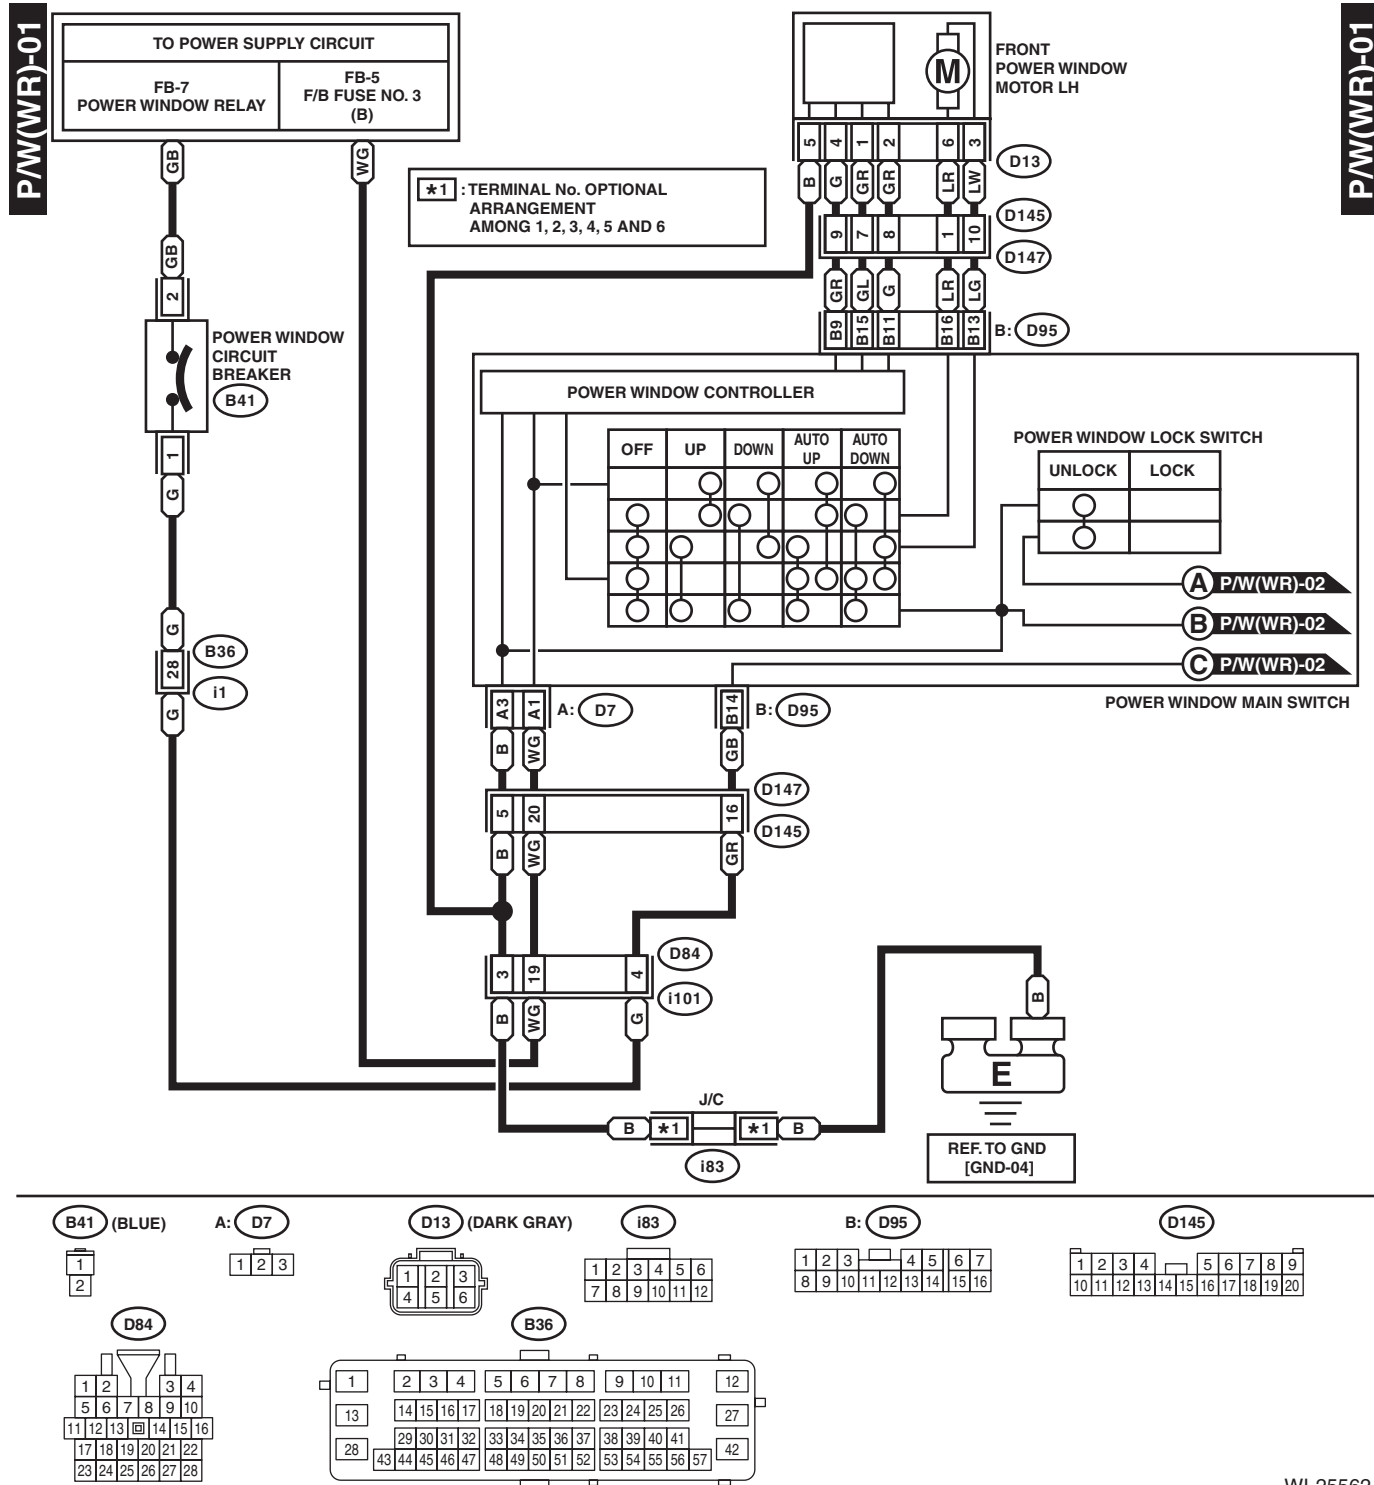

WI-25562

Power Window System


WIRING SYSTEM

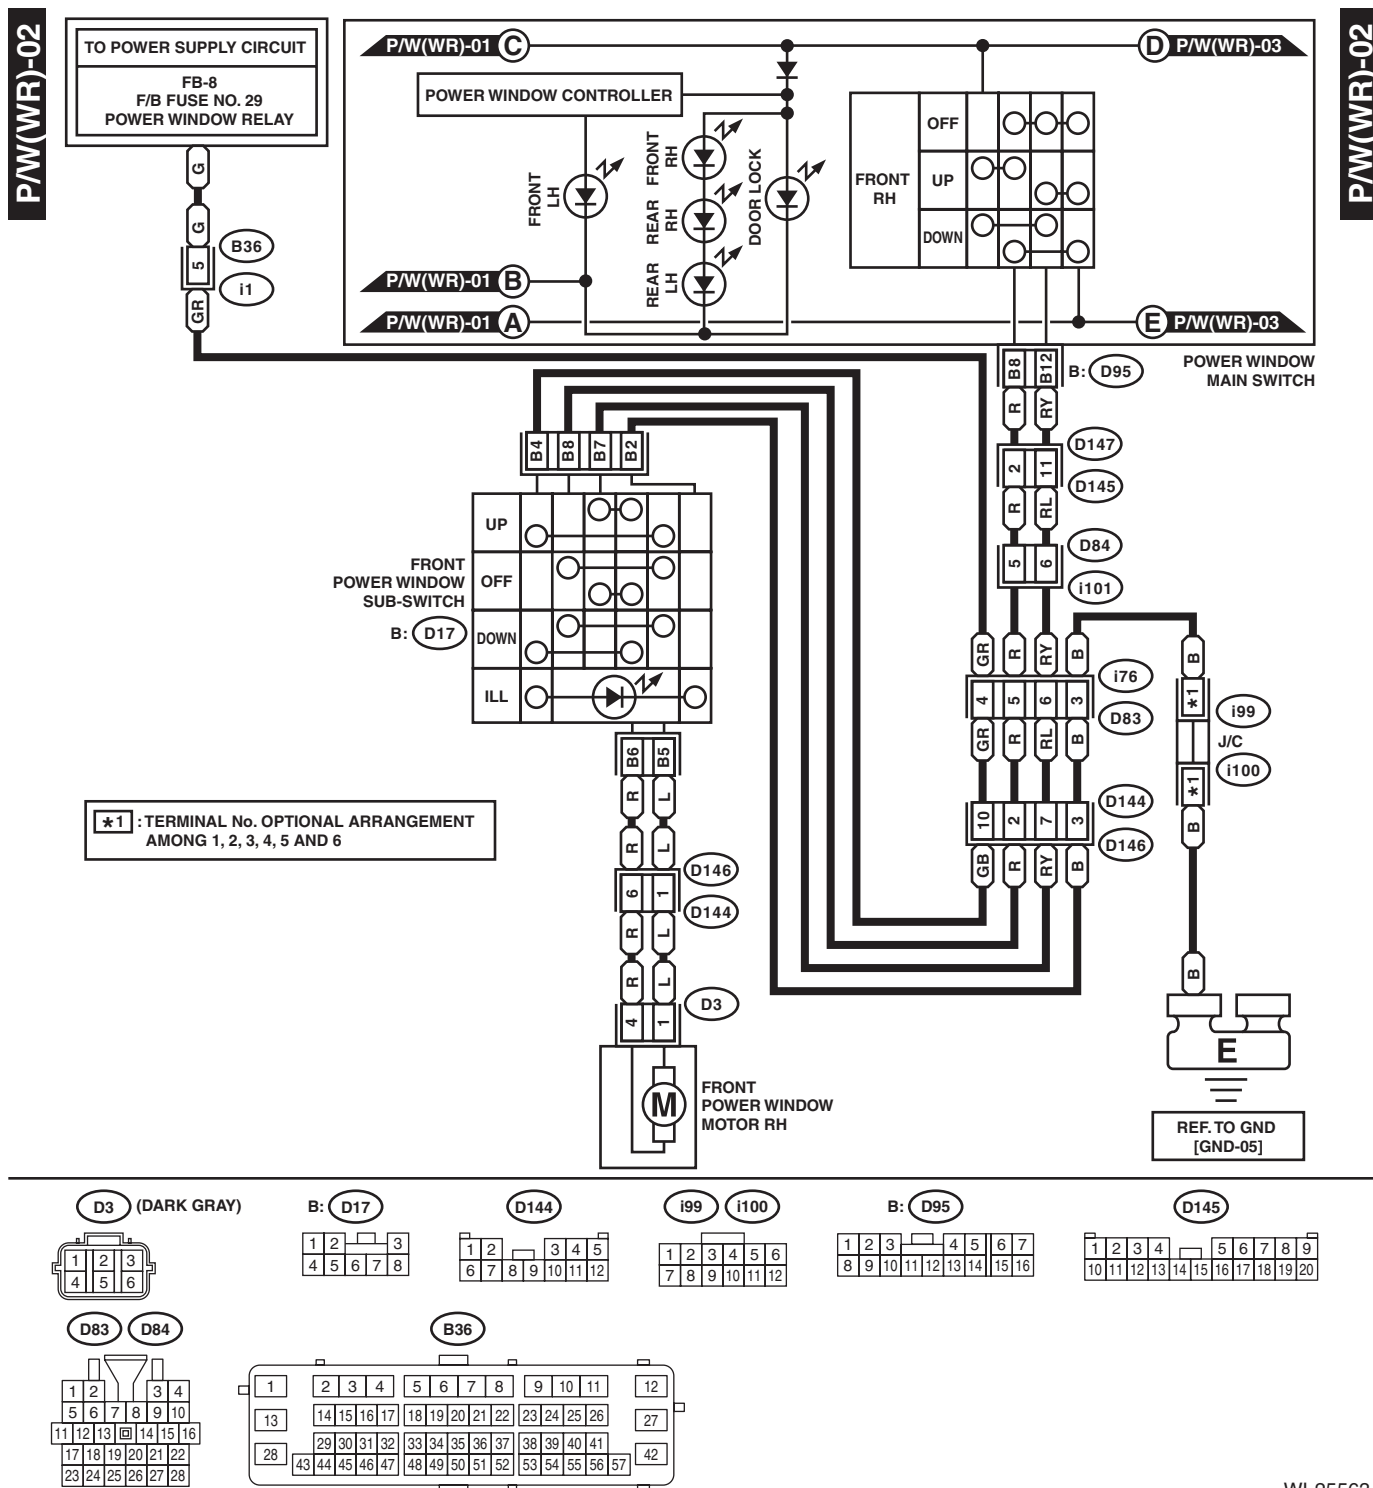


WI-25563

Power Window System

WIRING SYSTEM

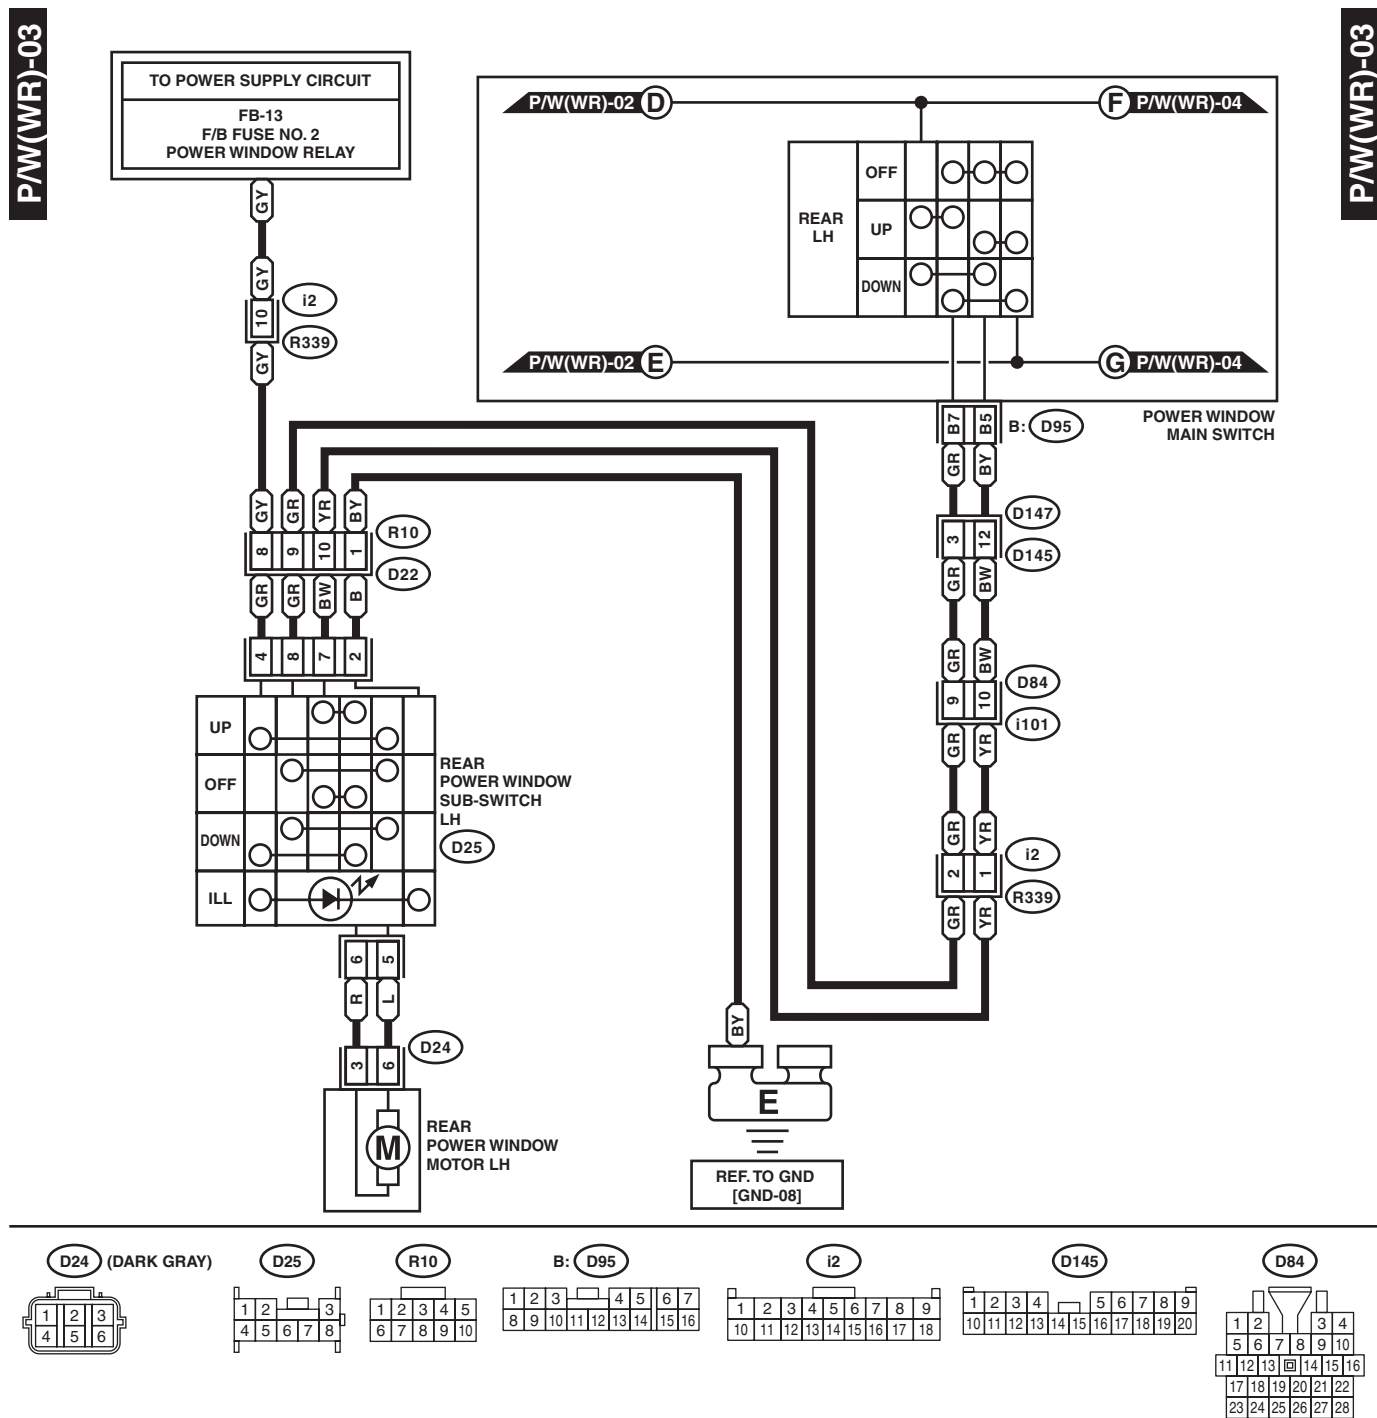

WI-25564

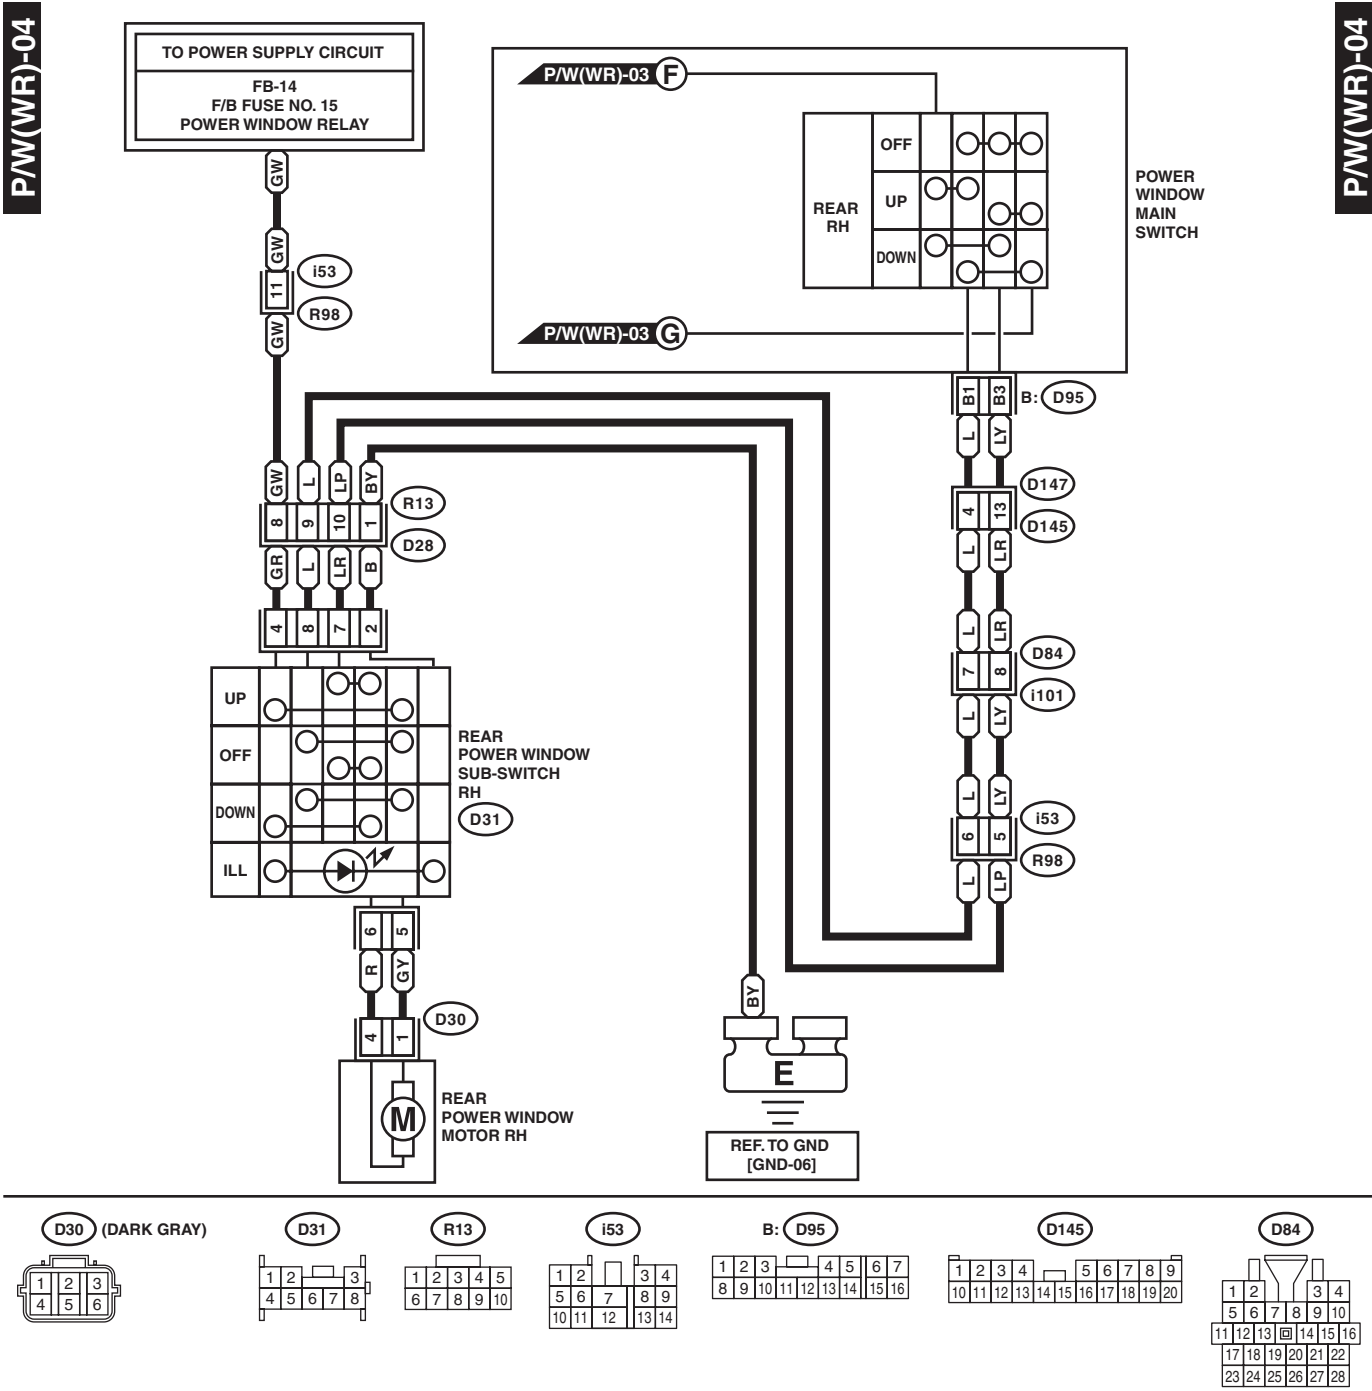

WI-25565


Radiator Fan System

WIRING SYSTEM

35.Radiator Fan System

A: WIRING DIAGRAM

1. 2.5 L NON-TURBO MODEL

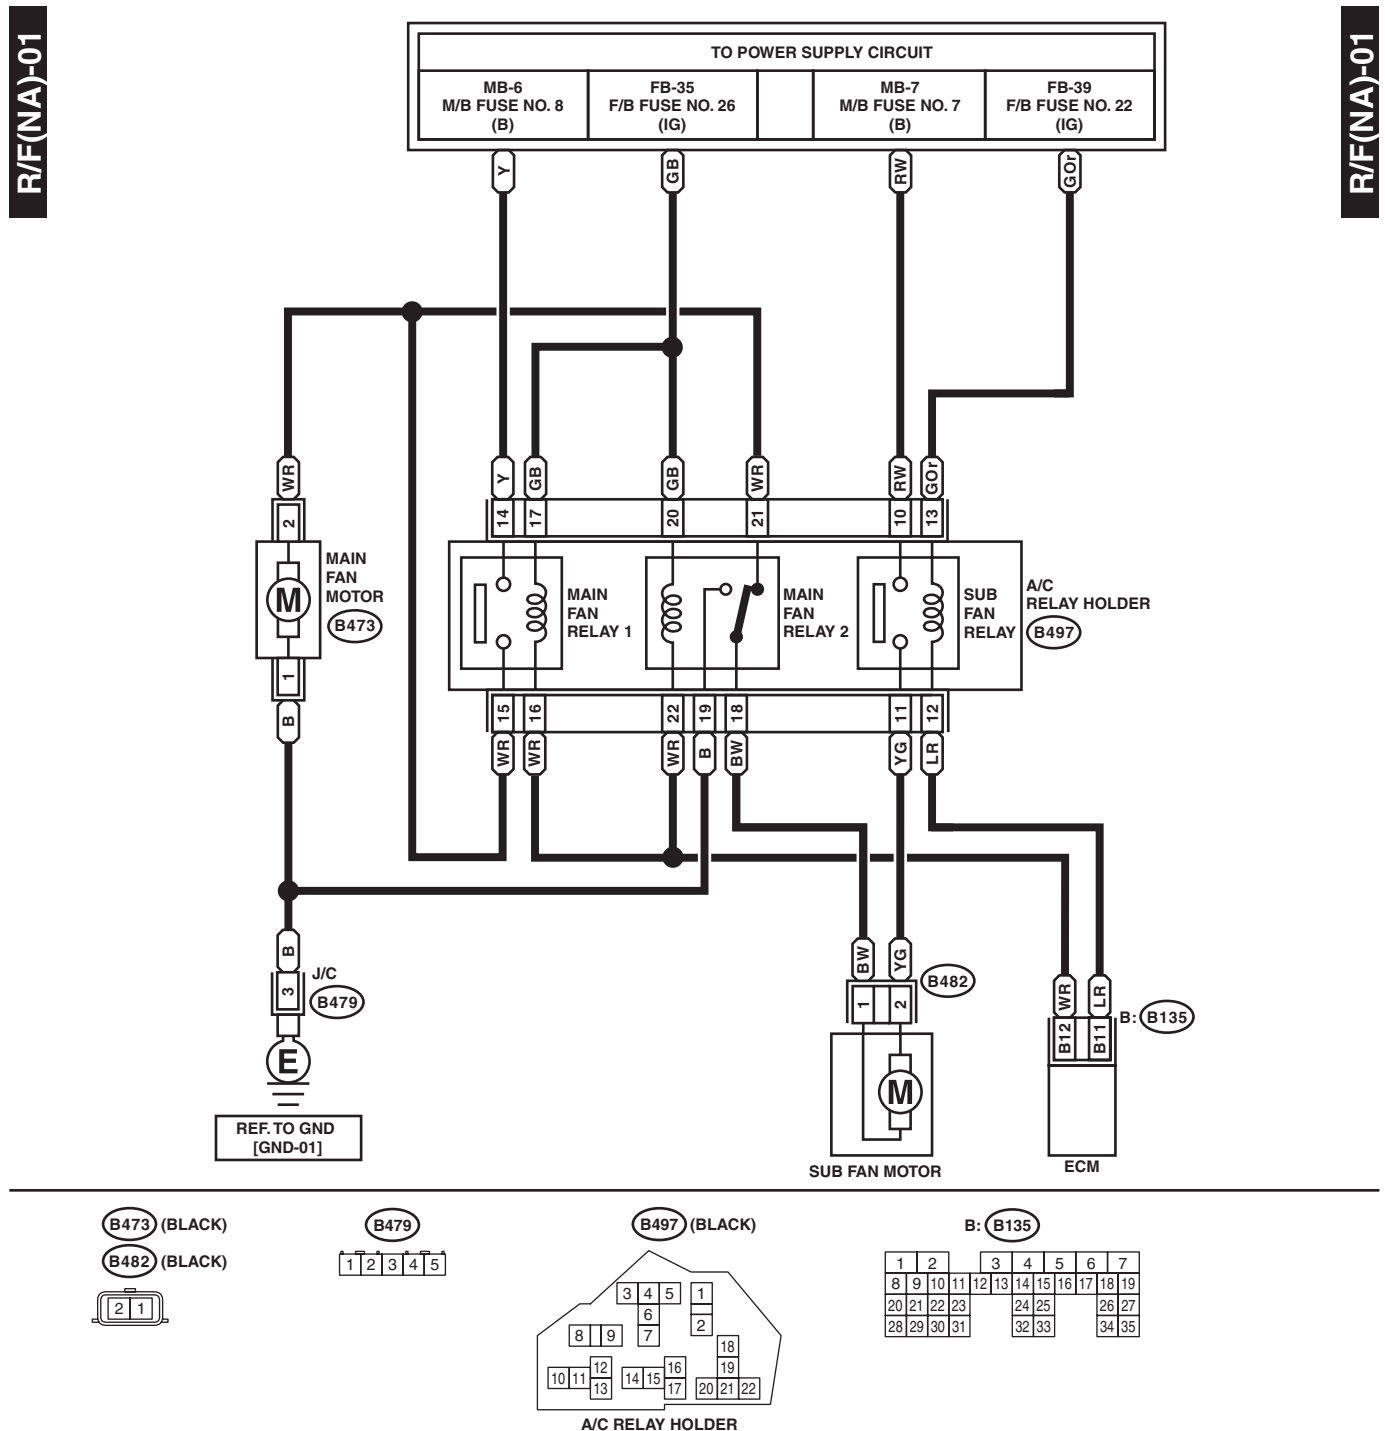


WI-25566

2. 2.5 L TURBO MODEL

R/F(TB)-01

R/F(TB)-01

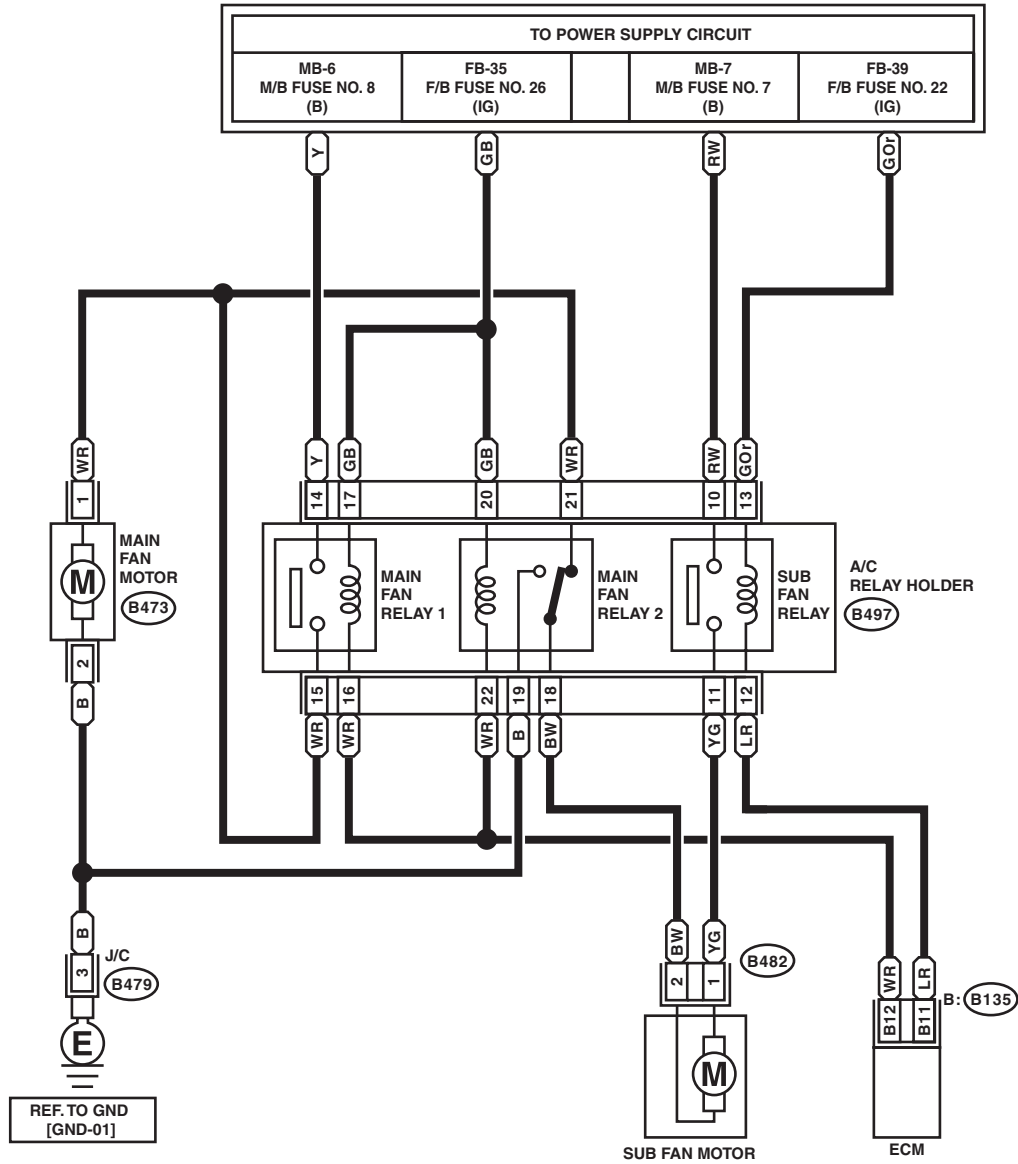


(B473) (DARK GRAY)


(B482) (DARK GRAY)



 (B479)




(B497) (BLACK)

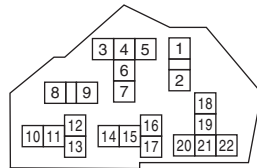

A/C RELAY HOLDER

 B: (B135)








WI-25567

WIRING SYSTEM

3. 3.6 L MODEL

R/F(H6)-01

   R/F(H6)-01

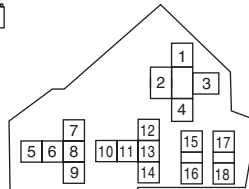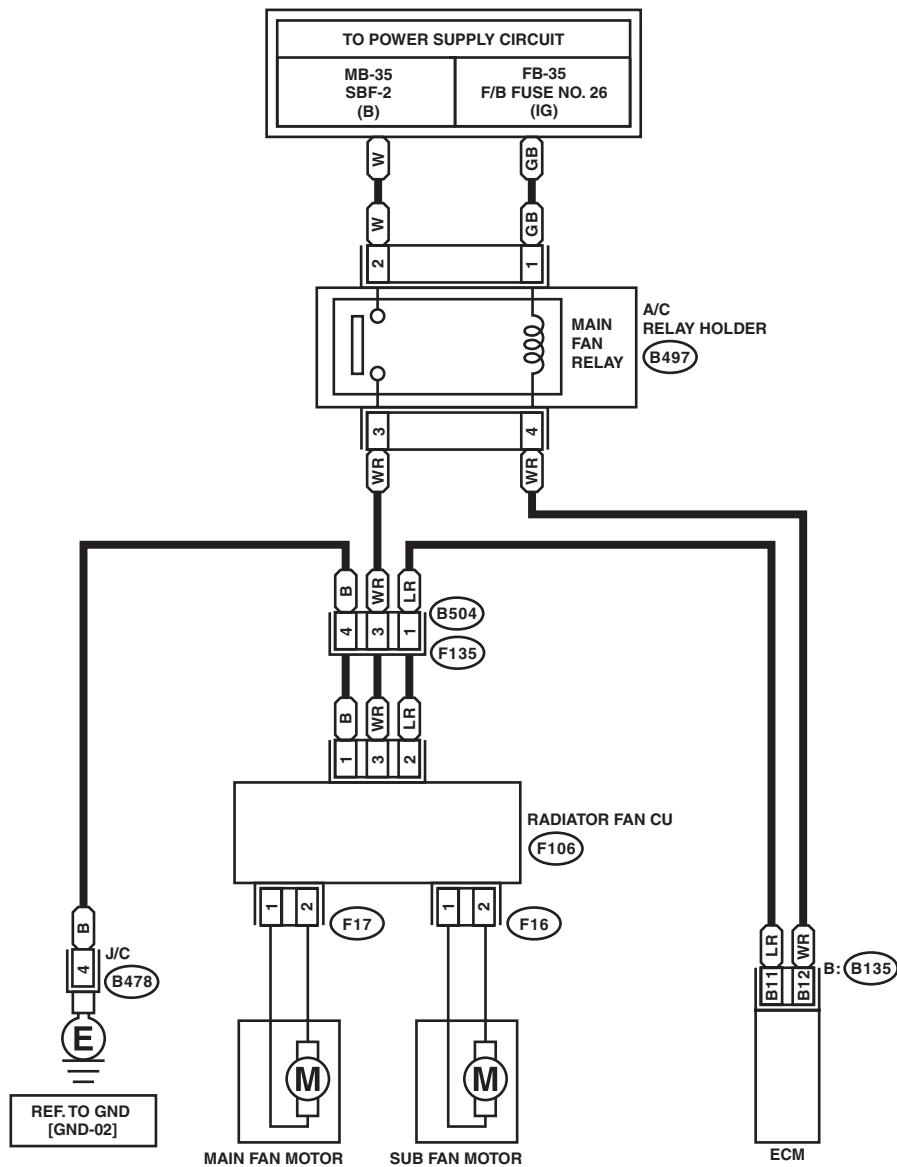




A/C RELAY HOLDER

36.Rear Accessory Power Supply Socket System


A: WIRING DIAGRAM

RAPS-01

  RAPS-01

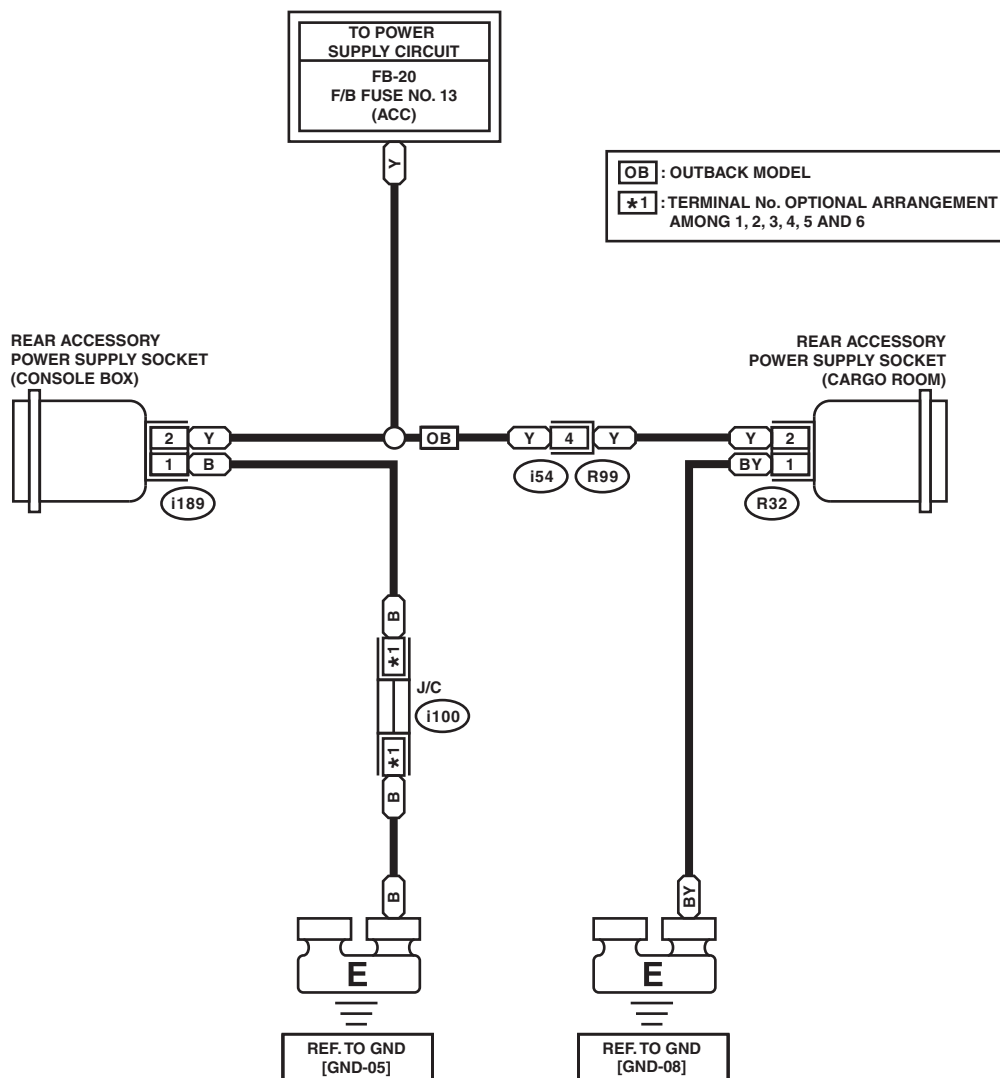


A: WIRING DIAGRAM

 

38.Rearview Camera System

A: WIRING DIAGRAM


1. SEDAN MODEL

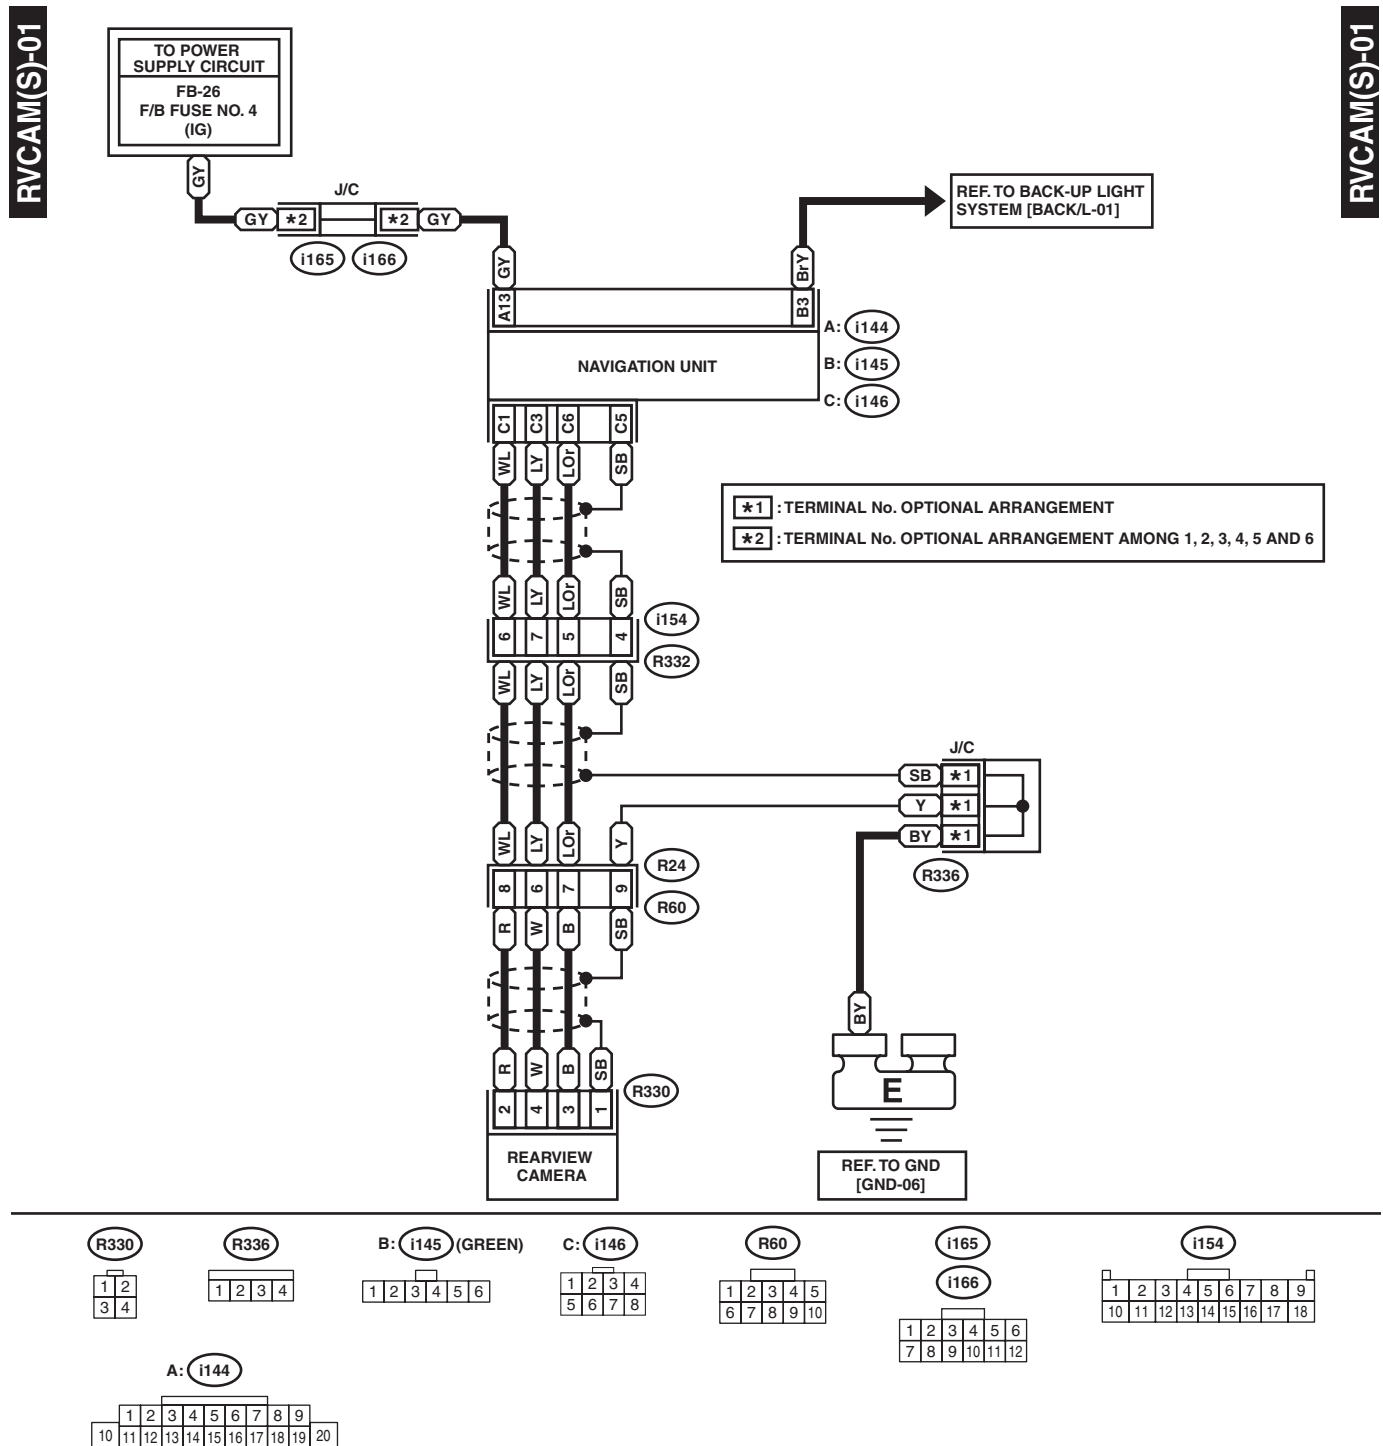

Rearview Camera System

WIRING SYSTEM

2. OUTBACK MODEL

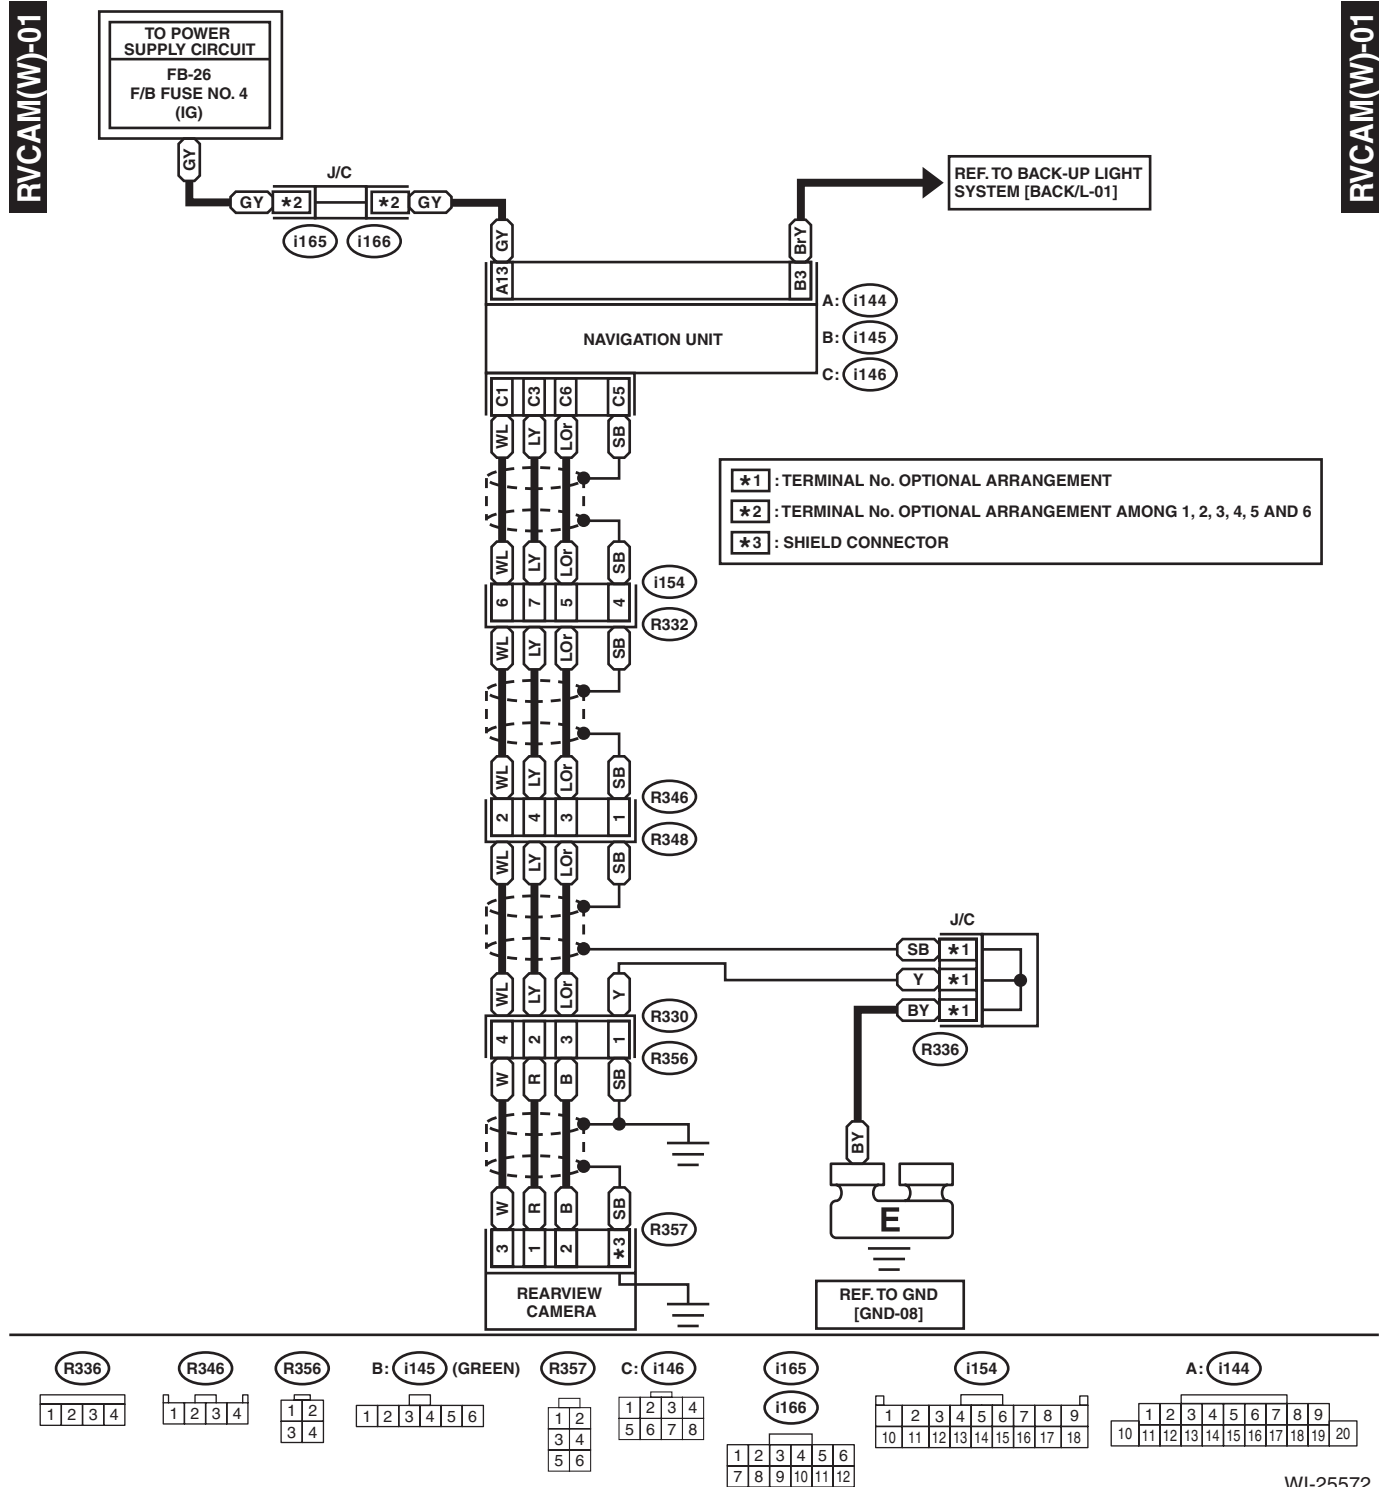



WI-25572

39. Rearview Mirror System

A: WIRING DIAGRAM

RVM-01

RVM-01

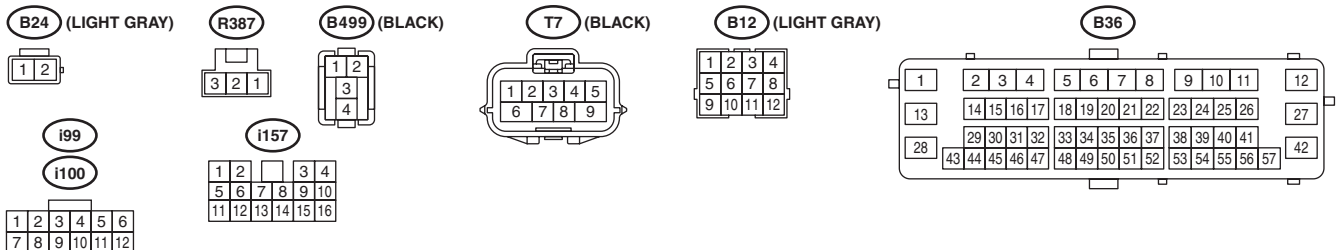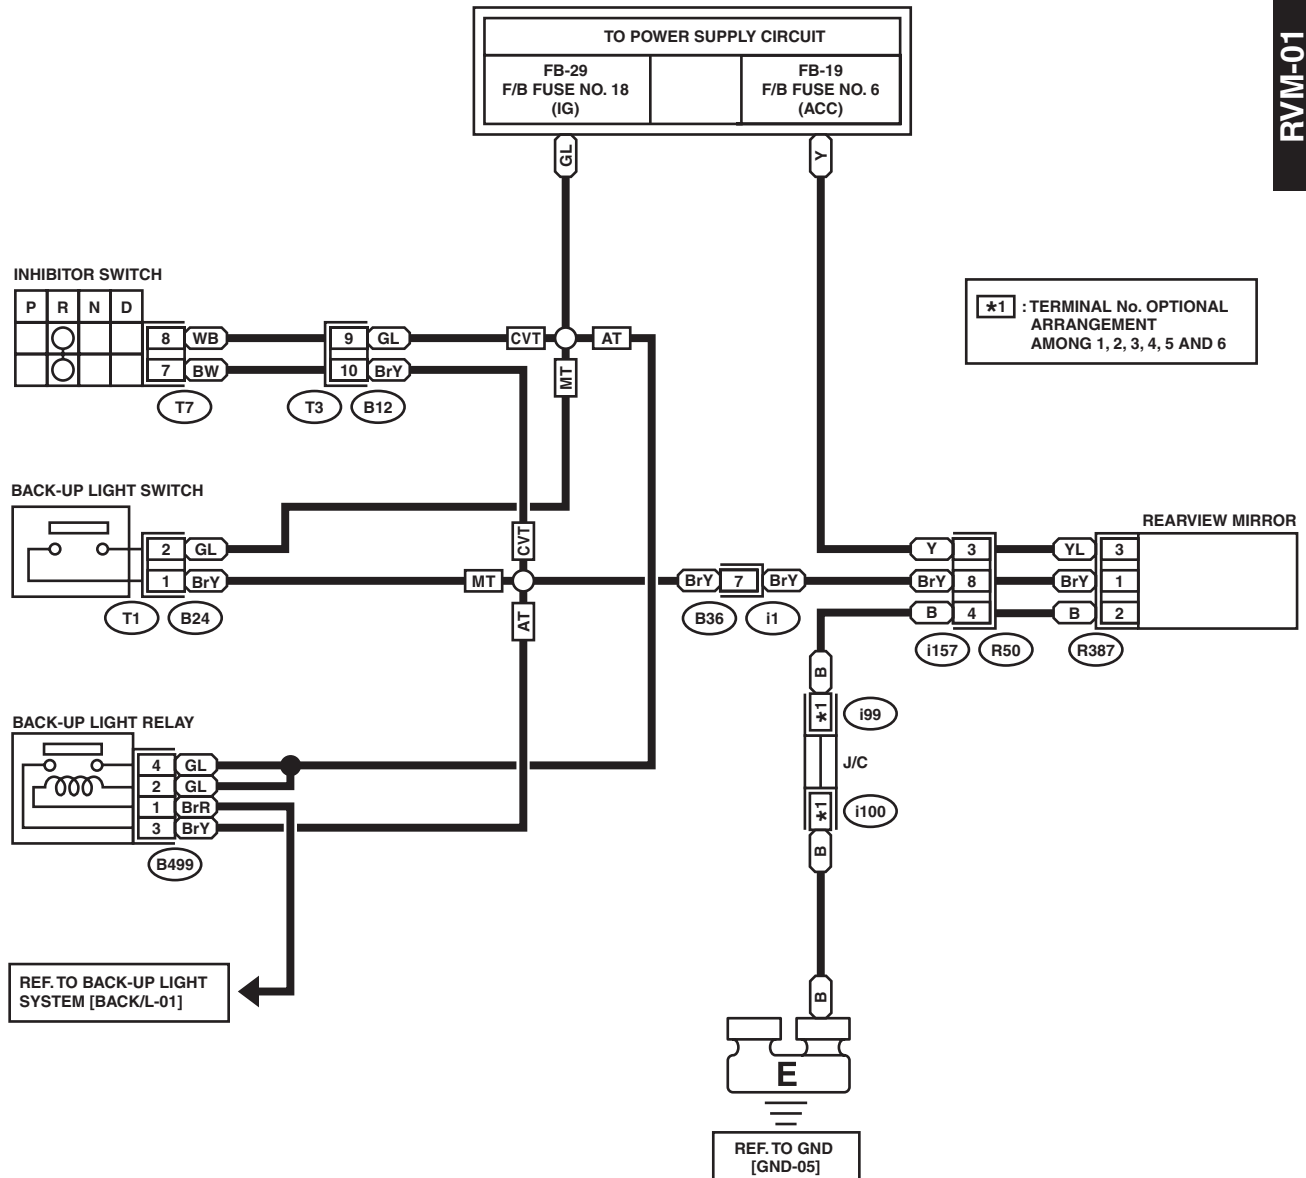


WI-25478

Rear Wiper and Washer System

WIRING SYSTEM


40.Rear Wiper and Washer System

A: WIRING DIAGRAM

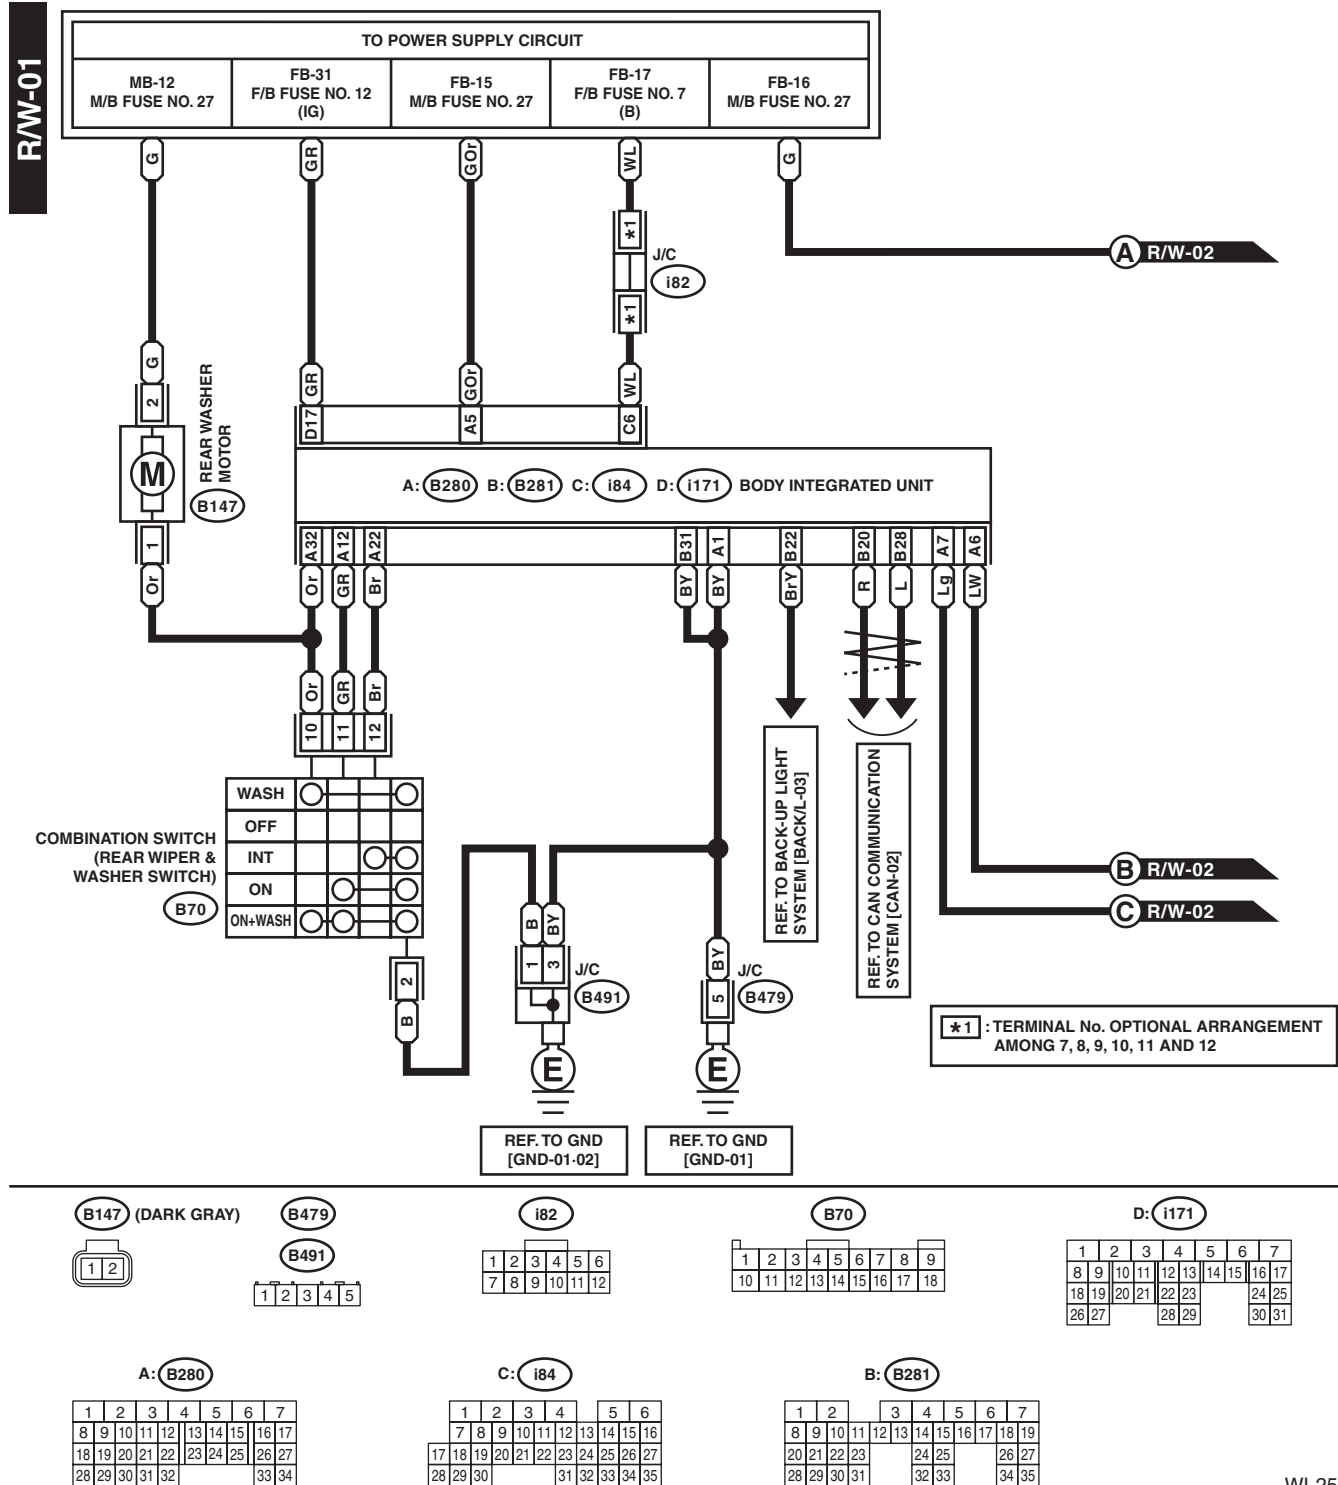

Rear Wiper and Washer System


WIRING SYSTEM

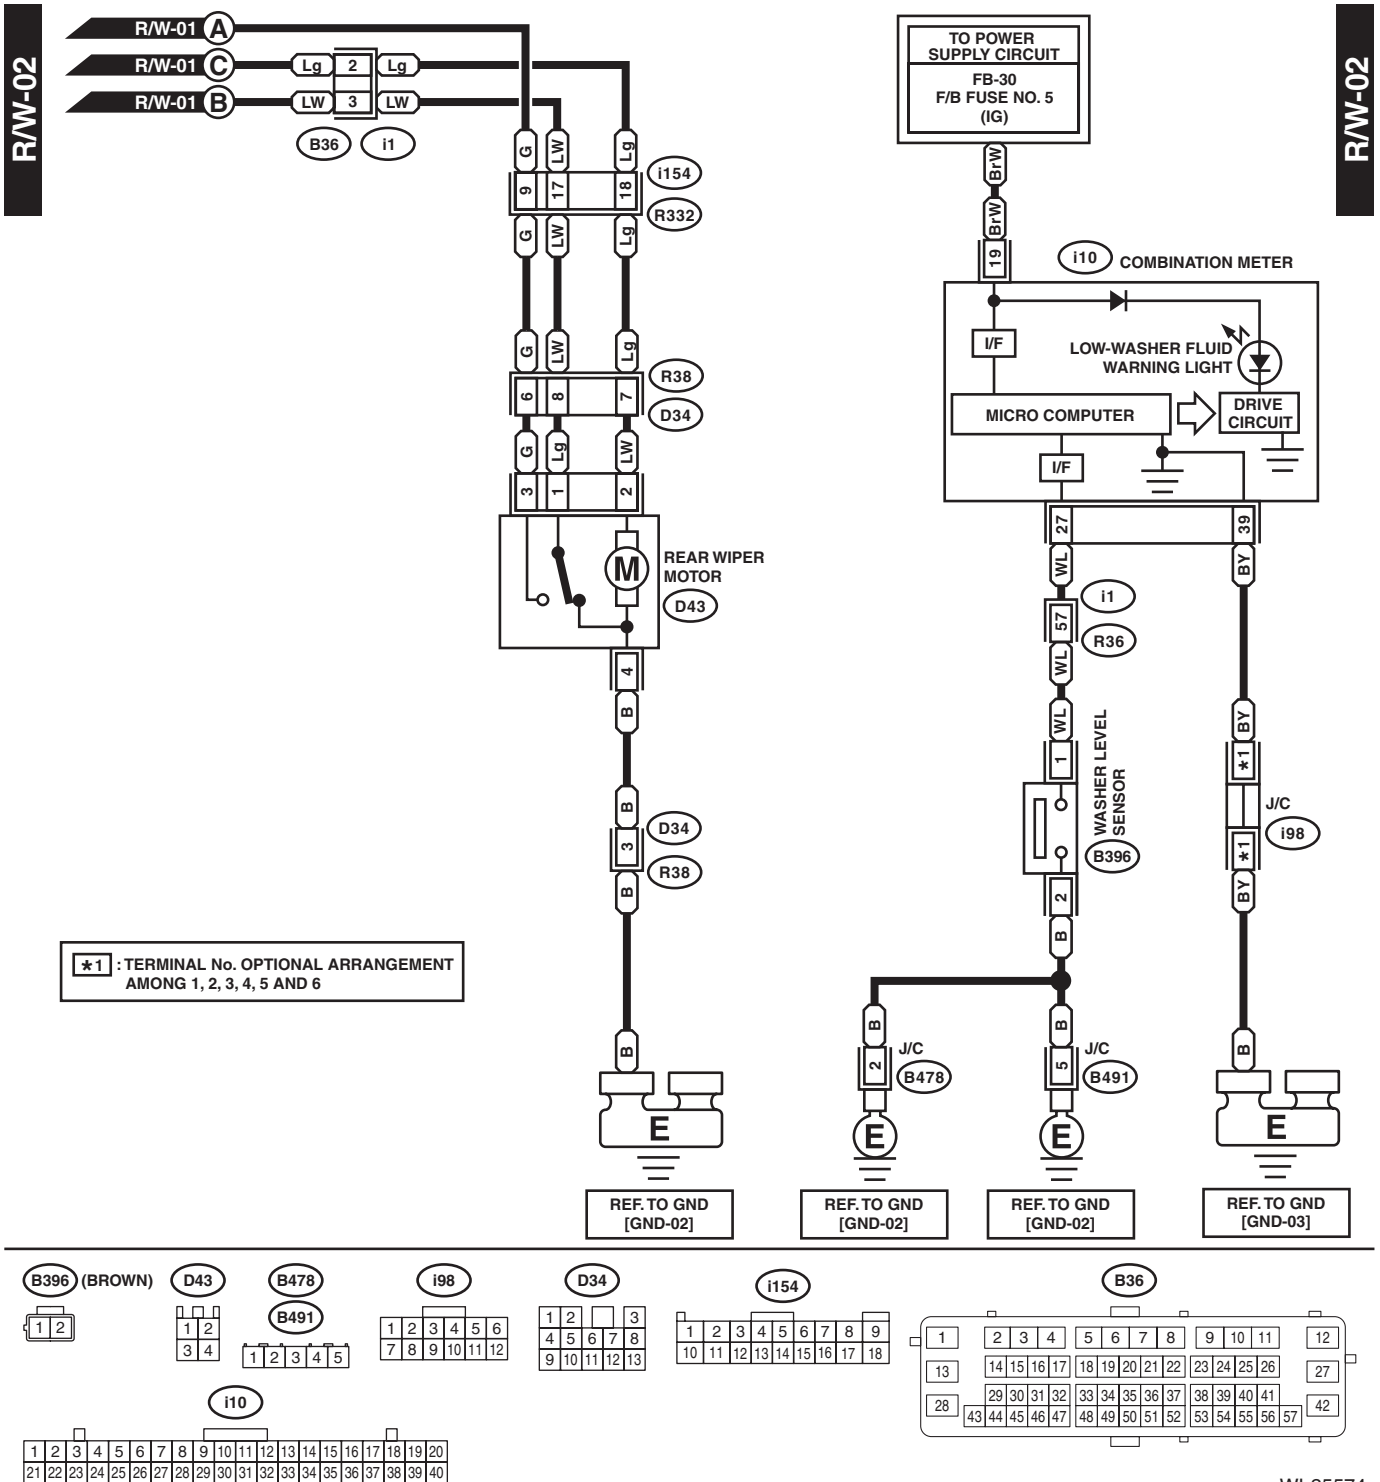

WI-25574

A: WIRING DIAGRAM

1. WITHOUT RETRACTABLE MIRROR

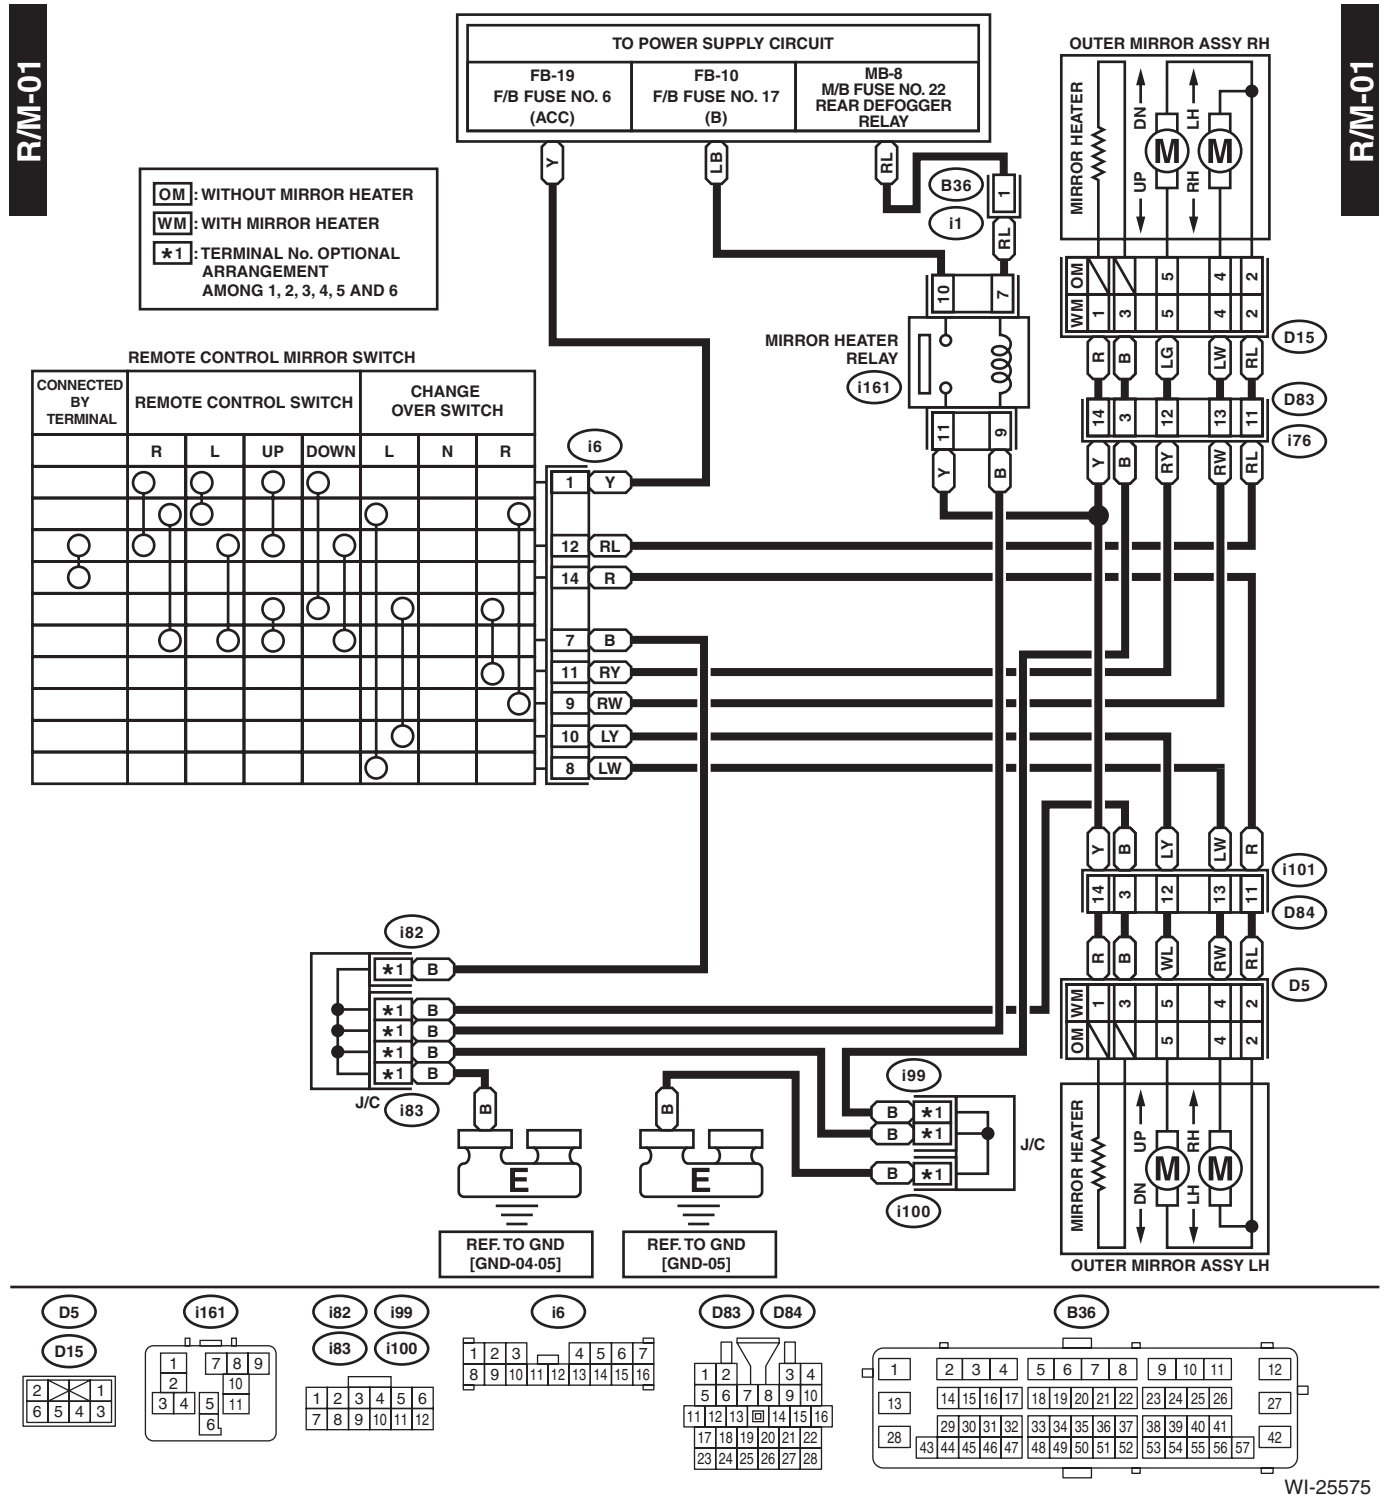

WIRING SYSTEM

R/M-02

R/M-02




Remote Engine Start System

WIRING SYSTEM

42.Remote Engine Start System


A: WIRING DIAGRAM

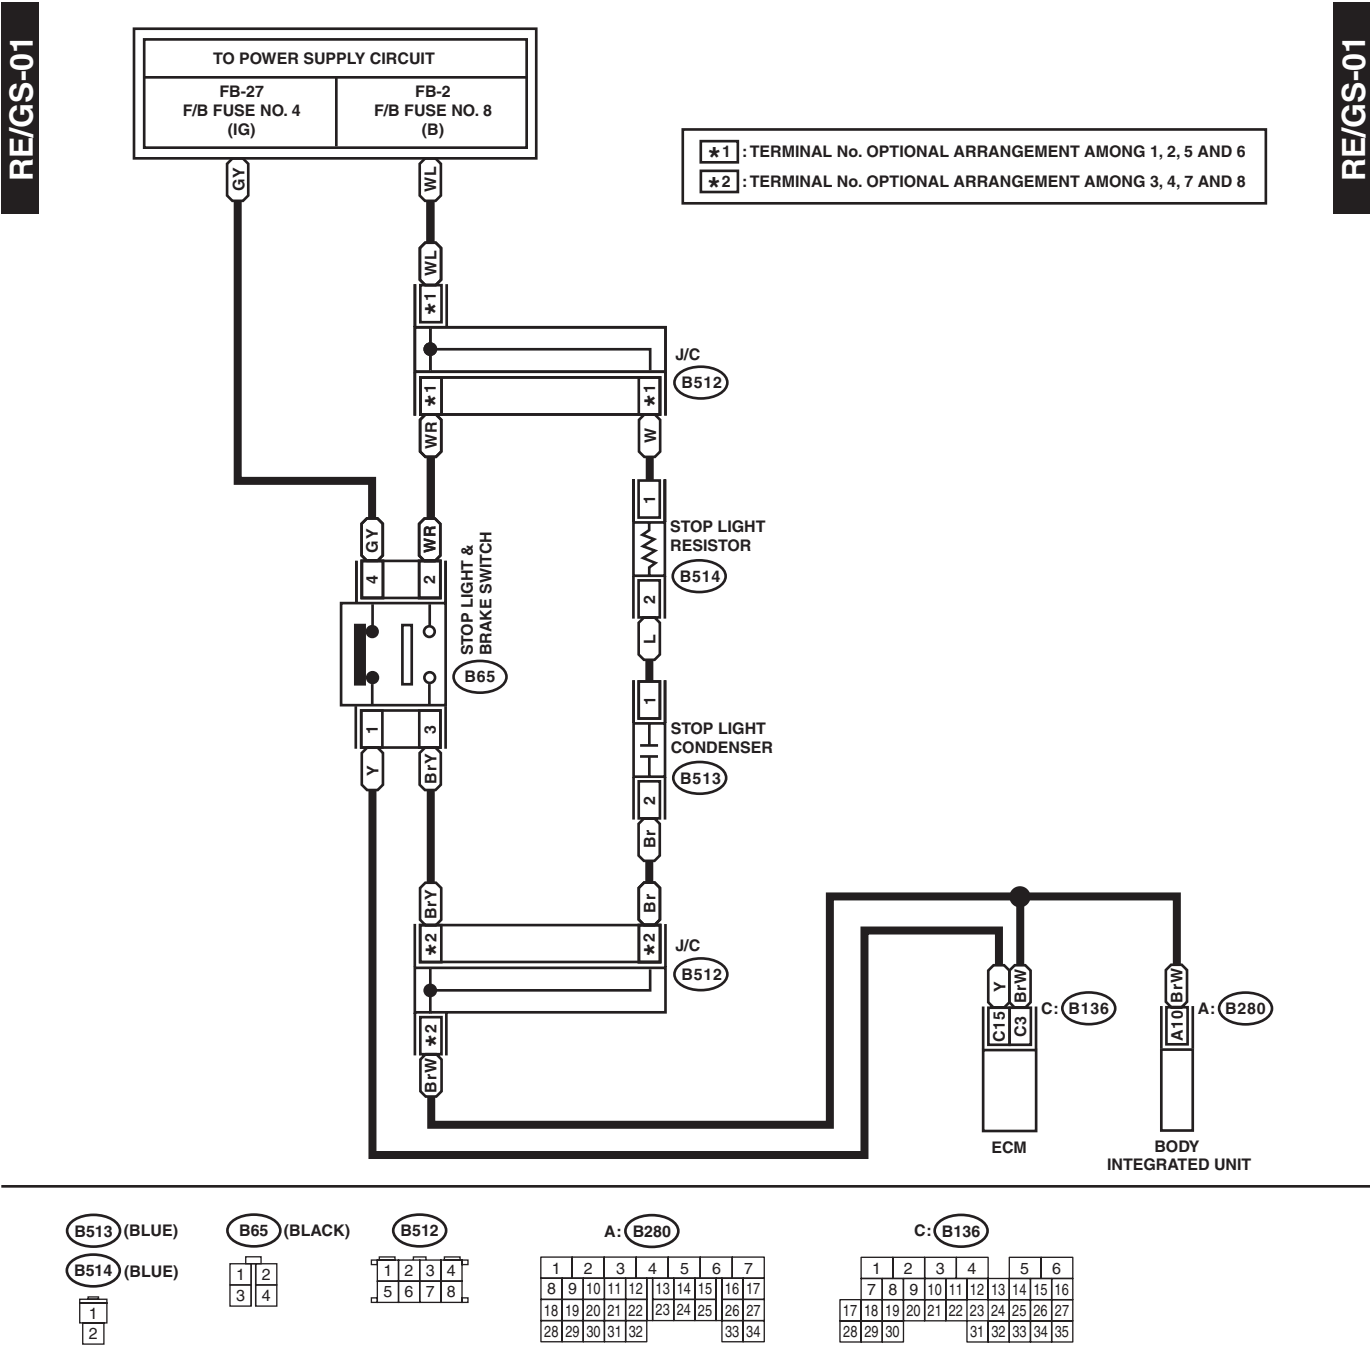

WI-25576


Remote Engine Start System

WIRING SYSTEM

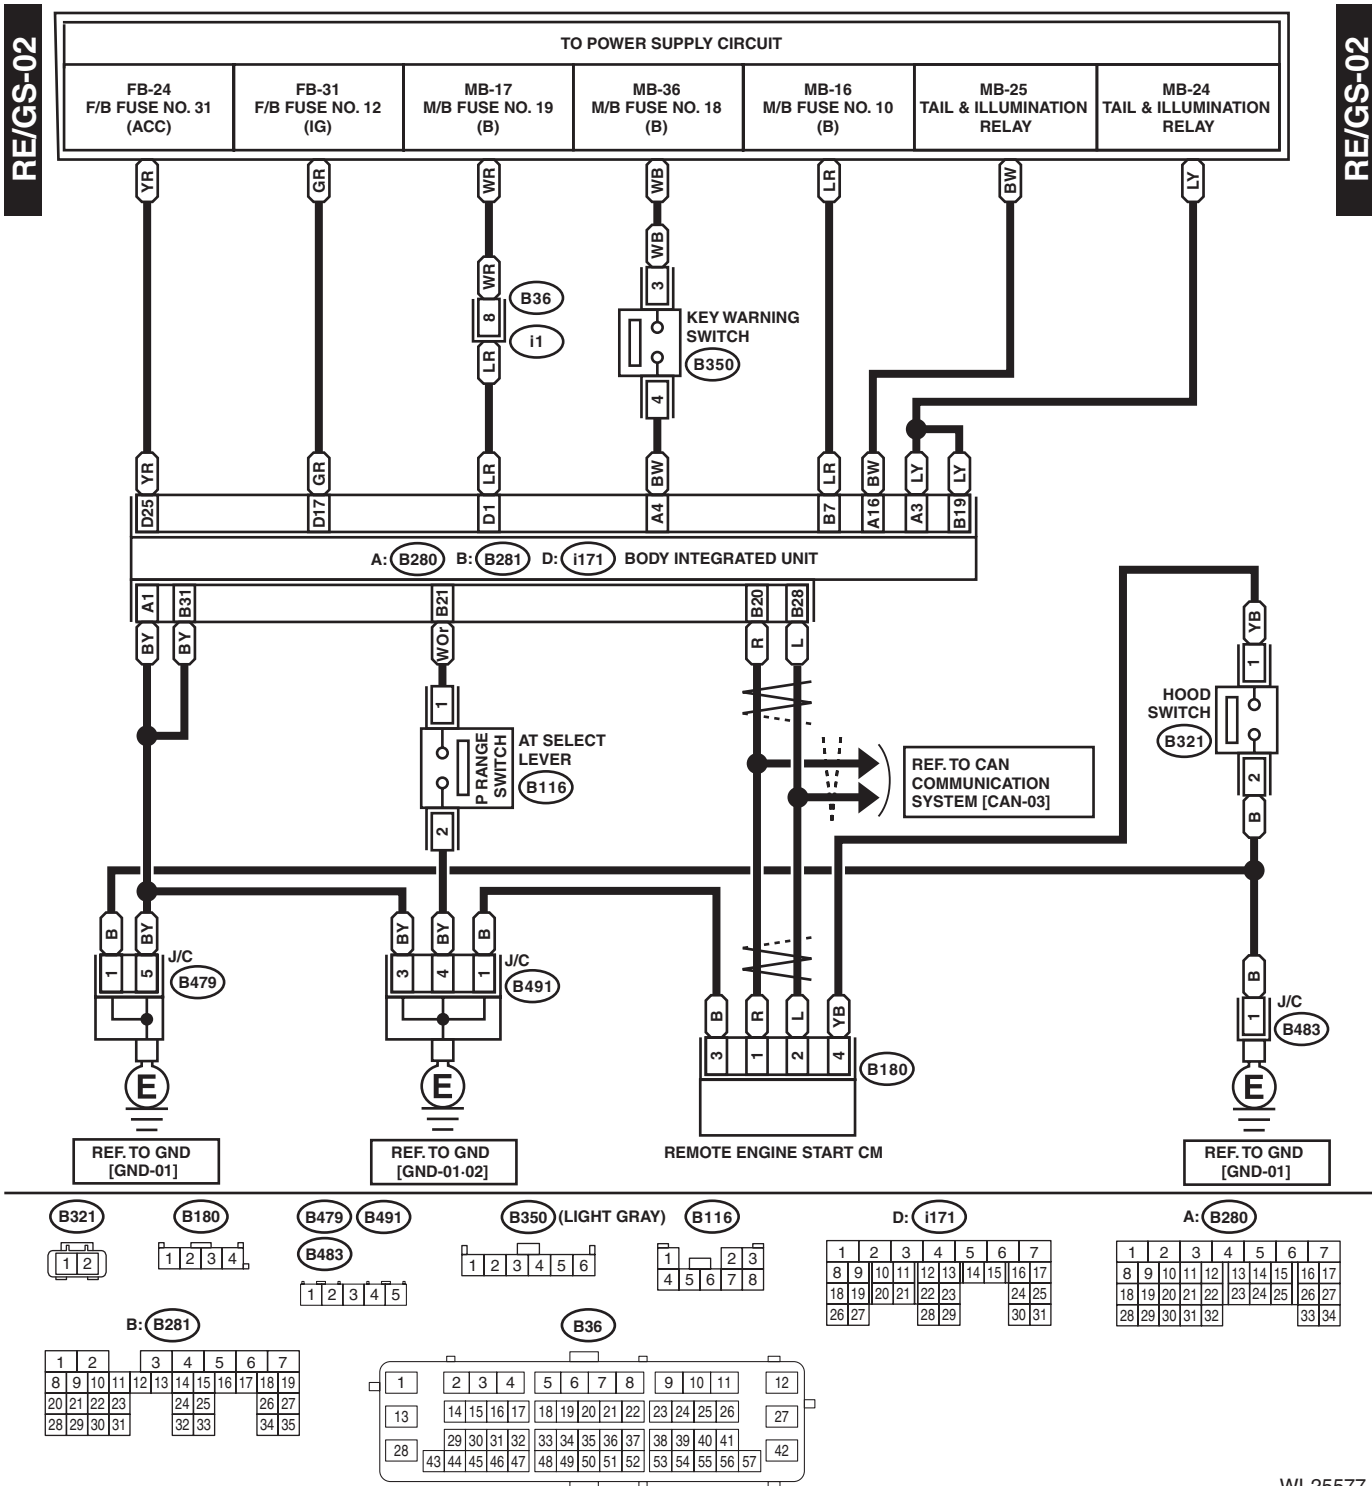

Remote Engine Start System

WIRING SYSTEM

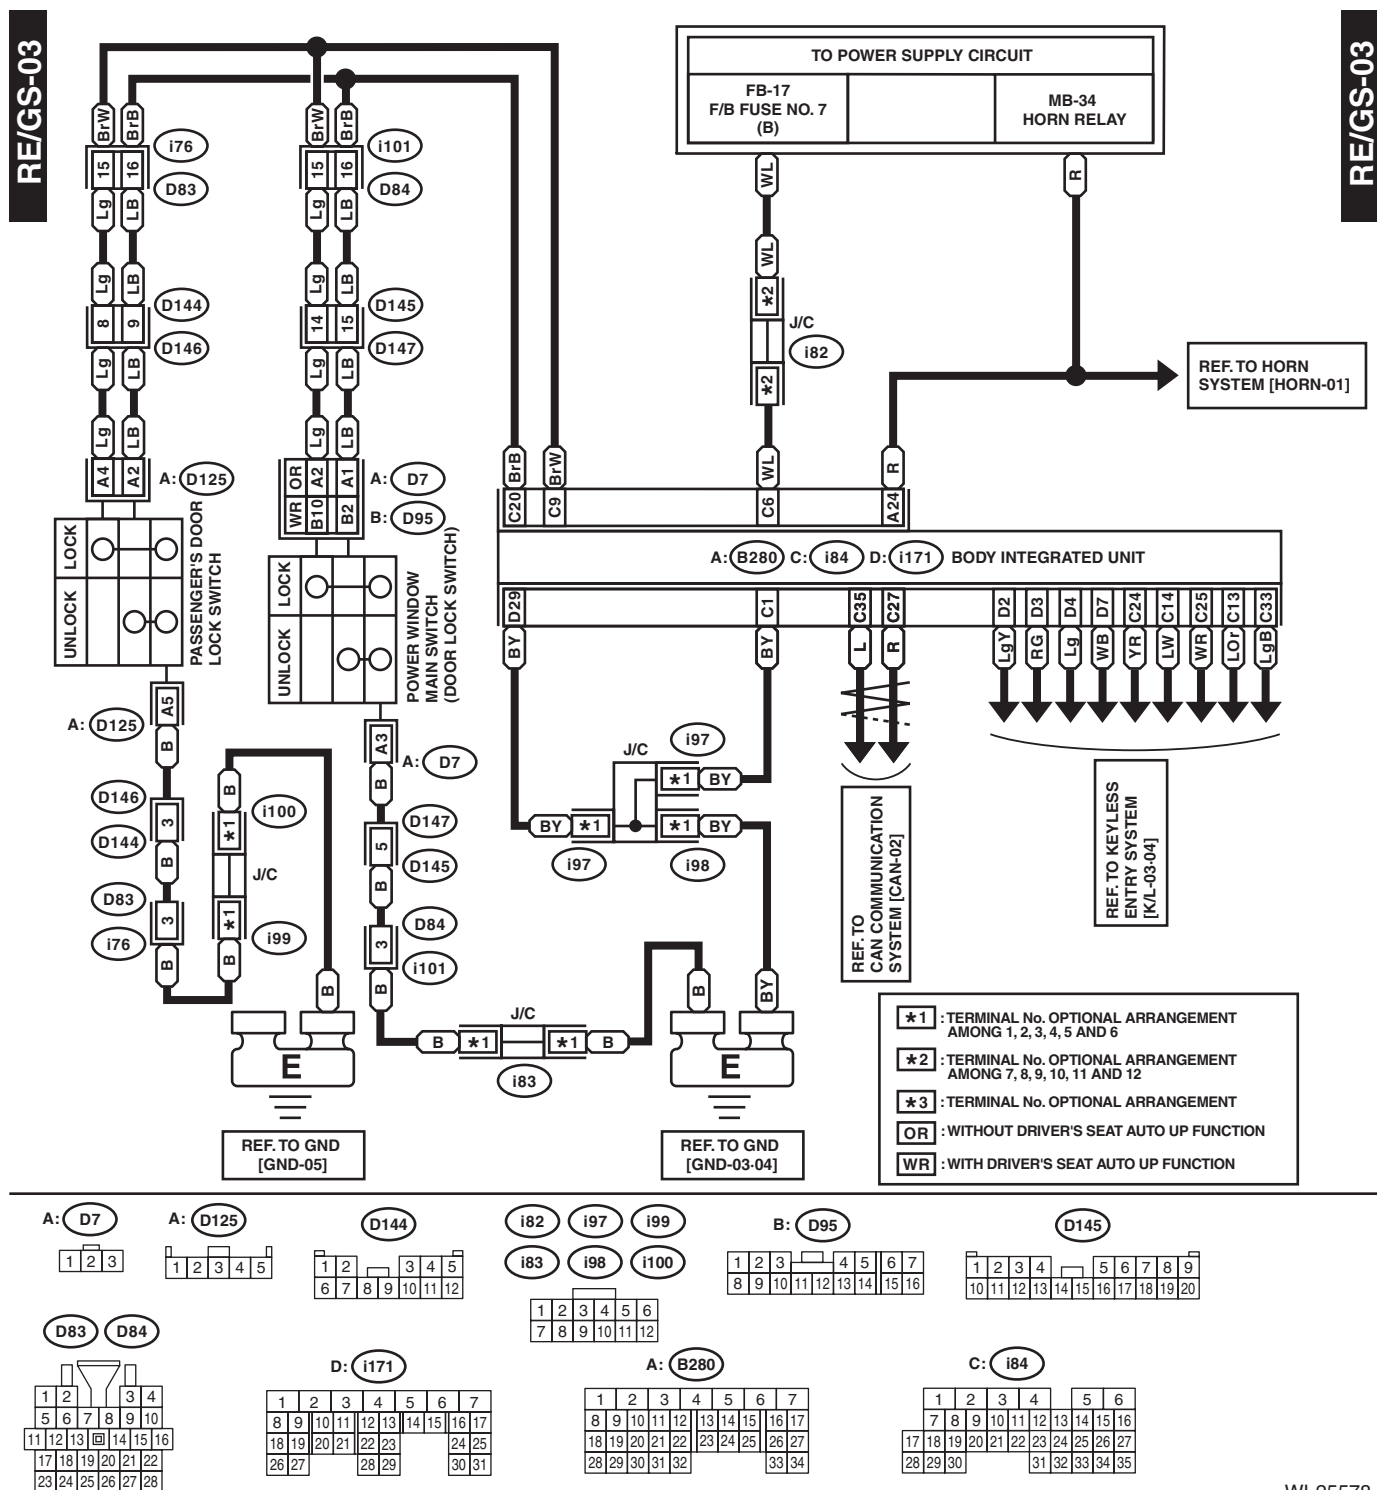

WI-25578

1. MANUAL SEAT MODEL


S/BELT(M)-01

S/BELT(M)-01



S/BELT(M)-02

S/BELT(M)-02


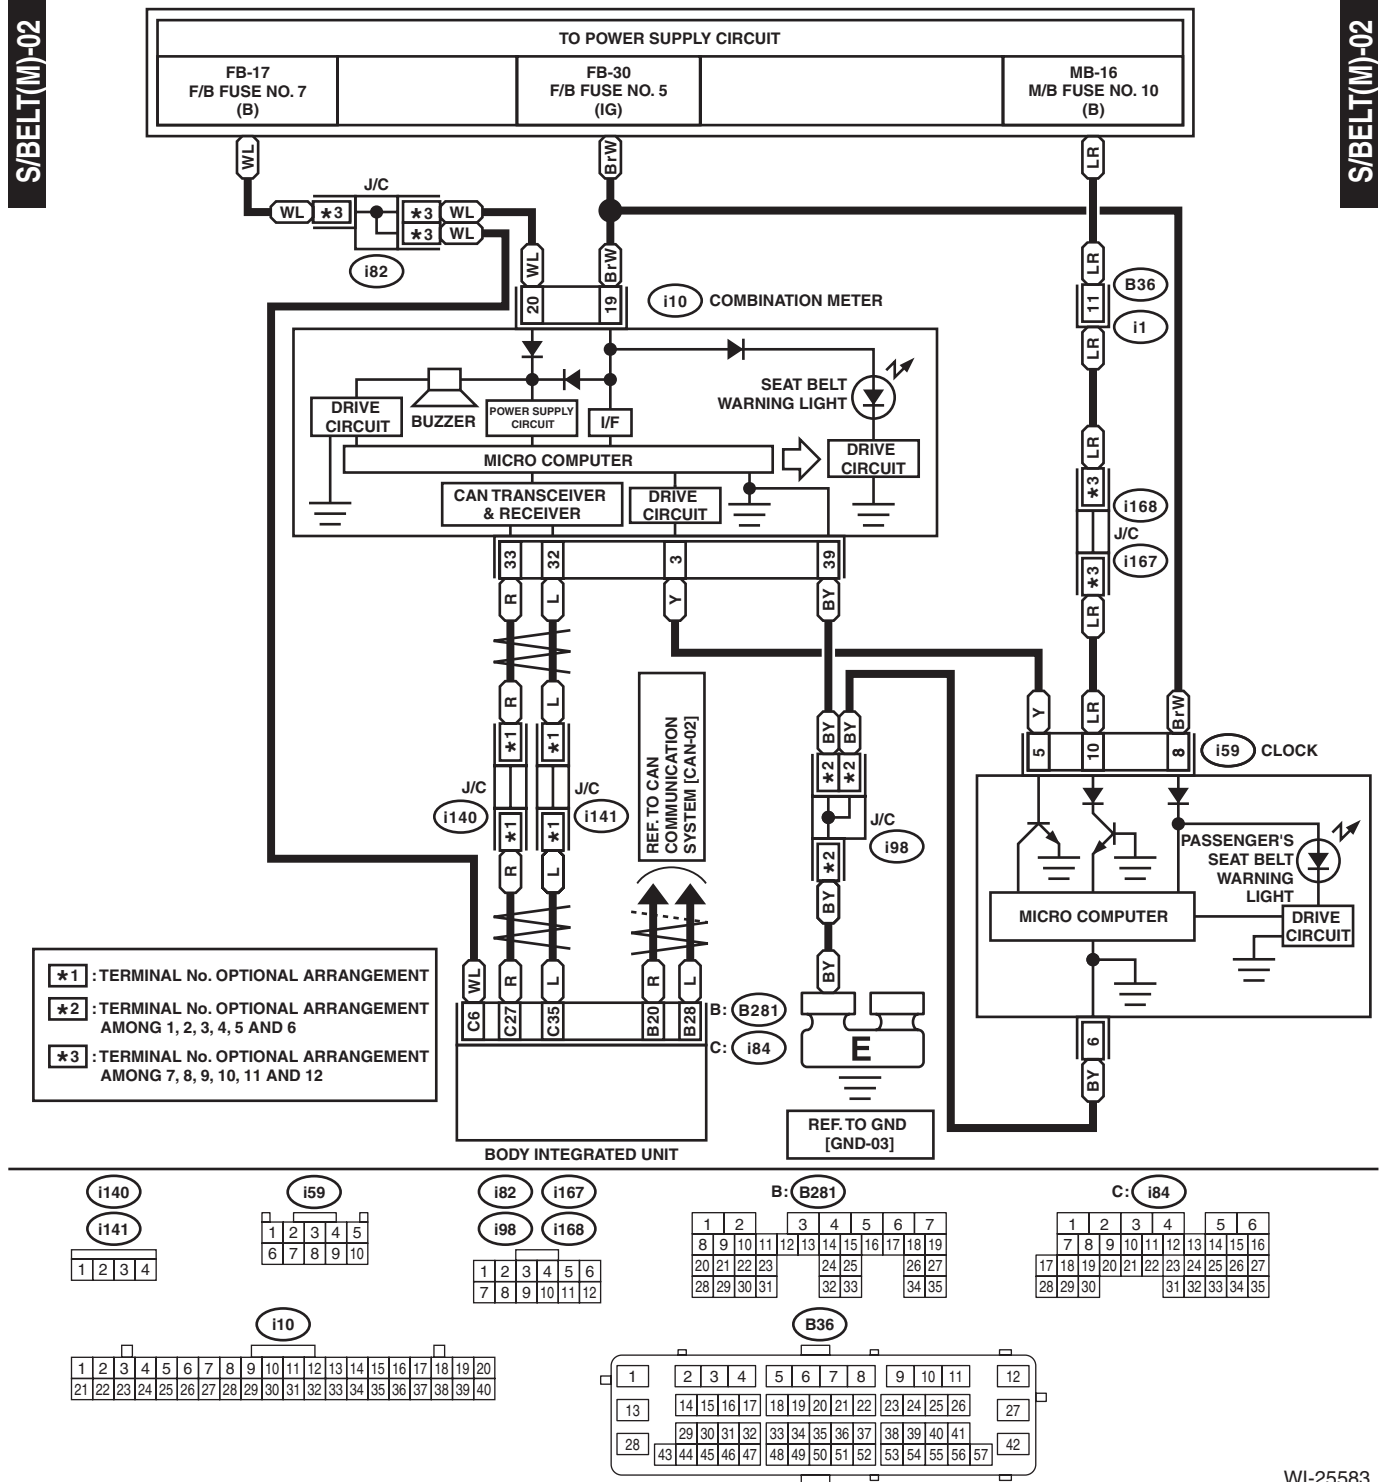


WI-25583

2. MODEL WITH POWER SEATS

S/BELT(P)-01

S/BELT(P)-01

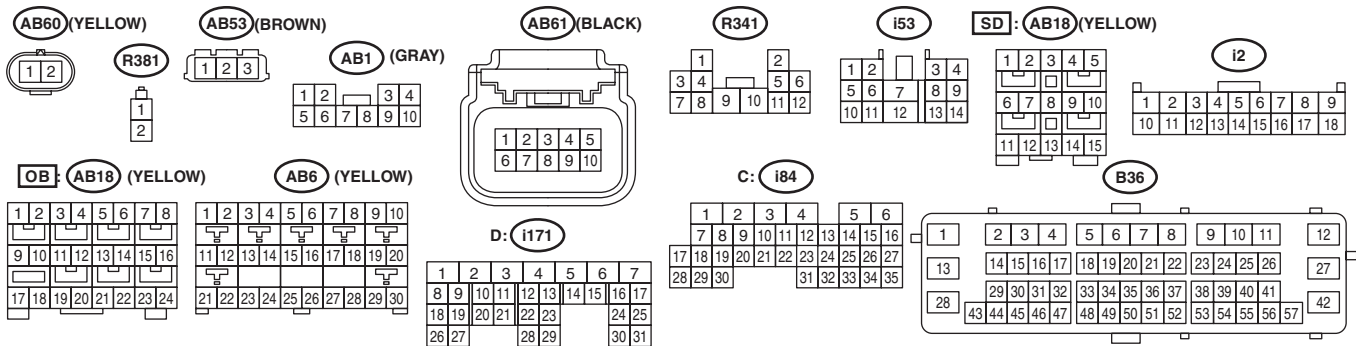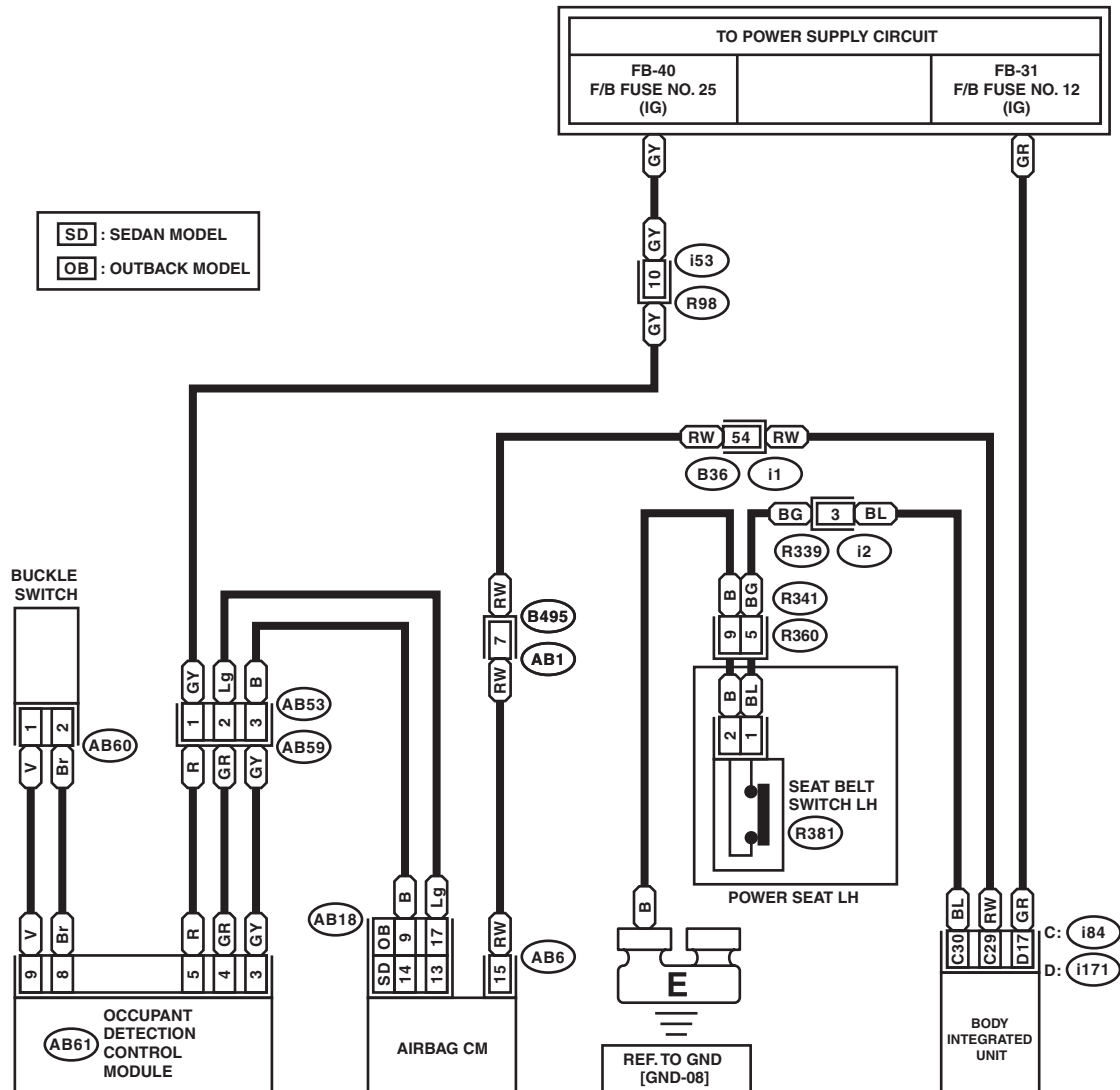

WI-25584

WIRING SYSTEM


S/BELT(P)-02



44. Seat Heater System

A: WIRING DIAGRAM

1. MANUAL SEAT MODEL

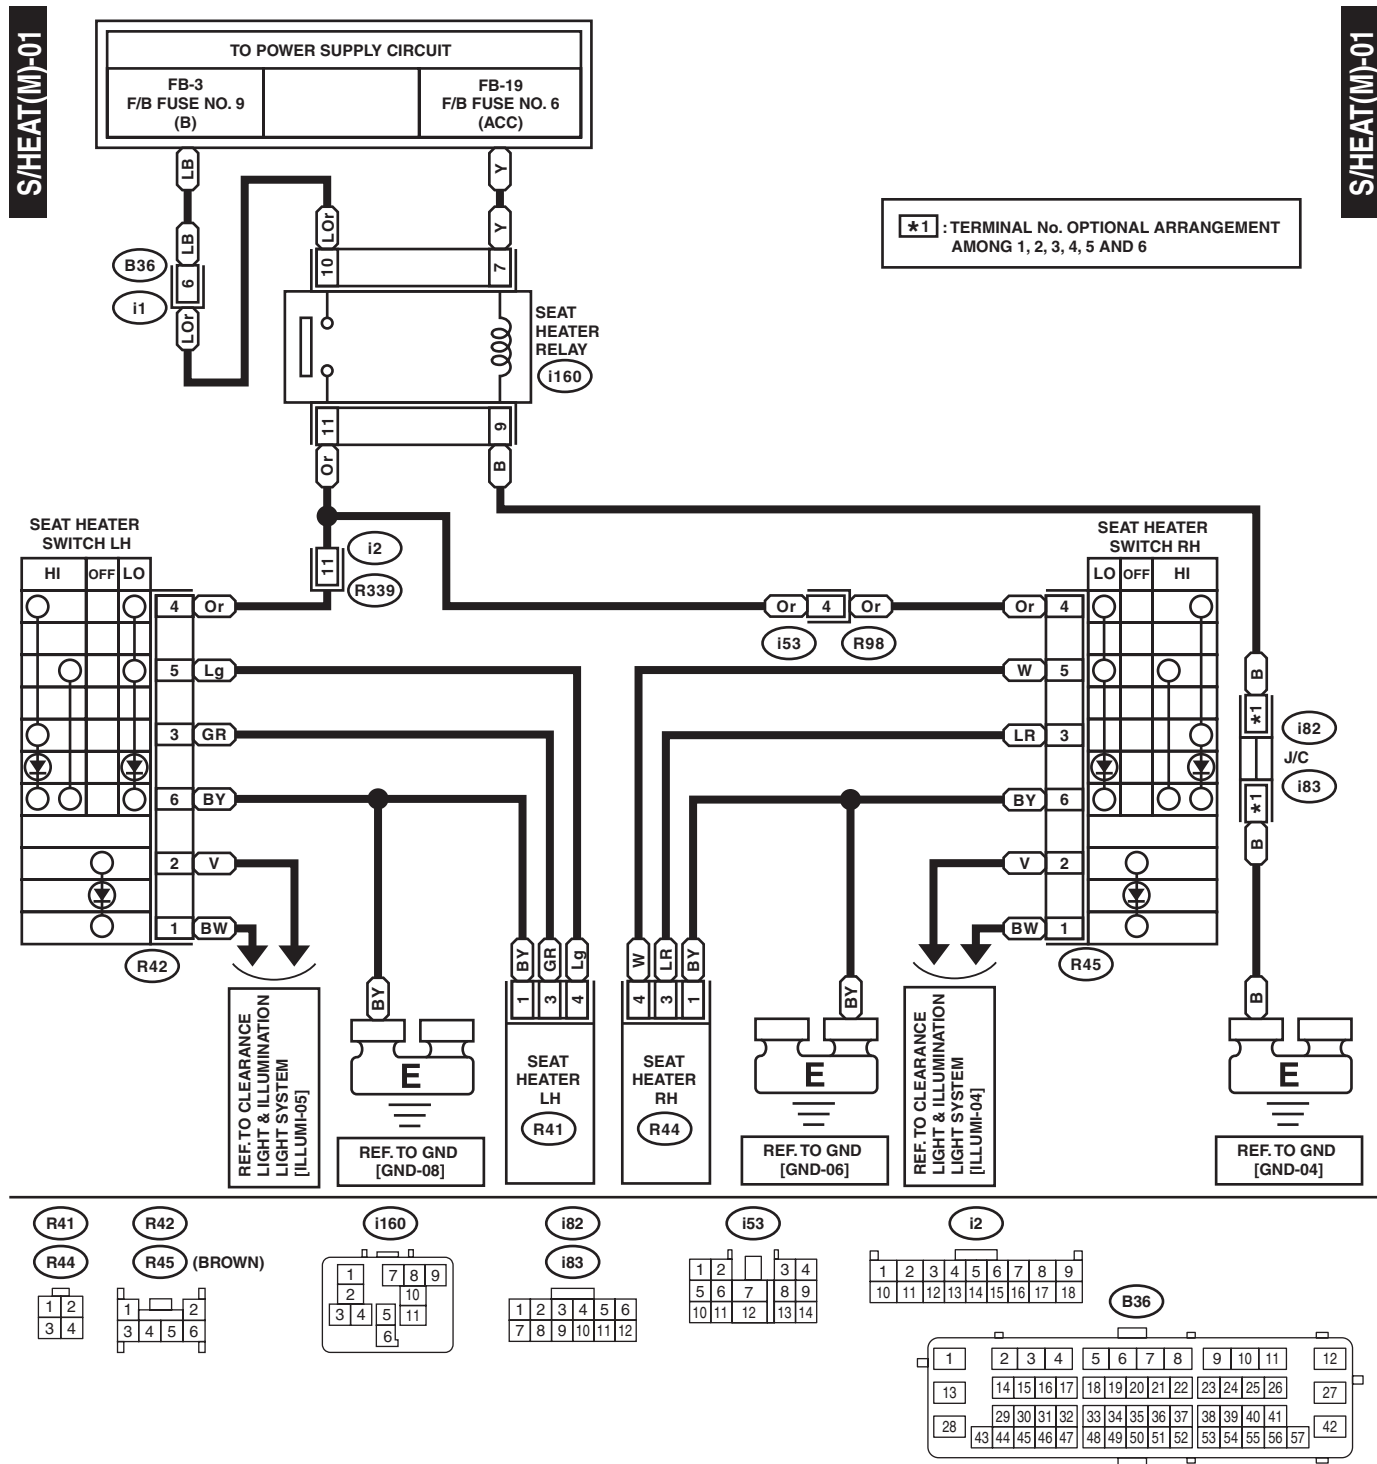


WI-25586

Seat Heater System


WIRING SYSTEM

2. MODEL WITH POWER SEATS

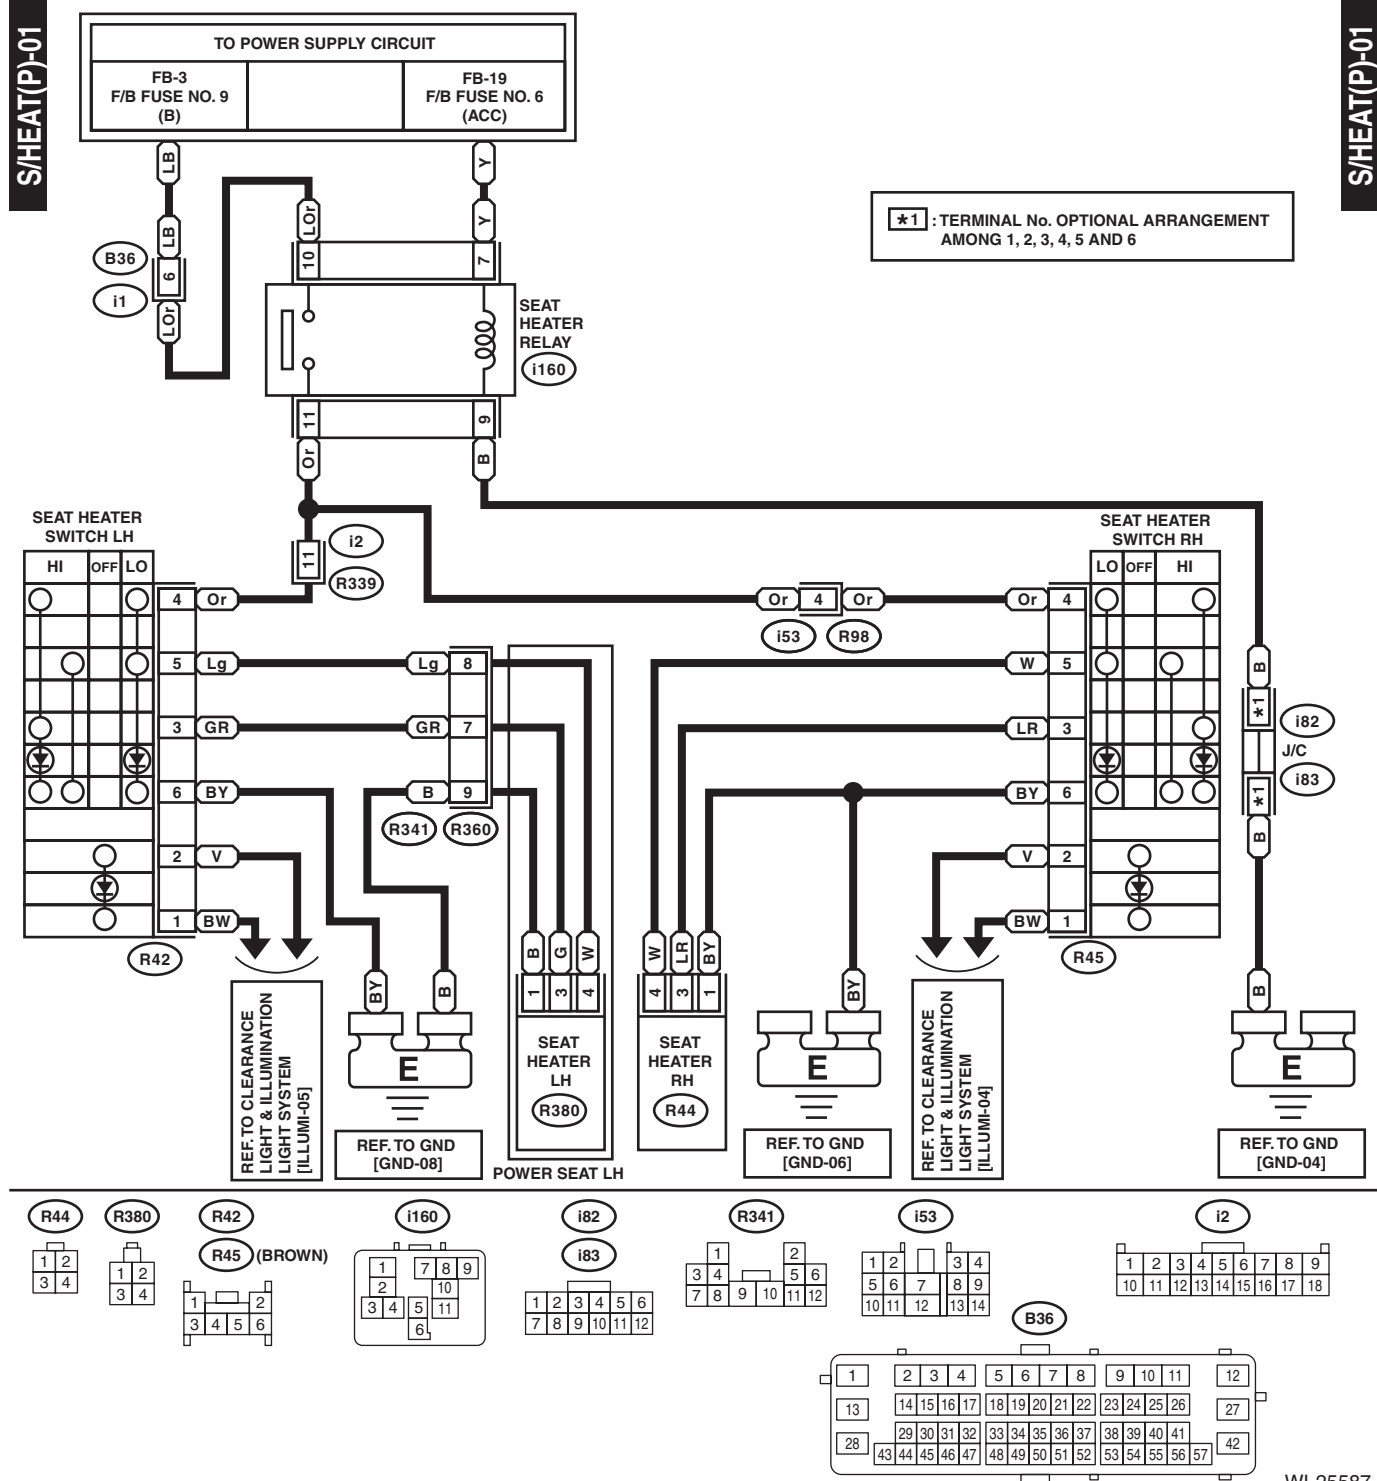

45.Security System


A: WIRING DIAGRAM

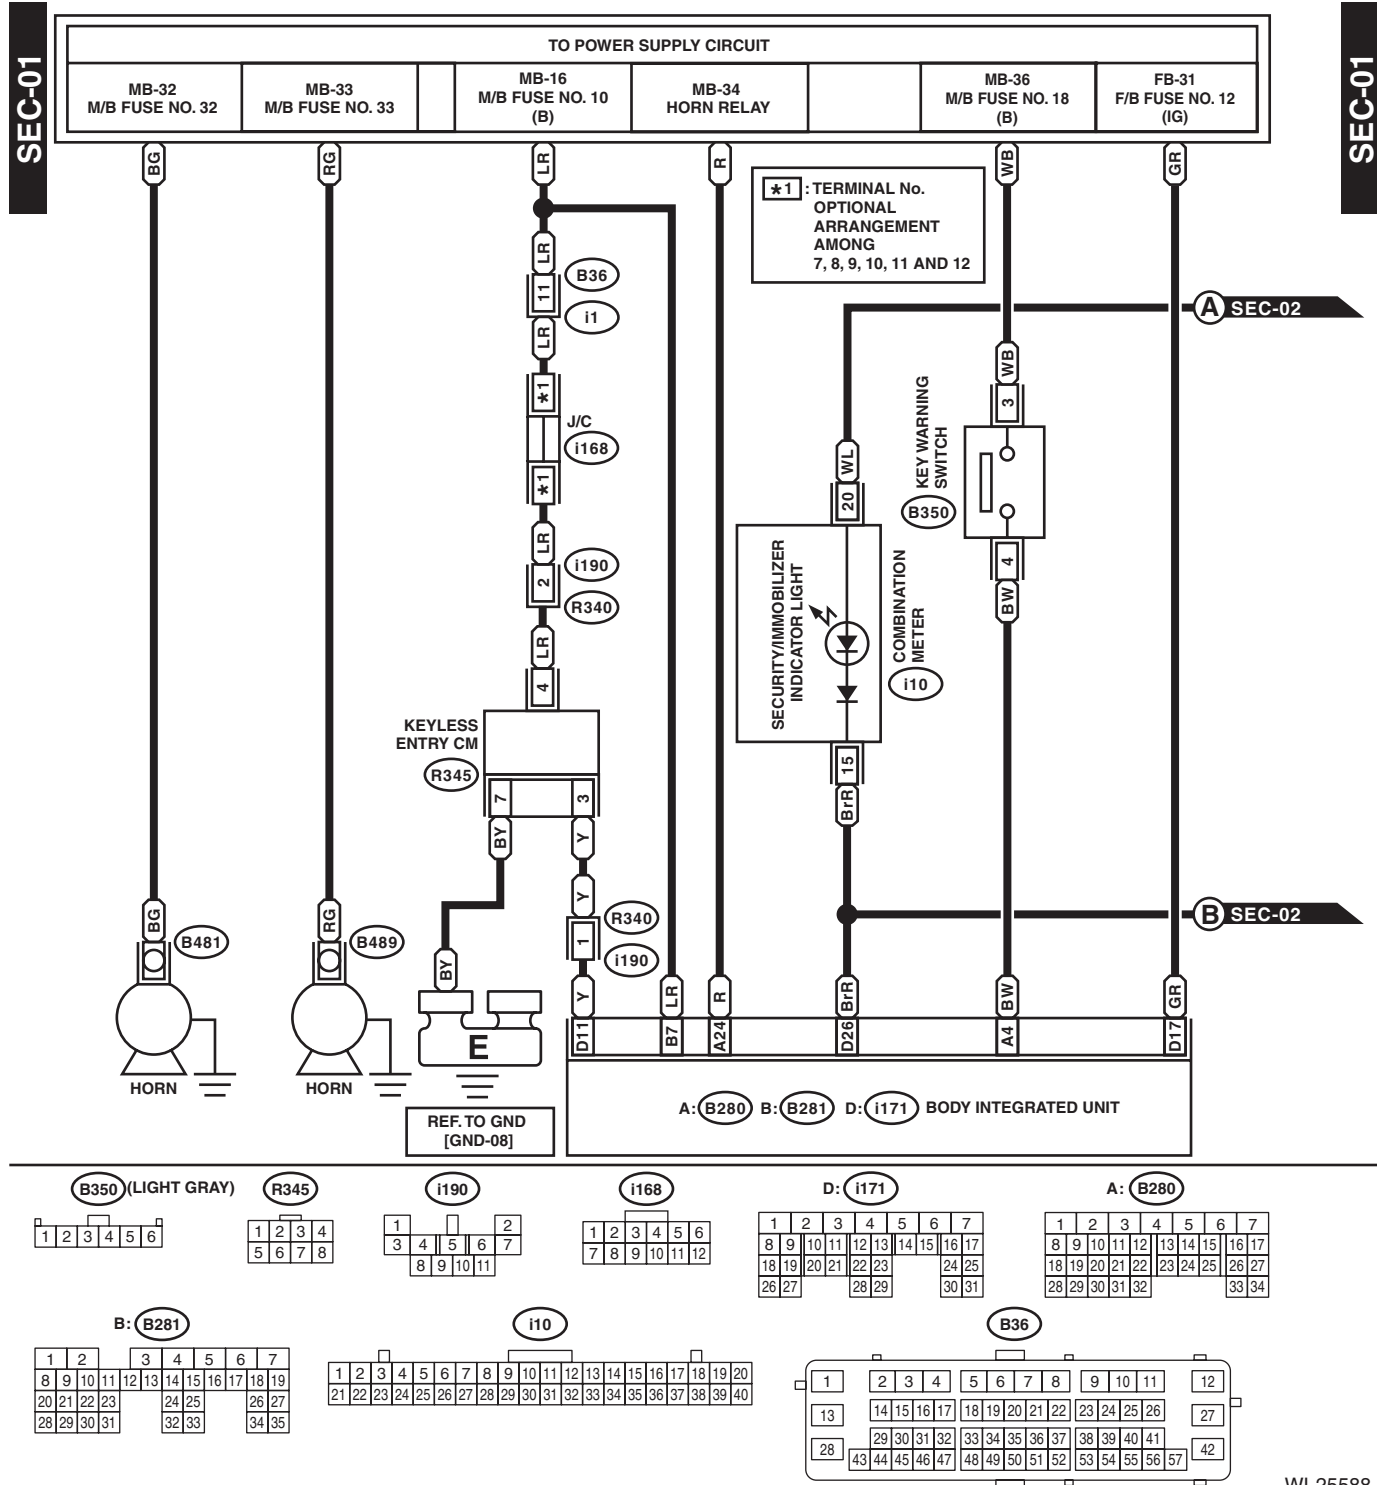

WI-25588

Security System



WIRING SYSTEM

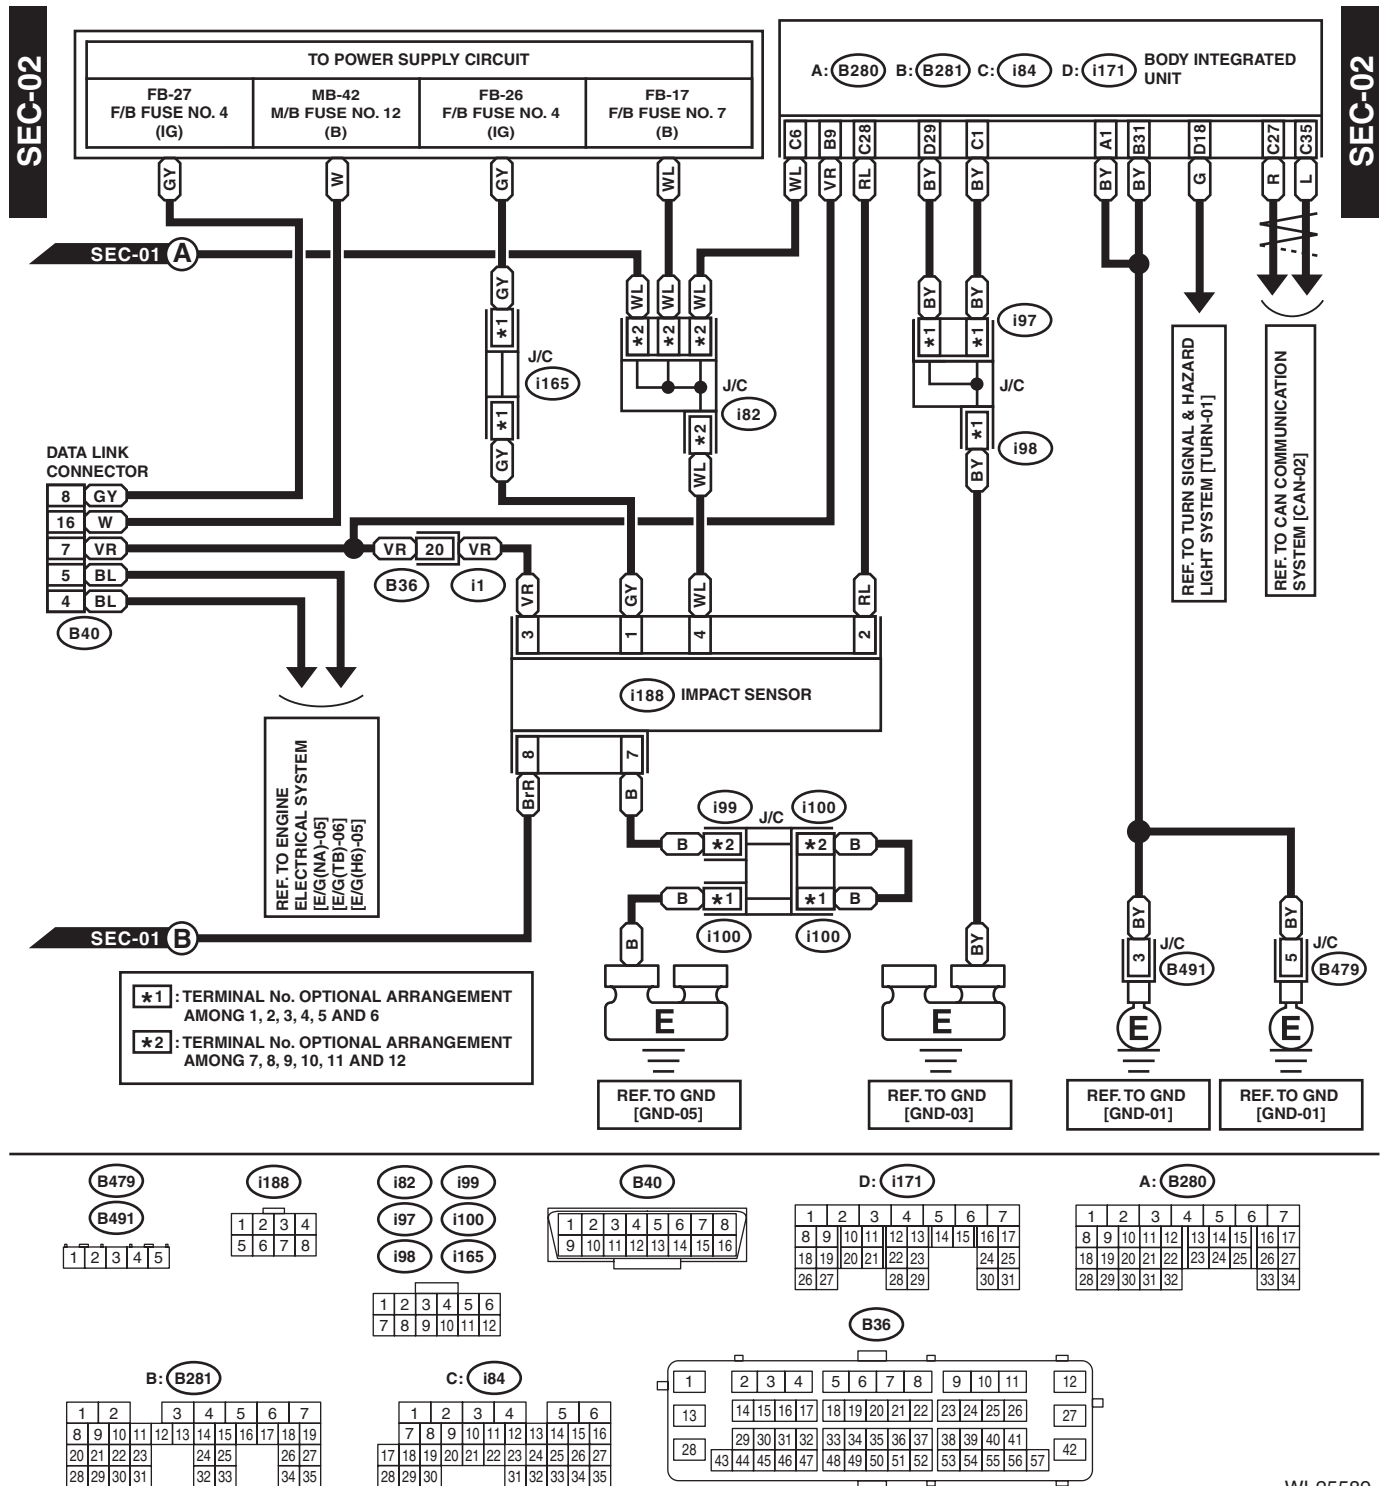

WI-25589

SEC-03

SEC-03

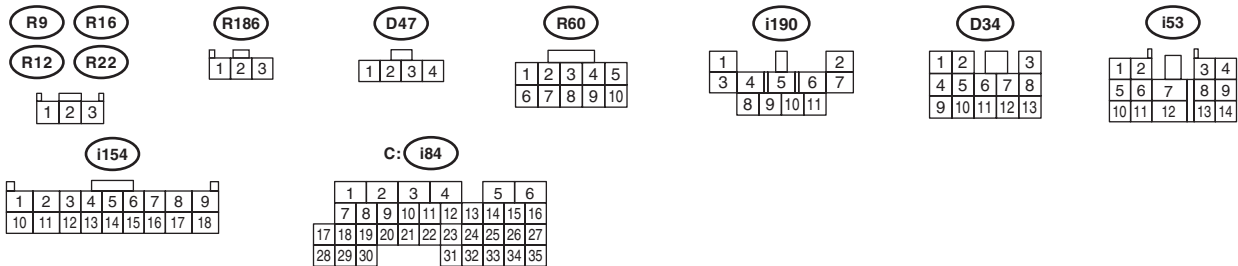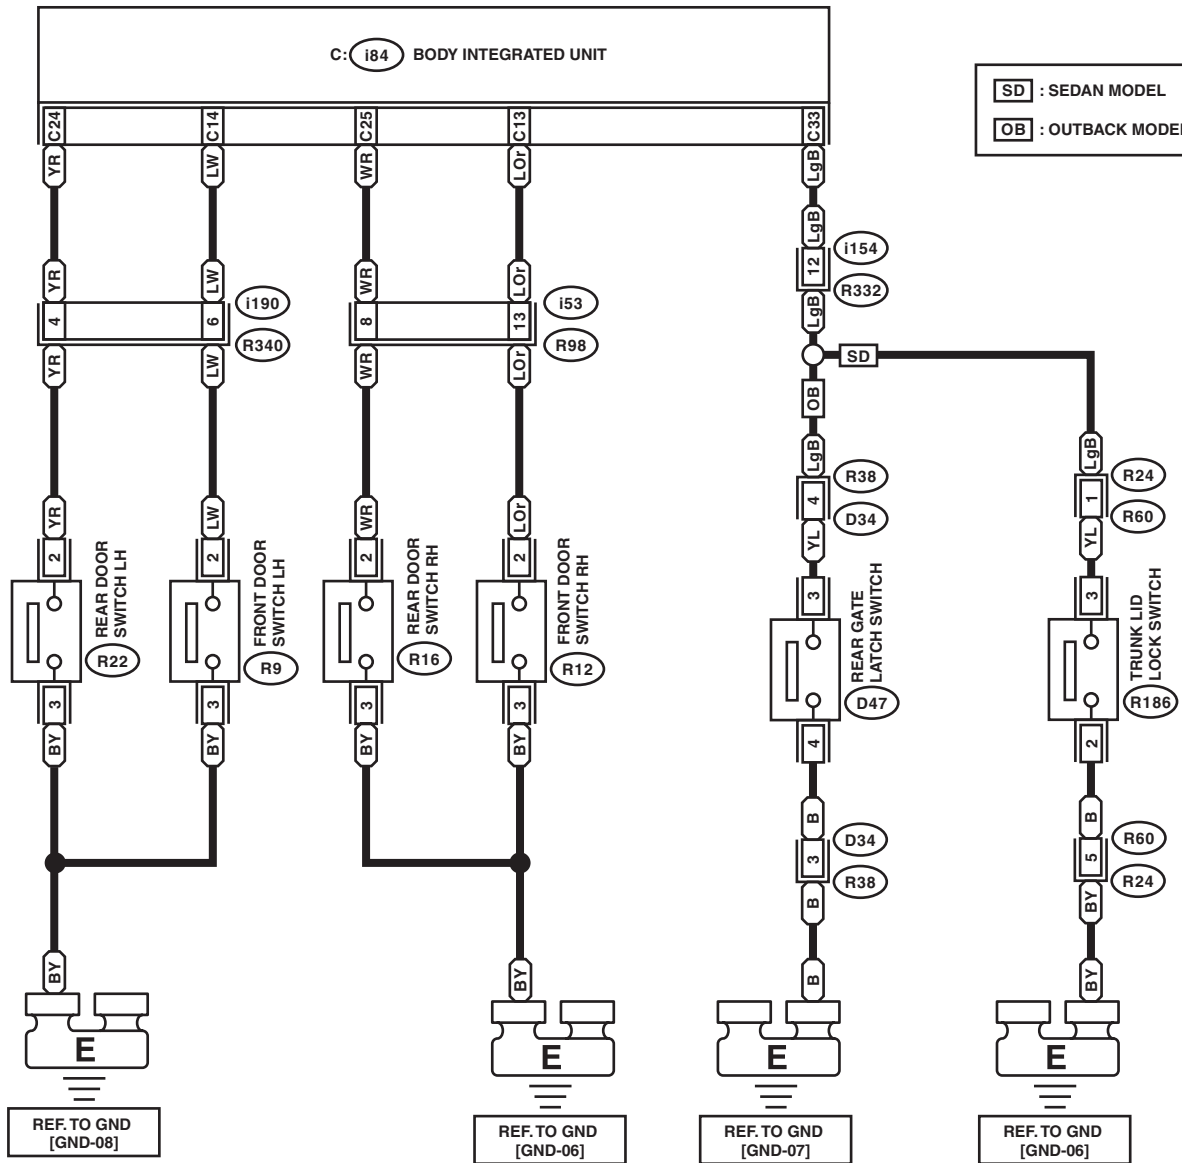


WI-25590

Speedometer System

WIRING SYSTEM

46.Speedometer System

A: WIRING DIAGRAM

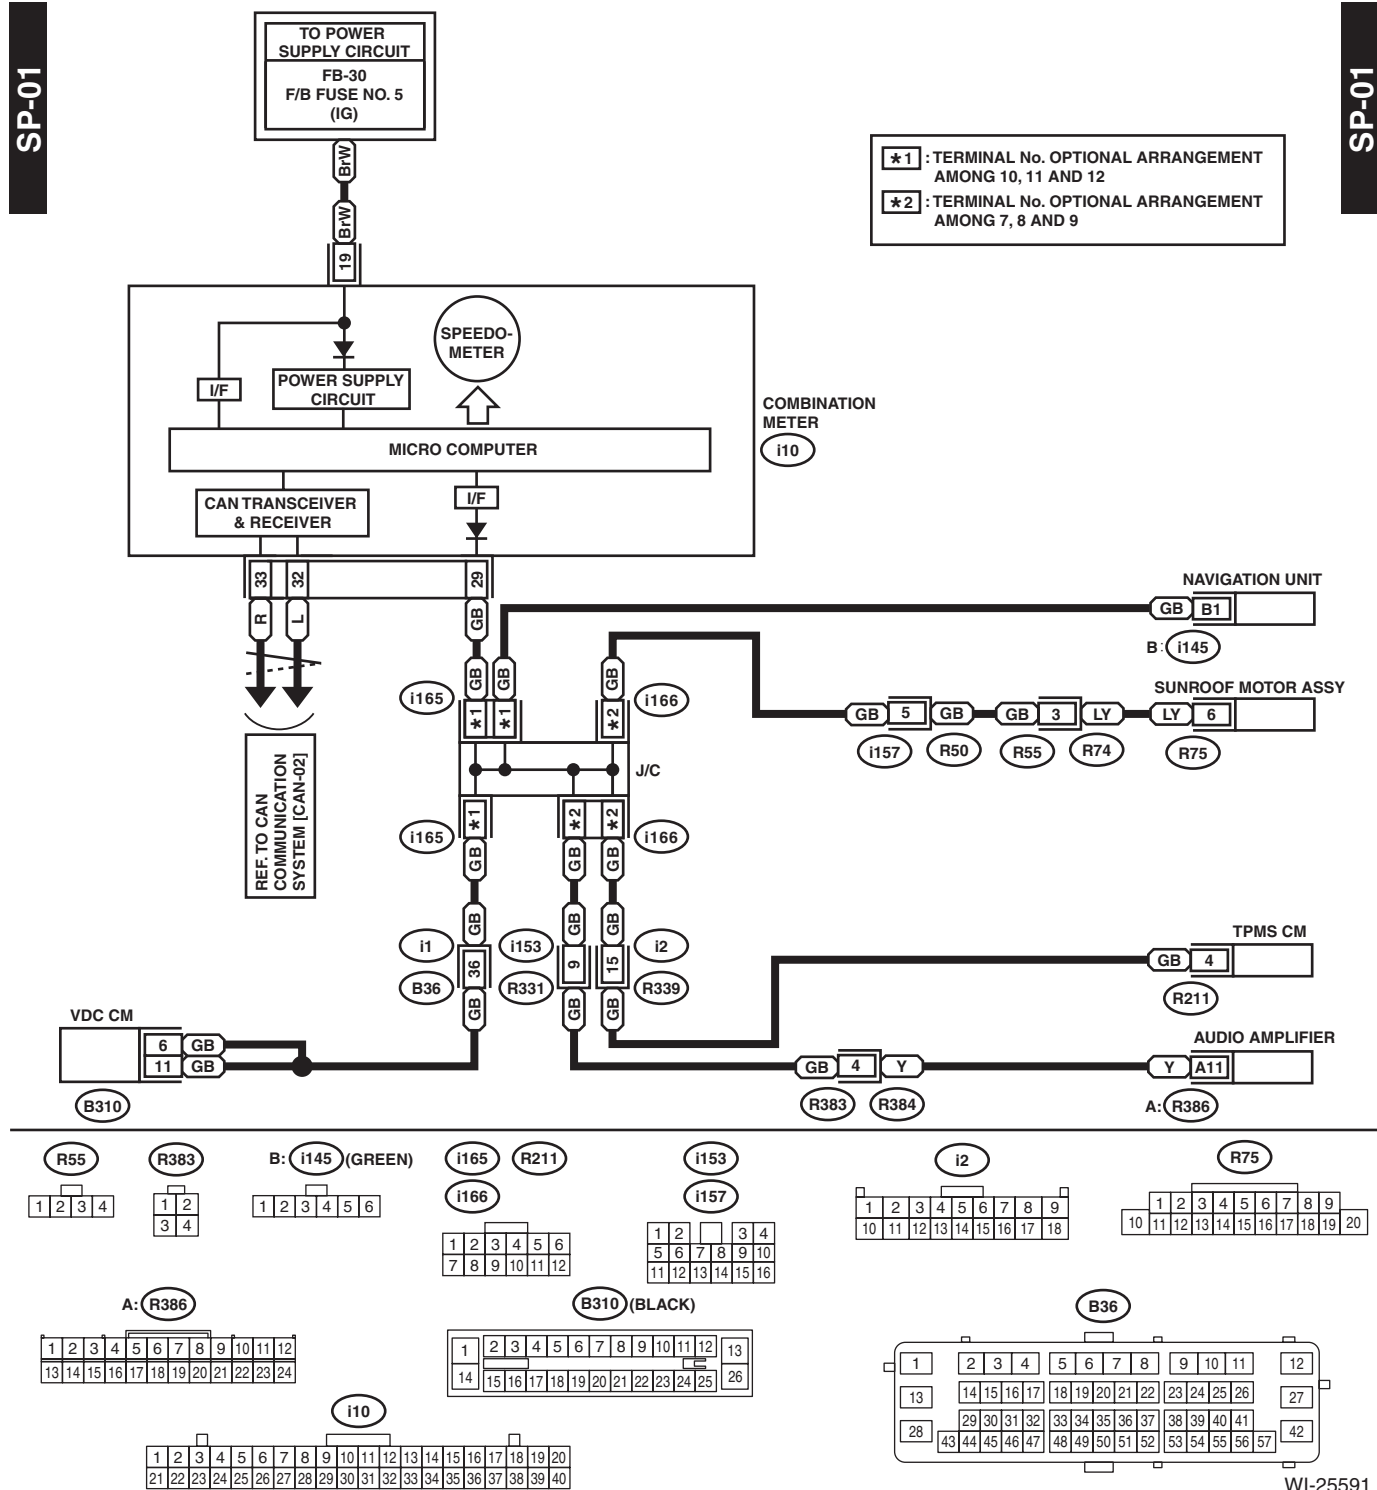


WI-25591

47.Starter System

A: WIRING DIAGRAM

1. 2.5 L NON-TURBO MODEL

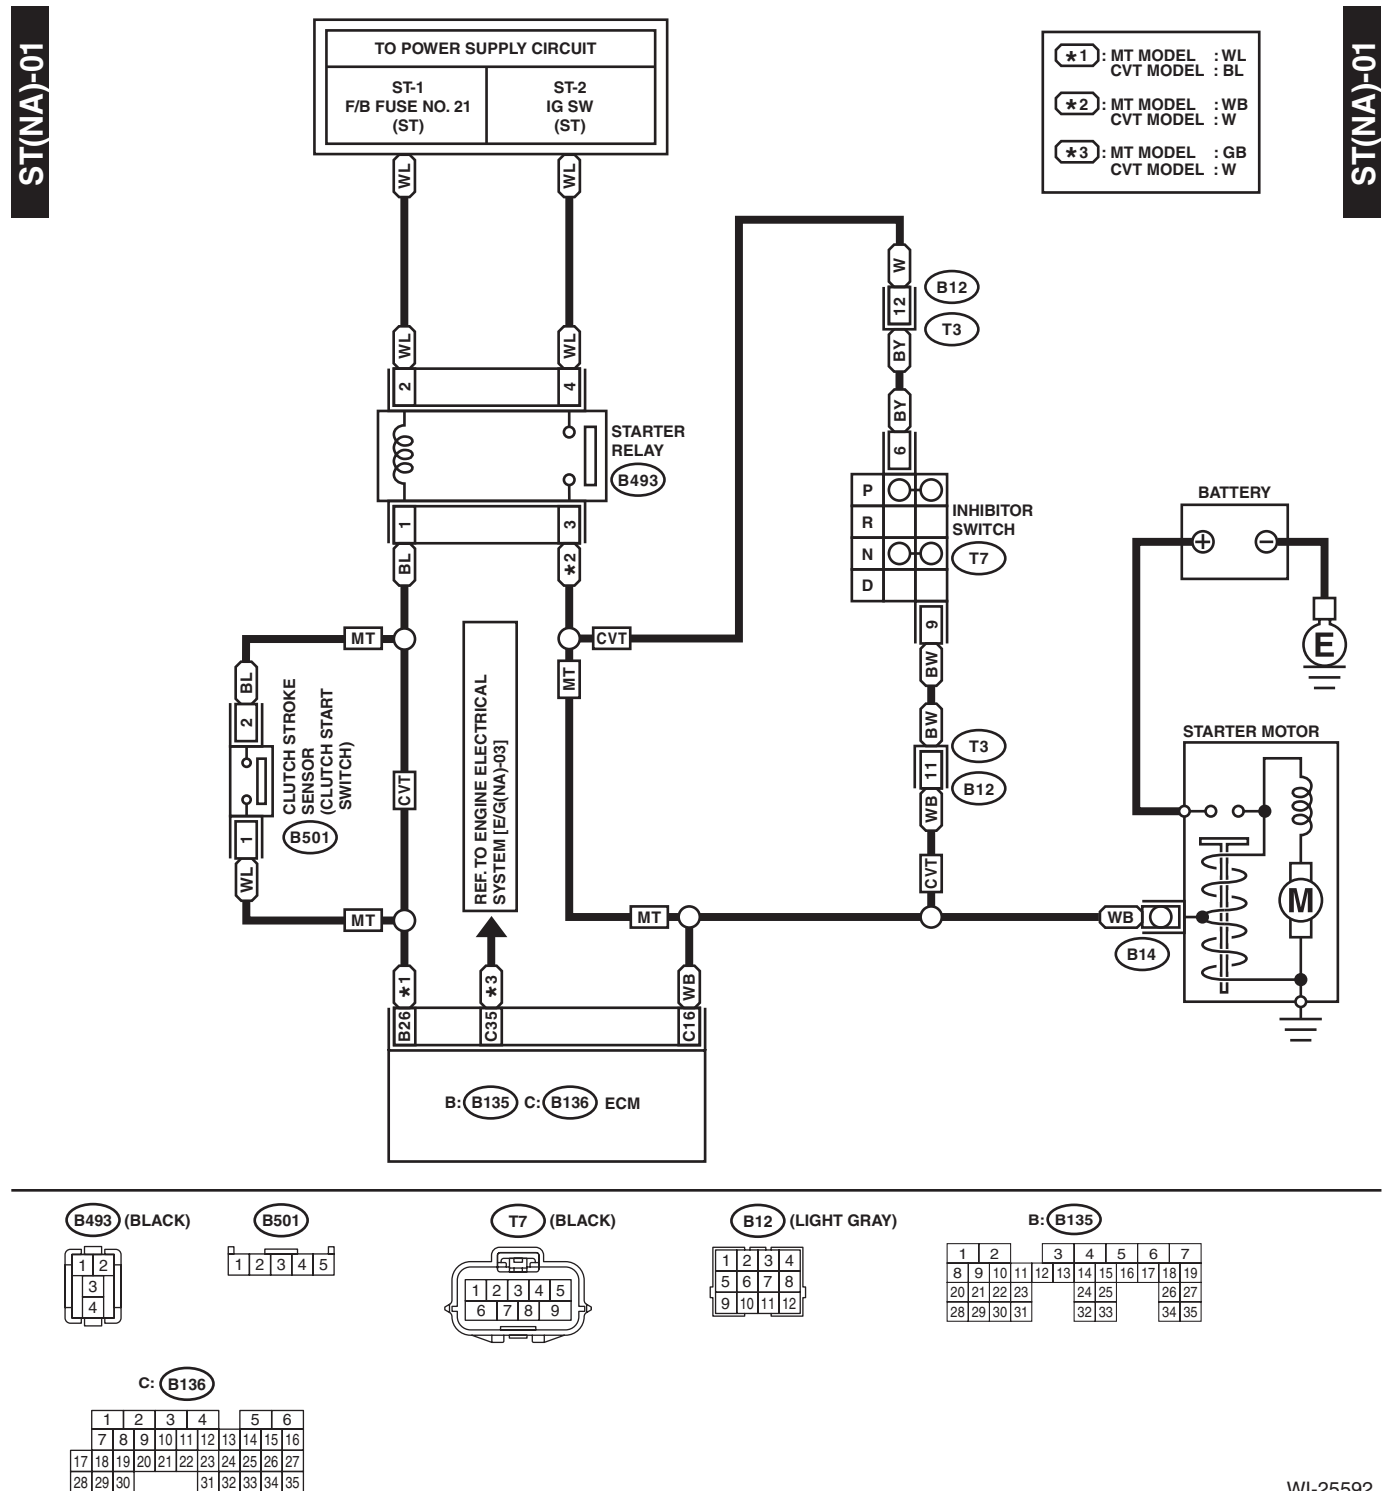

WI-25592


Starter System

WIRING SYSTEM

2. 2.5 L TURBO MODEL

ST(TB)-01


ST(TB)-01

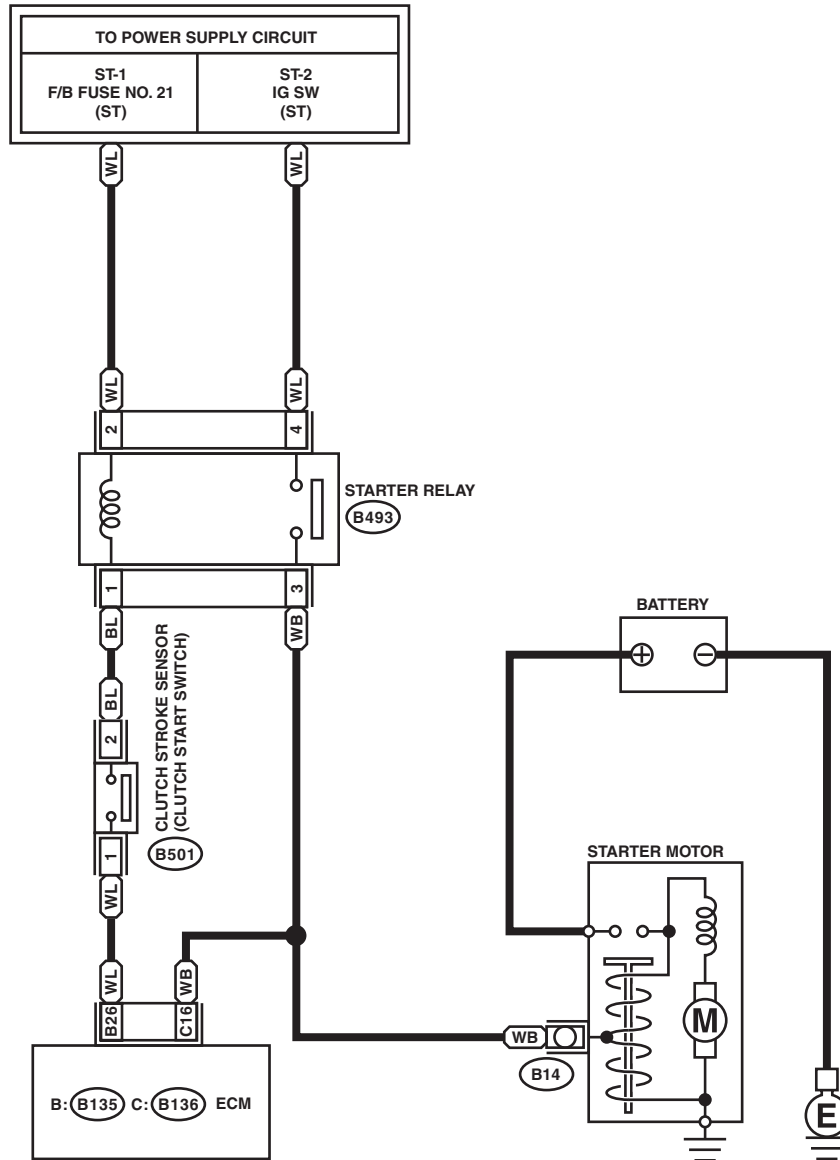


(B493) (BLACK)



 
(B501)



B: (B135)

 

C: (B136)

 

WI-25593


Starter System

WIRING SYSTEM

3. 3.6 L MODEL

ST(H6)-01

ST(H6)-01

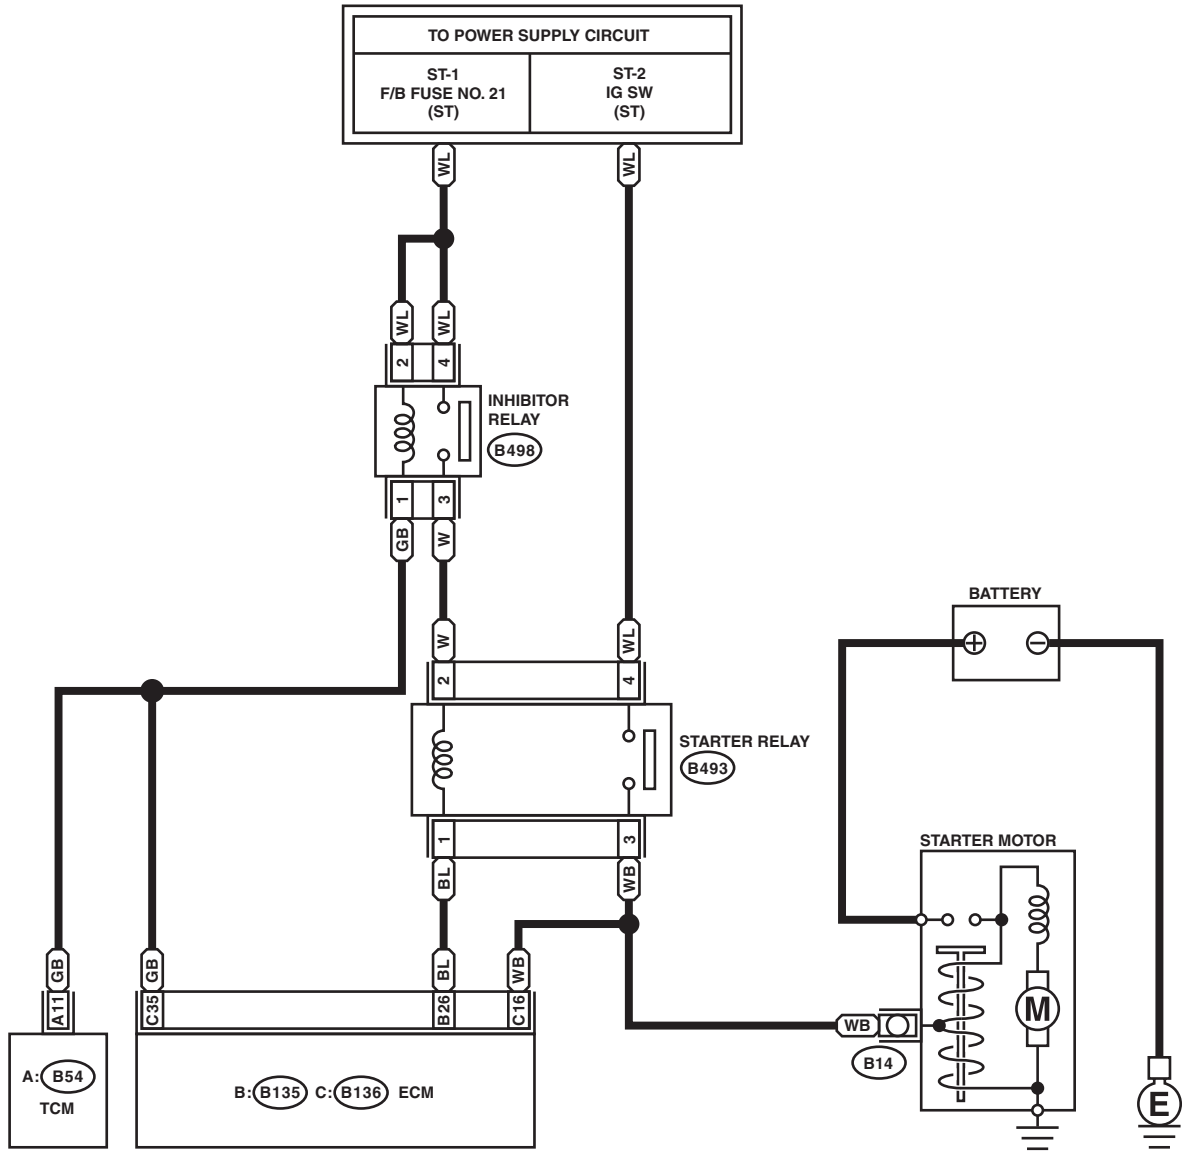

(B493) (BLACK)

(B498) (BLACK)



A: (B54) B: (B135)

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31	32	33	34	35

C: (B136)

1	2	3	4	5	6
7	8	9	10	11	12
13	14	15	16	17	18
19	20	21	22	23	24
25	26	27	28	29	30
31	32	33	34	35	


WI-25594

Stop Light System

WIRING SYSTEM

48. Stop Light System

A: WIRING DIAGRAM

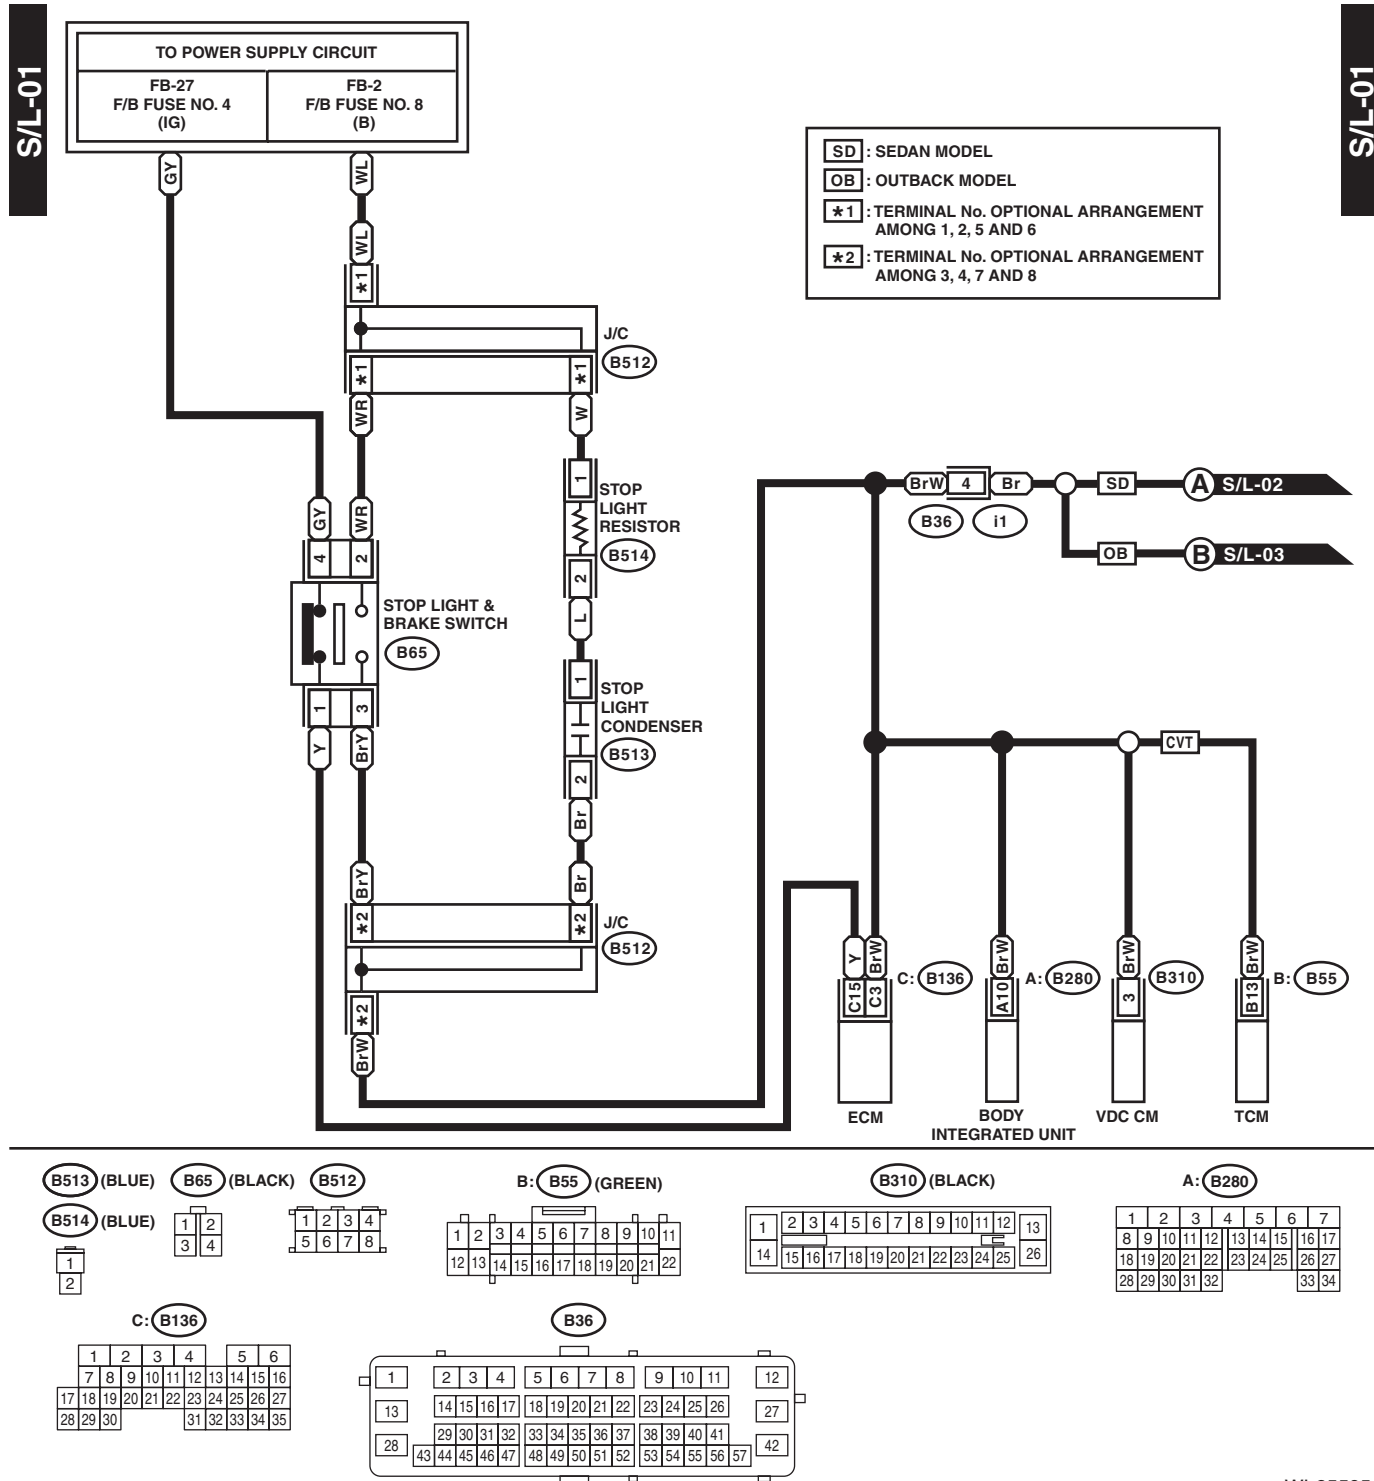






WI-25595

Stop Light System

WIRING SYSTEM

S/L-02

    S/L-02

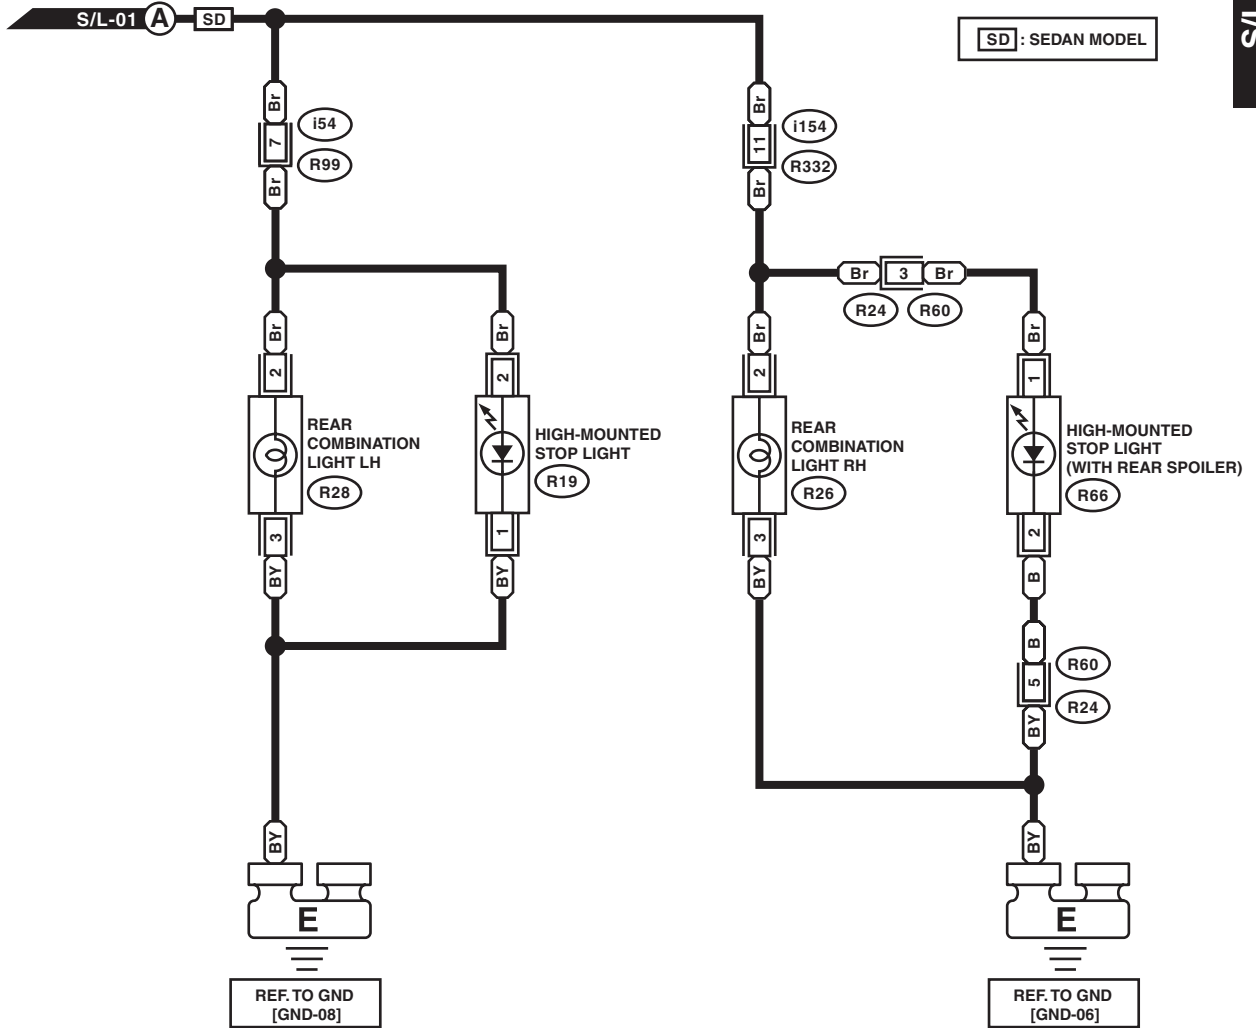




WI-25596

Stop Light System

WIRING SYSTEM

S/L-03

  
S/L-03

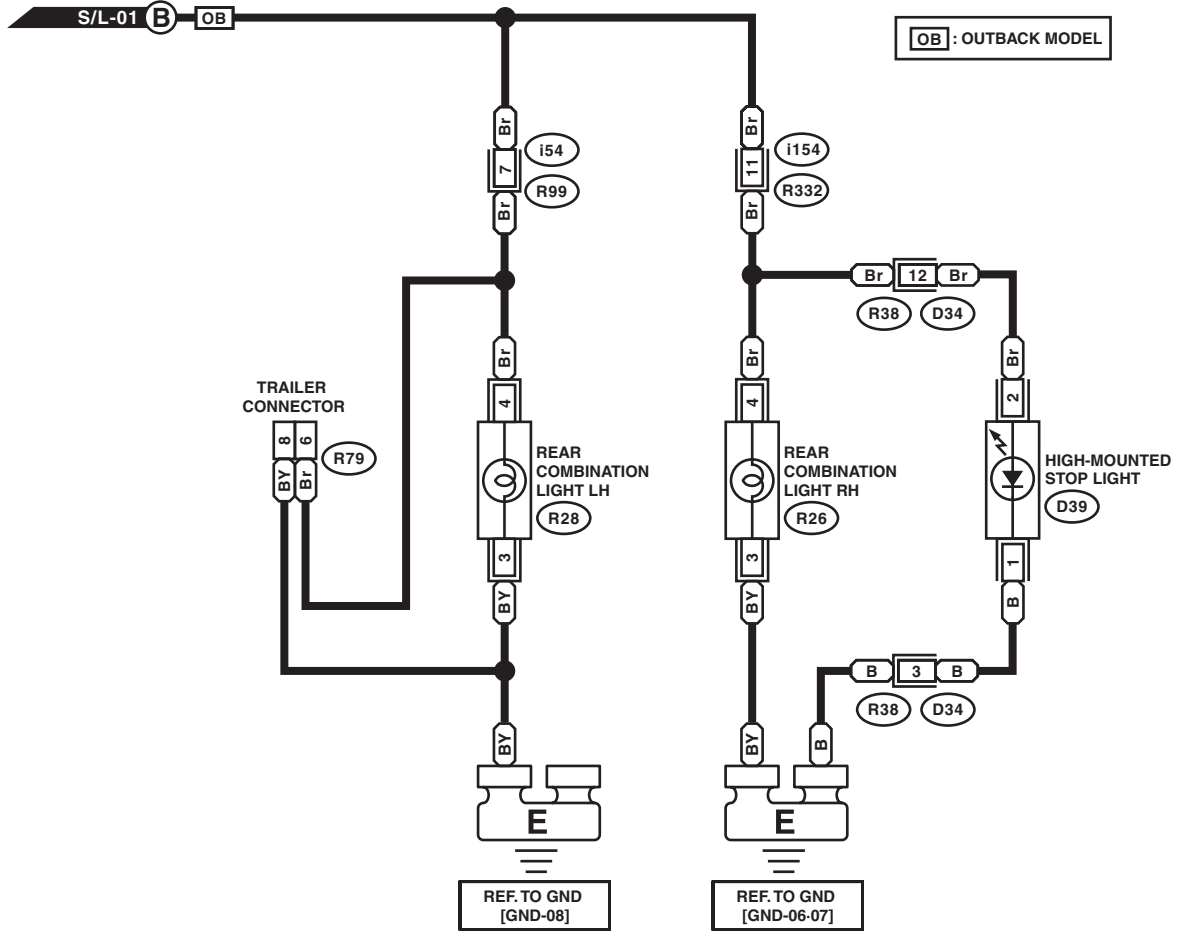

WI-25597

49.Sunroof Control System

A: WIRING DIAGRAM

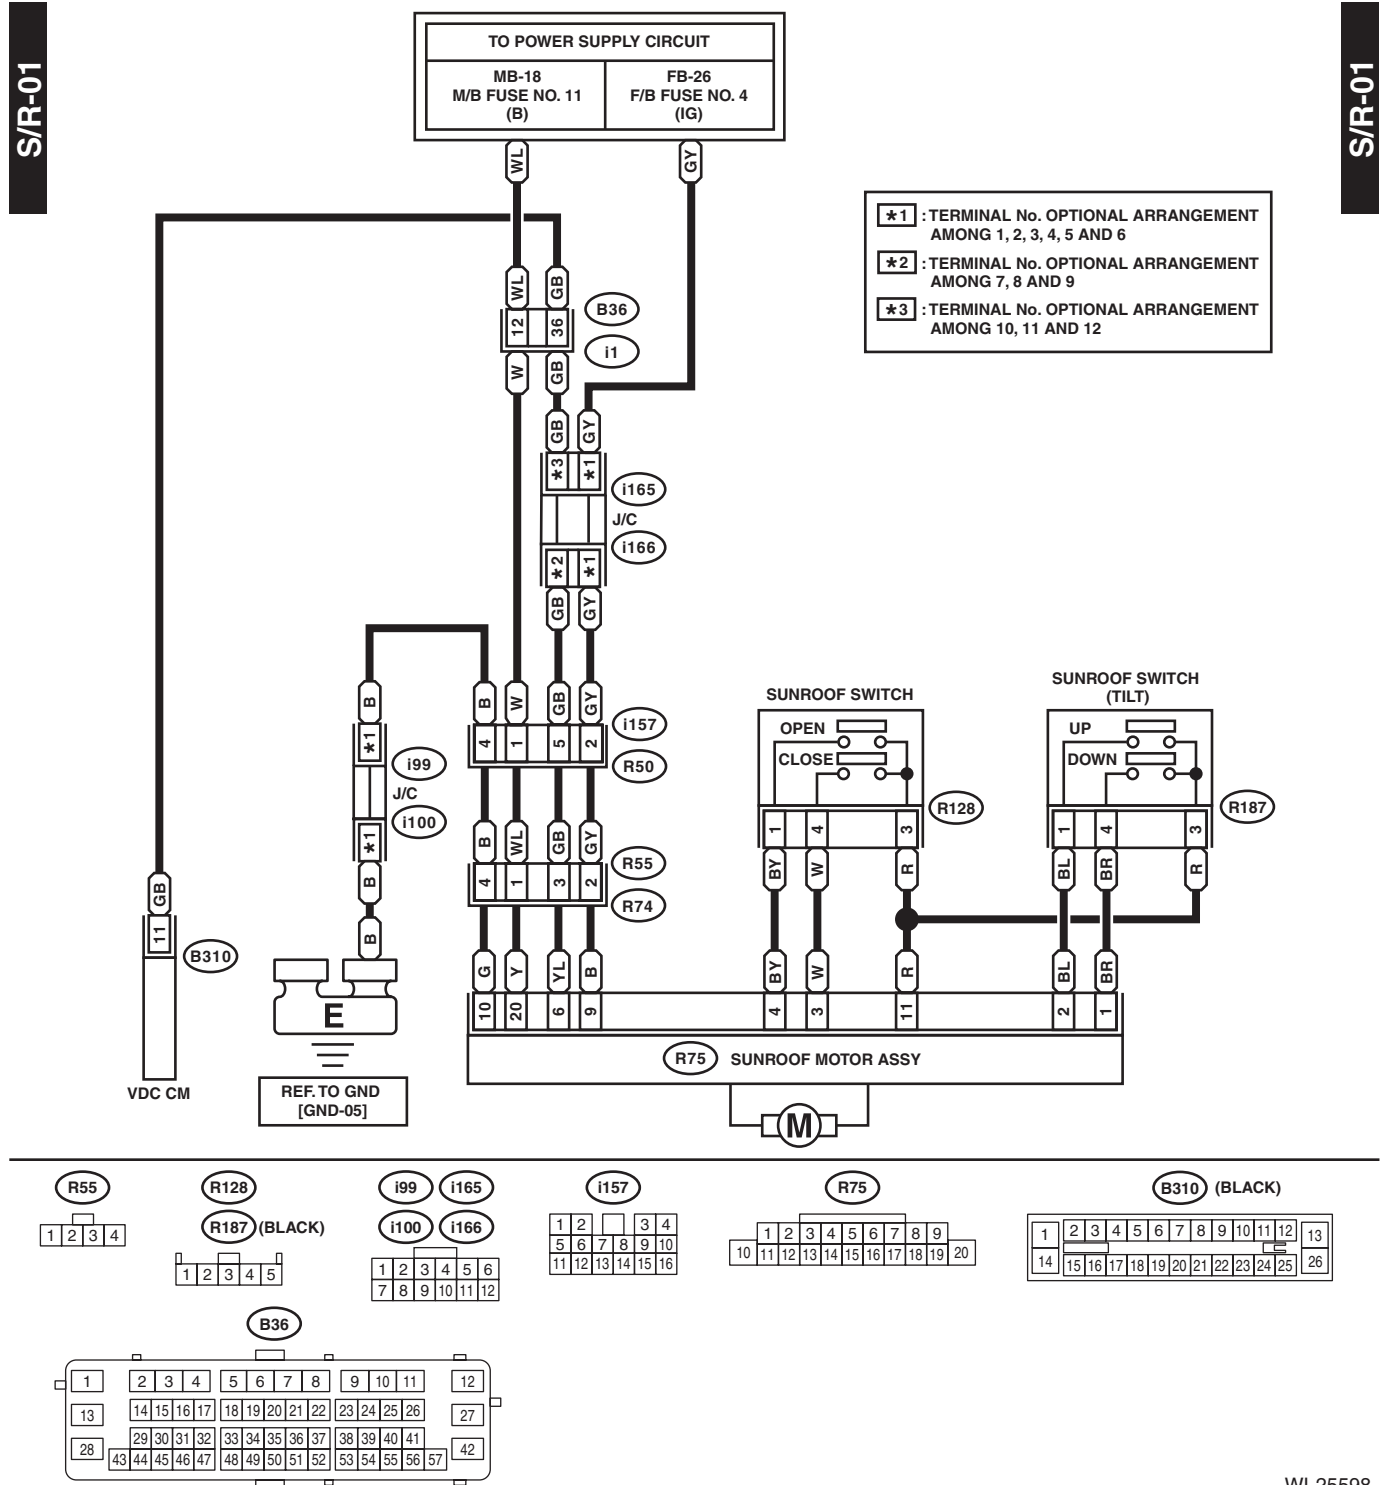


50.Tire Pressure Monitoring System

A: WIRING DIAGRAM


TPM-01

TPM-01

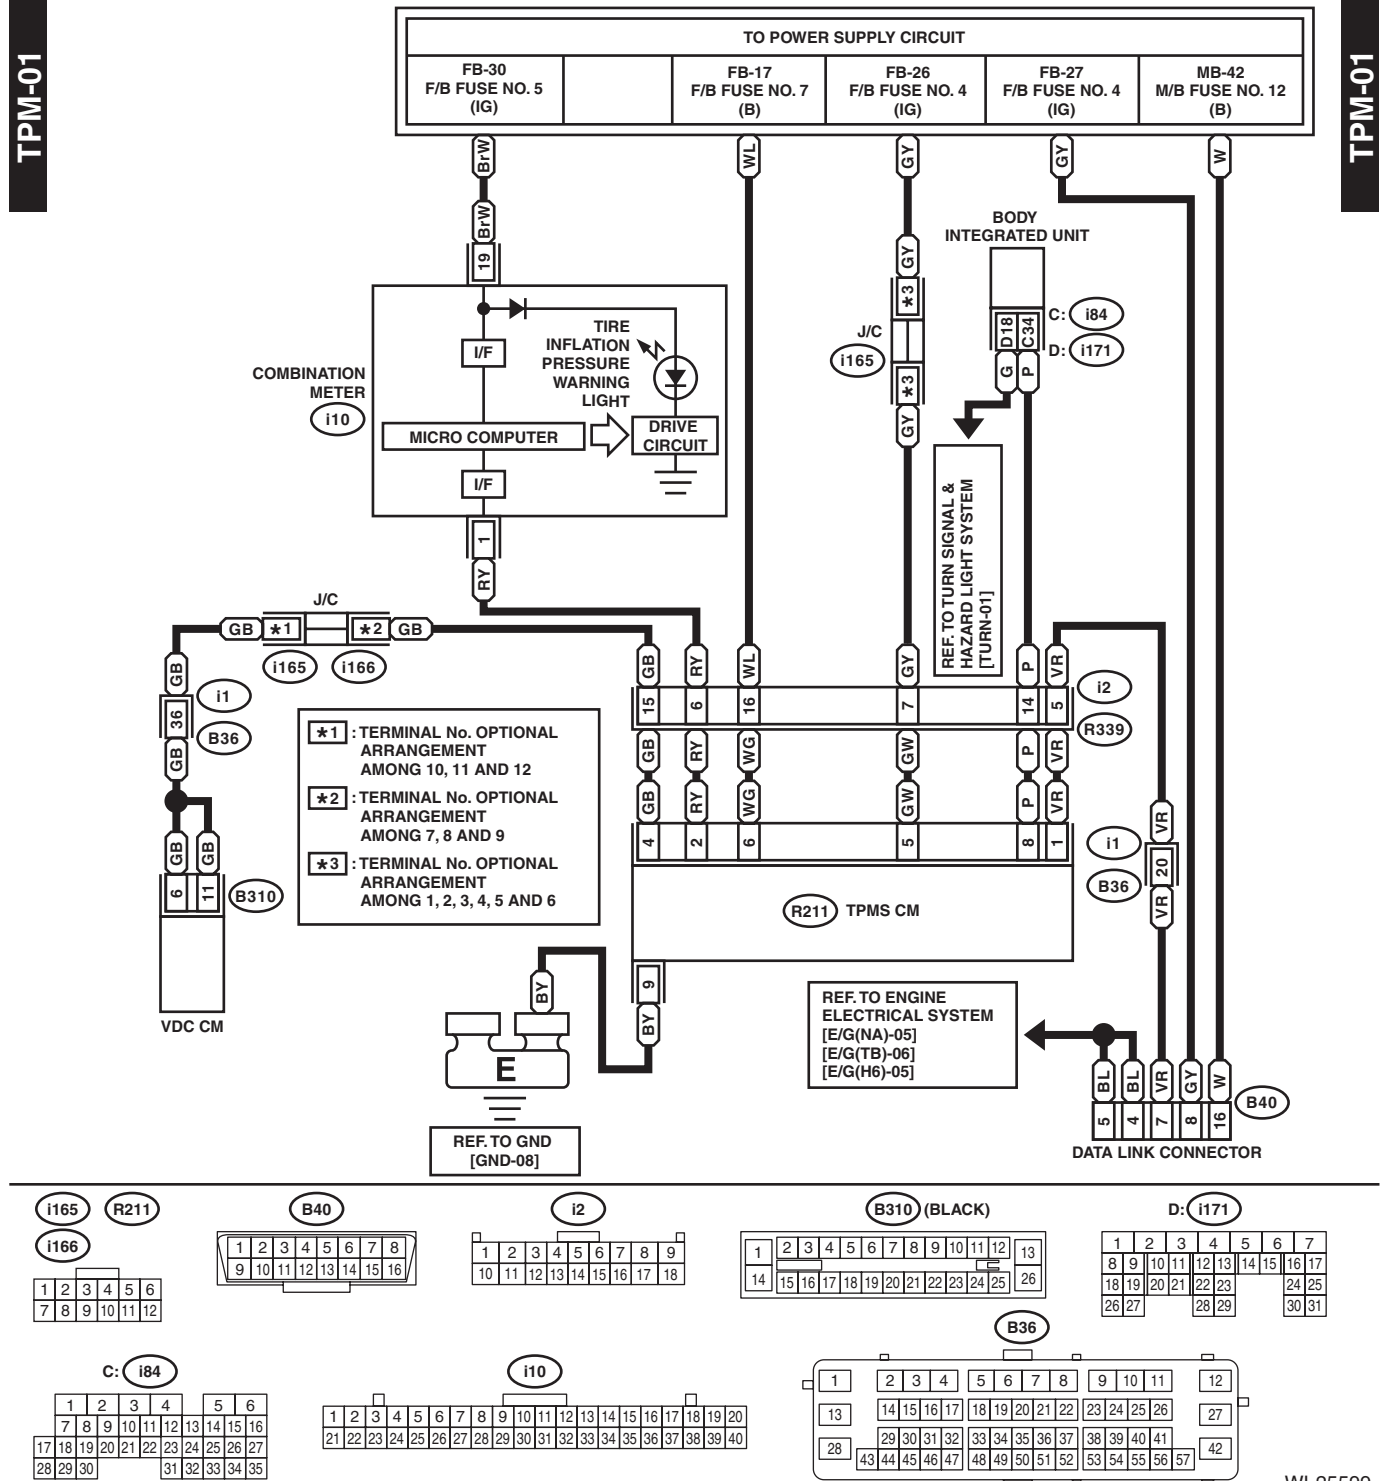


51. Turn Signal Light and Hazard Light System

A: WIRING DIAGRAM

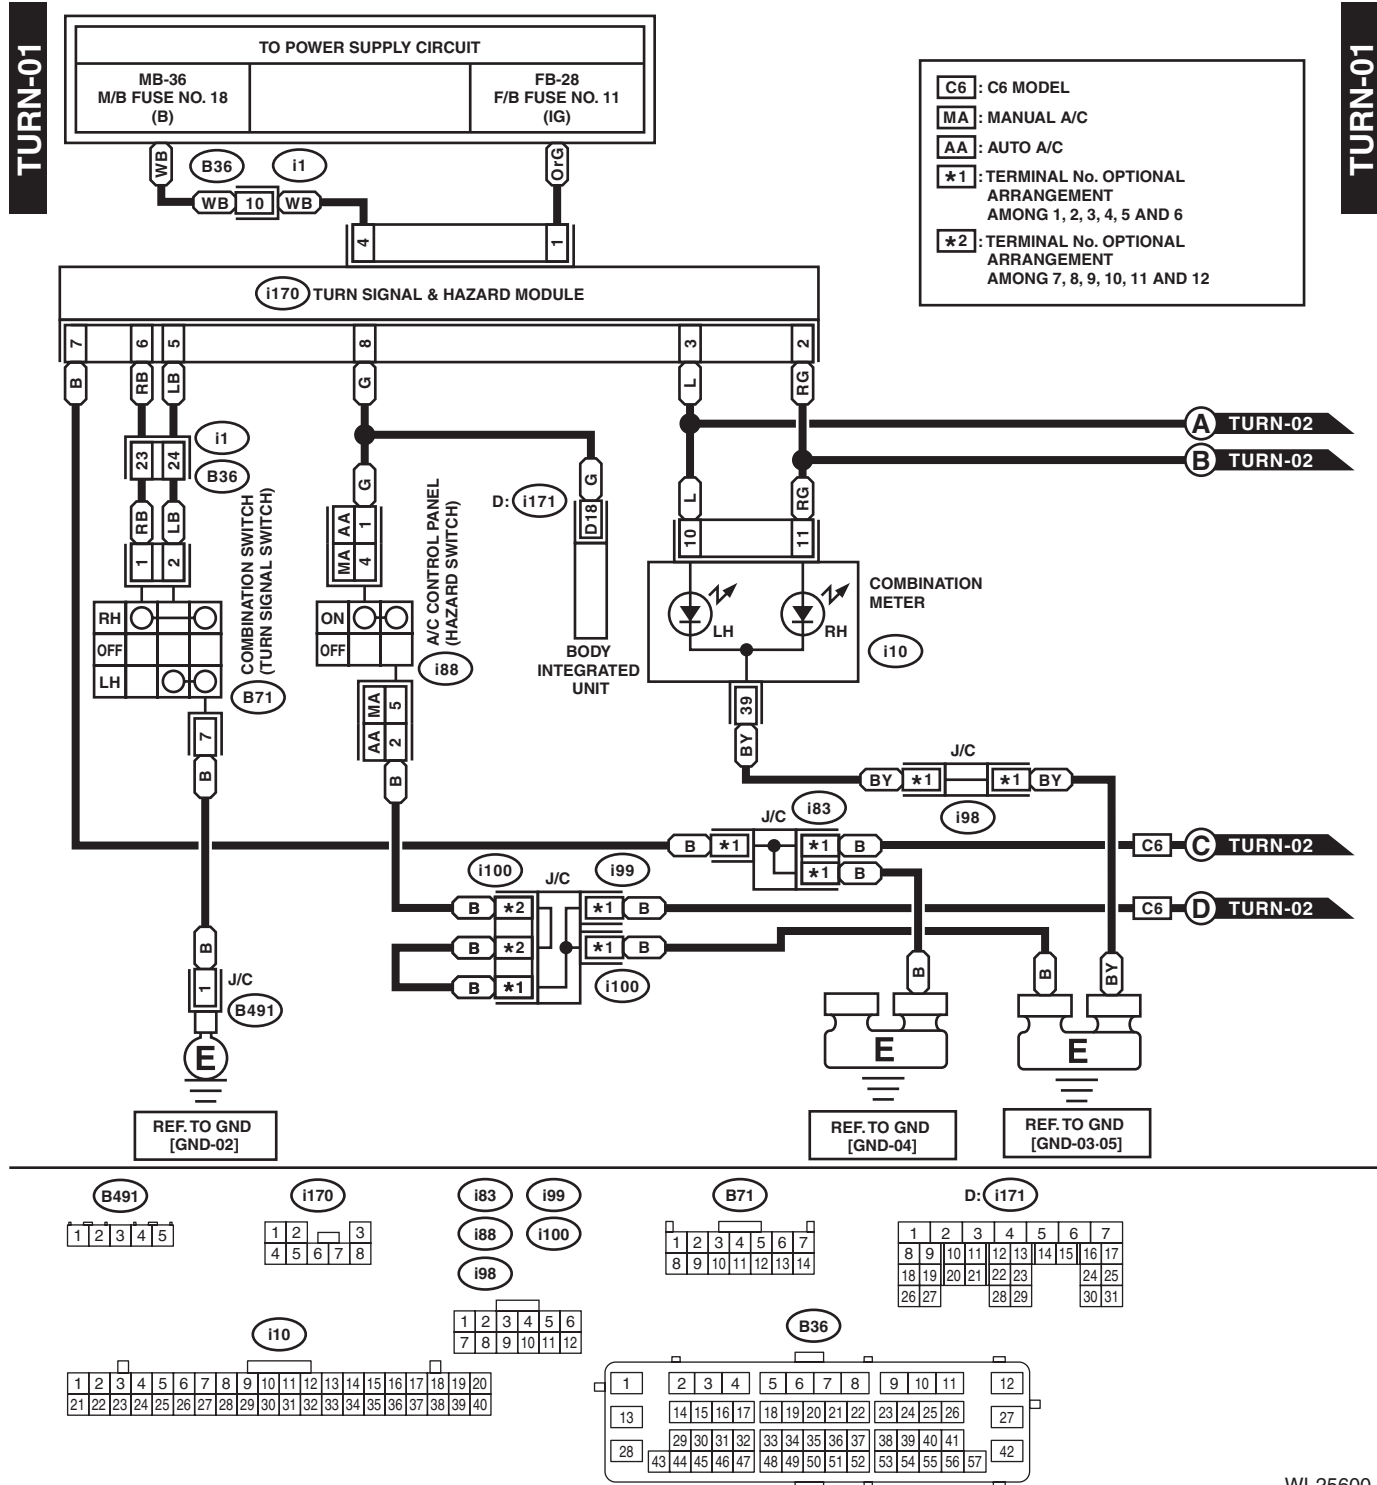

Turn Signal Light and Hazard Light System


WIRING SYSTEM

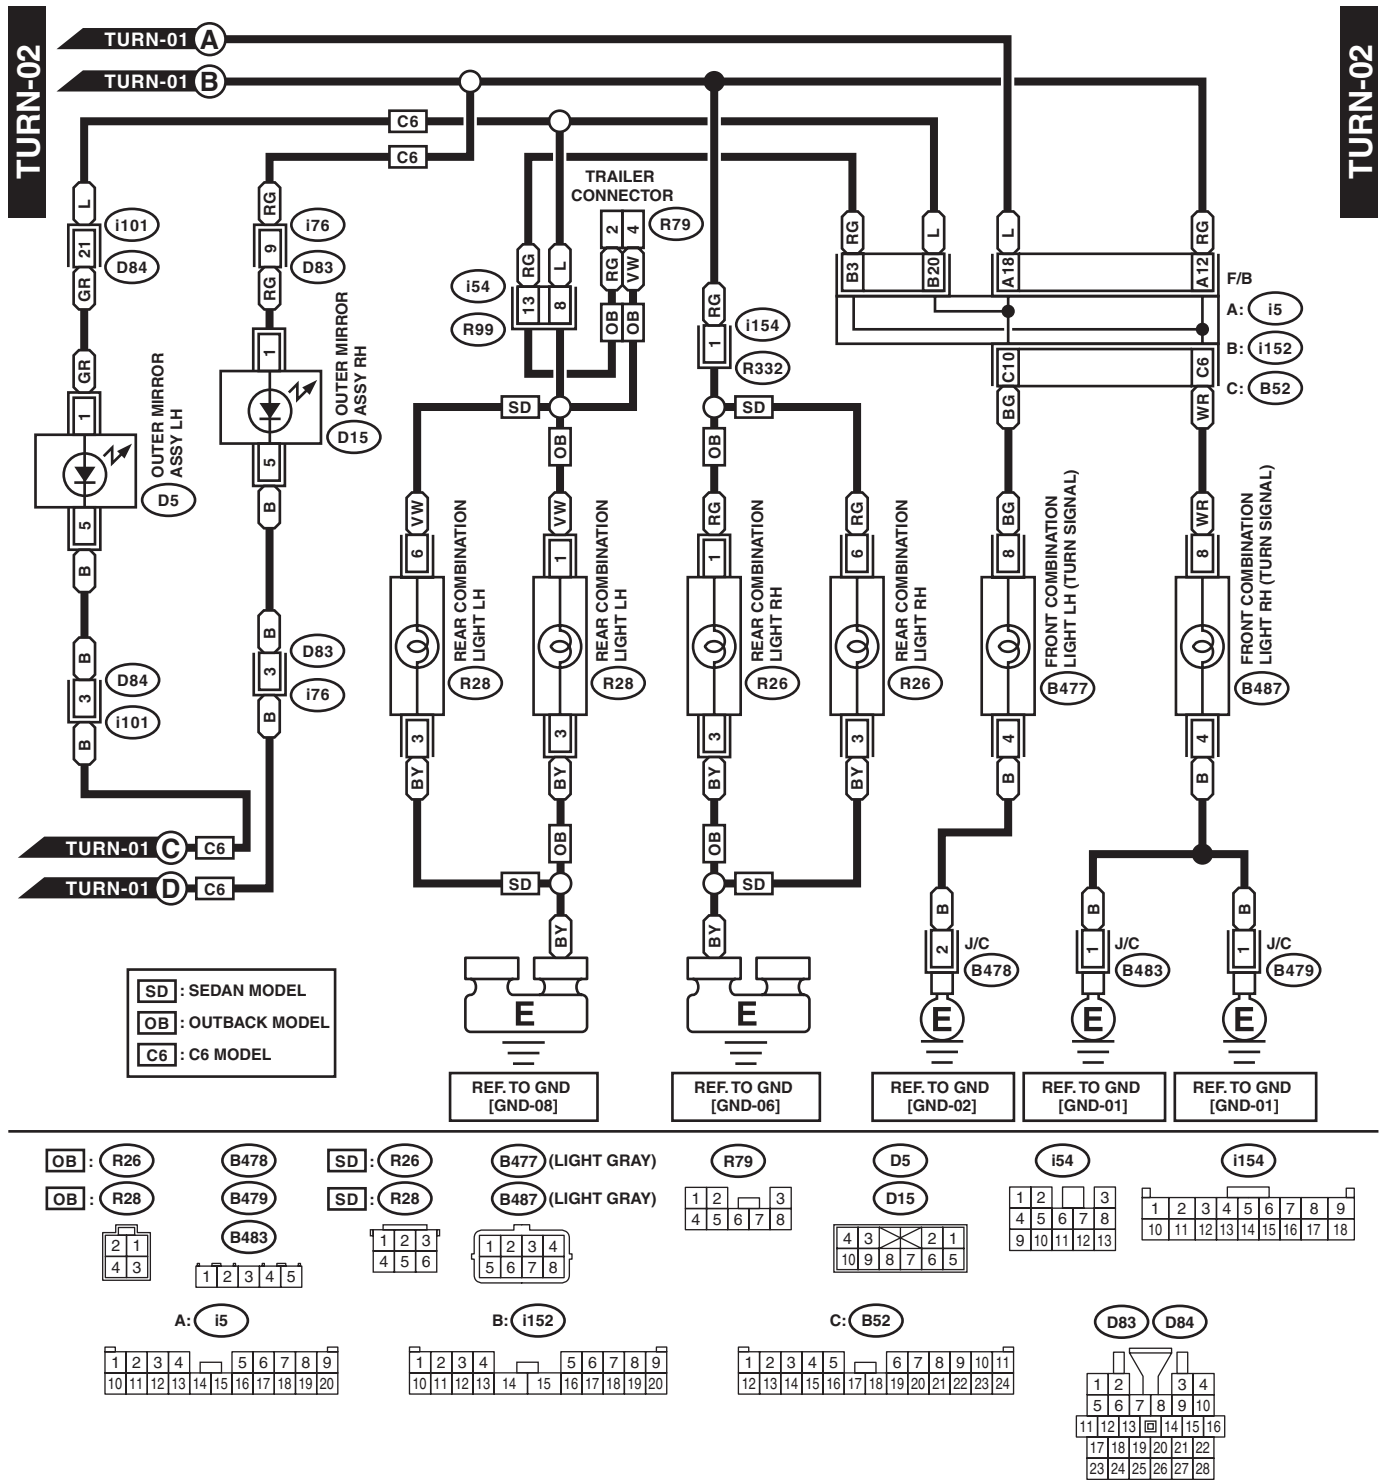

WI-25601


52. Vehicle Dynamics Control System

A: WIRING DIAGRAM

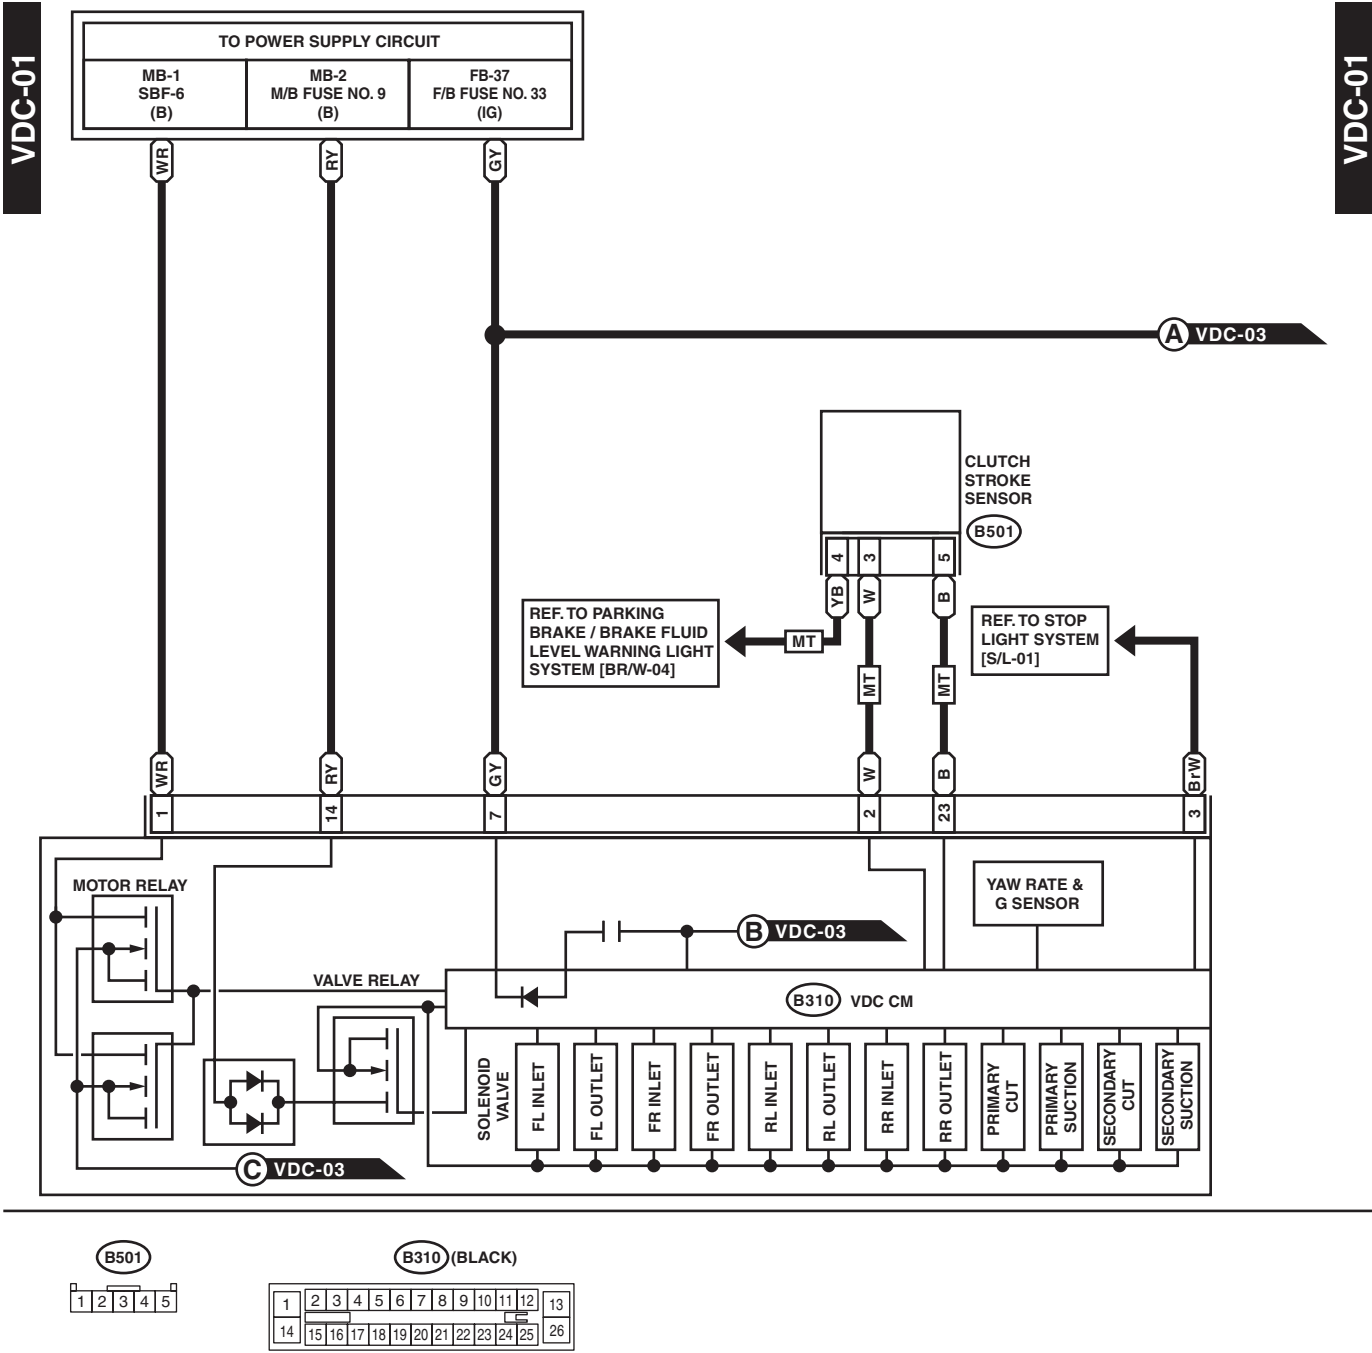

Vehicle Dynamics Control System

WIRING SYSTEM

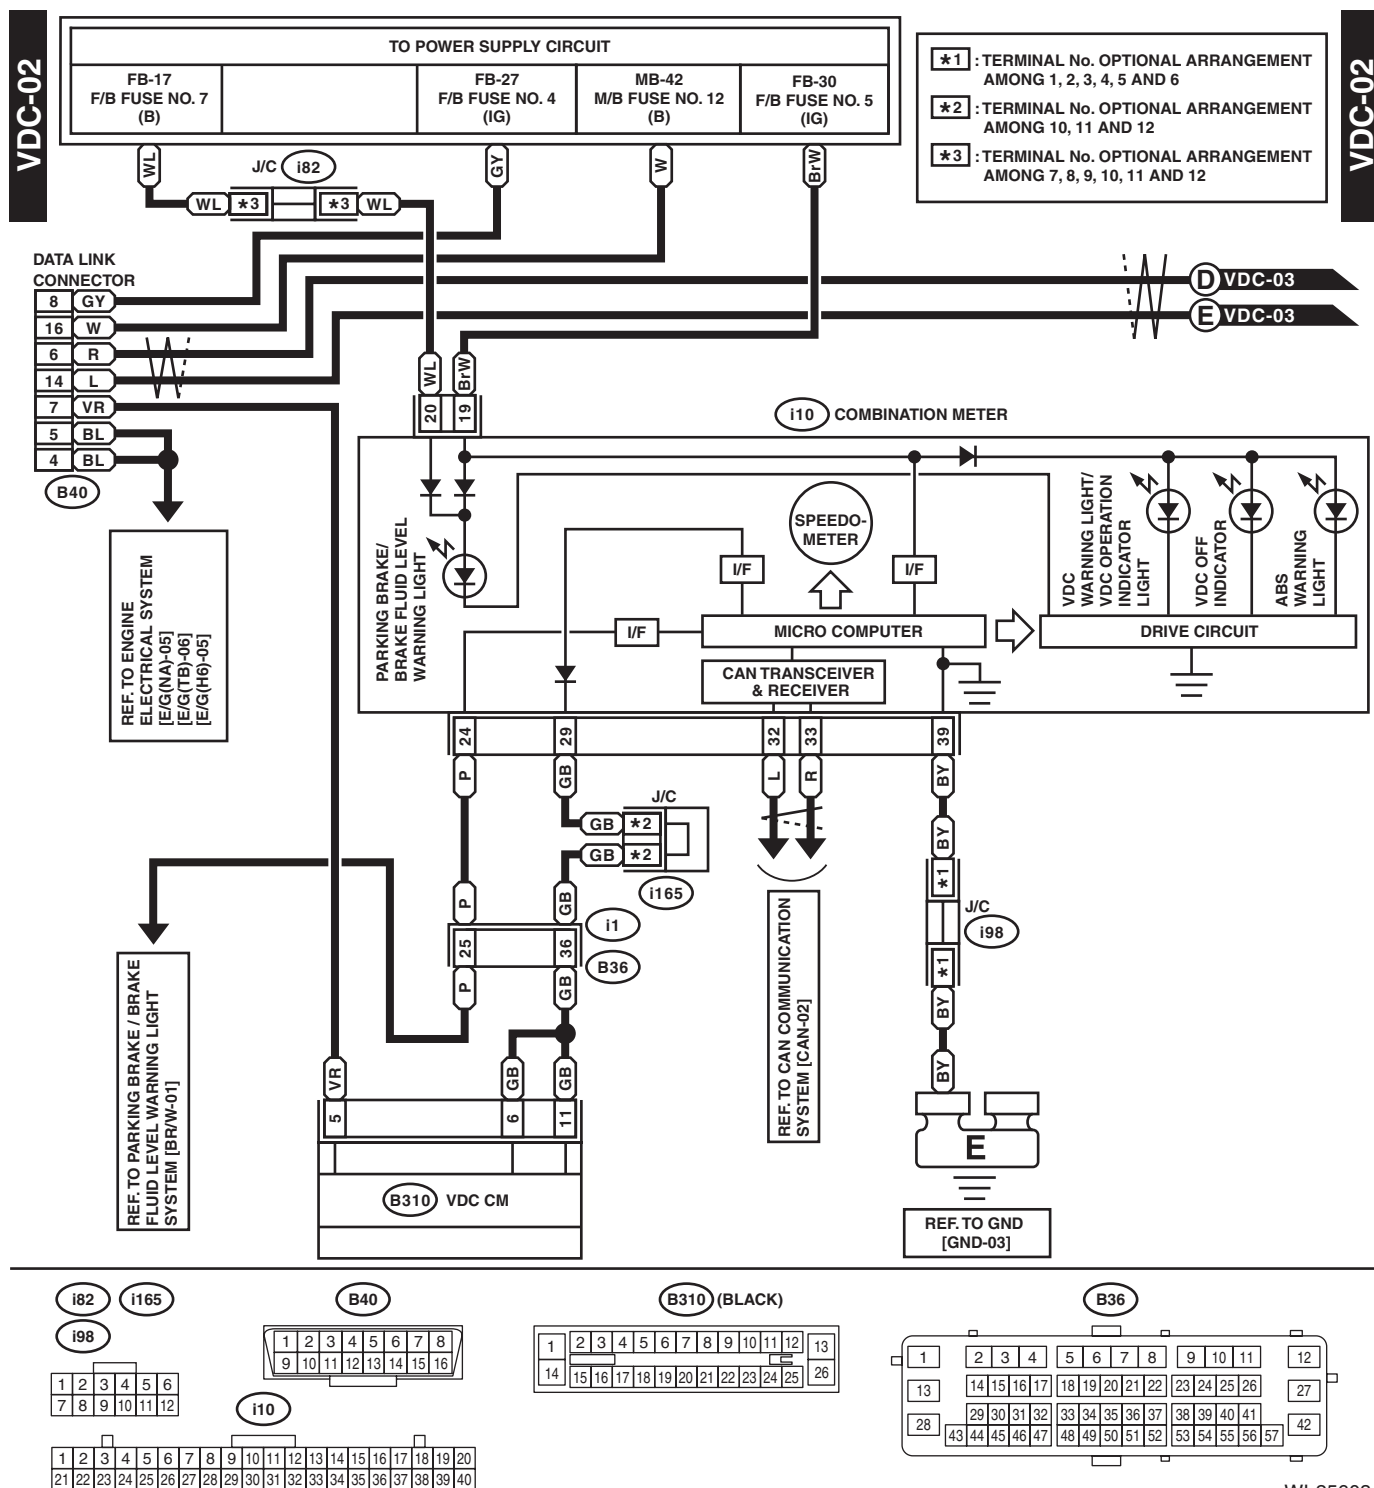


WI-25603

Wiper Deicer System

WIRING SYSTEM

53. Wiper Deicer System


A: WIRING DIAGRAM

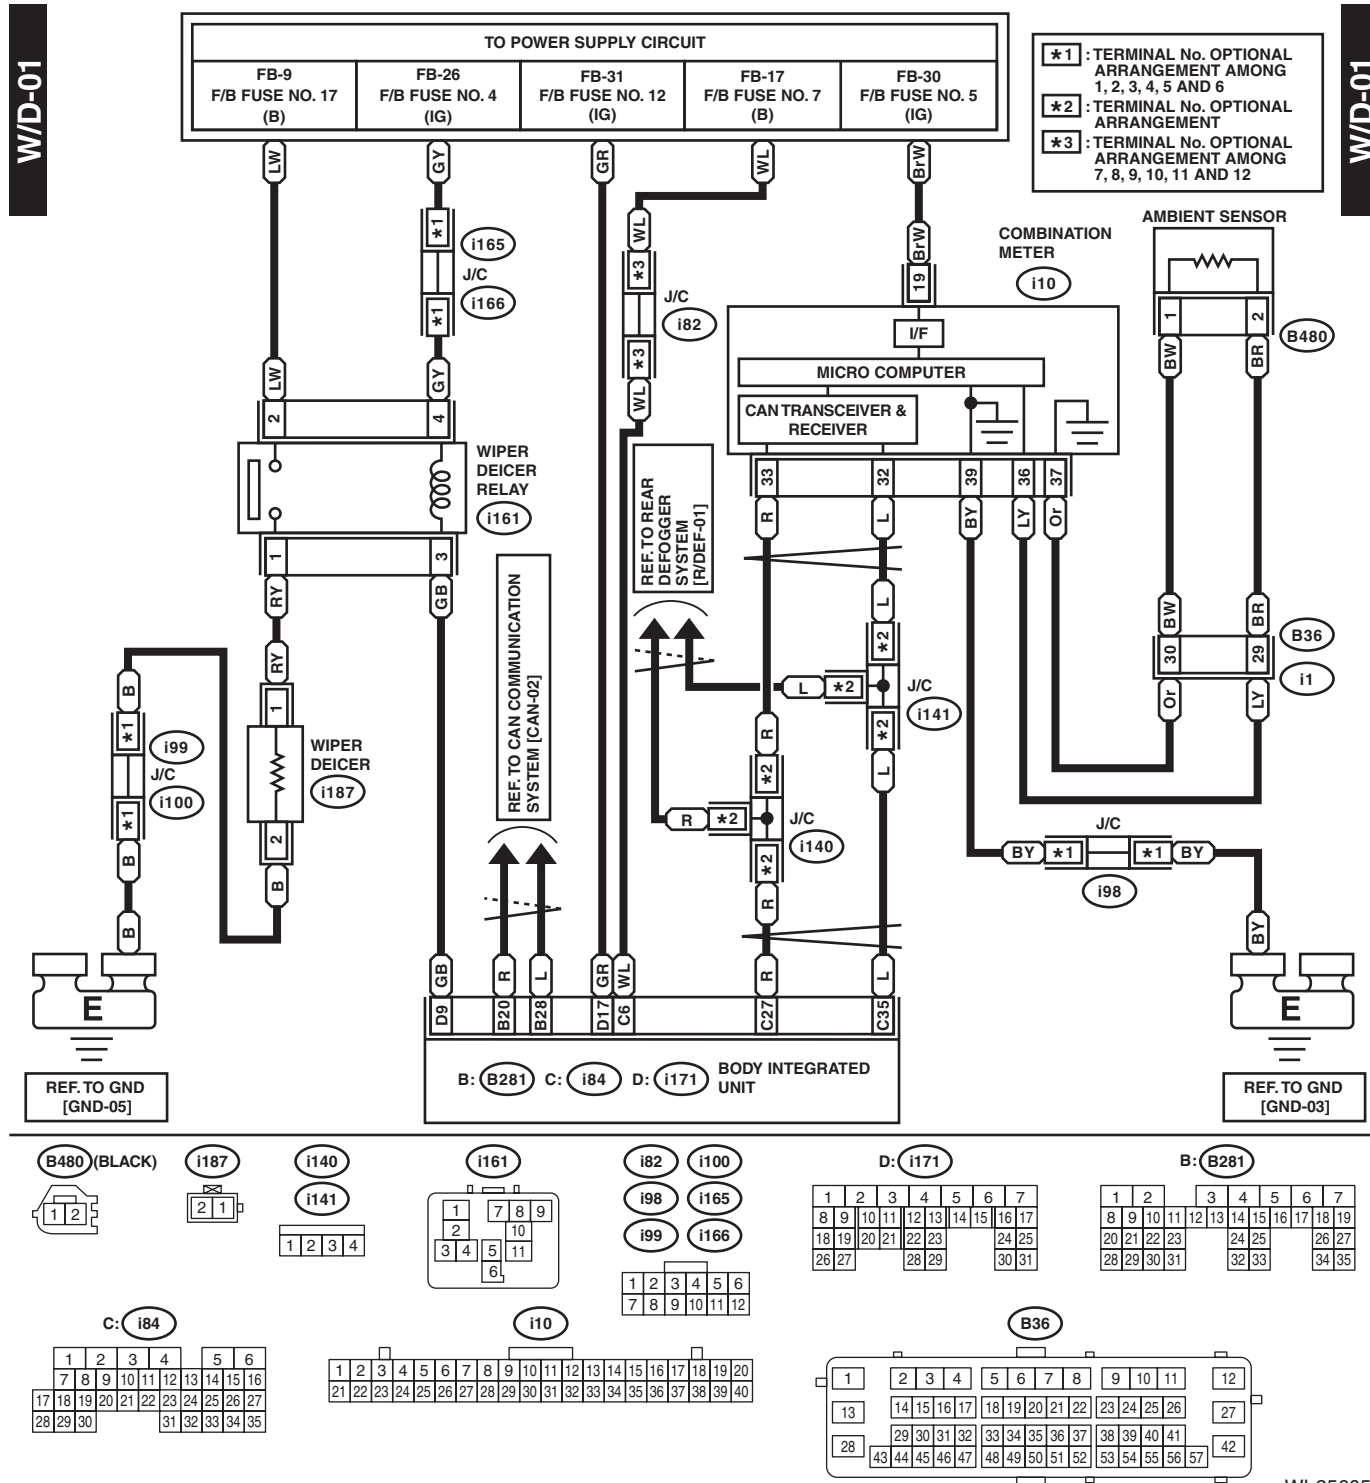

54. Harness Components Location

A: LOCATION

1. SEDAN MODEL

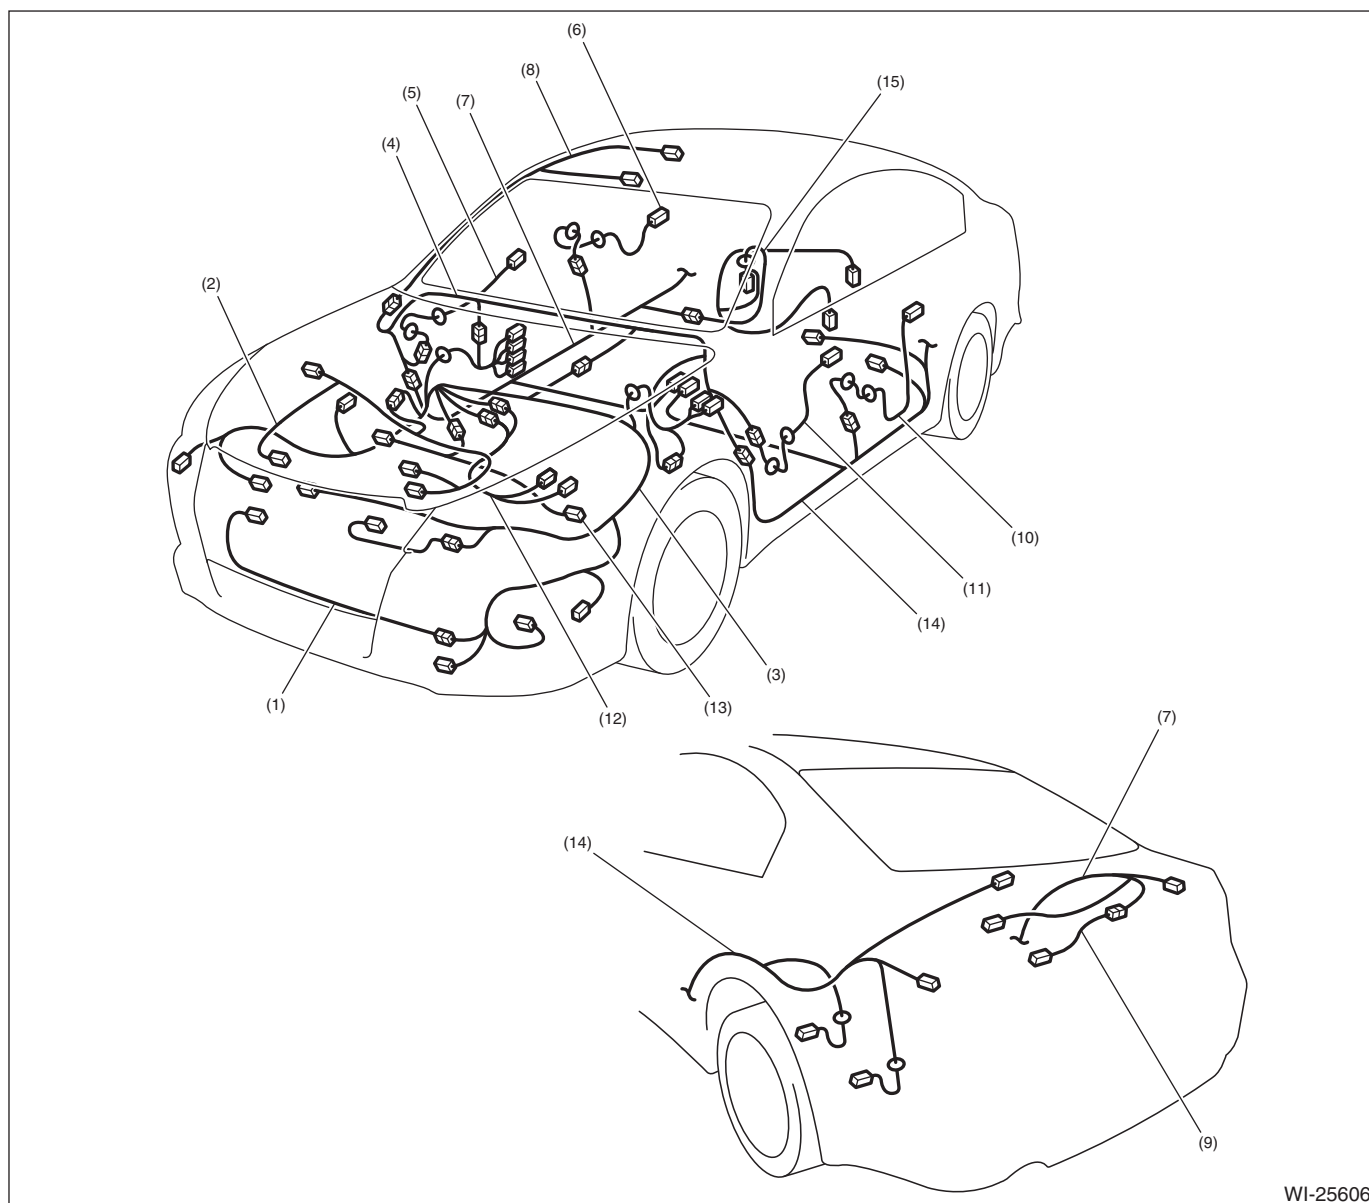


WI-25606

- | | | |
|-------------------------------------|----------------------------|-----------------------------|
| (1) Front wiring harness | (6) Rear door cord RH | (11) Front door cord LH |
| (2) Engine wiring harness | (7) Rear wiring harness RH | (12) Transmission cord |
| (3) Bulkhead wiring harness | (8) Roof cord | (13) Oxygen sensor cord |
| (4) Instrument panel wiring harness | (9) Trunk lid cord | (14) Rear wiring harness LH |
| (5) Front door cord RH | (10) Rear door cord LH | (15) Fuel cord |

Harness Components Location

WIRING SYSTEM

2. OUTBACK MODEL

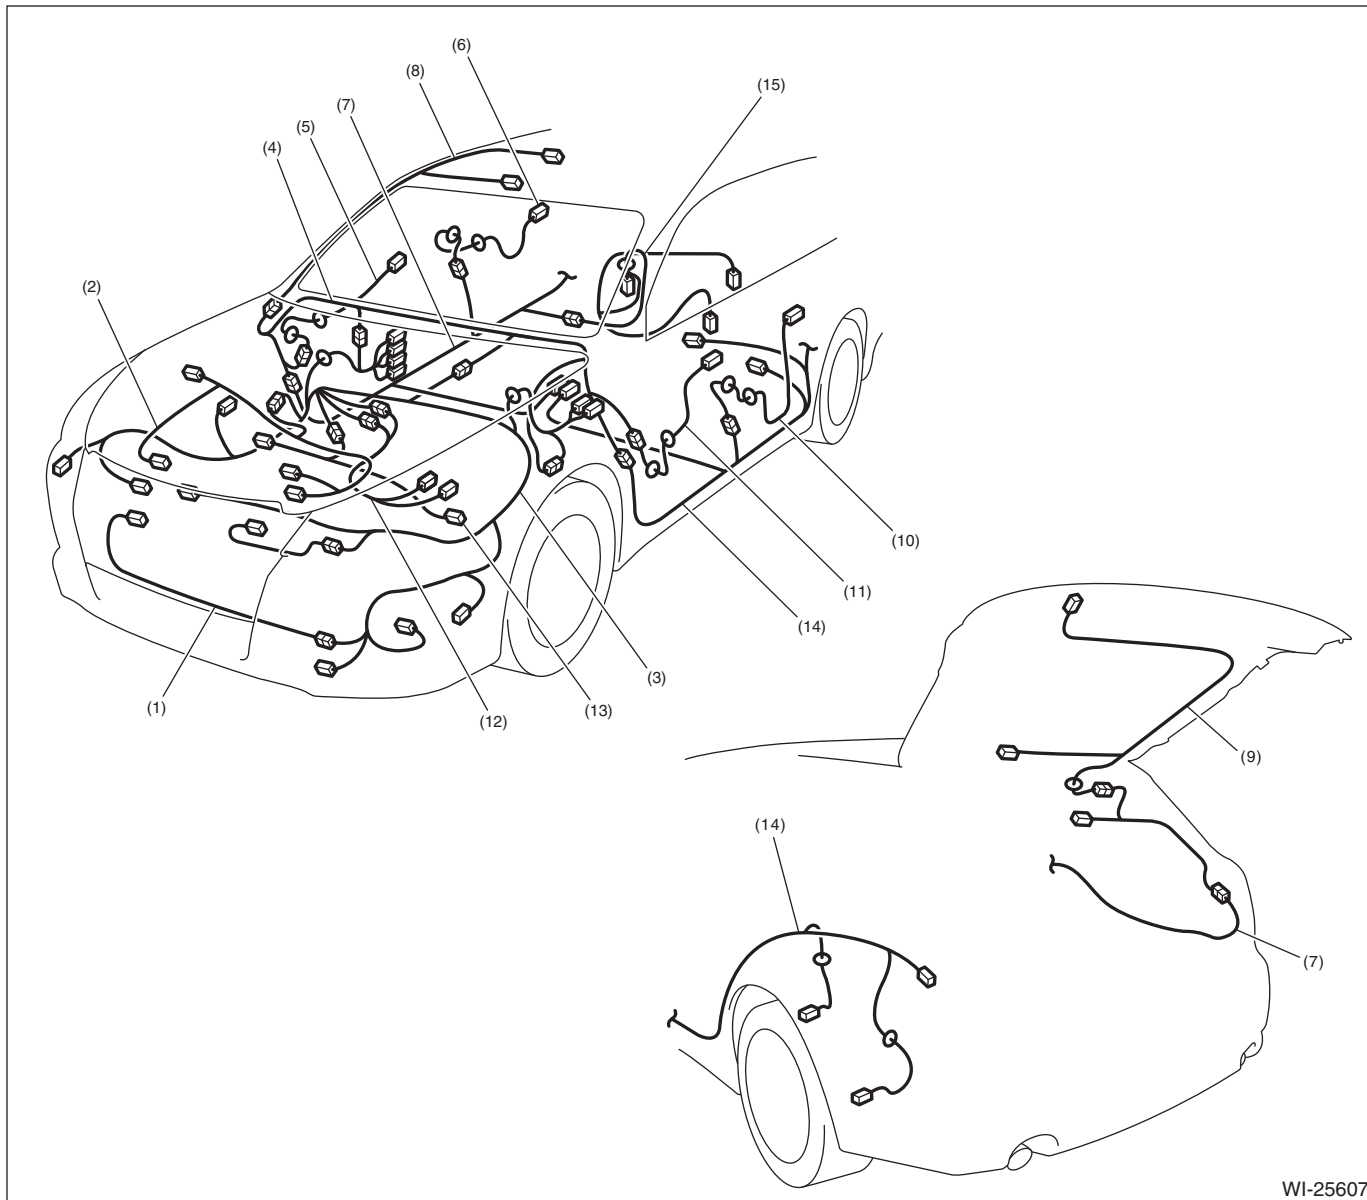


WI-25607

- | | | |
|-------------------------------------|----------------------------|-----------------------------|
| (1) Front wiring harness | (6) Rear door cord RH | (11) Front door cord LH |
| (2) Engine wiring harness | (7) Rear wiring harness RH | (12) Transmission cord |
| (3) Bulkhead wiring harness | (8) Roof cord | (13) Oxygen sensor cord |
| (4) Instrument panel wiring harness | (9) Rear gate cord | (14) Rear wiring harness LH |
| (5) Front door cord RH | (10) Rear door cord LH | (15) Fuel cord |

55.Front Wiring Harness

A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
F106	3	Light gray	C-2		Radiator fan CM (3.6 L model)
F135	4	Black	C-2	B504	Bulkhead wiring harness (3.6 L model)

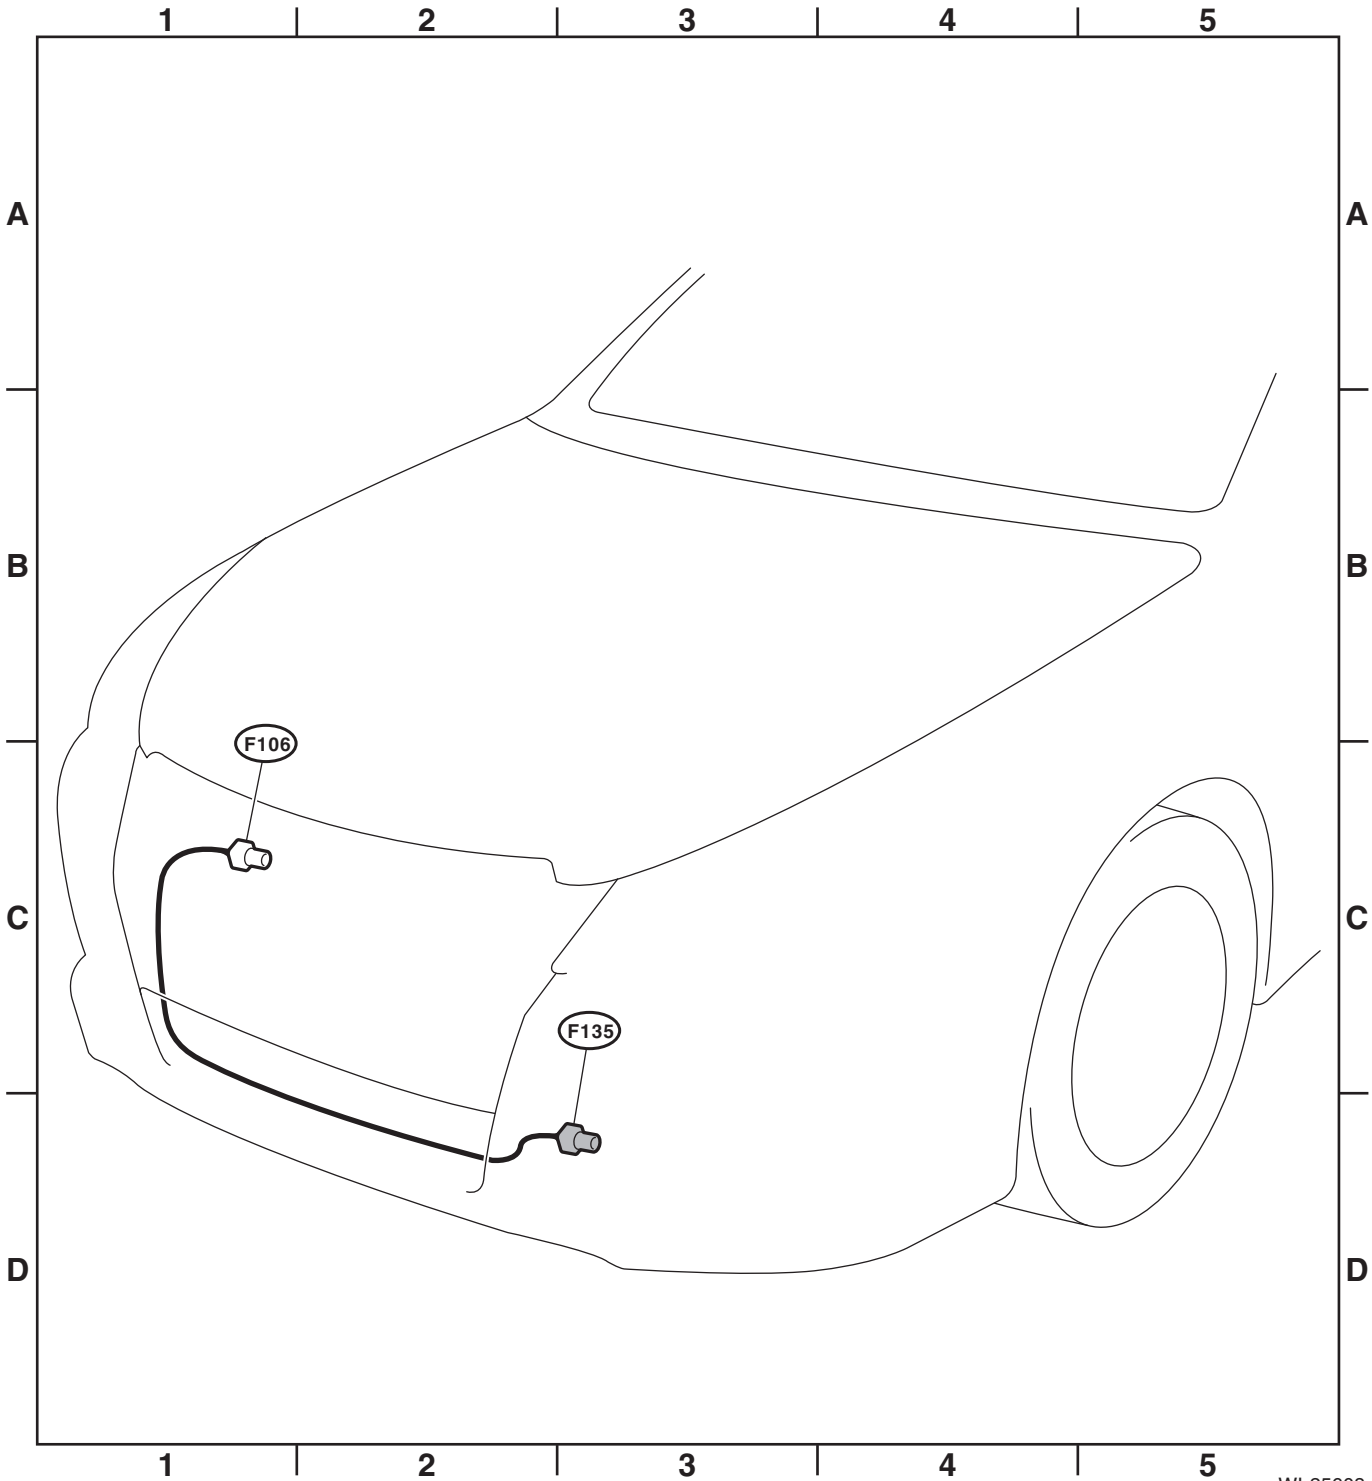

Bulkhead Wiring Harness (In Engine Compartment)

WIRING SYSTEM

56. Bulkhead Wiring Harness (In Engine Compartment)

A: LOCATION

1. 2.5 L NON-TURBO MODEL


Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
B3	5	Black	B-2		Mass air flow and intake air temperature sensor
B5	2	Light gray	C-5		Daytime running light resistor
B6	2	Light gray	B-2		Front ABS wheel speed sensor RH
B8	5	Light gray	B-5		Front wiper motor
B11	20	Light gray	B-3	T4	Transmission cord (CVT model)
B12	12	Light gray	B-3	T3	
B14	1	Black	B-3		Starter motor
B15	2	Light gray	B-4		Front ABS wheel speed sensor LH
B16	2	Light gray	B-4		Brake fluid level switch
B21	54	Black	B-3	E2	Engine wiring harness
B24	2	Light gray	B-3	T1	Transmission cord (MT model)
B25	2	Brown	B-3	T2	
B146	2	Dark gray	C-4		Front washer motor
B147	2	Dark gray	C-4		Rear washer motor
B310	26	Black	B-2		VDC CM
B321	2	★	A-2		Hood switch
B396	2	Brown	C-4		Washer fluid level sensor
B407	2	Black	C-4		Puddle light LH
B430	2	Black	B-2		Puddle light RH
B471	3	Light green	B-2		Generator
B473	2	Black	C-3		Main fan motor
B474	2	Brown	C-4		Front fog light LH
B477	8	Light gray	C-4		Front combination light LH
B478	5	★	C-4		J/C
B479	5	★	C-4		
B480	2	Black	C-2		Ambient sensor
B481	1	Black	C-2		Horn
B482	2	Black	C-1		Sub fan motor
B483	5	★	B-2		J/C
B487	8	Light gray	B-1		Front combination light RH
B488	2	Brown	B-1		Front fog light RH
B489	1	Black	B-1		Horn
B490	2	Black	B-1		Keyless buzzer
B497	22	Black	B-5		A/C relay holder
B505	3	Light gray	B-3		Pressure sensor
B506	2	Light gray	B-3		Compressor solenoid
B507	3	Black	C-3		Flow sensor
B515	1	★	B-2		Generator terminal B

★ : White or natural color

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB13	2	Yellow	C-3		Front sub sensor LH
AB16	2	Yellow	B-1		Front sub sensor RH

Bulkhead Wiring Harness (In Engine Compartment)

WIRING SYSTEM

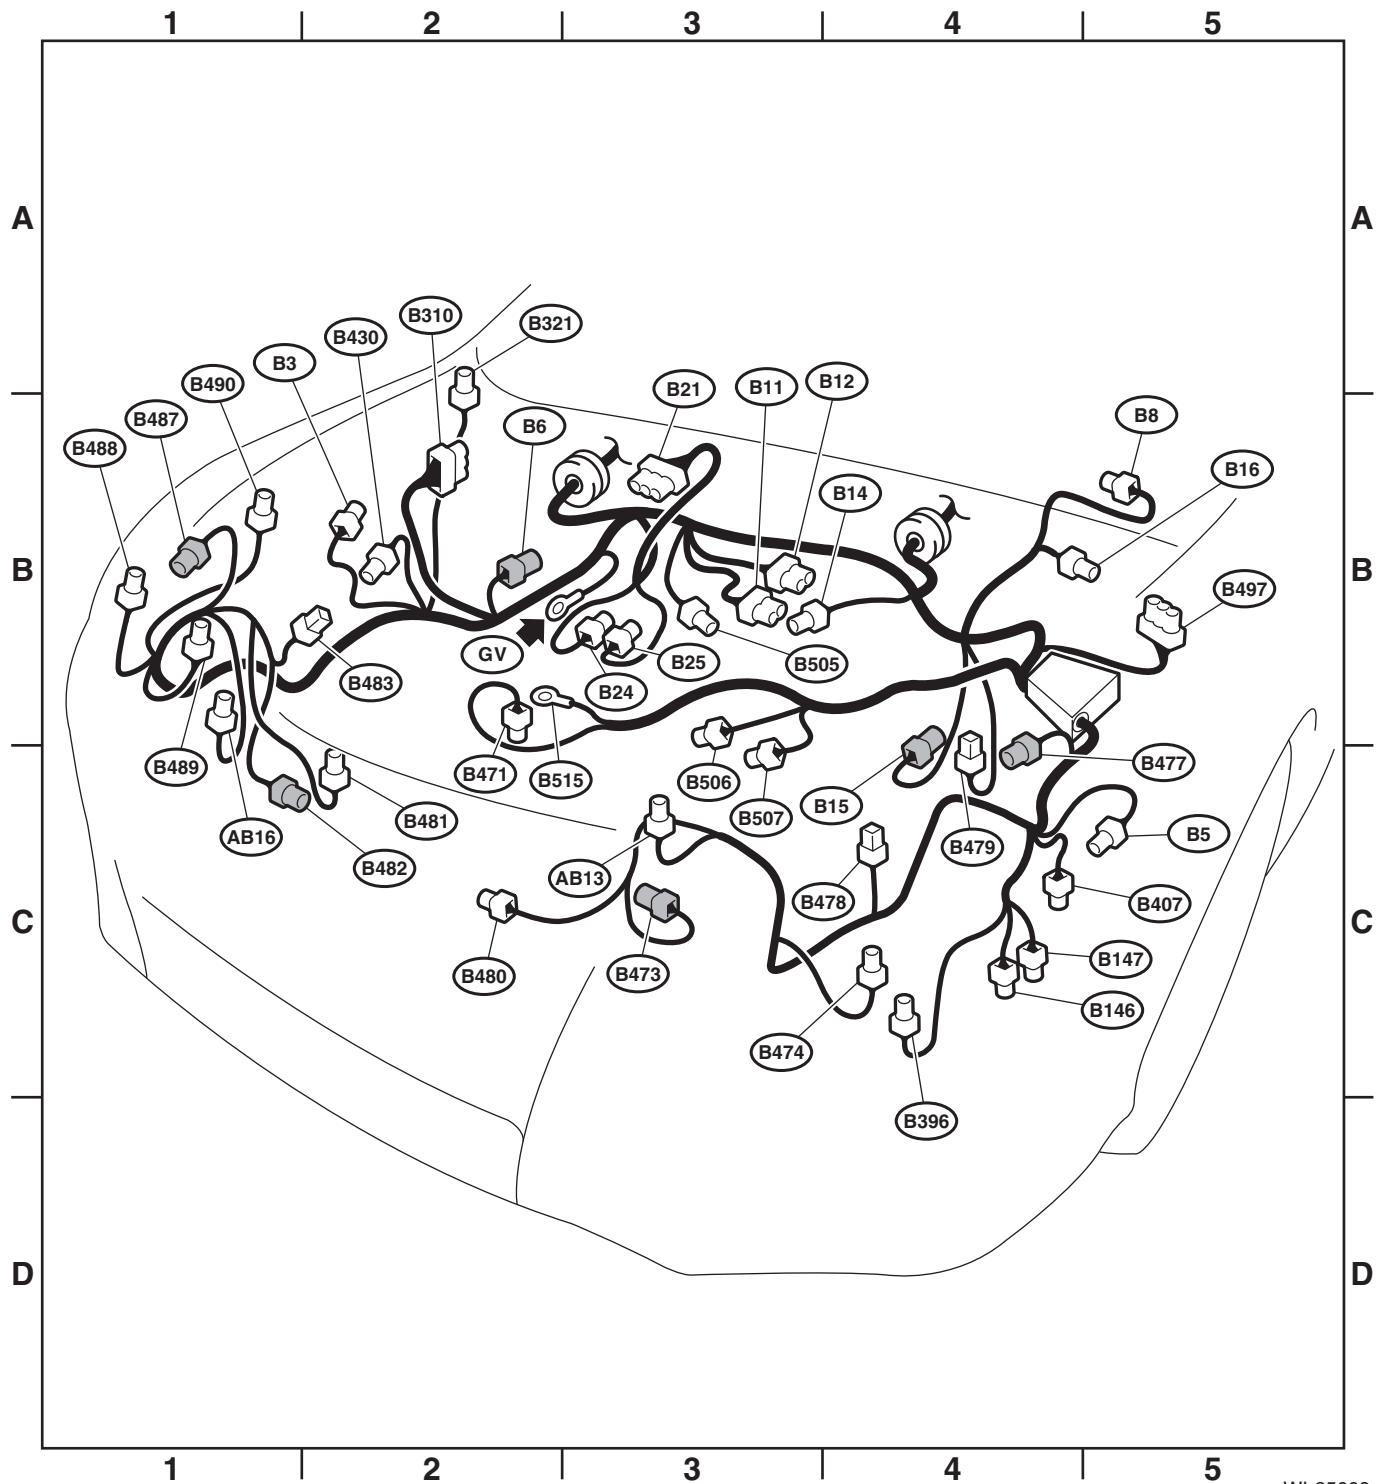

WI-25609

Bulkhead Wiring Harness (In Engine Compartment)

WIRING SYSTEM


2. 2.5 L TURBO MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
B3	5	Black	B-2		Mass air flow and intake air temperature sensor
B5	2	Light gray	C-5		Daytime running light resistor
B6	2	Light gray	B-2		Front ABS wheel speed sensor RH
B8	5	Light gray	B-5		Front wiper motor
B14	1	Black	B-3		Starter motor
B15	2	Light gray	B-4		Front ABS wheel speed sensor LH
B16	2	Light gray	B-4		Brake fluid level switch
B21	54	Black	B-3	E2	Engine wiring harness
B22	16	★	B-3	E3	
B24	2	Light gray	B-3	T1	Transmission cord
B25	2	Brown	B-3	T2	
B146	2	Dark gray	C-4		Front washer motor
B147	2	Dark gray	C-4		Rear washer motor
B310	26	Black	B-2		VDC CM
B321	2	★	B-2		Hood switch
B396	2	Brown	C-4		Washer fluid level sensor
B407	2	Black	C-4		Puddle light LH
B430	2	Black	B-2		Puddle light RH
B471	3	Light green	B-2		Generator
B473	2	Dark gray	C-3		Main fan motor
B474	2	Brown	C-4		Front fog light LH
B477	8	Light gray	C-4		Front combination light LH
B478	5	★	C-4		J/C
B479	5	★	C-4		
B480	2	Black	C-2		Ambient sensor
B481	1	Black	C-2		Horn
B482	2	Dark gray	C-1		Sub fan motor
B483	5	★	B-2		J/C
B487	8	Light gray	B-1		Front combination light RH
B488	2	Brown	B-1		Front fog light RH
B489	1	Black	B-1		Horn
B490	2	Black	B-1		Keyless buzzer
B497	22	Black	B-5		A/C relay holder
B505	3	Light gray	B-3		Pressure sensor
B506	2	Light gray	B-3		Compressor solenoid
B507	3	Black	C-3		Flow sensor
B515	1	★	B-2		Generator terminal B
★ : White or natural color					

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB13	2	Yellow	C-3		Front sub sensor LH
AB16	2	Yellow	B-1		Front sub sensor RH

Bulkhead Wiring Harness (In Engine Compartment)

WIRING SYSTEM

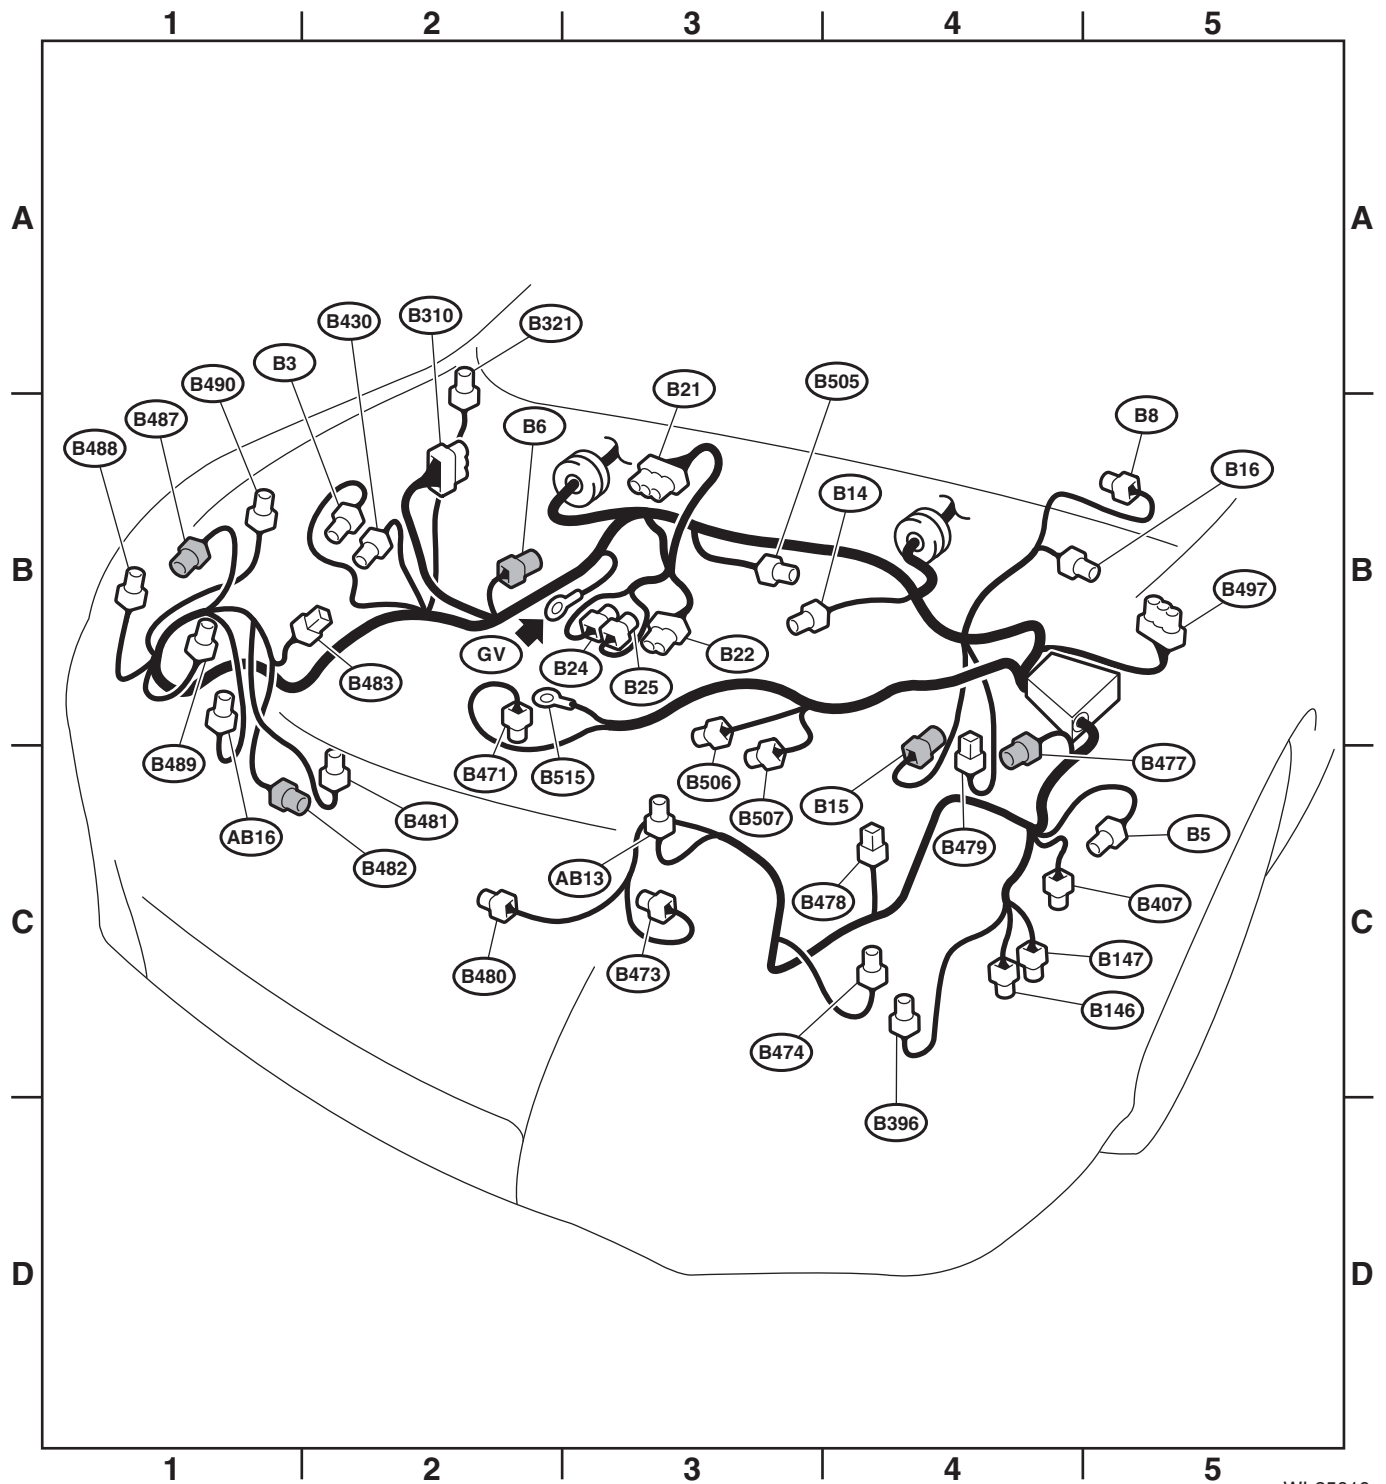

WI-25610

Bulkhead Wiring Harness (In Engine Compartment)

WIRING SYSTEM


3. 3.6 L MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
B3	5	Black	B-2		Mass air flow and intake air temperature sensor
B5	2	Light gray	C-5		Daytime running light resistor
B6	2	Light gray	B-2		Front ABS wheel speed sensor RH
B8	5	Light gray	B-5		Front wiper motor
B11	20	Light gray	B-3	T4	Transmission cord
B12	8	Light gray	B-3	T3	
B14	1	Black	B-3		Starter motor
B15	2	Light gray	B-4		Front ABS wheel speed sensor LH
B16	2	Light gray	B-4		Brake fluid level switch
B21	54	Black	B-3	E2	Engine wiring harness
B22	16	★	B-3	E3	
B146	2	Dark gray	C-4		Front washer motor
B147	2	Dark gray	C-4		Rear washer motor
B310	26	Black	B-2		VDC CM
B321	2	★	B-2		Hood switch
B396	2	Brown	C-4		Washer fluid level sensor
B407	2	Black	C-4		Puddle light LH
B430	2	Black	B-2		Puddle light RH
B471	3	Light green	B-2		Generator
B474	2	Brown	C-4		Front fog light LH
B477	8	Light gray	C-4		Front combination light LH
B478	5	★	C-4		J/C
B479	5	★	C-4		
B480	2	Black	C-2		Ambient sensor
B481	1	Black	C-2		Horn
B483	5	★	B-2		J/C
B487	8	Light gray	B-1		Front combination light RH
B488	2	Brown	B-1		Front fog light RH
B489	1	Black	B-1		Horn
B490	2	Black	B-1		Keyless buzzer
B497	18	Black	B-5		A/C relay holder
B504	4	Black	C-3	F135	Front wiring harness
B505	3	Light gray	B-3		Pressure sensor
B506	2	Light gray	B-3		Compressor solenoid
B507	3	Black	C-3		Flow sensor
B515	1	★	B-2		Generator terminal B

★ : White or natural color

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB13	2	Yellow	C-3		Front sub sensor LH
AB16	2	Yellow	B-1		Front sub sensor RH

 WIRING SYSTEM



Bulkhead Wiring Harness (In Compartment)

WIRING SYSTEM

57. Bulkhead Wiring Harness (In Compartment)

A: LOCATION

1. 2.5 L NON-TURBO MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
B36	57	★	B-1	i1	Instrument panel wiring harness
B38	19	★	B-5	i3	
B40	16	★	B-1		Data link connector
B41	2	Blue	B-1		Power window circuit breaker
B52	24	★	C-1		F/B
B54	26	Green	B-2		TCM
B55	22	Green	C-2		
B65	4	Black	B-2		Stop light & brake switch
B68	16	★	C-2		Roll connector
B70	18	★	C-2		Combination switch
B71	14	★	C-2		
B72	6	★	B-2		Ignition switch
B83	8	★	B-5		J/C
B107	2	Blue	B-2		Clutch switch (model with cruise control)
B116	8	★	C-3		AT select lever
B134	34	★	B-4		ECM
B135	35	★	B-4		
B136	35	★	B-4		
B137	31	★	C-4		
B138	8	★	B-5		J/C
B152	10	Gray	C-1		F/B
B158	8	★	C-2		
B159	9	Brown	C-2		
B180	4	★	C-1		Remote engine start CM
B220	21	★	B-5		IG relay
					Fuel pump relay
					Main relay
					A/F, oxygen sensor relay
					Electronic throttle control relay
B231	5	★	C-2		Steering angle sensor
B280	34	★	B-2		Body integrated unit
B281	35	★	B-2		
B315	6	Black	B-3		Accelerator pedal position sensor
B350	6	Light gray	C-3		Key warning switch and key lock solenoid
B358	2	★	C-3		AT select lever illumination
B415	2	★	C-3		Immobilizer antenna
B491	5	★	B-1		J/C
B493	4	Black	C-2		Starter relay
B494	4	Black	C-1		Self shut relay
B495	10	Gray	C-4	AB1	Airbag wiring harness
B501	5	★	B-2		Clutch stroke sensor (MT model)
B503	8	★	C-5		J/C
B512	8	★	B-2		J/C
B513	2	Blue	B-3		Stop light condenser

Bulkhead Wiring Harness (In Compartment)


WIRING SYSTEM

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
B514	2	Blue	B-3		Stop light register
B516	2	★	B-1	B517	Bulkhead wiring harness
B517	2	★	B-1	B516	
B518	20	★	B-4		Security CM
★ : White or natural color					

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB1	10	Gray	C-4	B495	Bulkhead wiring harness
AB2	4	Yellow	C-2	AB7	Driver's airbag module
AB6	30	Yellow	D-4		Airbag CM
AB9	4	Yellow	C-3		Passenger's airbag module
AB35	2	★	C-1		F/B
★ : White or natural color					

Bulkhead Wiring Harness (In Compartment)

WIRING SYSTEM

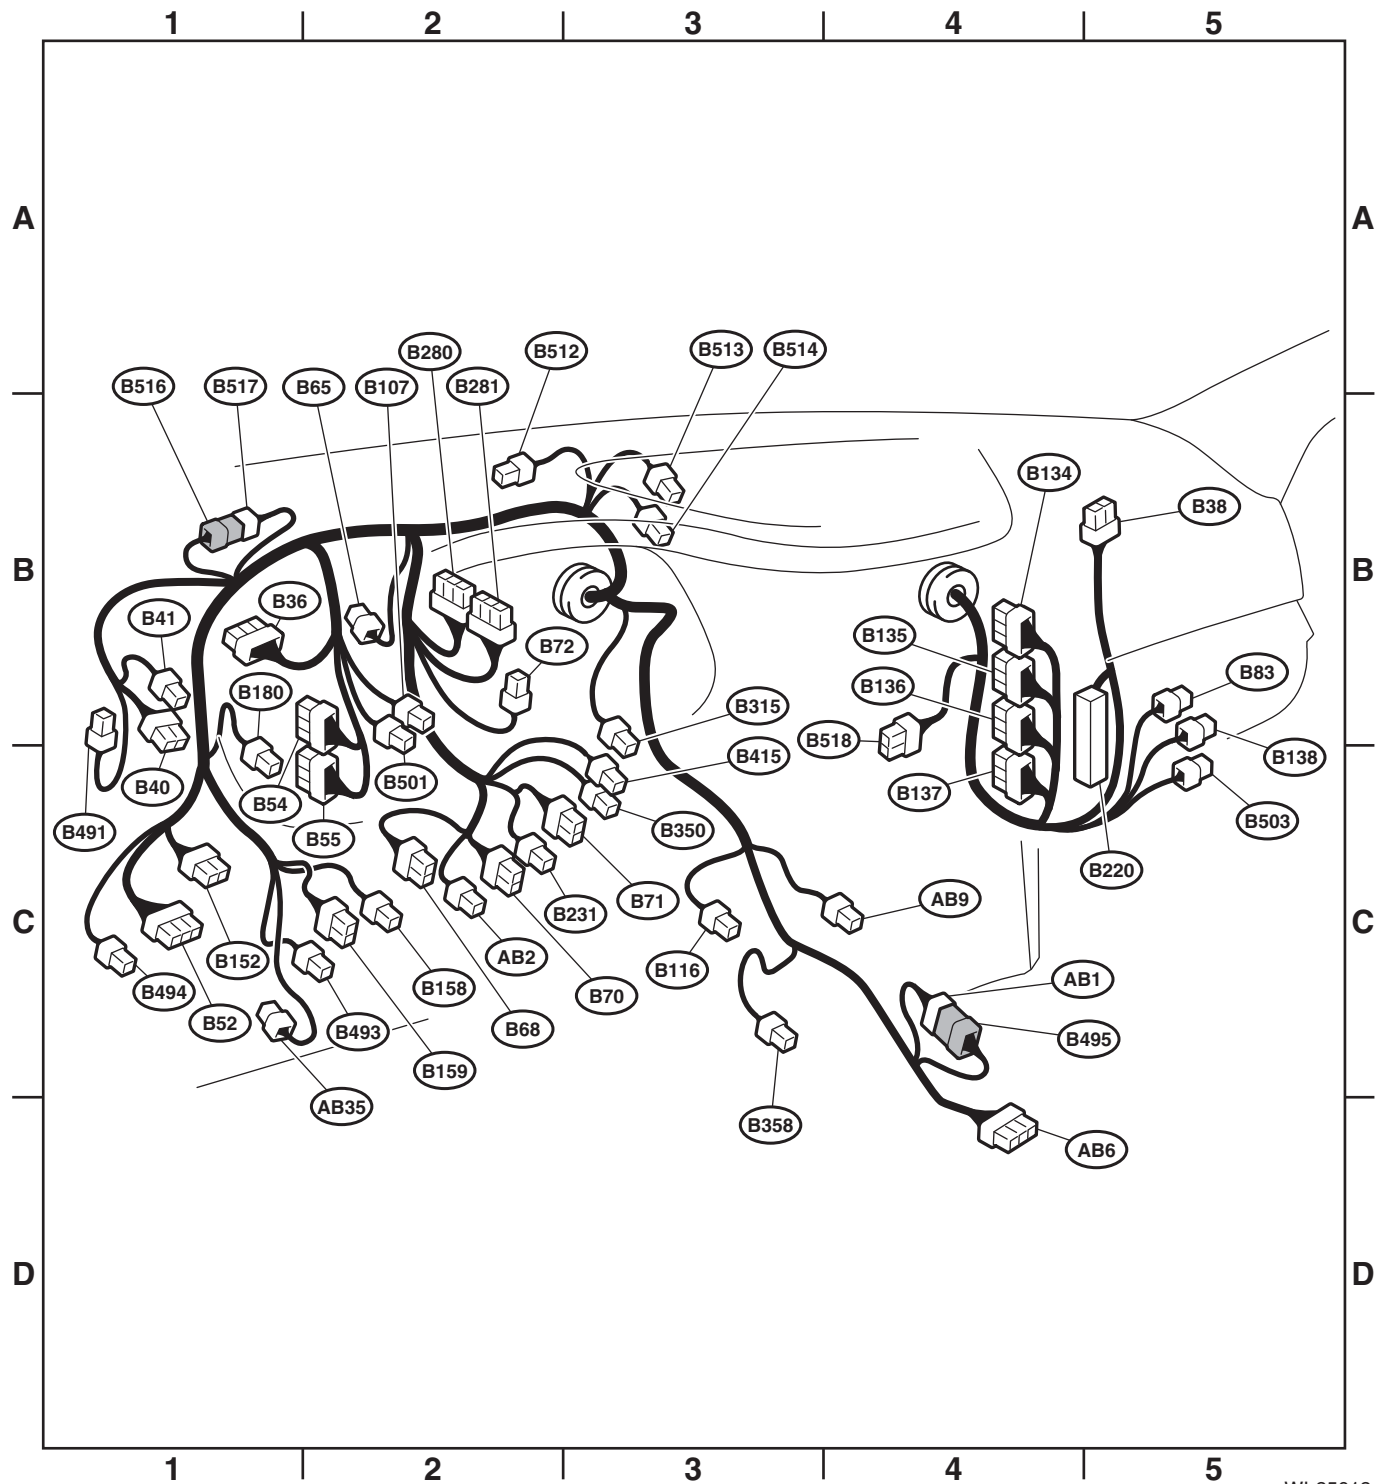

WI-25612

Bulkhead Wiring Harness (In Compartment)

WIRING SYSTEM

2. 2.5 L TURBO MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
B36	57	★	B-1	i1	Instrument panel wiring harness
B38	19	★	B-5	i3	
B40	16	★	B-1		Data link connector
B41	2	Blue	B-1		Power window circuit breaker
B52	24	★	C-1		F/B
B65	4	Black	B-2		Stop light & brake switch
B68	16	★	C-2		Roll connector
B70	18	★	C-2		Combination switch
B71	14	★	C-2		
B72	6	★	B-2		Ignition switch
B83	8	★	B-5		J/C
B107	2	Blue	C-2		Clutch switch (model with cruise control)
B134	34	★	B-4		ECM
B135	35	★	B-4		
B136	35	★	B-4		
B137	31	★	C-4		
B138	8	★	B-5		J/C
B152	10	Gray	C-1		F/B
B158	8	★	C-2		
B159	9	Brown	C-2		
B180	4	★	C-1		Remote engine start CM
B220	21	★	B-5		Fuel pump relay
					Main relay
					A/F, oxygen sensor relay
					Electronic throttle control relay
B231	5	★	C-2		Steering angle sensor
B280	34	★	B-2		Body integrated unit
B281	35	★	B-2		
B315	6	Black	B-3		Accelerator pedal position sensor
B350	6	Light gray	C-3		Key warning switch and key lock solenoid
B415	2	★	C-3		Immobilizer antenna
B491	5	★	B-1		J/C
B493	4	Black	C-2		Starter relay
B495	10	Gray	C-4	AB1	Airbag wiring harness
B501	5	★	B-2		Clutch stroke sensor
B503	8	★	C-5		J/C
B512	8	★	B-2		
B513	2	Blue	B-3		Stop light condenser
B514	2	Blue	B-3		Stop light register
B516	2	★	B-1	B517	Bulkhead wiring harness
B517	2	★	B-1	B516	
B518	20	★	B-4		Security CM

★ : White or natural color

WIRING SYSTEM

Bulkhead Wiring Harness (In Compartment)

WIRING SYSTEM

3. 3.6 L MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
B36	57	★	B-1	i1	Instrument panel wiring harness
B38	19	★	B-5	i3	
B40	16	★	B-1		Data link connector
B41	2	Blue	B-1		Power window circuit breaker
B52	24	★	C-1		F/B
B54	35	★	B-2		TCM
B55	35	★	C-2		
B65	4	Black	B-2		Stop light & brake switch
B68	16	★	C-2		Roll connector
B70	18	★	C-2		Combination switch
B71	14	★	C-2		
B72	6	★	B-2		Ignition switch
B83	8	★	B-5		J/C
B116	8	★	C-3		AT select lever
B134	34	★	B-4		ECM
B135	35	★	B-4		
B136	35	★	B-4		
B137	31	★	C-4		
B138	8	★	B-5		J/C
B152	10	Gray	C-1		F/B
B158	8	★	C-2		
B159	9	Brown	C-2		
B180	4	★	C-1		Remote engine start CM
B220	21	★	B-5		IG relay
					Fuel pump relay
					Main relay
					A/F, oxygen sensor relay
					Electronic throttle control relay
B231	5	★	C-2		Steering angle sensor
B280	34	★	B-2		Body integrated unit
B281	35	★	B-2		
B315	6	Black	B-3		Accelerator pedal position sensor
B350	6	Light gray	C-3		Key warning switch and key lock solenoid
B358	2	★	C-3		AT select lever illumination
B415	2	★	C-3		Immobilizer antenna
B491	5	★	B-1		J/C
B493	4	Black	C-2		Starter relay
B495	10	Gray	C-4	AB1	Airbag wiring harness
B498	4	Black	C-1		Inhibitor relay
B499	4	Black	C-1		Back-up light relay
B503	8	★	C-5		J/C
B512	8	★	B-2		
B513	2	Blue	B-3		Stop light condenser
B514	2	Blue	B-3		Stop light register
B516	2	★	B-1	B517	Bulkhead wiring harness
B517	2	★	B-1	B516	
B518	20	★	B-4		Security CM


★ : White or natural color

Bulkhead Wiring Harness (In Compartment)

WIRING SYSTEM

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB1	10	Gray	C-4	B495	Bulkhead wiring harness
AB2	4	Yellow	C-2	AB7	Driver's airbag module
AB6	30	Yellow	D-4		Airbag CM
AB9	4	Yellow	C-4		Passenger's airbag module
AB35	2	★	C-1		F/B

★ : White or natural color

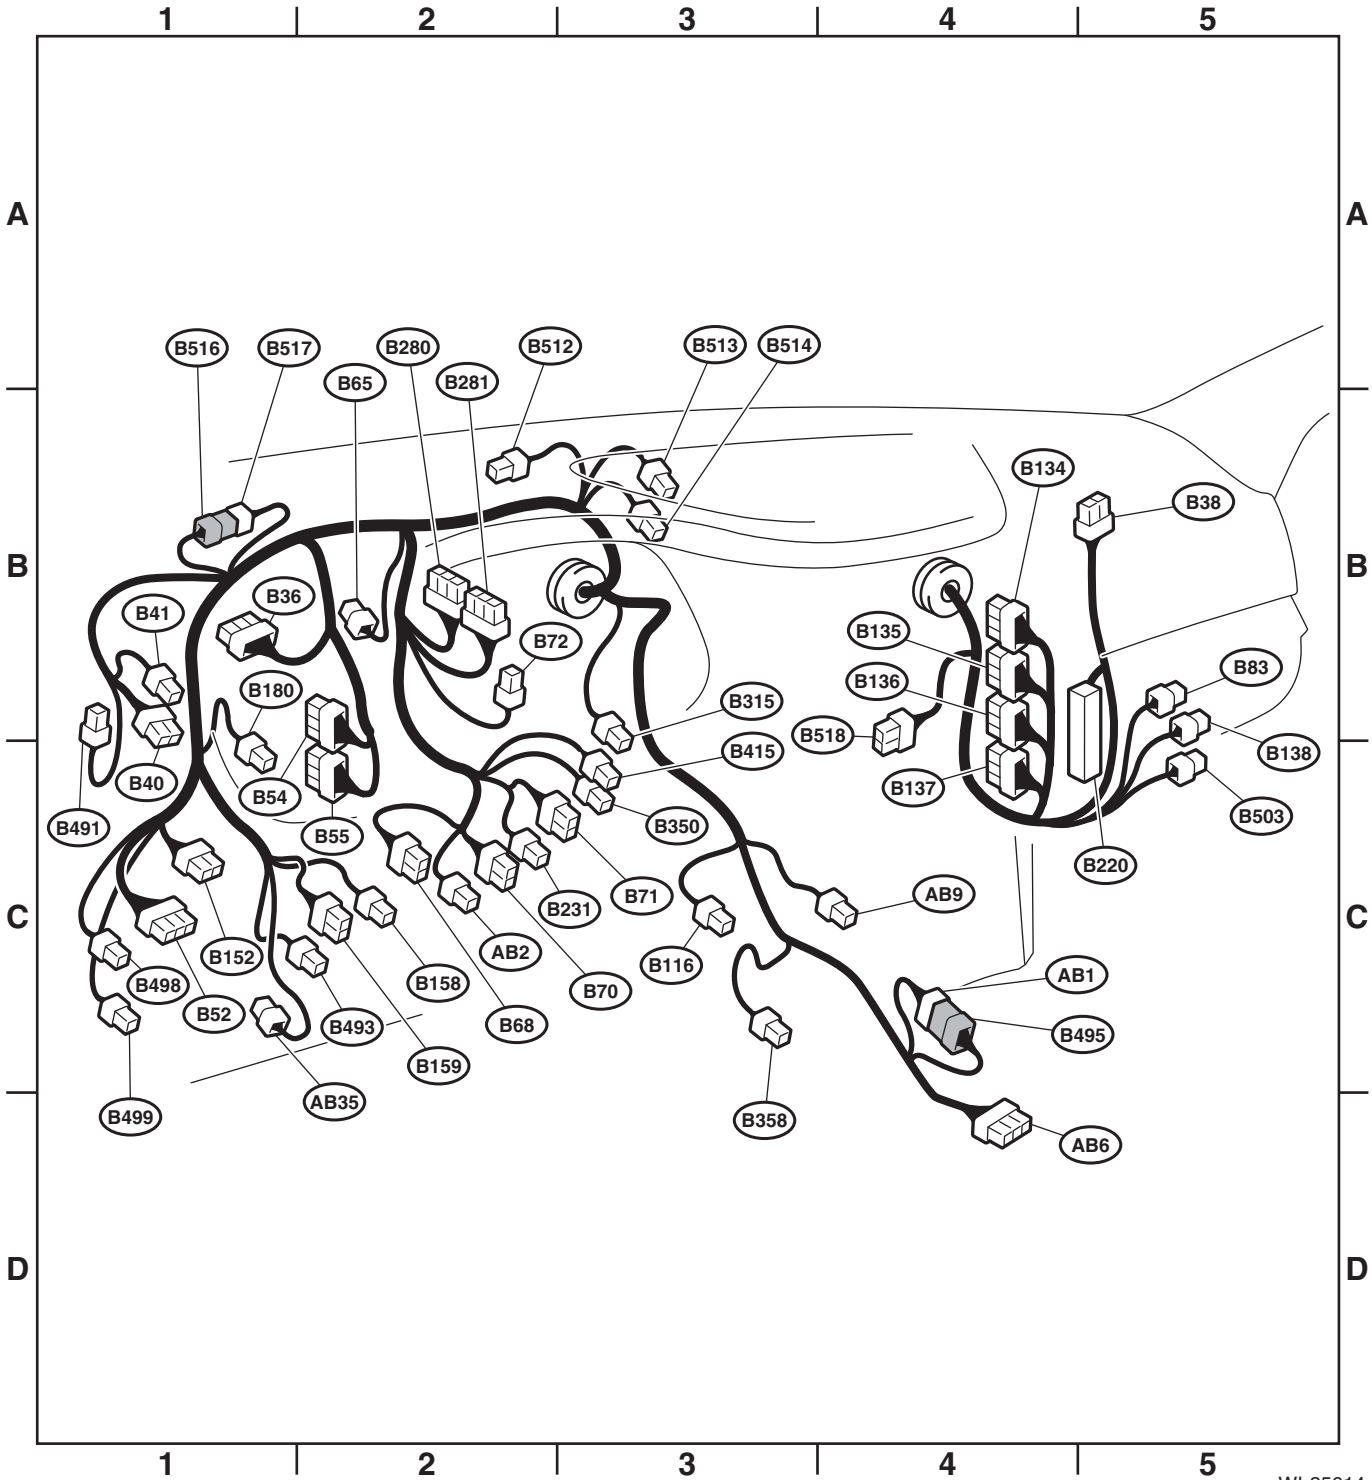

WI-25614

58.Engine Wiring Harness and Transmission Cord

A: LOCATION

1. 2.5 L NON-TURBO MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
E2	54	Black	A-2	B21	Bulkhead wiring harness
E4	2	Black	B-3		Purge control solenoid valve
E5	2	Dark gray	B-1		Fuel injector No. 1
E6	2	Dark gray	A-2		Fuel injector No. 3
E8	2	Black	B-2		Engine coolant temperature sensor
E10	2	Light gray	B-3		Crankshaft position sensor
E11	1	Light gray	B-2		Oil pressure switch
E14	2	Black	A-4		Knock sensor
E15	2	Black	B-4		Camshaft position sensor
E16	2	Dark gray	B-4		Fuel injector No. 2
E17	2	Dark gray	B-4		Fuel injector No. 4
E18	6	Dark gray	A-4		EGR valve
E19	1	★	B-2		Power steering oil pressure switch
E21	3	Black	A-3		Manifold absolute pressure sensor
E24	4	Black	B-1		Front oxygen (A/F) sensor
E25	4	Dark gray	B-1		Rear oxygen sensor
E31	3	★	B-1		Ignition coil No. 1
E32	3	★	B-4		Ignition coil No. 2
E33	3	Black	A-2		Ignition coil No. 3
E34	3	Black	B-5		Ignition coil No. 4
E57	6	Black	A-3		Electronic throttle control
E69	2	Blue	A-2		Oil switching solenoid valve RH
E70	2	Blue	B-4		Oil switching solenoid valve LH
E71	1	★	B-2		Variable valve lift diagnosis oil pressure switch RH
E72	1	★	B-4		Variable valve lift diagnosis oil pressure switch LH
E75	2	Black	A-3		Oil temperature sensor
E130	1	★	B-5		Oil level switch

★ : White or natural color

• MT model

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
T1	2	★	C-1	B24	Bulkhead wiring harness
T2	2	Brown	C-1	B25	


★ : White or natural color

• CVT model

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
T3	12	Black	D-4	B12	Bulkhead wiring harness
T4	20	Gray	D-4	B11	
T7	9	Black	D-4		Inhibitor switch
AT1	3	Gray	D-4		Primary speed sensor
AT4	3	Black	D-5		Secondary speed sensor
AT5	3	Gray	D-5		Front wheel speed sensor
AT6	3	Black	D-4		Secondary pressure sensor

Engine Wiring Harness and Transmission Cord

WIRING SYSTEM

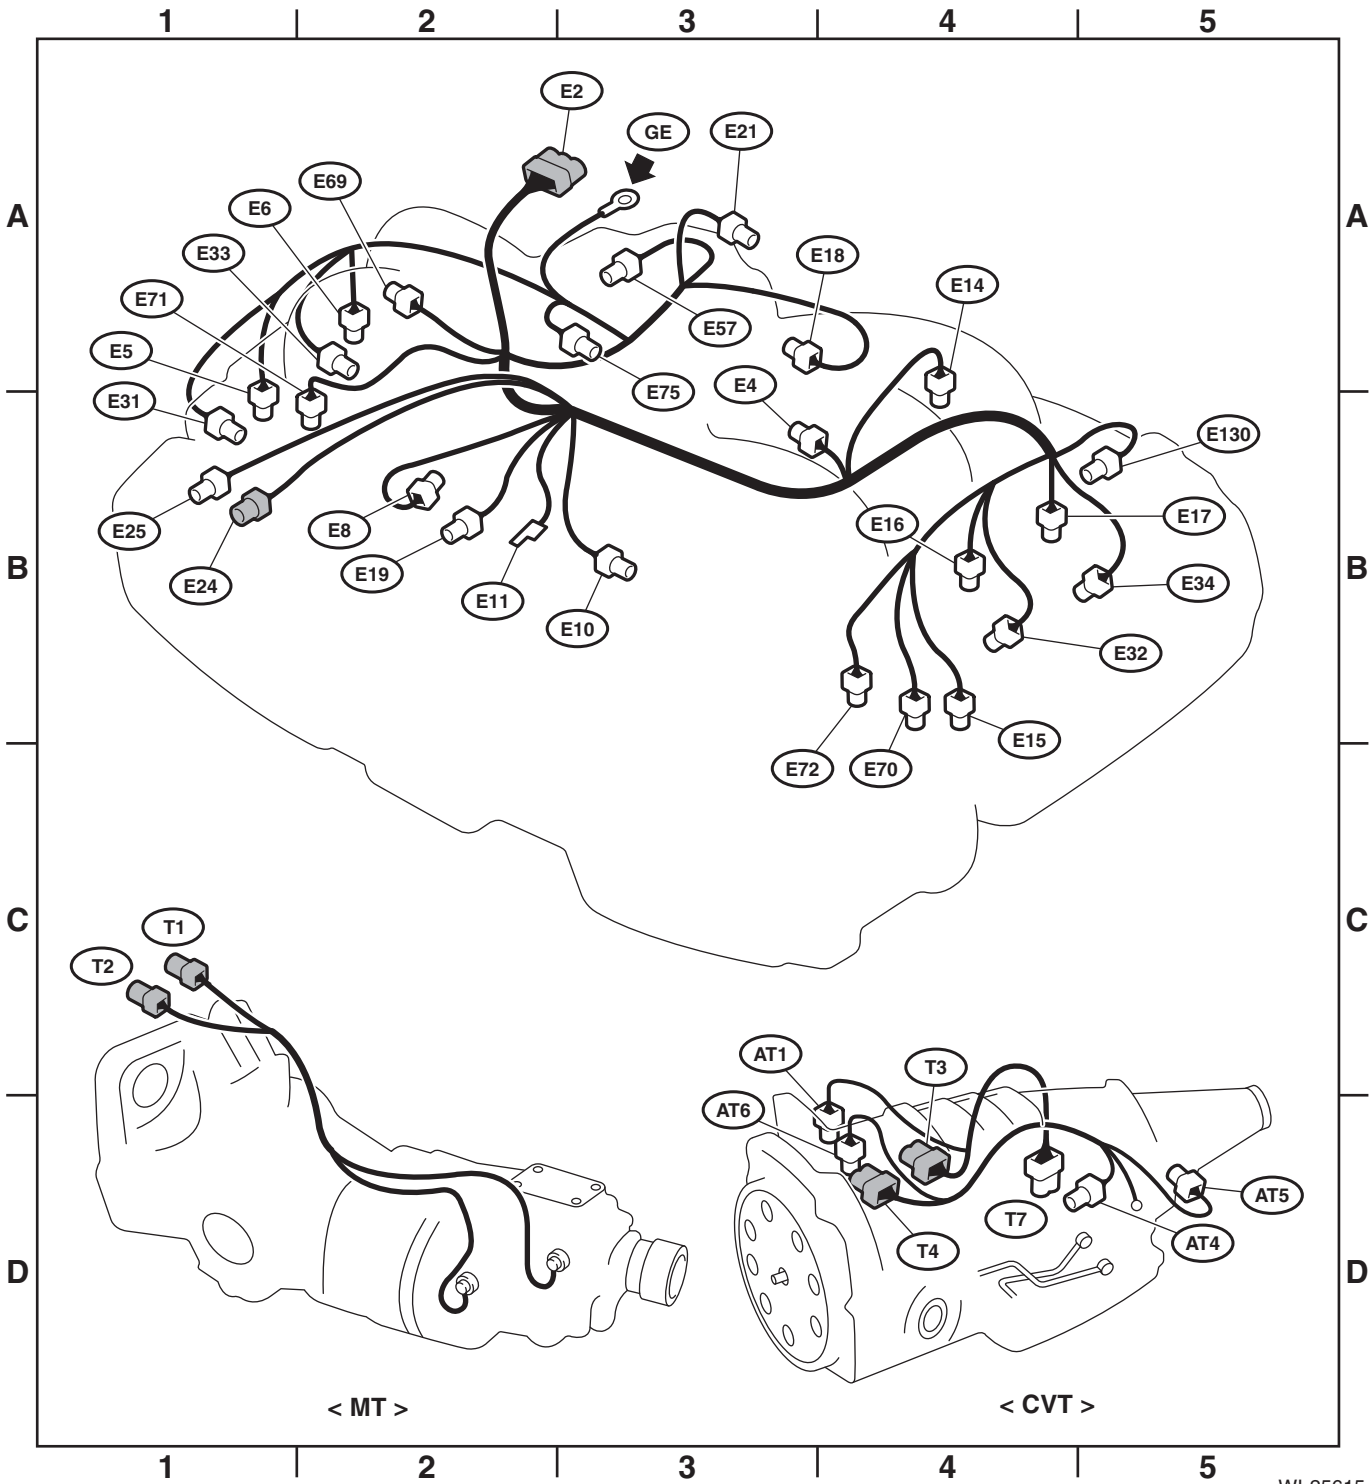

WI-25615

Engine Wiring Harness and Transmission Cord

WIRING SYSTEM


2. 2.5 L TURBO MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
E2	54	Black	A-3	B21	Bulkhead wiring harness
E3	16	Brown	A-3	B22	
E4	2	Black	B-3		Purge control solenoid valve 1
E5	2	Dark gray	A-1		Fuel injector No. 1
E6	2	Dark gray	A-2		Fuel injector No. 3
E8	2	Black	B-3		Engine coolant temperature sensor
E10	2	Light gray	B-2		Crankshaft position sensor
E11	1	Light gray	B-3		Oil pressure switch
E14	2	Black	B-4		Knock sensor
E16	2	Dark gray	B-4		Fuel injector No. 2
E17	2	Dark gray	B-4		Fuel injector No. 4
E19	1	★	B-2		Power steering oil pressure switch
E21	3	Black	B-2		Manifold absolute pressure sensor
E24	4	Light gray	B-4		Front oxygen (A/F) sensor
E25	4	Black	B-4		Rear oxygen sensor
E31	3	Gray	B-1		Ignition coil No. 1
E32	3	Gray	B-4		Ignition coil No. 2
E33	3	Gray	B-2		Ignition coil No. 3
E34	3	Gray	B-4		Ignition coil No. 4
E35	3	Black	B-4		Intake camshaft position sensor LH
E36	3	Black	A-2		Intake camshaft position sensor RH
E37	2	Blue	B-4		Intake oil flow control solenoid valve LH
E38	2	Blue	A-2		Intake oil flow control solenoid valve RH
E51	5	Light gray	B-5		Tumble generator valve assembly LH
E52	2	Black	A-3		Purge control solenoid valve 2
E55	5	Light gray	B-1		Tumble generator valve assembly RH
E57	6	Black	A-4		Electronic throttle control
E62	3	Light gray	B-1		Exhaust camshaft position sensor RH
E63	2	Blue	B-1		Exhaust oil flow control solenoid valve RH
E64	2	Black	B-1		Wastegate control solenoid valve
E65	3	Light gray	C-4		Exhaust camshaft position sensor LH
E66	2	Blue	C-4		Exhaust oil flow control solenoid valve LH
E130	1	★	B-5		Oil level switch
★ : White or natural color					

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
T1	2	★	C-2	B24	Bulkhead wiring harness
T2	2	Brown	C-2	B25	
★: White or natural color					

Engine Wiring Harness and Transmission Cord

WIRING SYSTEM

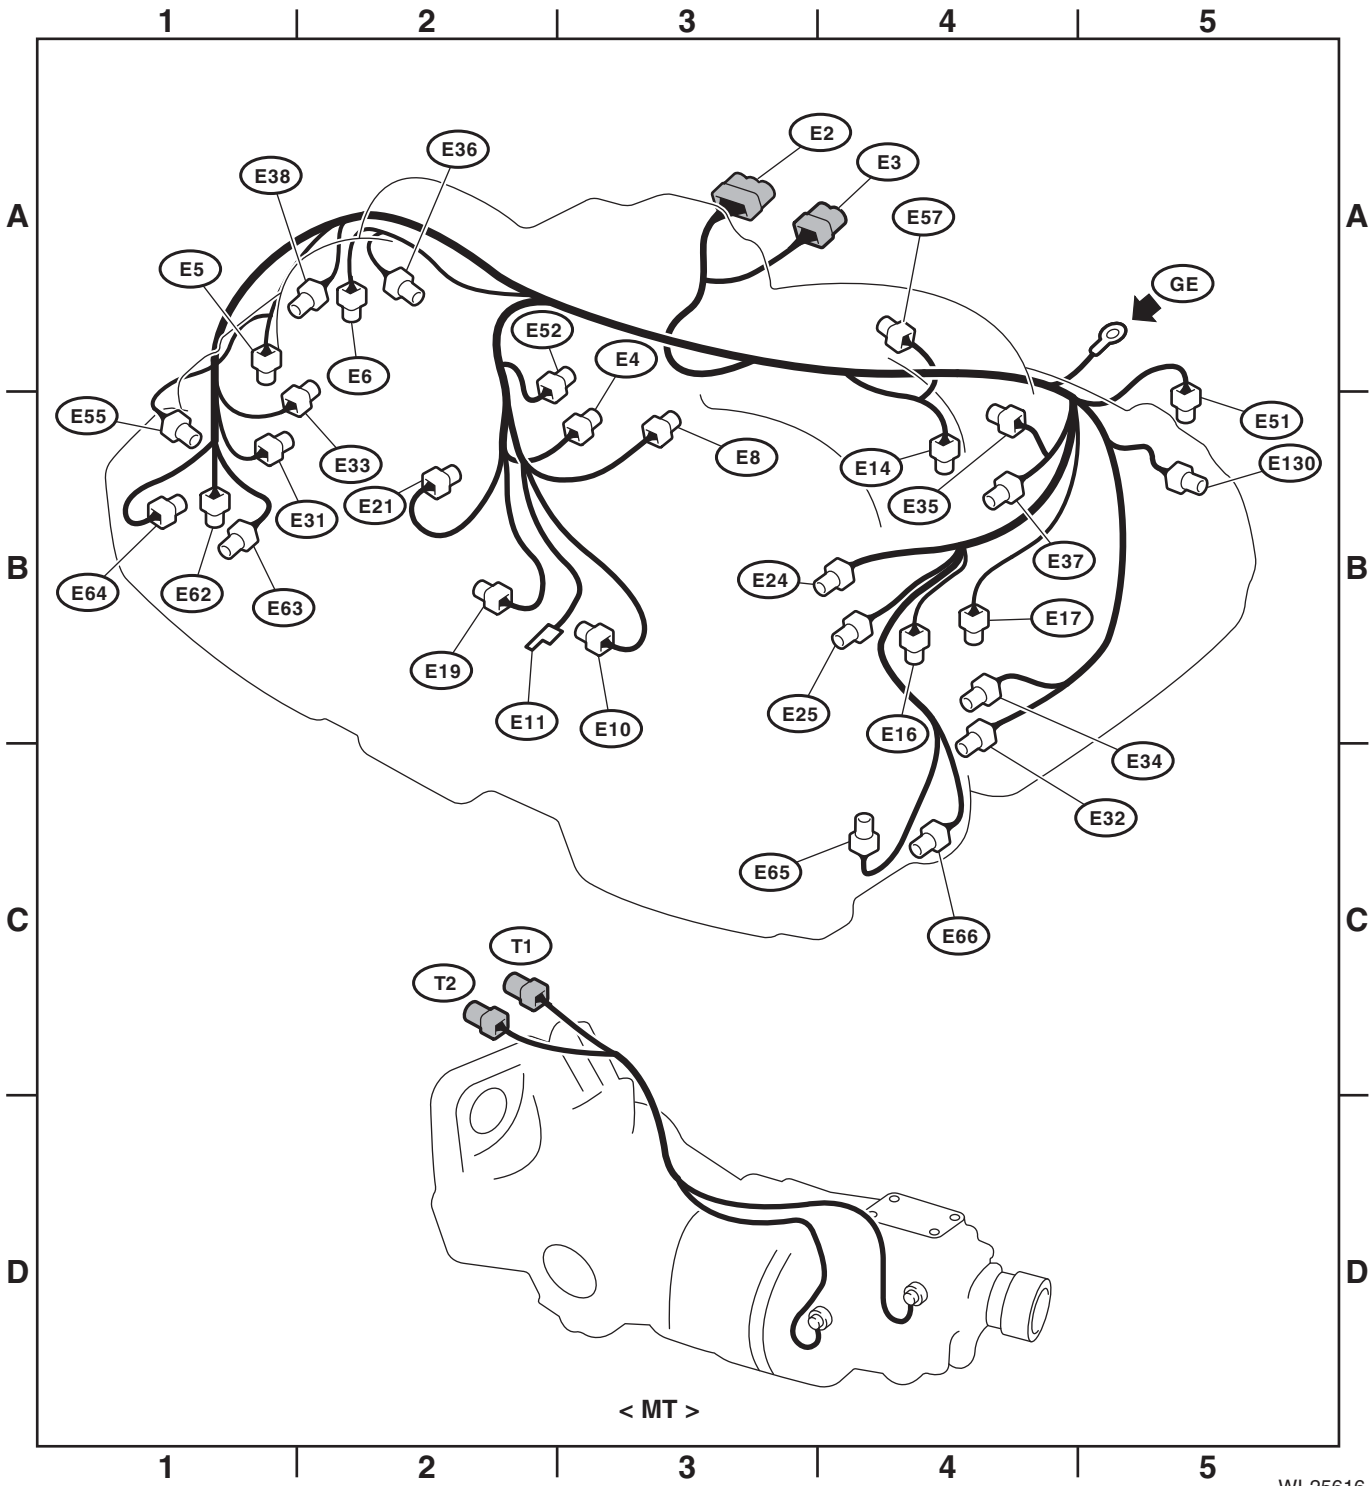

WI-25616

Engine Wiring Harness and Transmission Cord

WIRING SYSTEM

3. 3.6 L MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
E2	54	Black	A-3	B21	Bulkhead wiring harness
E3	16	Brown	D-2	B22	
E4	2	Blue	A-2		Purge control solenoid valve
E5	2	Dark gray	A-2		Fuel injector No. 1
E6	2	Dark gray	A-2		Fuel injector No. 3
E8	2	Brown	B-4		Engine coolant temperature sensor
E10	2	Light gray	B-4		Crankshaft position sensor
E11	1	★	B-1		Oil pressure switch
E14	2	Blue	B-2		Knock sensor 1
E16	2	Dark gray	B-4		Fuel injector No. 2
E17	2	Dark gray	B-4		Fuel injector No. 4
E18	6	Dark gray	B-3		EGR valve
E19	1	★	B-2		Power steering oil pressure switch
E21	3	Black	A-3		Manifold absolute pressure sensor
E24	4	Light gray	D-3		Front oxygen (A/F) sensor LH
E25	4	Dark gray	D-3		Rear oxygen sensor LH
E31	3	Gray	B-1		Ignition coil No. 1
E32	3	Gray	C-4		Ignition coil No. 2
E33	3	Gray	B-2		Ignition coil No. 3
E34	3	Gray	B-4		Ignition coil No. 4
E35	3	Black	B-5		Intake camshaft position sensor LH
E36	3	Black	A-2		Intake camshaft position sensor RH
E37	2	Black	B-4		Intake oil flow control solenoid valve LH
E38	2	Black	B-1		Intake oil flow control solenoid valve RH
E43	2	Dark gray	A-2		Fuel injector No. 5
E44	2	Dark gray	B-5		Fuel injector No. 6
E45	3	Gray	B-2		Ignition coil No. 5
E46	3	Gray	B-5		Ignition coil No. 6
E47	4	Light gray	C-2		Front oxygen (A/F) sensor RH
E48	2	Blue	A-4		Knock sensor 2
E57	6	Black	A-3		Electronic throttle control
E61	4	Dark gray	C-2		Rear oxygen sensor RH
E62	3	Gray	B-1		Exhaust camshaft position sensor RH
E63	2	Blue	B-1		Exhaust oil flow control solenoid valve RH
E65	3	Gray	C-4		Exhaust camshaft position sensor LH
E66	2	Blue	C-4		Exhaust oil flow control solenoid valve LH
E75	2	Black	B-4		Oil temperature sensor
E76	10	Dark gray	A-3	E77	Engine wiring harness
E77	10	Gray	A-3	E76	
E130	1	★	C-4		Oil level switch


★ : White or natural color

Engine Wiring Harness and Transmission Cord

WIRING SYSTEM

• AT model

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
T3	8	Light gray	D-2	B12	Bulkhead wiring harness
T4	20	Gray	D-2	B11	
AT1	3	Black	D-3		Turbine speed sensor 1
AT4	3	Black	C-4		Rear vehicle speed sensor

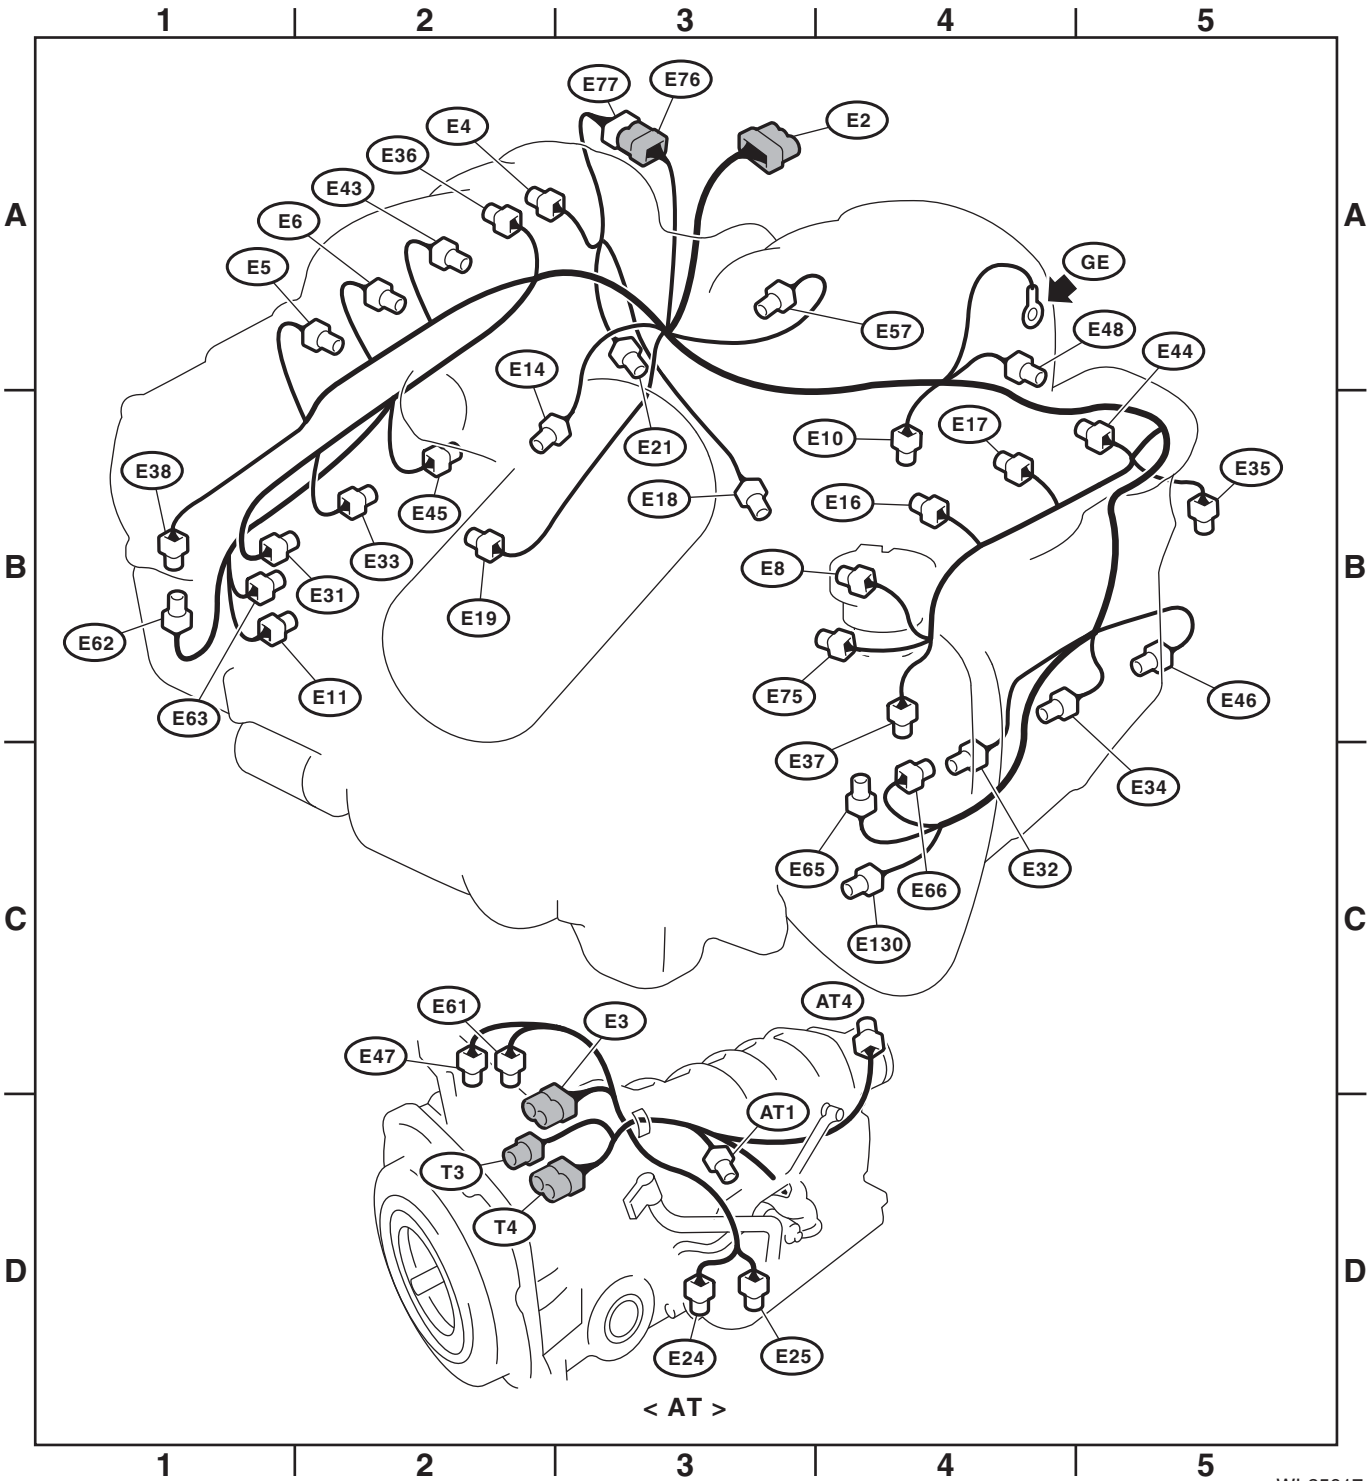

WI-25617

59. Instrument Panel Wiring Harness

A: LOCATION


Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
i1	57	★	B-1	B36	Bulkhead wiring harness
i2	18	★	C-1	R339	Rear wiring harness LH
i3	19	★	B-4	B38	Bulkhead wiring harness
i5	20	★	C-1		F/B
i6	16	★	C-2		Remote control mirror switch
i10	40	★	B-2		Combination meter
i15	6	★	C-3		Blower fan switch
i23	2	★	B-4		Glove box light
i24	2	★	B-3		Front accessory power supply socket
i26	20	★	B-3		Audio
i29	1	★	B-3		Audio bracket ground (with navigation system)
	1	★	B-2		Audio bracket ground (without navigation system)
i53	14	★	C-5	R98	Rear wiring harness RH
i54	13	★	C-1	R99	Rear wiring harness LH
i59	10	★	B-3		Clock
i76	28	★	C-5	D83	Front door cord RH
i79	6	★	B-2		Illumination control switch
i80	26	★	C-4		A/C CM
i82	12	★	B-1		J/C
i83	12	★	B-1		
i84	35	★	C-2		Body integrated unit
i88	12	★	C-4		A/C control panel
i97	12	★	B-4		J/C
i98	12	★	B-4		
i99	12	★	B-4		
i100	12	★	B-4		
i101	28	★	C-1	D84	Front door cord LH
i102	14	★	C-1	R167	Rear wiring harness LH
i131	24	★	B-3		Navigation unit
	24	★	B-3		Audio
i140	4	★	B-3		J/C
i141	4	★	B-3		
i144	20	★	B-3		Navigation unit
i145	6	Green	B-3		
i146	8	★	B-3		
i149	6	★	C-3		AUX input terminal
i152	20	★	C-1		F/B
i153	16	★	C-5	R331	Rear wiring harness RH
i154	18	★	C-5	R332	
i155	11	★	C-5	R333	
i156	5	★	C-2		Hill hold switch
i157	16	★	A-5	R50	Roof cord
i158	4	★	B-1		Side tweeter LH (normal audio)
	2	★	B-1		Side tweeter LH
i159	4	★	B-5		Side tweeter RH (normal audio)
	2	★	B-5		Side tweeter RH

Instrument Panel Wiring Harness

WIRING SYSTEM

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
i160	11	★	B-1		Relay block
i161	11	★	B-2		
i162	6	★	C-1		Lower cover switch
i163	10	★	C-2		EPB control switch
i164	12	★	B-2		J/C
i165	12	★	B-1		
i166	12	★	B-1		
i167	12	★	B-2		
i168	12	★	B-2		
i169	22	★	B-5		
i170	8	★	B-2		Turn signal and hazard unit
i171	31	★	C-2		Body integrated unit
i172	2	★	B-2		Evaporator sensor
i173	2	★	C-3		In-vehicle sensor
i174	7	Green	B-3		Air mix door actuator (manual A/C)
	7	Green	B-3		Air mix door actuator (driver's seat) (auto A/C)
i175	7	Green	B-4		Air mix door actuator (passenger's seat) (auto A/C)
i176	5	★	B-3		Mode door actuator
i181	24	★	C-4		A/C CM
i182	4	★	B-4		Blower resistor
i183	5	★	B-4		Power transistor (auto A/C)
i184	7	★	B-4		Blower motor relay
i185	2	★	C-5		Blower motor
i186	7	Green	B-4		Intake door actuator
i187	2	★	A-5		Wiper deicer
i188	8	★	B-5		Impact sensor
i189	2	★	C-4		Rear accessory power supply socket (console box)
i190	11	★	C-1	R340	Rear wiring harness LH
i191	2	★	B-4		Trunk opener cancel button
i192	8	★	A-3		Audio (premium)
i193	2	Black	C-1		F/B
i194	6	★	B-5		Light control sensor
i195	4	★	C-5	R382	Rear wiring harness RH
i196	10	★	C-3	R385	Adapter cord (audio amplifier)
★ : White or natural color					

 WIRING SYSTEM



Rear Wiring Harness

WIRING SYSTEM

60.Rear Wiring Harness

A: LOCATION

1. SEDAN MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
R9	3	★	C-4		Front door switch LH
R10	10	★	C-4	D22	Rear door cord LH
R12	3	★	B-2		Front door switch RH
R13	10	★	B-2	D28	Rear door cord RH
R15	11	★	B-3	R57	Fuel cord
R41	4	★	C-3		Seat heater LH
R42	6	★	C-3		Seat heater switch LH
R44	4	★	B-2		Seat heater RH
R45	6	Brown	C-2		Seat heater switch RH
R47	3	★	A-4		Fuel tank pressure sensor
R50	16	★	B-2	i157	Instrument panel wiring harness
R51	2	★	A-2		Vanity mirror light RH
R52	3	★	A-3		Room light
R54	2	★	B-3		Vanity mirror light LH
R55	4	★	A-3	R74	Sunroof cord
R57	11	★	B-3	R15	Rear wiring harness
R58	6	★	B-4		Fuel pump ASSY
R59	2	★	B-4		Fuel sub level sensor
R68	2	Dark gray	B-4		Pressure control solenoid valve (turbo model)
R74	4	★	A-3	R55	Roof cord
R75	20	★	B-3		Sunroof motor assembly
R98	14	★	B-1	i53	Instrument panel wiring harness
R99	13	★	C-3	i54	
R108	2	★	C-3		Seat belt switch LH
R109	2	Black	B-2		Power seat RH
R128	5	★	A-3		Sunroof switch
R167	14	★	C-3	i102	Instrument panel wiring harness
R187	5	Black	A-3		Sunroof switch (tilt)
R211	12	★	C-4		TPMS CM
R316	10	★	B-2		Audio amplifier
R317	12	★	B-2		
R331	16	★	B-1	i153	Instrument panel wiring harness
R332	18	★	B-1	i154	
R333	11	★	B-1	i155	
R339	18	★	C-3	i2	Instrument panel wiring harness
R340	11	★	C-3	i190	
R341	12	★	B-3		Power seat LH
R342	14	Gray	B-3	R354	EPB adapter cord
R343	4	★	B-4		J/C
R344	4	★	B-4		
R353	10	★	B-3		Overhead console
R354	14	Gray	B-3	R342	Rear wiring harness
R355	22	★	B-3		EPB CM
R382	4	★	B-1	i195	Instrument panel wiring harness

Rear Wiring Harness

WIRING SYSTEM

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
R383	4	★	B-2	R384	Adapter cord (audio amplifier)
R384	4	★	B-2	R383	Rear wiring harness
R385	10	★	B-1		Instrument panel wiring harness
R386	24	★	B-1		Audio amplifier
R387	3	★	B-3		Rearview mirror
★ : White or natural color					

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB17	15	Yellow	B-3		Airbag CM
AB18	15	Yellow	B-3		
AB19	4	Yellow	C-3		Side airbag module LH
AB21	2	Black	C-4		Pretensioner LH
AB23	4	Yellow	C-4		Side airbag sensor LH
AB24	4	Yellow	B-2		Side airbag module RH
AB26	2	Black	B-3		Pretensioner RH
AB28	4	Yellow	B-3		Side airbag sensor RH
AB53	3	Brown	C-2	AB59	Occupant sensor harness
AB59	3	Brown	C-2	AB53	Rear wiring harness
AB60	2	Yellow	C-2		Buckle switch
AB61	10	Black	C-2		Occupant detection control module

WIRING SYSTEM



Rear Wiring Harness

WIRING SYSTEM

2. OUTBACK MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
R9	3	★	C-4		Front door switch LH
R10	10	★	C-4	D22	Rear door cord LH
R12	3	★	B-2		Front door switch RH
R13	10	★	B-3	D28	Rear door cord RH
R15	11	★	B-3	R57	Fuel cord
R41	4	★	C-3		Seat heater LH
R42	6	★	C-3		Seat heater switch LH
R44	4	★	B-2		Seat heater RH
R45	6	Brown	C-2		Seat heater switch RH
R47	3	★	A-4		Fuel tank pressure sensor
R50	16	★	B-2	i157	Instrument panel wiring harness
R51	2	★	A-3		Vanity mirror light RH
R52	3	★	A-3		Room light
R54	2	★	B-3		Vanity mirror light LH
R55	4	★	A-3	R74	Sunroof cord
R57	11	★	B-3	R15	Rear wiring harness
R58	6	★	B-4		Fuel pump ASSY
R59	2	★	B-4		Fuel sub level sensor
R74	4	★	A-3	R55	Roof cord
R75	20	★	B-3		Sunroof motor assembly
R98	14	★	B-1	i53	Instrument panel wiring harness
R99	13	★	C-3	i54	
R108	2	★	C-3		Seat belt switch LH
R109	2	Black	B-2		Power seat RH
R128	5	★	B-3		Sunroof switch
R167	14	★	C-3	i102	Instrument panel wiring harness
R187	5	Black	B-3		Sunroof switch (tilt)
R211	12	★	C-4		TPMS CM
R316	10	★	B-2		Audio amplifier
R317	12	★	B-2		
R331	16	★	B-1	i153	Instrument panel wiring harness
R332	18	★	B-1	i154	
R333	11	★	B-1	i155	
R339	18	★	C-3	i2	Instrument panel wiring harness
R340	11	★	C-3	i190	
R341	12	★	C-3		Seat cord LH
R342	14	Gray	B-4	R354	EPB adapter cord
R343	4	★	B-4		J/C
R344	4	★	B-4		
R346	4	★	C-3	R348	Rear wiring harness
R348	4	★	C-3	R346	
R353	10	★	A-3		Overhead console
R354	14	Gray	B-3	R342	Rear wiring harness
R355	22	★	B-3		EPB CM
R382	4	★	B-1	i195	Instrument panel wiring harness
R383	4	★	B-2	R384	Adapter cord (audio amplifier)
R384	4	★	B-2	R383	Rear wiring harness

Rear Wiring Harness


WIRING SYSTEM

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
R385	10	★	B-1		Instrument panel wiring harness
R386	24	★	B-2		Audio amplifier
R387	3	★	A-4		Rearview mirror
★ : White or natural color					

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB17	24	Yellow	B-3		Airbag CM
AB18	24	Yellow	B-3		
AB19	4	Yellow	C-3		Side airbag module LH
AB21	2	Black	C-4		Pretensioner LH
AB23	4	Yellow	C-4		Side airbag sensor LH
AB24	4	Yellow	B-2		Side airbag module RH
AB26	2	Black	B-3		Pretensioner RH
AB28	4	Yellow	B-3		Side airbag sensor RH
AB53	3	Brown	C-2	AB59	Occupant sensor harness
AB59	3	Brown	C-2	AB53	Rear wiring harness
AB60	2	Yellow	C-2		Buckle switch
AB61	10	Black	C-2		Occupant detection control module

Rear Wiring Harness

WIRING SYSTEM

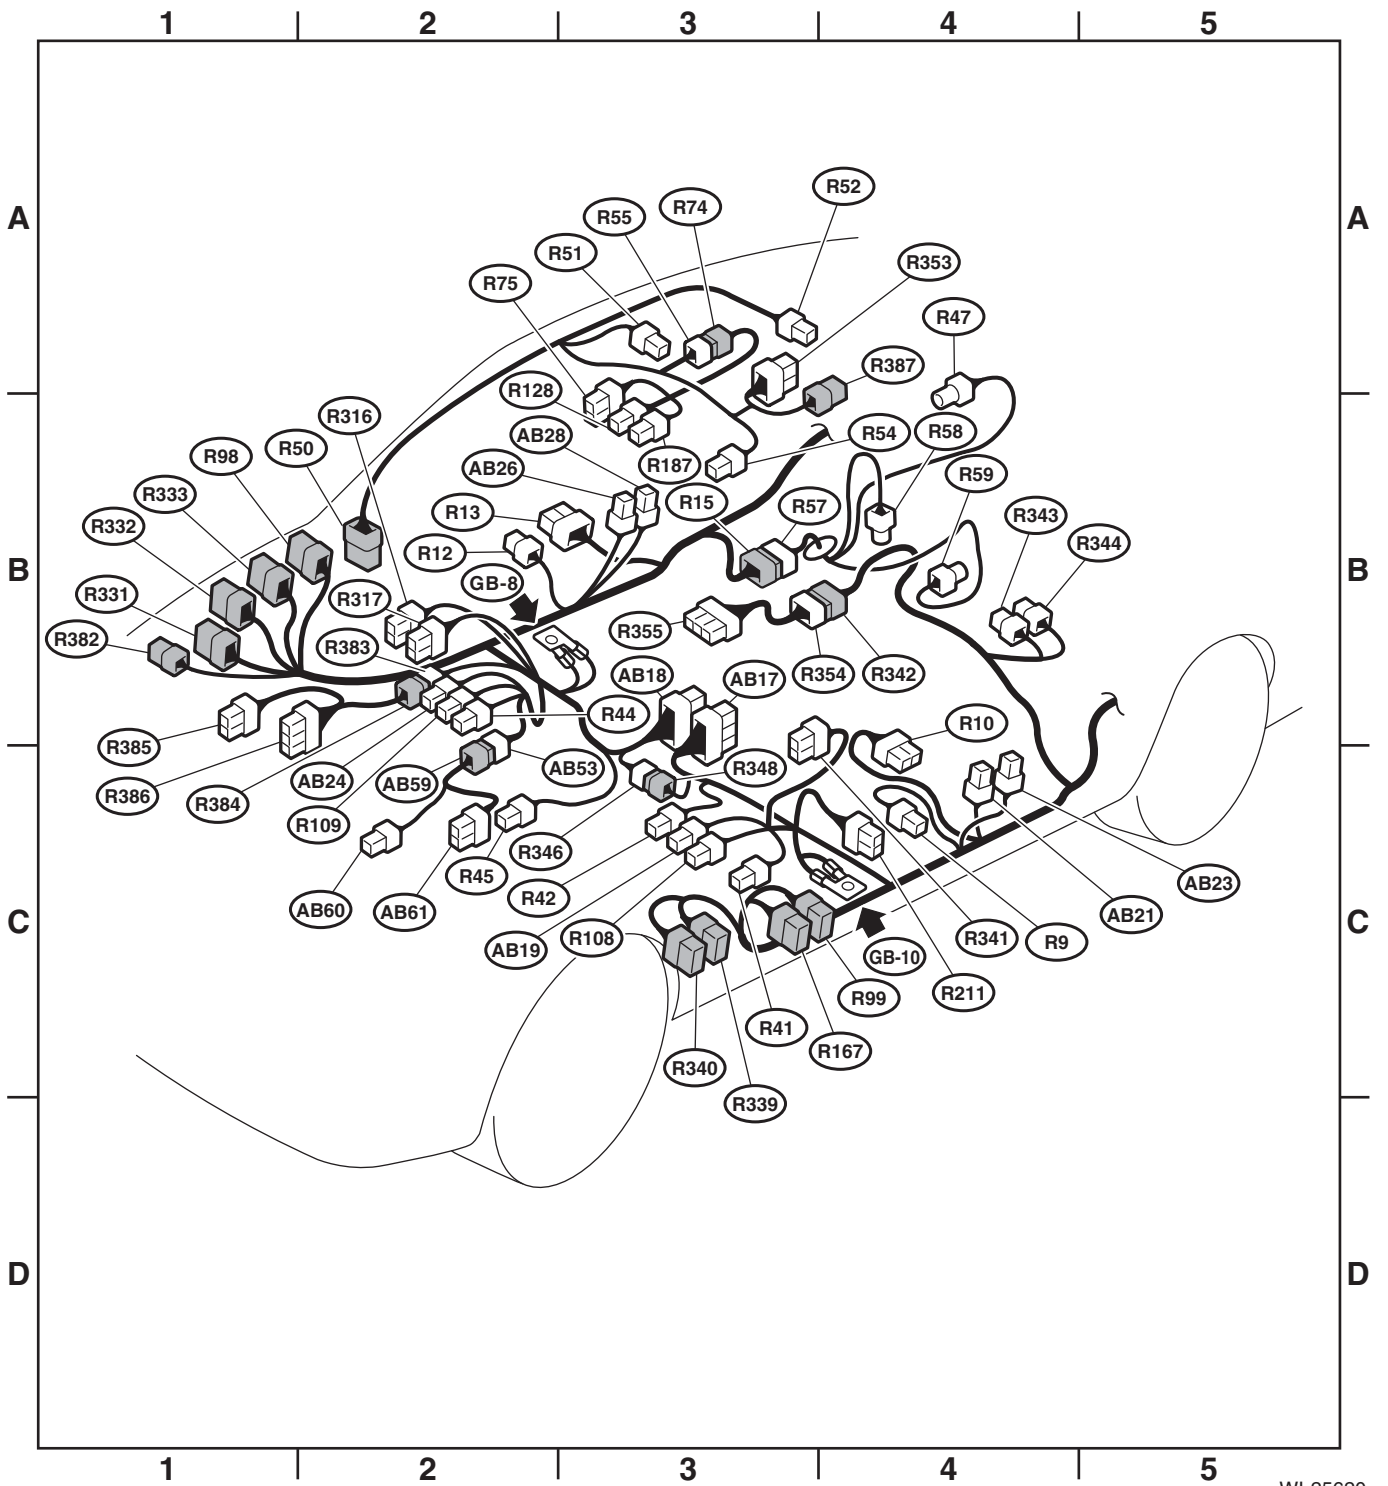

WI-25620

Door Cord

WIRING SYSTEM


61.Door Cord

A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
D2	2	★	C-2		Front door speaker RH
D3	6	Dark gray	B-2		Front power window motor RH
D5	6	★	C-3		Outer mirror assembly LH (except for C6 model)
	10	★	C-4		Outer mirror assembly LH (C6 model)
D7	3	★	C-3		Power window main switch
D10	2	★	C-4		Door step light LH
D12	2	★	C-4		Front door speaker LH
D13	6	Dark gray	C-4		Front power window motor LH
D15	6	★	B-2		Outer mirror assembly RH (except for C6 model)
	10	★	B-2		Outer mirror assembly RH (C6 model)
D17	8	★	B-2		Front power window sub switch
D18	2	★	C-4		Front door lock actuator LH
D20	2	★	B-3		Door step light RH
D22	10	★	C-4	R10	Rear wiring harness LH
D23	2	★	C-4		Rear door speaker LH
D24	6	Dark gray	B-4		Rear power window motor LH
D25	8	★	B-4		Rear power window sub switch LH
D26	2	★	B-5		Rear door lock actuator LH
D28	10	★	B-3	R13	Rear wiring harness RH
D29	2	★	B-3		Rear door speaker RH
D30	6	Dark gray	B-3		Rear power window motor RH
D31	8	★	B-3		Rear power window sub switch RH
D32	2	★	B-3		Rear door lock actuator RH
D72	2	★	B-3		Front door lock actuator RH
D83	28	★	B-2	i76	Instrument panel wiring harness
D84	28	★	C-3	i101	
D95	16	★	C-3		Power window main switch
D125	5	★	B-2		Passenger's door lock switch
D144	12	★	C-2	D146	Adapter cord (power window sub switch)
D145	20	★	C-3	D147	Adapter cord (power window main switch)
D146	12	★	C-2	D144	Front door cord RH
D147	20	★	C-3	D145	Front door cord LH

★ : White or natural color

 WIRING SYSTEM



Rear Wiring Harness and Trunk Lid Cord

WIRING SYSTEM

62.Rear Wiring Harness and Trunk Lid Cord

A: LOCATION


Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
R16	3	★	B-3		Rear door switch RH
R19	2	★	B-2		High-mounted stop light
R20	2	★	B-5		Trunk room light
R22	3	★	B-1		Rear door switch LH
R24	10	★	B-4	R60	Trunk lid cord
R26	6	★	B-5		Rear combination light RH
R28	6	★	C-3		Rear combination light LH
R60	10	★	B-5	R24	Rear wiring harness
R66	2	★	B-4		High-mounted stop light (with rear spoiler)
R72	2	Light gray	C-3		Rear ABS wheel speed sensor RH
R73	2	Light gray	C-2		Rear ABS wheel speed sensor LH
R76	2	★	C-4		License plate light LH
R77	2	★	C-4		License plate light RH
R97	2	★	B-2		Antenna amplifier
R117	4	★	B-4		Woofer
R122	10	★	B-5		Fuel pump CM
R144	2	Black	C-2		Drain valve
R174	2	★	B-4		Rear defogger
R186	3	★	C-4		Trunk lid lock actuator & switch
R330	4	★	C-4		Rearview camera
R336	4	★	B-4		J/C
R345	8	★	B-3		Keyless entry CM
R350	3	★	C-4		Rear finisher light LH (tail light)
R351	3	★	C-5		Rear finisher light LH (tail light)

★ : White or natural color

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB31	2	Black	B-2		Curtain airbag module LH
AB32	4	Yellow	C-1		Curtain airbag sensor LH
AB33	2	Black	B-4		Curtain airbag module RH
AB34	4	Yellow	B-3		Curtain airbag sensor RH

Rear Wiring Harness and Trunk Lid Cord

WIRING SYSTEM

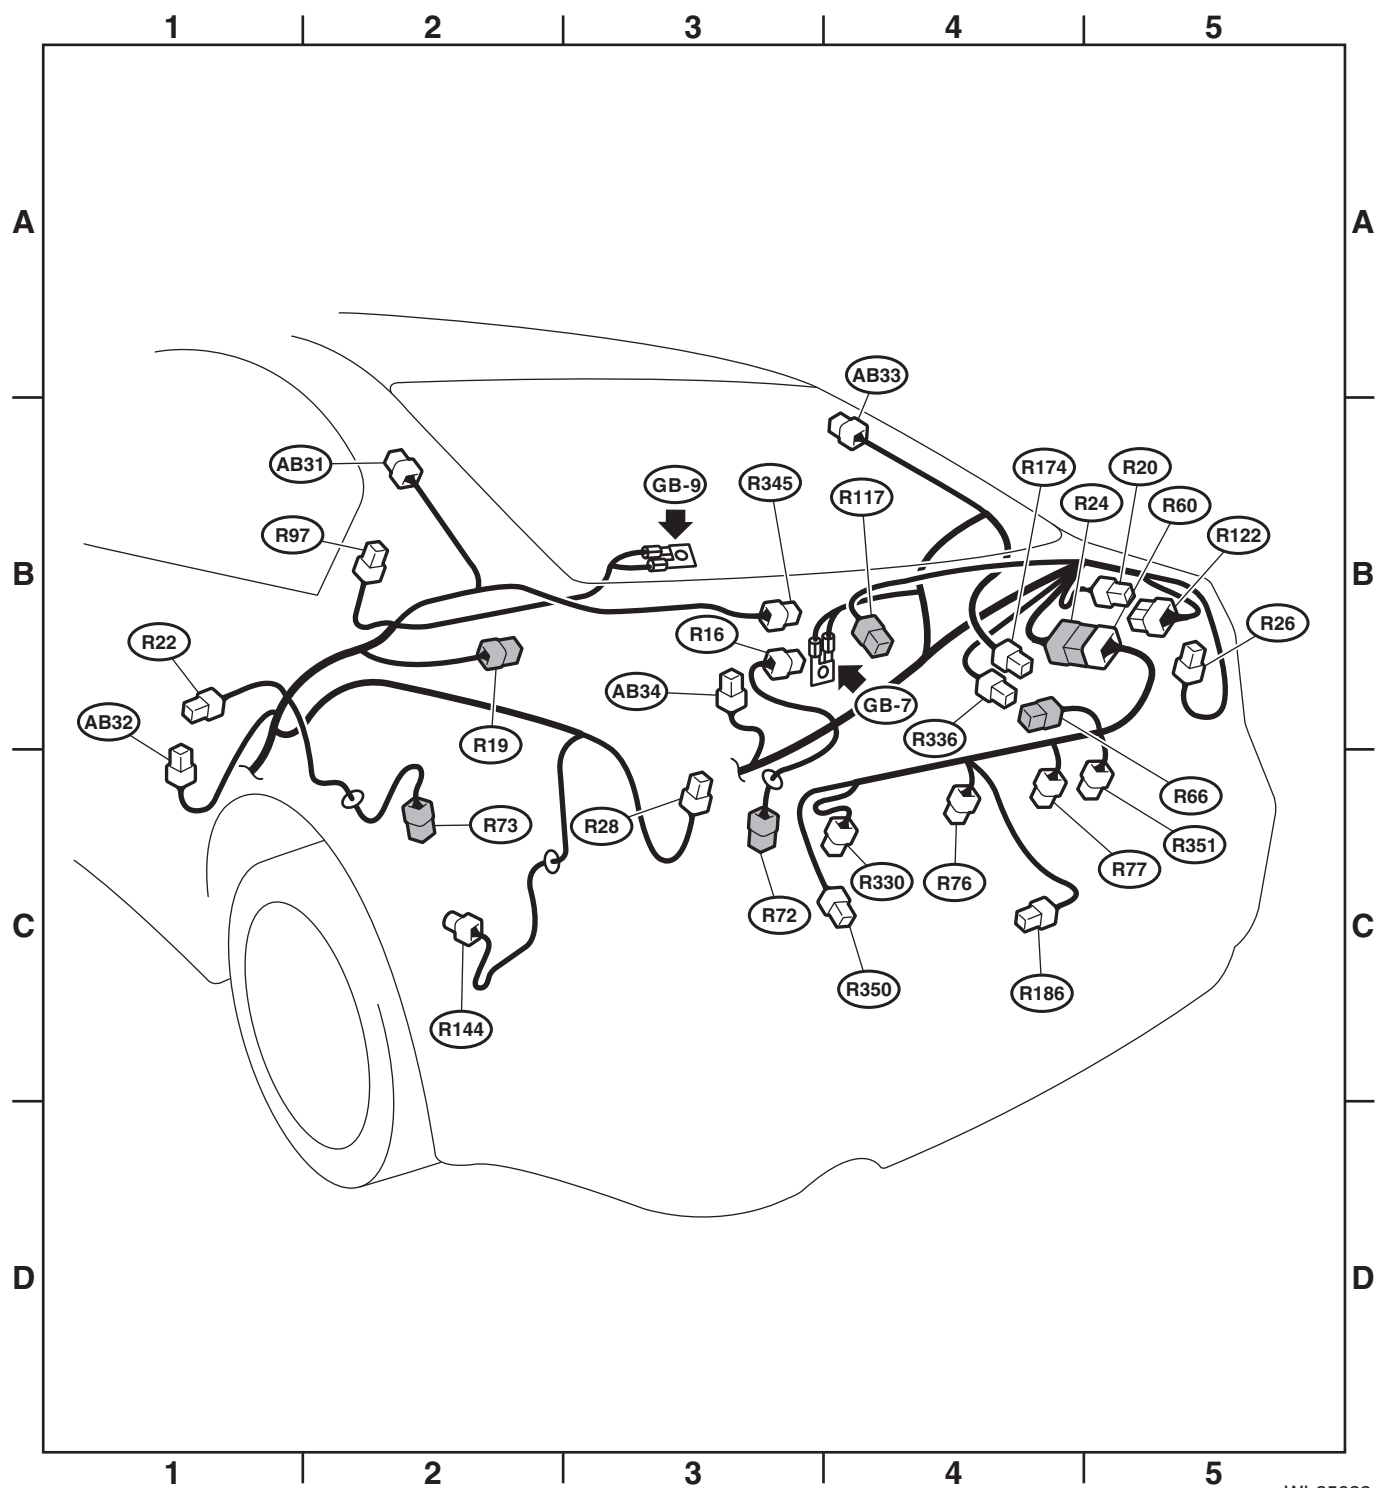

WI-25622

Rear Wiring Harness and Rear Gate Cord

WIRING SYSTEM

63.Rear Wiring Harness and Rear Gate Cord

A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
R16	3	★	B-3		Rear door switch RH
R22	3	★	C-1		Rear door switch LH
R26	4	★	C-5		Rear combination light RH
R28	4	★	C-2		Rear combination light LH
R32	2	★	C-3		Rear accessory power supply socket (cargo room)
R38	13	★	B-3	D34	Rear gate cord
R72	2	Light gray	C-3		Rear ABS wheel speed sensor RH
R73	2	Light gray	C-2		Rear ABS wheel speed sensor LH
R79	8	★	C-2		Trailer connector
R97	1	★	B-2		Antenna amplifier
R117	4	★	C-4		Woofer
R122	10	★	C-4		Fuel pump CM
R144	2	Black	D-2		Drain valve
R330	4	★	B-2	R356	Rear gate cord (rearview camera)
R336	4	★	C-2		J/C
R345	8	★	C-2		Keyless entry CM
R347	3	★	B-3		Luggage room light
R356	4	★	B-2	R330	Rear wiring harness
R357	6	★	A-3		Rearview camera

★ : White or natural color


Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
D34	13	★	B-3	R38	Rear wiring harness
D39	2	★	B-3		High-mounted stop light
D43	4	★	A-4		Rear wiper motor
D44	2	★	A-4		License plate light
D47	4	★	A-4		Rear gate lock actuator & latch switch
D77	6	★	A-4		Rear gate opener button
D87	2	★	A-5		Rear finisher light RH (back-up light)
D89	2	★	A-4		Rear defogger
D91	2	★	A-3		Rear finisher light LH (back-up light)
D134	2	★	A-3		Rear finisher light LH (tail light)
D139	2	★	B-5		Rear finisher light LH (tail light)

★ : White or natural color

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB31	2	Black	C-2		Curtain airbag module LH
AB32	4	Yellow	C-1		Curtain airbag sensor LH
AB33	2	Black	B-4		Curtain airbag module RH
AB34	4	Yellow	C-3		Curtain airbag sensor RH

Rear Wiring Harness and Rear Gate Cord

WIRING SYSTEM

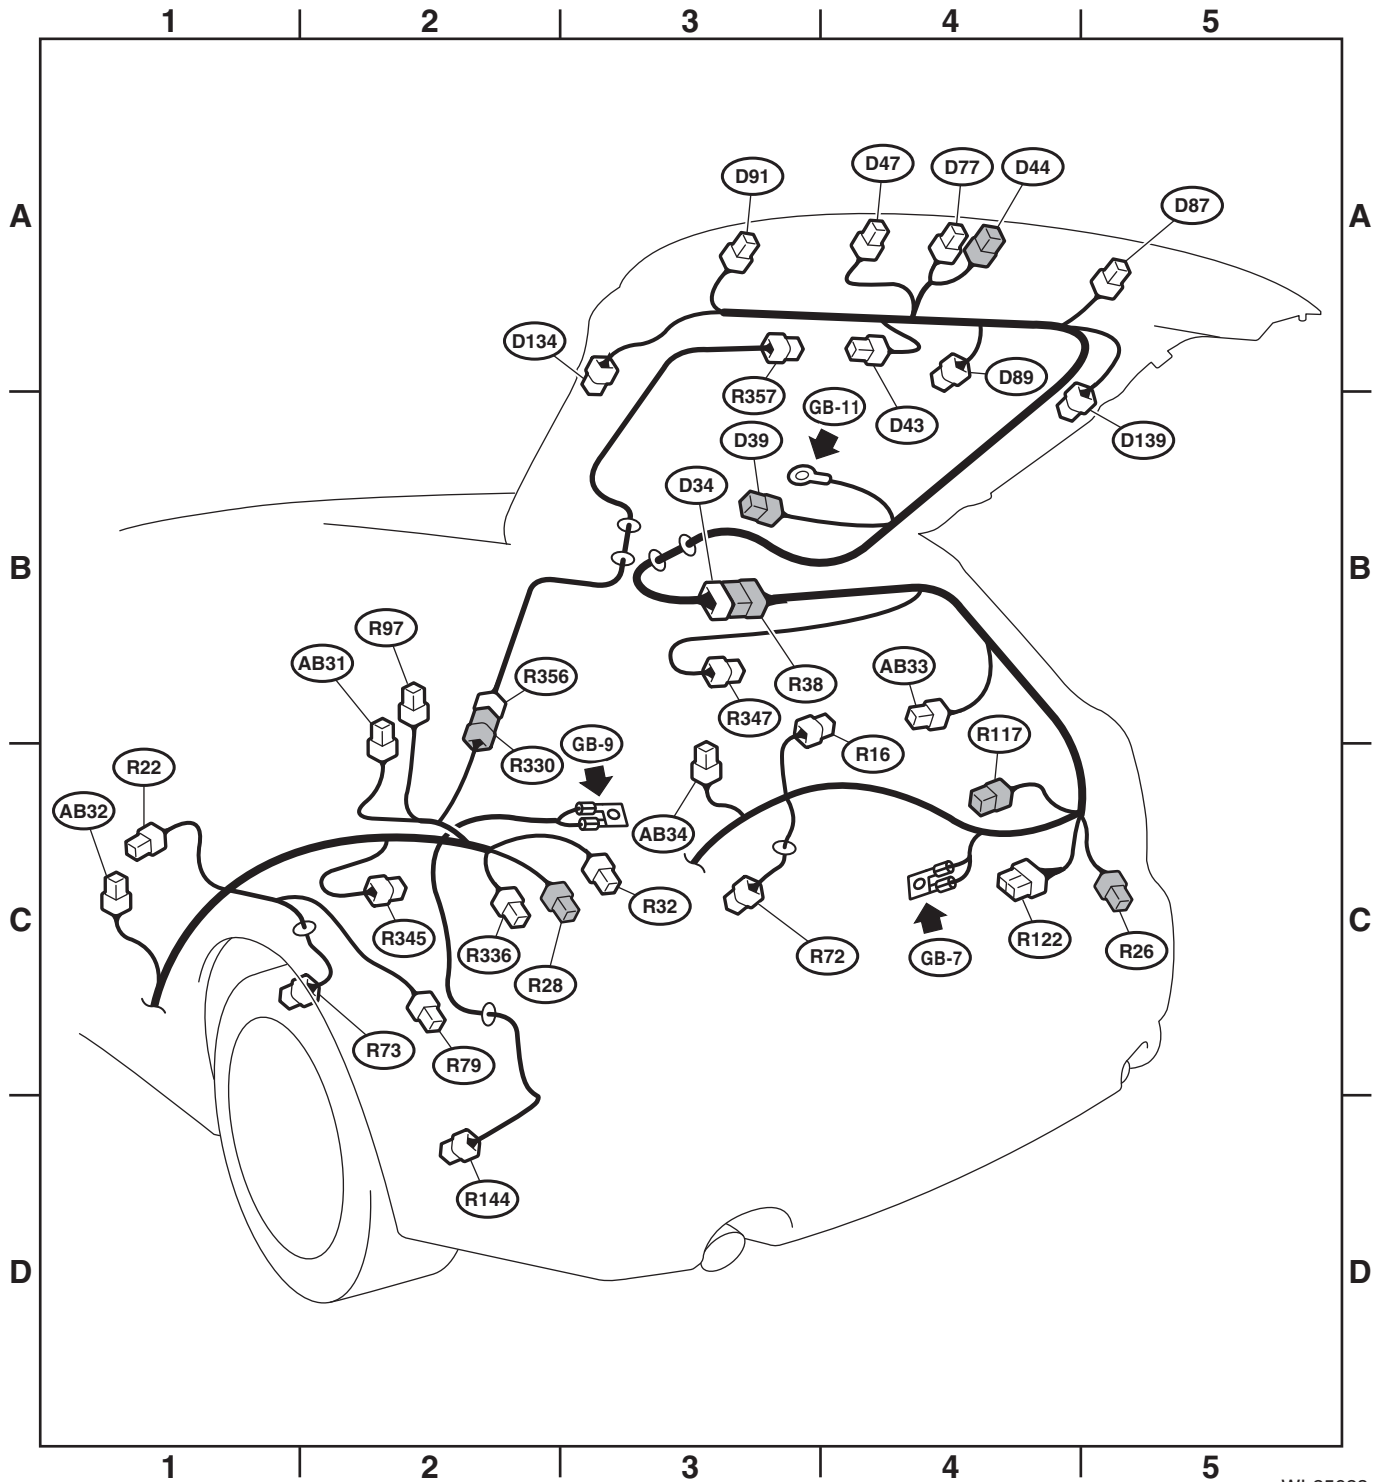

WI-25623

Rear Wiring Harness and Rear Gate Cord

WIRING SYSTEM
