

Transmission Control Module (TCM)

CONTINUOUSLY VARIABLE TRANSMISSION


22. Transmission Control Module (TCM)

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the instrument panel lower cover. <Ref. to EI-63, REMOVAL, Instrument Panel Lower Cover.>
- 3) Remove the bulkhead harness connector from TCM.
- 4) Remove the TCM.

NOTE:

Replace TCM and bracket as a set.

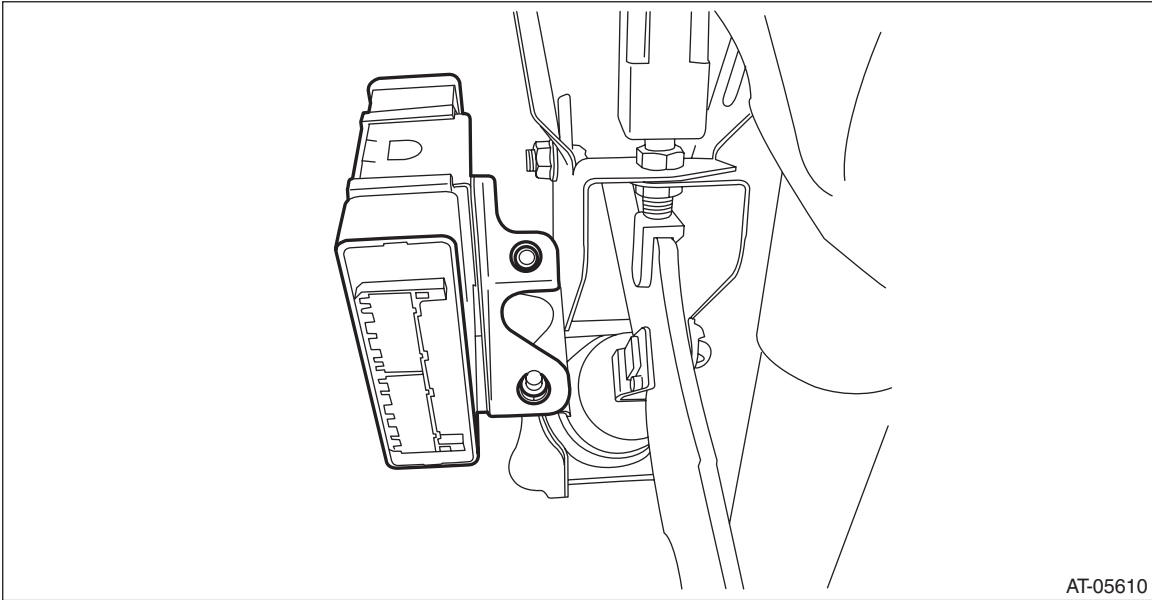

AT-05610

Transmission Control Module (TCM)

CONTINUOUSLY VARIABLE TRANSMISSION

B: INSTALLATION

1) Install the TCM to the bracket.


CAUTION:

To avoid the damage to bracket and TCM, do not remove after installing TCM to bracket. If installed by mistake, the part must be replaced with a new part.

2) Install the TCM.

Tightening torque:

7.5 N·m (0.76 kgf·m, 5.5 ft·lb)

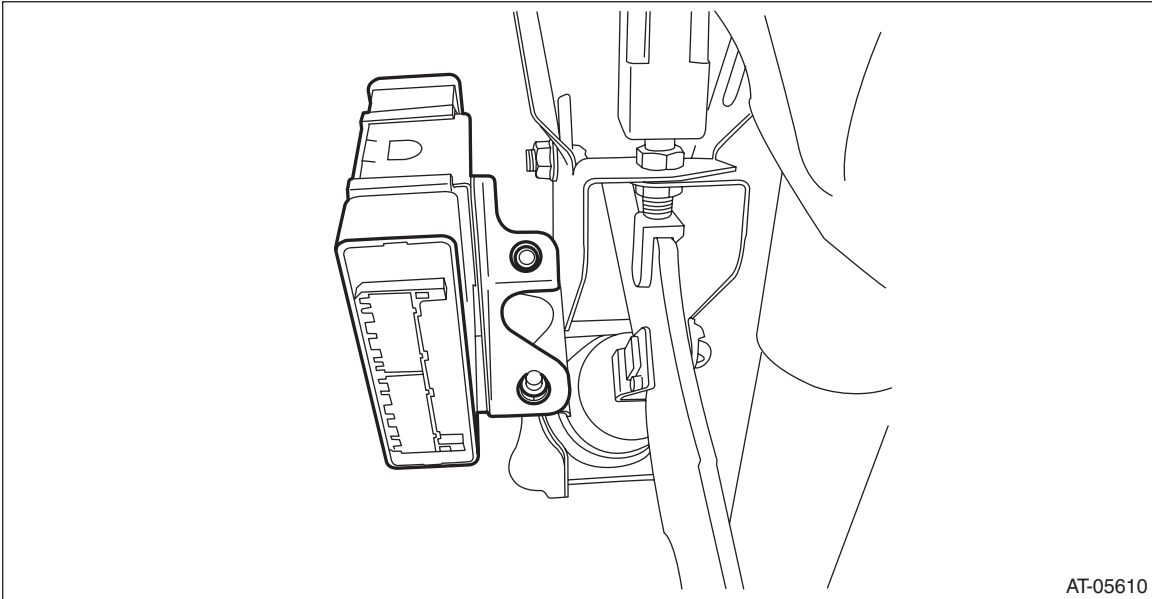

3) Install the harness connector to TCM.

4) Install the instrument panel lower cover. <Ref. to EI-64, INSTALLATION, Instrument Panel Lower Cover.>

5) Execute the learning control promotion. <Ref. to CVT(diag)-20, Learning Control.>