


Parking Pawl

CONTINUOUSLY VARIABLE TRANSMISSION

32. Parking Pawl

A: REMOVAL

- 1) Remove the transmission assembly from the vehicle. <Ref. to CVT-55, REMOVAL, Automatic Transmission Assembly.>
- 2) Shift the range select lever to "N" range.
- 3) Remove the extension case. <Ref. to CVT-137, REMOVAL, Extension Case.>
- 4) Remove the parking pawl shaft, return spring and parking pawl.

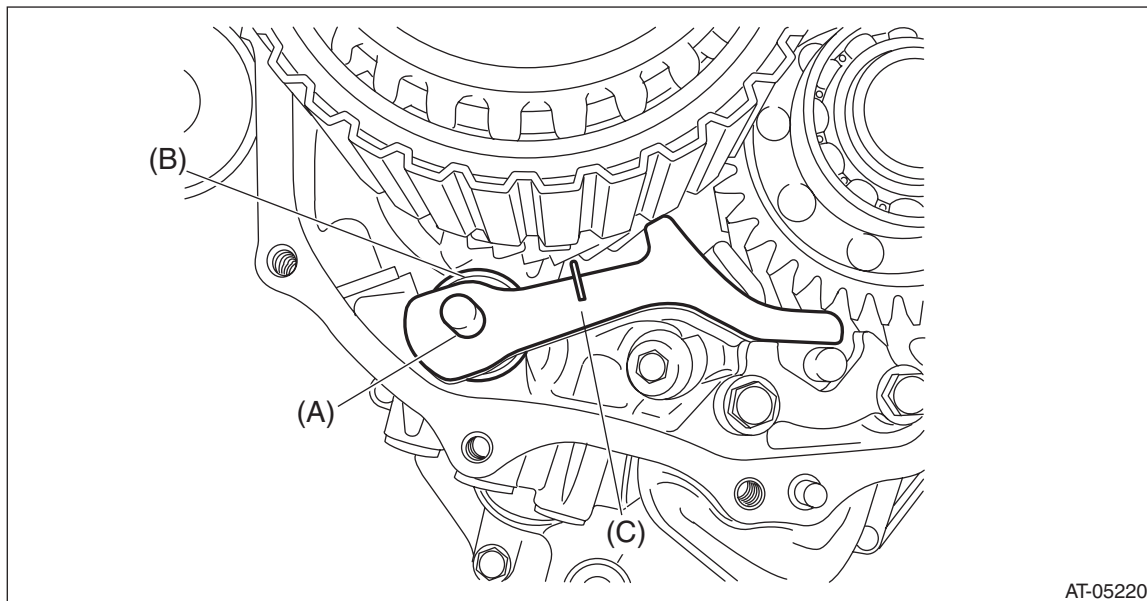


- (A) Parking pawl shaft
- (B) Return spring
- (C) Parking pawl

B: INSTALLATION

- 1) Set the range select lever to the "N" range.
- 2) Install the parking pawl shaft, return spring and parking pawl.

NOTE:

Make sure that the return spring end sticks out of parking pawl as shown in the figure (a). Make sure that the other end of return spring is in contact with the rib of intermediate case as shown in the figure (b).

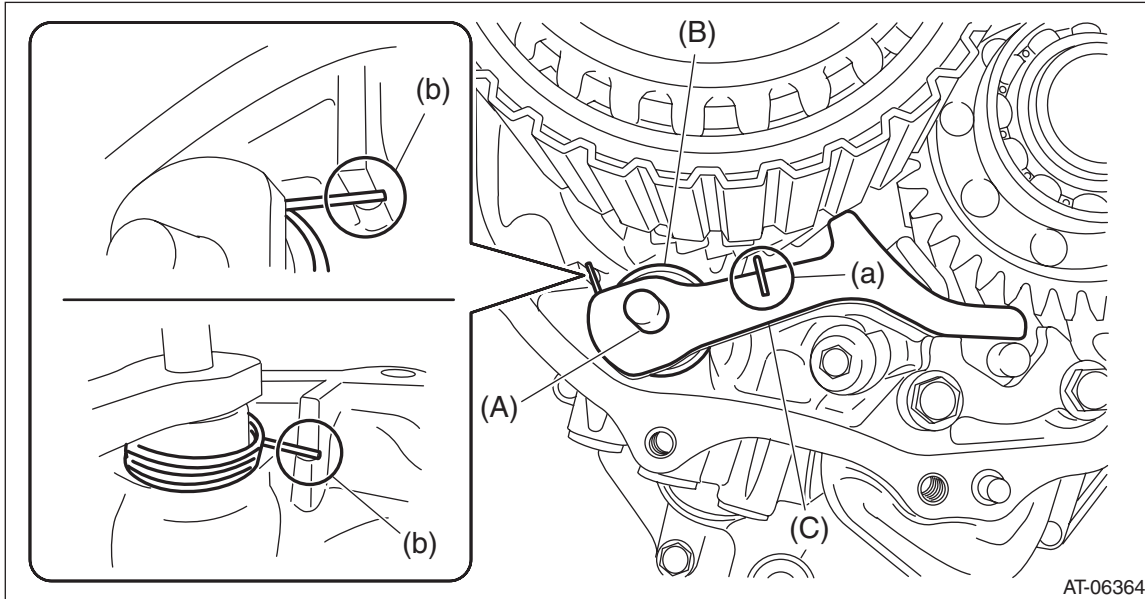

- (A) Parking pawl shaft
- (B) Return spring
- (C) Parking pawl

- 3) Install the extension case. <Ref. to CVT-137, INSTALLATION, Extension Case.>
- 4) Install the transmission assembly to the vehicle. <Ref. to CVT-69, INSTALLATION, Automatic Transmission Assembly.>

C: INSPECTION

- Check the parking pawl for breakage or damage.
- Check the return spring for fatigue.