

6. Resonator Chamber

A: REMOVAL

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to "Air Cleaner Case" for removal procedure. <Ref. to IN(H6DO)-5, REMOVAL, Air Cleaner Case.>

B: INSTALLATION

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to "Air Cleaner Case" for installation procedure. <Ref. to IN(H6DO)-5, INSTALLATION, Air Cleaner Case.>

C: INSPECTION

Check that the resonator chamber has no deformation, cracks or other damages.

Resonator Chamber

INTAKE (INDUCTION)

MECHANICAL

ME(H6DO)

	Page
1. General Description	2
2. Compression	26
3. Idle Speed	27
4. Ignition Timing	28
5. Intake Manifold Vacuum	29
6. Engine Oil Pressure	30
7. Fuel Pressure	31
8. Valve Clearance	32
9. Engine Assembly	35
10. Engine Mounting	44
11. Preparation for Overhaul	48
12. V-belt	49
13. Crank Pulley	50
14. Chain Cover	51
15. Timing Chain Assembly	59
16. Cam Sprocket	78
17. Crank Sprocket	79
18. Camshaft	80
19. Cylinder Head	88
20. Cylinder Block	100
21. Oil Flow Control Solenoid Valve	123
22. Intake and Exhaust Valve	124
23. Piston	125
24. Connecting Rod	126
25. Crankshaft	127
26. Engine Trouble in General	128
27. Engine Noise	134