


Oil Control Solenoid

FUEL INJECTION (FUEL SYSTEMS)

9. Oil Control Solenoid


A: REMOVAL

- 1) Disconnect the ground cable from battery.

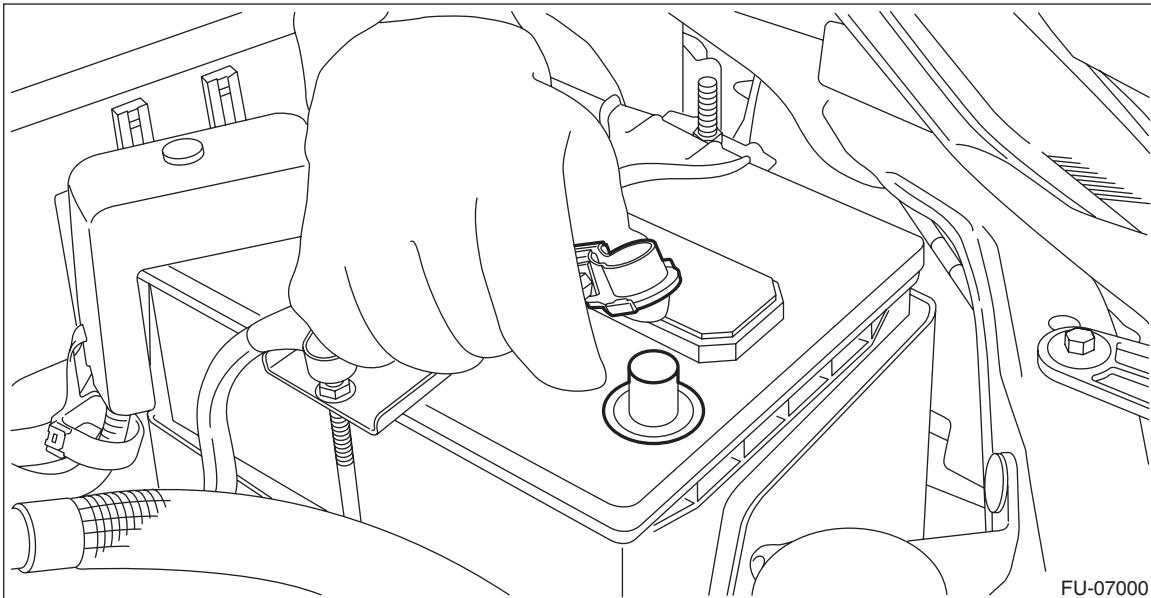


- 2) Remove the air intake duct. (RH side only) <Ref. to IN(H4DO)-14, REMOVAL, Air Intake Duct.>
- 3) Remove the reservoir tank. (LH side only) <Ref. to CO(H4DO)-41, REMOVAL, Reservoir Tank.>
- 4) Disconnect the connector (A) from the intake oil control solenoid, and remove the intake oil control solenoid from the chain cover.

- RH side

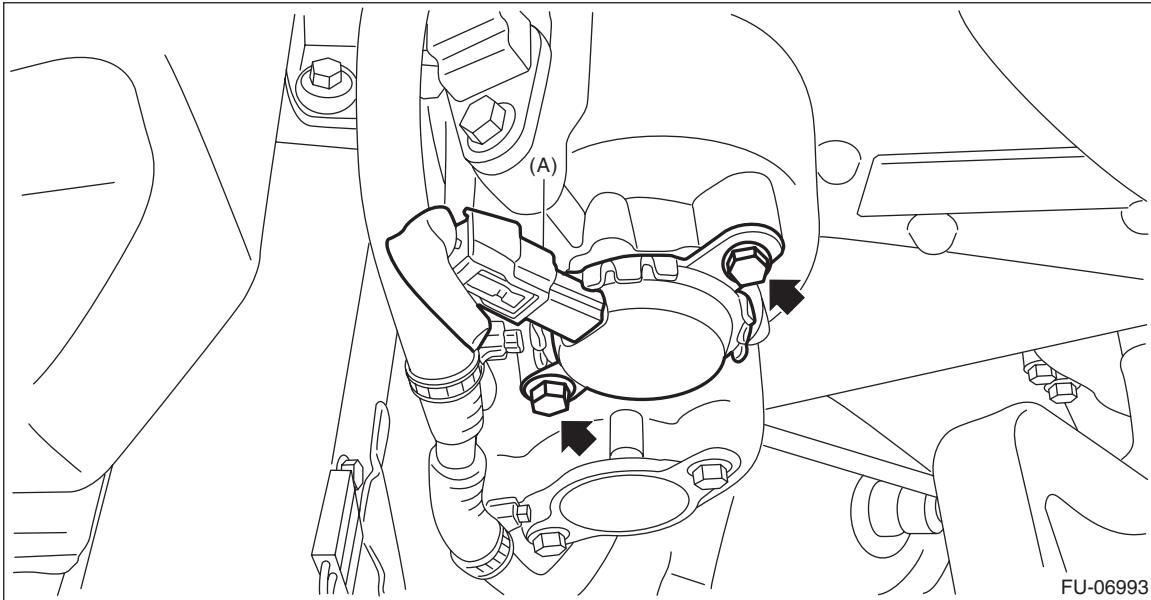

- LH side

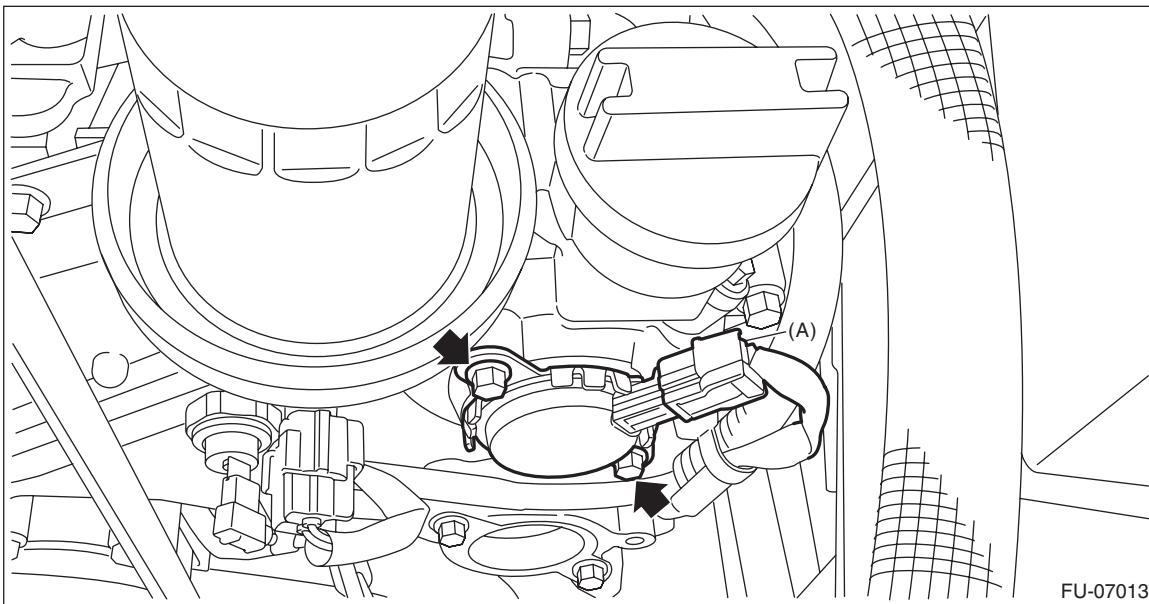

B: INSTALLATION

Install in the reverse order of removal.

NOTE:


Use new O-rings.

Tightening torque:

6.4 N·m (0.7 kgf-m, 4.7 ft-lb)

C: INSPECTION

- 1) Check that the oil control solenoid has no deformation, cracks or other damages.
- 2) Measure the resistance between the oil control solenoid terminals.

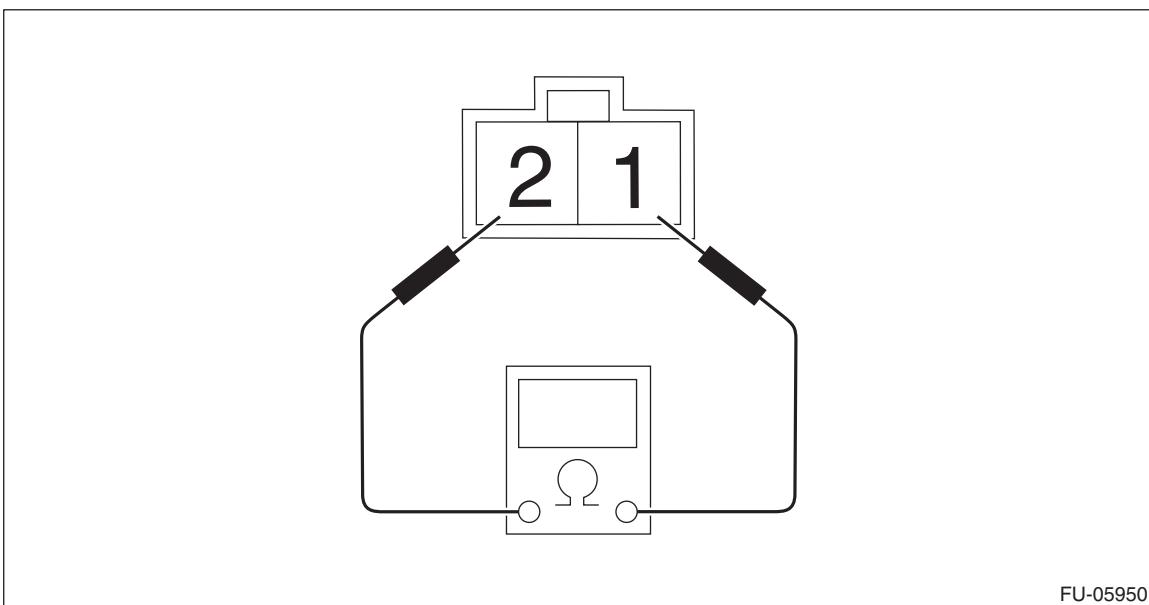

Terminal No.	Standard
1 and 2	$7.25 \pm 0.4 \Omega$ (when 20°C (68°F))