


Power Transistor (Auto A/C Model)

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)


11. Power Transistor (Auto A/C Model)

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the clips, and remove the glove box under cover.

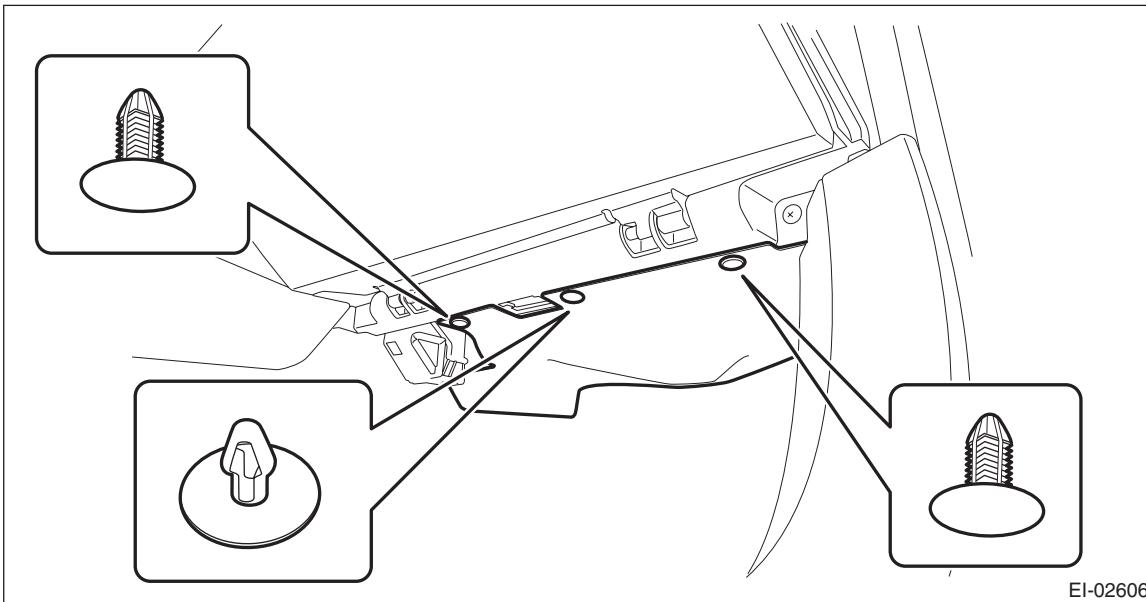

- 3) Remove the power transistor.
 - (1) Disconnect the connector.
 - (2) Remove the screws and remove the power transistor.

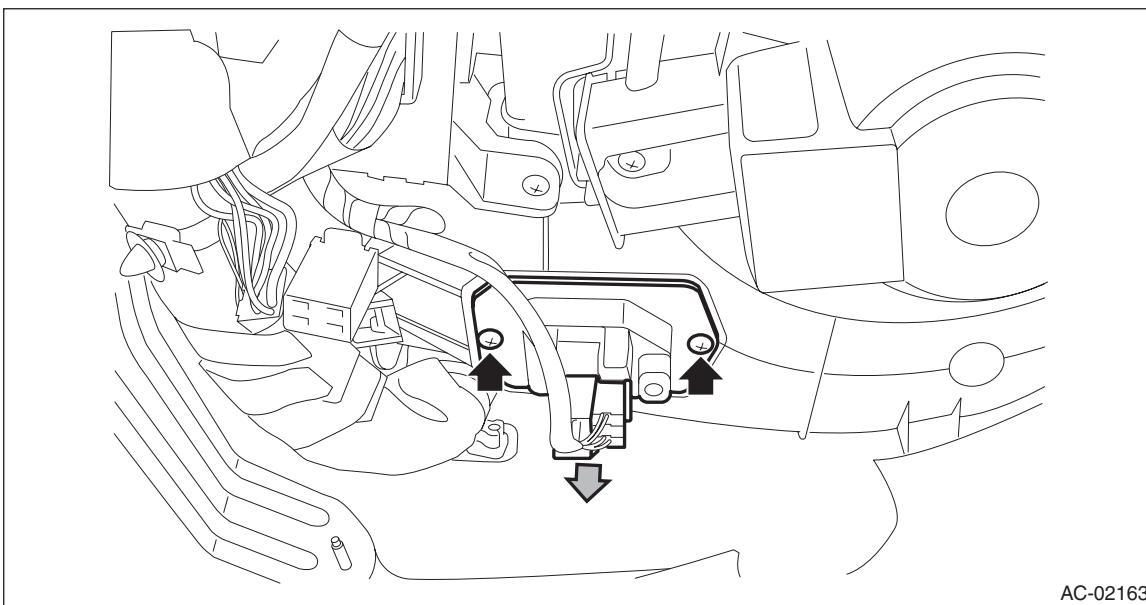

B: INSTALLATION

Install each part in the reverse order of removal.