

## 21. Key Lock Cylinders


### A: REPLACEMENT

#### 1. FRONT DOOR


- 1) Raise the front door glass to the top position.
- 2) Remove the front door trim. <Ref. to EI-59, FRONT DOOR, REMOVAL, Door Trim.>
- 3) Remove the sealing cover.

#### CAUTION:

- Carefully remove the butyl tape. Excessive force will easily break the cover.
- If the sealing cover gets broken, replace it with a new part.

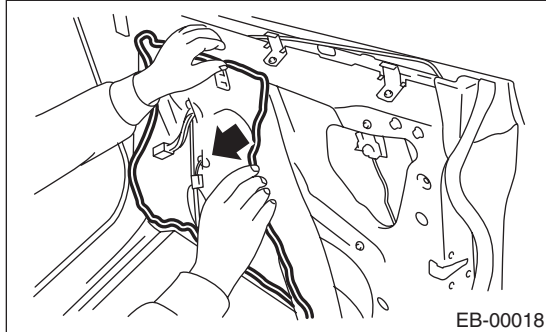

- 4) Remove the rod from the outer handle rod clamp.

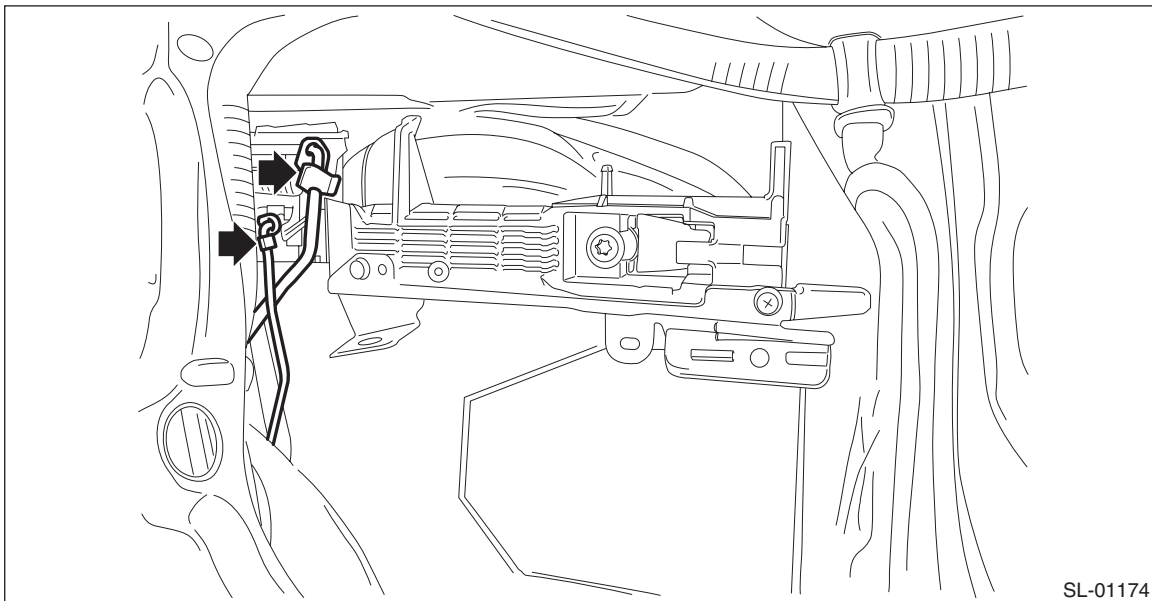

# Key Lock Cylinders


## SECURITY AND LOCKS

5) Remove the door outer handle cover.


**Preparation tool:**

**TORX® T30**

- (1) Remove the plug to the rear of the door panel.
- (2) Loosen the TORX® bolt and remove the door outer handle cover.

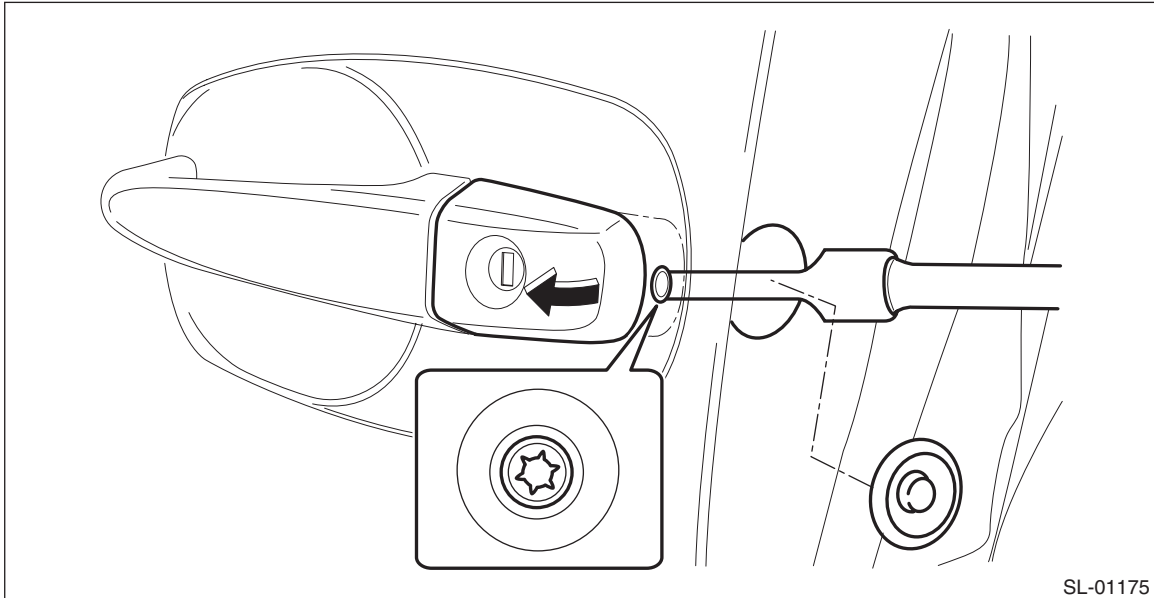

6) Remove the key cylinder from the door outer handle cover, and replace the key cylinder.

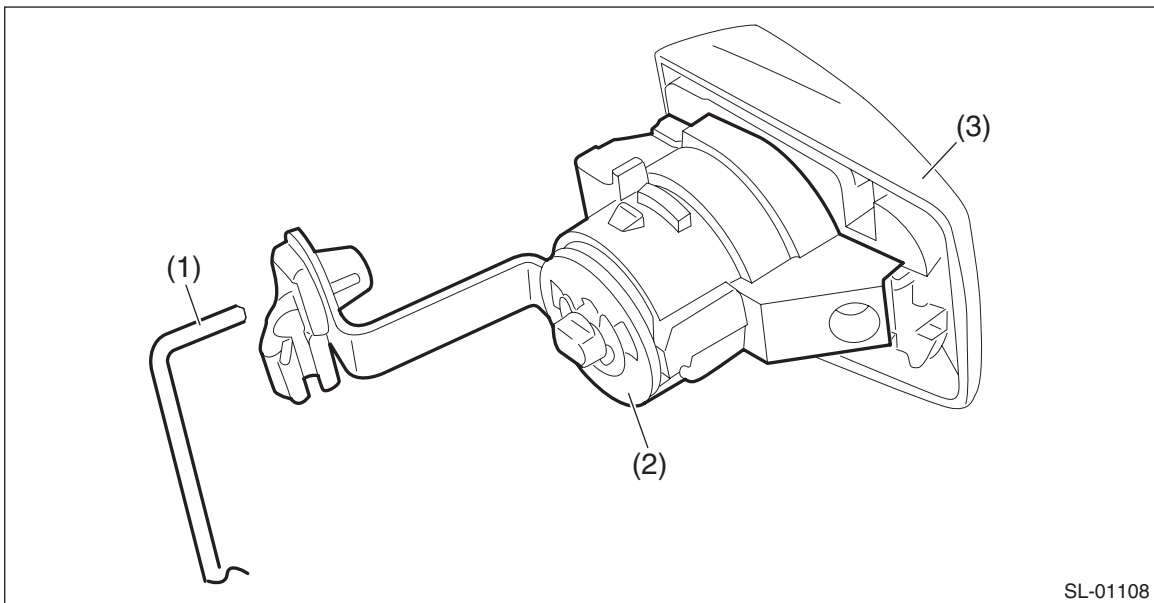

(1) Latch connection rod

(2) Key cylinder


(3) Door outer handle cover (driver's seat only)

**Tightening torque:**


Refer to "COMPONENT" of "General Description". <Ref. to SL-2, DOOR LOCK ASSEMBLY, COMPONENT, General Description.>

## 2. TRUNK LID

- 1) Remove the trunk lid garnish. <Ref. to EI-170, REMOVAL, Trunk Lid Garnish.>
- 2) Remove the key cylinder.
  - (1) Remove the cable (1), clip (2) and bolt (3).

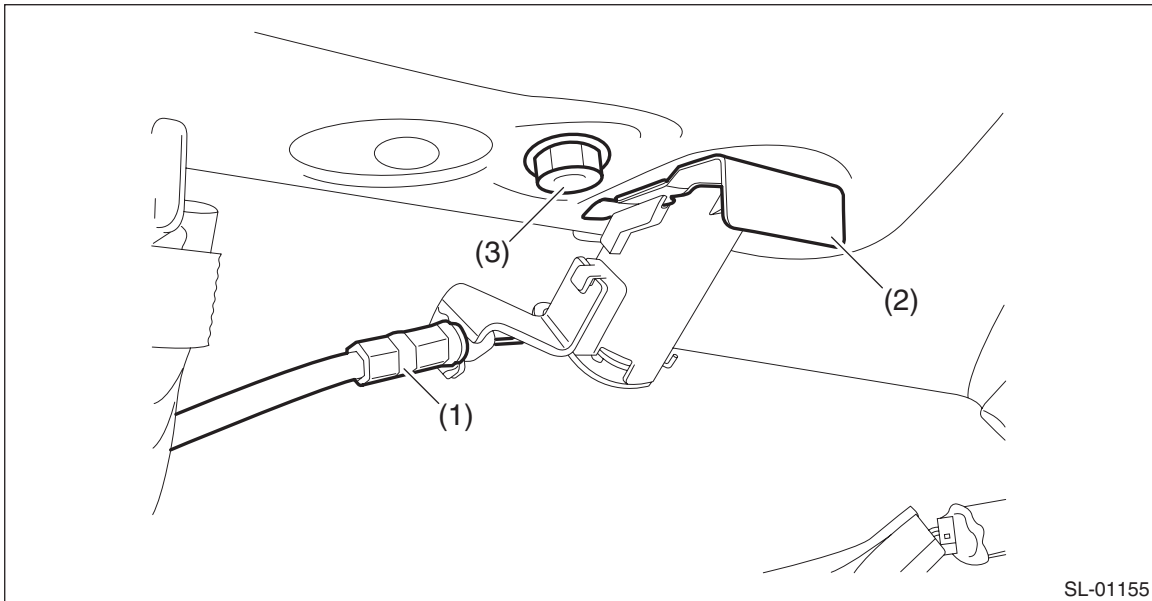

- (2) Remove the key cylinder from the trunk lid, and replace the key cylinder.

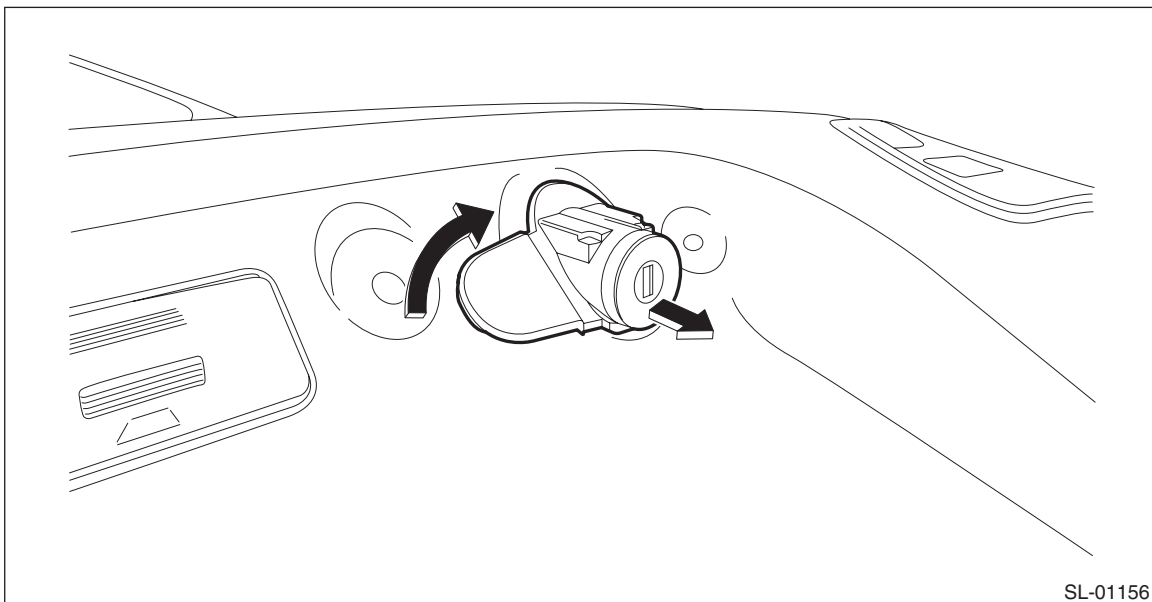

### **Tightening torque:**


**Key cylinder: 7.5 N·m (0.76 kgf-m, 5.5 ft-lb)**

# Key Lock Cylinders

## SECURITY AND LOCKS


### 3. GLOVE BOX LID

- 1) Remove the glove box lid assembly.
  - (1) Remove the glove box damper.
  - (2) Release the stoppers and remove the glove box lid assembly by pulling it toward you.

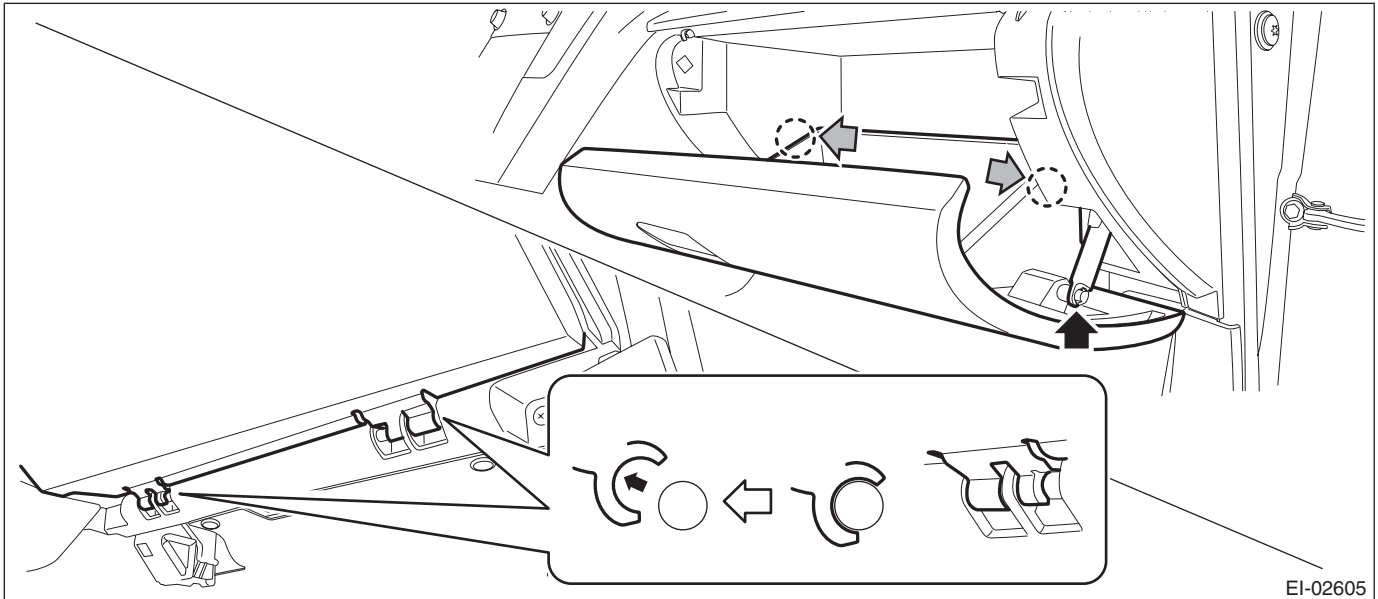

EI-02605

- 2) Remove the key cylinder.
  - (1) UNLOCK the key cylinder, and pull up the lock knob.
  - (2) While maintaining the condition (1), insert the key to set LOCK condition

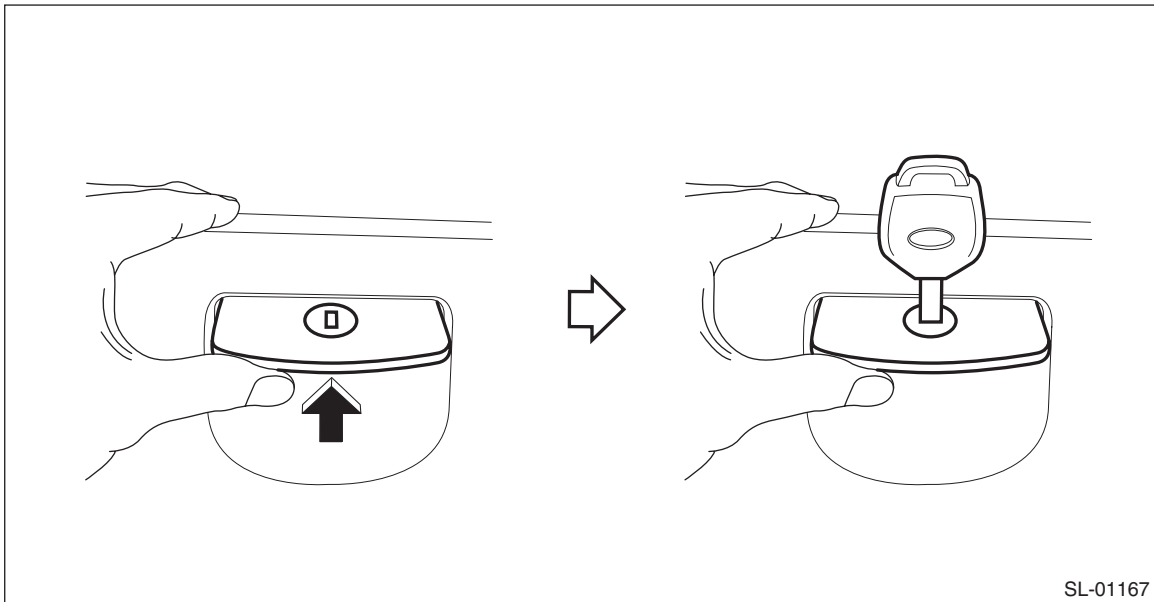

SL-01167

- (3) Push out the key cylinder, while pressing in the metal plate.

(4) Remove the key cylinder from lock knob, and replace the key cylinder.

