


# Electrical Component Location

## AIRBAG SYSTEM (DIAGNOSTICS)

### 4. Electrical Component Location

#### A: LOCATION

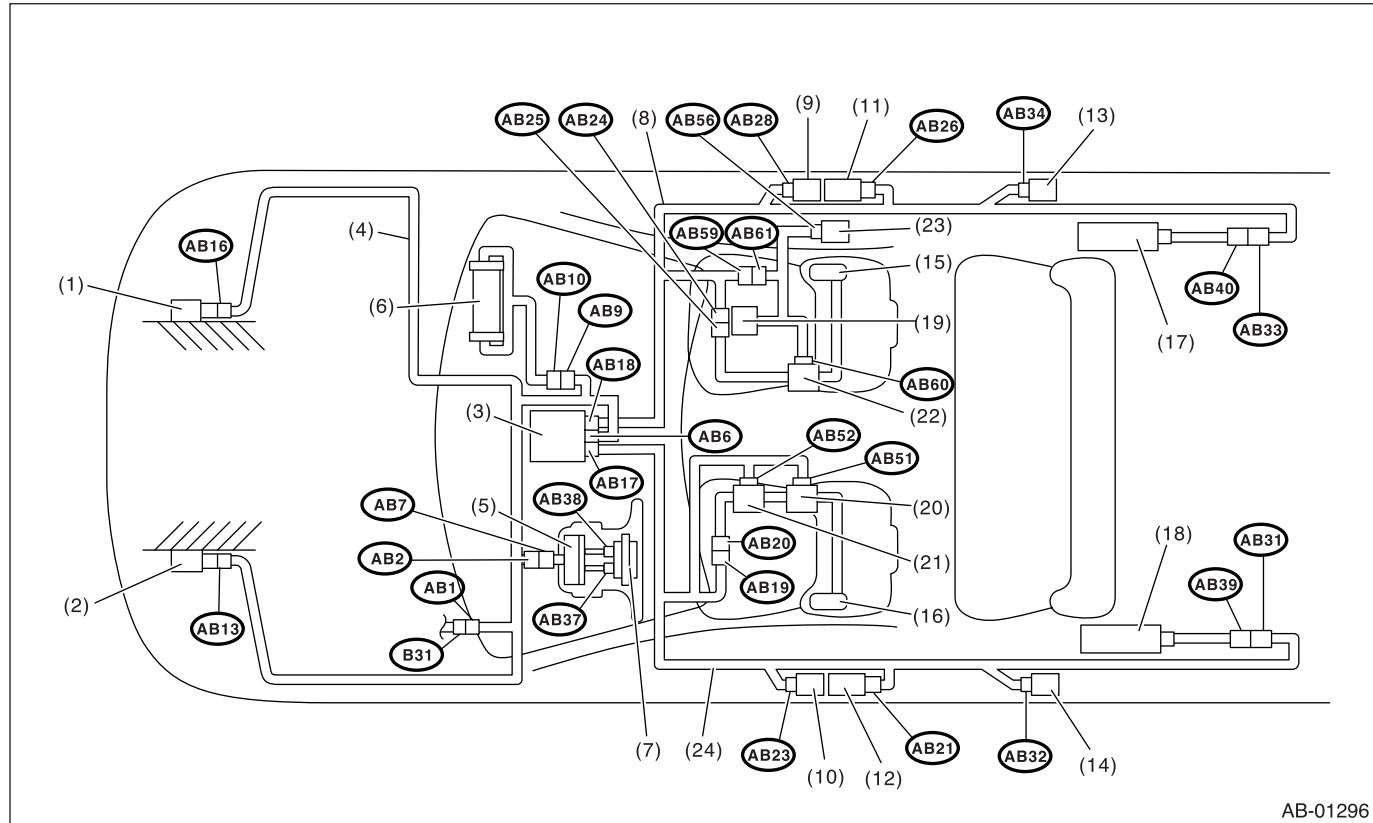

AB-01296

(1) Front sub sensor (RH)	(9) Side airbag sensor (RH)	(17) Curtain airbag inflator (RH)
(2) Front sub sensor (LH)	(10) Side airbag sensor (LH)	(18) Curtain airbag inflator (LH)
(3) Airbag control module with built-in safing and electric sensor	(11) Seat belt pretensioner (RH)	(19) Occupant detection control module
(4) Airbag main harness	(12) Seat belt pretensioner (LH)	(20) Buckle switch (LH)
(5) Roll connector	(13) Curtain airbag sensor (RH)	(21) Seat position sensor (LH)
(6) Passenger's airbag inflator	(14) Curtain airbag sensor (LH)	(22) Buckle switch (RH)
(7) Driver's airbag inflator	(15) Side airbag inflator (RH)	(23) Belt tension sensor
(8) Airbag rear harness (RH)	(16) Side airbag inflator (LH)	(24) Airbag rear harness LH

# Electrical Component Location

AIRBAG SYSTEM (DIAGNOSTICS)

Connector No.	(AB1)	(AB2)	(AB6)	(AB7)	(AB9)	(AB10)	(AB13)	(AB16)	(AB17)	(AB18)	(AB19)	(AB20)
Pin	12	4	28	4	4	4	2	2	20	20	2	2
Connector color	Yellow											
Male/ Female	Female	Female	Female	Male	Female	Male	Female	Female	Female	Female	Female	Male
<hr/>												
Connector No.	(AB21)	(AB23)	(AB24)	(AB25)	(AB26)	(AB28)	(AB31)	(AB32)	(AB33)	(AB34)	(AB37)	(AB38)
Pin	2	4	2	2	2	4	2	4	2	4	2	2
Connector color	Black	Yellow	Yellow	Yellow	Black	Yellow	Yellow	Yellow	Yellow	Yellow	Orange	Black
Male/ Female	Female	Female	Female	Male	Female							
<hr/>												
Connector No.	(AB39)	(AB40)	(AB51)	(AB52)	(AB56)	(AB59)	(AB60)	(AB61)				
Pin	2	2	2	2	3	6	2	6				
Connector color	Yellow	Yellow	Yellow	Yellow	Brown	Gray	Yellow	Gray				
Male/ Female	Male	Male	Female	Female	Female	Male	Male	Female				