


## 10.Curtain Airbag Sensor

### A: REMOVAL

- 1) Turn the ignition switch to OFF.
- 2) Disconnect the ground cable from battery and wait for at least 20 seconds before starting work.
- 3) Remove the rear quarter lower trim. <Ref. to EI-45, REMOVAL, Rear Quarter Trim.>
- 4) Remove the nut and disconnect the airbag connector to remove the curtain airbag sensor.

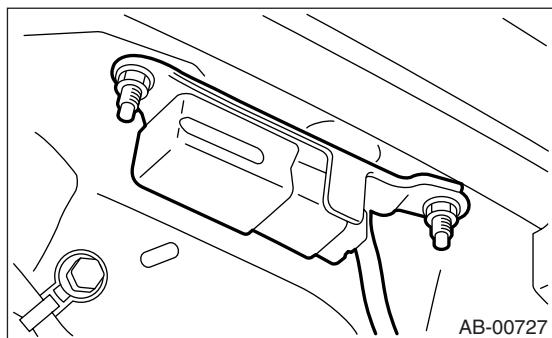

### B: INSTALLATION

#### CAUTION:

- Do not reuse the bolt and nut.
- Always use new bolts and nuts for them.

Install in the reverse order of removal.

#### *Tightening torque:*

8 N·m (0.82 kgf·m, 5.9 ft-lb)

### C: INSPECTION

Check for the following, and replace the damaged parts with new parts.

- Mounting bracket or connector of curtain airbag sensor is damaged.
- Curtain airbag is deployed.