


## 12. Front Sub Sensor

### A: REMOVAL

- 1) Turn the ignition switch to OFF.
- 2) Disconnect the ground cable from battery and wait for at least 20 seconds before starting work.
- 3) Remove the front bumper face. <Ref. to EI-21, FRONT BUMPER FACE, REMOVAL, Front Bumper.>
- 4) Remove the bolt, and then detach the front sub sensor.

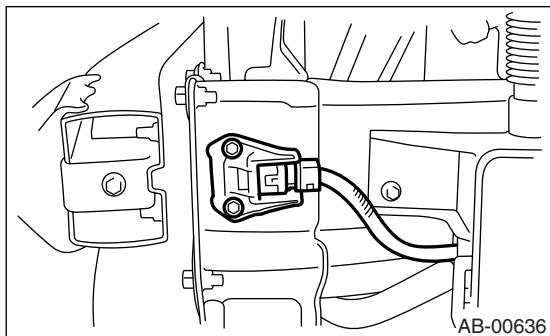

- 5) Disconnect the connector from front sub sensor.

### B: INSTALLATION

#### CAUTION:

- Do not reuse the bolt and nut.
- Always use new bolts and nuts for them.

Install in the reverse order of removal.

#### *Tightening torque:*

13 N·m (1.32 kgf·m, 9.6 ft-lb)

### C: INSPECTION

Check for the following, and replace the damaged parts with new parts.

- Front sub sensor, mounting bracket and connector are damaged.
- Airbag is deployed.

## Front Sub Sensor

AIRBAG SYSTEM

---