

## 4. Horn Switch

### A: REMOVAL

**CAUTION:**

Before servicing, be sure to read the notes in the AB section for proper handling of the driver's airbag module. <Ref. to AB-4, CAUTION, General Description.>

**NOTE:**

Horn switch is a unit with the driver's airbag module.


- 1) Disconnect the ground cable from battery.
- 2) Remove the driver's airbag module. <Ref. to AB-15, REMOVAL, Driver's Airbag Module.>

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

Measure the resistance between horn switch terminal and airbag module bracket.

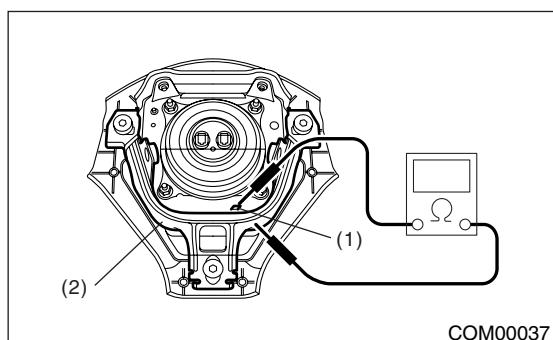

(1) Airbag module bracket

(2) Horn switch terminal

Switch position	Terminal No.	Resistance
When horn switch is pushed.	Horn switch terminal and airbag module bracket	Less than 1 Ω
When horn switch is not pushed.		1 MΩ or more

## **Horn Switch**

COMMUNICATION SYSTEM

---