


### 3. Cruise Control Command Switch

#### A: REMOVAL

##### CAUTION:


Before servicing, be sure to read the notes in the "AB" section for proper handling of the driver's airbag module. <Ref. to AB-4, CAUTION, General Description.>

- 1) Set the front wheels in straight ahead position.
- 2) Turn the ignition switch to OFF.
- 3) Disconnect the ground cable from battery and wait for at least 20 seconds before starting work.
- 4) Using TORX® BIT T30 (1), loosen two TORX® bolts which secure the driver's airbag module.

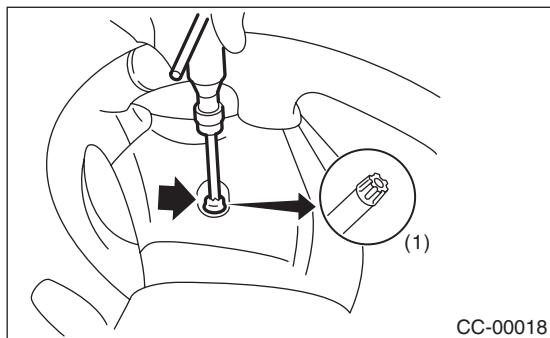


CC-00018

- 5) Disconnect the airbag module connector on back of the airbag module.
- 6) Remove the steering wheel. <Ref. to PS-12, REMOVAL, Steering Wheel.>
- 7) Remove the four screws to remove the lower cover from steering wheel.

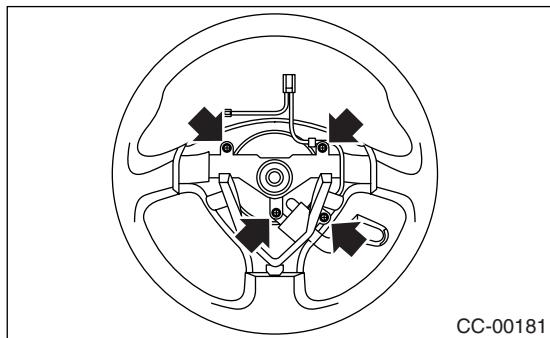

CC-00181

- 8) Remove one screw to remove the cruise control command switch from lower cover.

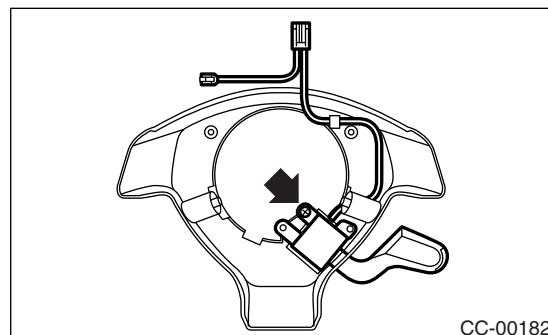


CC-00182

#### B: INSTALLATION

Install in the reverse order of removal.

#### C: INSPECTION

Measure the cruise control command switch resistance.

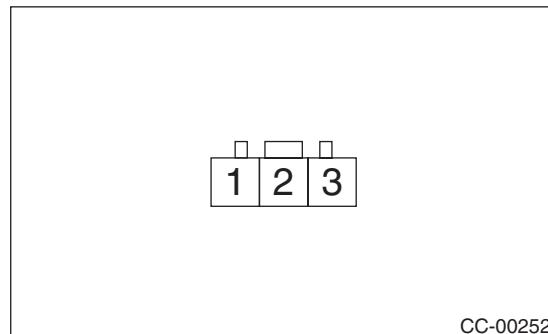

CC-00252

Switch	Area	Terminal No.	Standard
CANCEL SET/COAST RESUME/ ACCEL	All OFF	2 and 3	Approx. 4 kΩ
CANCEL	ON	2 and 3	Less than 1 Ω
SET/COAST	ON	2 and 3	Approximately 250 Ω
RESUME/ ACCEL	ON	2 and 3	Approximately 1500 Ω
MAIN	OFF	1 and 2	1 MΩ or more
	ON	1 and 2	Less than 1 Ω

If NG, replace the cruise control command switch.