

## 2. Cruise Control Unit

### A: NOTE

The control of cruise control system is carried out in Engine control module (ECM).

### B: REMOVAL

<Ref. to FU(H6DO)-32, REMOVAL, Engine Control Module (ECM).>

### C: INSTALLATION

<Ref. to FU(H6DO)-32, INSTALLATION, Engine Control Module (ECM).>