

## 4. Stop Light and Brake Switch

### A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Disconnect the connector from the stop light & brake switch, and then remove the switch. <Ref. to BR-37, REMOVAL, Stop Light Switch.>

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

Measure the resistance of brake switch (A) and stop light switch (B).

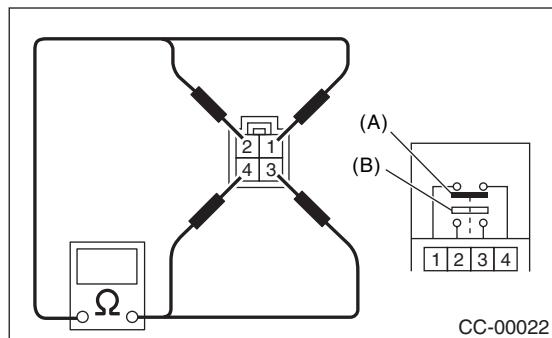

Switch	Pedal	Terminal No.	Standard
Brake	Released	1 and 4	Less than 1 Ω
	Depressed	1 and 4	1 MΩ or more
Stop light	Released	2 and 3	1 MΩ or more
	Depressed	2 and 3	Less than 1 Ω

If NG, replace the stop light & brake switch.