

24.AUX Input Terminal

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the quarter trim. <Ref. to EI-45, REMOVAL, Rear Quarter Trim.>
- 3) Remove the AUX input terminal from the trim.

B: INSTALLATION

Install in the reverse order of removal.