


## 15. Antenna Amplifier

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear gate trim. <Ref. to EI-51, REMOVAL, Rear Gate Trim.>
- 3) Disconnect the harness connectors and terminals.
- 4) Remove the screws and detach the antenna amplifier.

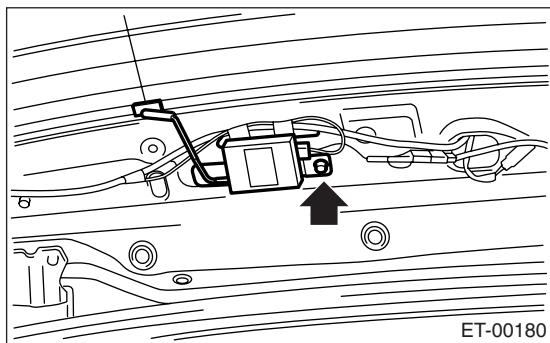


### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

Measure the resistance of antenna amplifier.

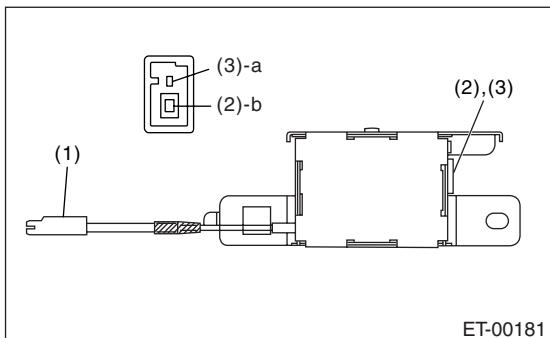

Terminal No.	Standard
(1) and amplifier body	10 kΩ or more
(2)-b and Amplifier body	10 kΩ or more
(3)-a and Amplifier body	10 kΩ or more