



## 9. Audio

### A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Remove the ring indicator (A) and console front panel (B).

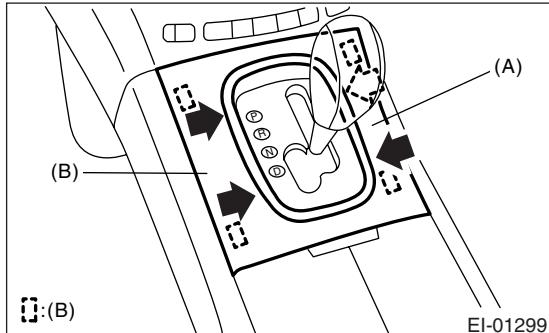

- 3) Remove the screws, and pull out the front control panel.

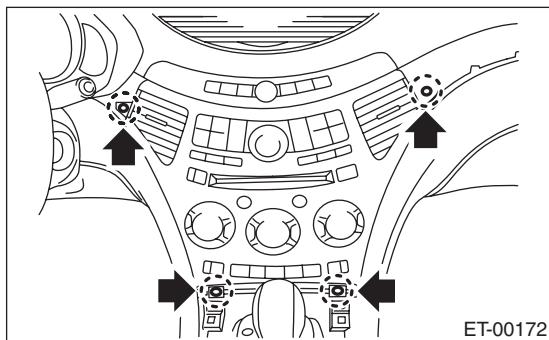

- 4) Disconnect the harness connectors and remove the front control panel.
- 5) Remove the screws, and partially pull the audio out from center console.

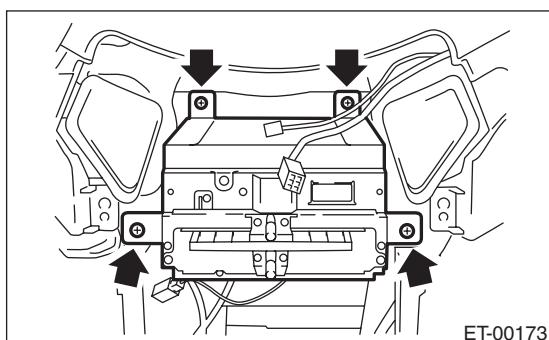

- 6) Disconnect the harness connector and antenna feeder cord, and then remove the audio.

### B: INSTALLATION

Install in the reverse order of removal.