

6. Multi Function Display (MFD) System

A: WIRING DIAGRAM

<Ref. to WI-116, WIRING DIAGRAM, Multi-function Display (MFD) System.>

B: INSPECTION

Symptom	Repair order
No power coming in. (Light does not illuminate.)	<ol style="list-style-type: none">1. Check the fuse and power supply for the display.2. Check the ground circuit of the display.3. Remove the display to repair.
A specific light does not operate.	<ol style="list-style-type: none">1. Check the display.2. Check the output circuit between unit and display.

1. MFD ERROR DISPLAY AND FAULT CONTENT

Display contents	Fault cause			
CHECK_DISK	<ul style="list-style-type: none">• During playback, it was not possible to read data from the CD due to scratches on the CD, etc.• Disc inserted upside-down, cannot detect disc.• Because of a focus error, cannot read the disc.• An error occurred in the decoder section• A problem occurred in the internal circuit during playback, such as high temperature, etc.			
MECHA_ERROR	<ul style="list-style-type: none">• During disc loading, a problem occurred in the traverse drive.• Operation became impossible during disc change, loading, or eject.			
NO_FILE	<ul style="list-style-type: none">• After completing read of the disc, the number of files was 0• A disc with no data was inserted			
ERROR_**	01	<ul style="list-style-type: none">• Disc is dirty, or is upside down.• Nothing is recorded.• Is not an audio disc.• There are scratches on the disk.• A disc that cannot be played back was used.		
	02			
	03			
	04	A mechanical error/operational error of some sort occurred.		

NOTE:

When the above errors are displayed, check the disc, and if no problems can be found, repair or replace the unit.