


## 26.Rear Accessory Power Supply Socket

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the console box. <Ref. to EI-39, REMOVAL, Center Console.>
- 3) Disconnect the harness connector, and remove the accessory power supply socket.

#### NOTE:

The socket can be pulled out by unlocking the accessory socket lock in 2 locations and turning the socket to the left.

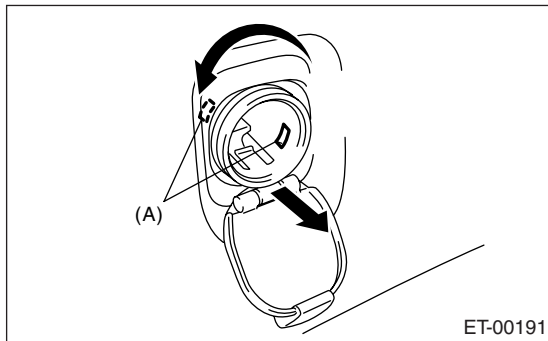

### B: INSTALLATION

Install in the reverse order of removal.

#### NOTE:

Confirm that the accessory socket is locked and can not be pulled out.