


15. Console Box

A: REMOVAL


- 1) Remove the ring indicator (A) and console front panel (B).

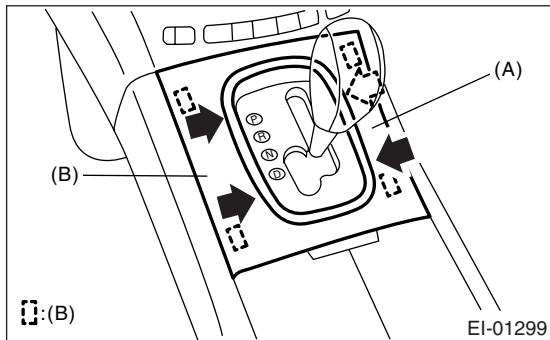


NOTE:

The ring indicator can be easily removed by inserting the clip remover or equivalent into the positions indicated by arrows.

- 2) Remove the screws.

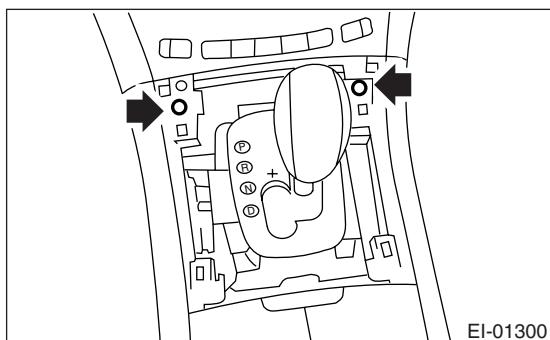

- 3) Remove the bolts inside the upper pocket.

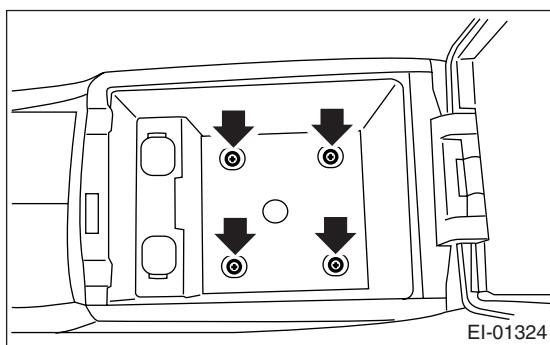

- 4) Pull out the console lower pocket, and remove the console box.

B: INSTALLATION

Install in the reverse order of removal.