



## 2. Front Under Cover

### A: REMOVAL

- 1) Remove the clips and bolts, then remove the undercover.

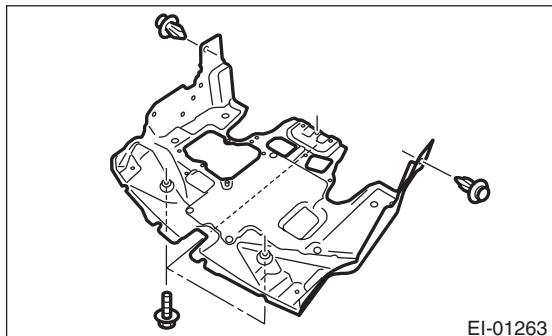

- 2) Remove the clips and bolts, then remove the front lower cover.

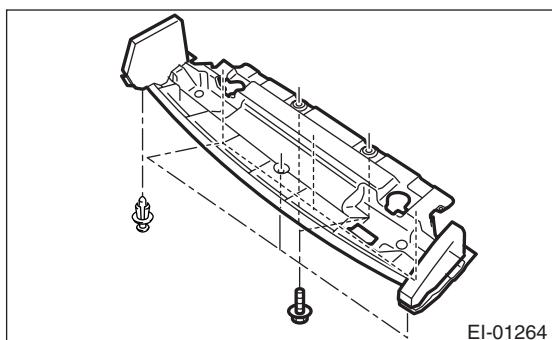

### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

Refer to "COMPONENT" of "General Description". <Ref. to EI-2, UNDER COVER, COMPONENT, General Description.>