


7. Rear Bumper

A: REMOVAL


1. REAR BUMPER FACE

- 1) Remove the clips, and then remove the reflector.

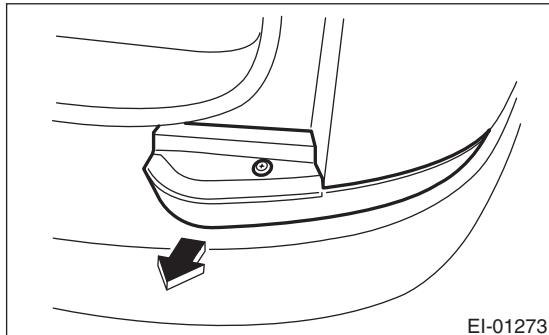


EI-01273

- 2) Turn over the mud guard, and remove the clip (A) and (B) inside wheel house and in the lower side of bumper.

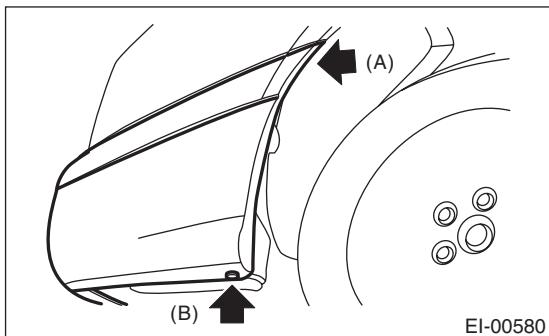


EI-00580

- 3) Remove the clips on the lower side of rear bumper.

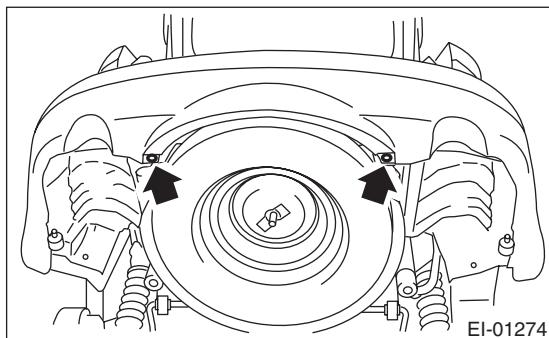

EI-01274

- 4) Remove the rear bumper from vehicle body.

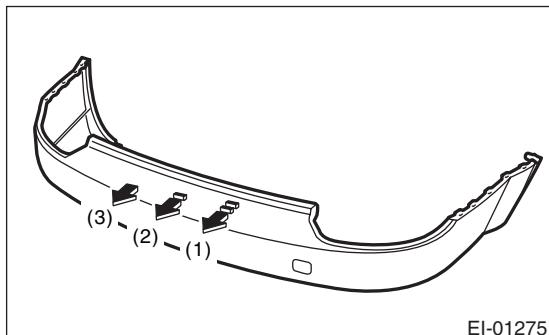

EI-01275

CAUTION:


Do not pull with a excessive force. Otherwise the bracket installation area may be damaged.

NOTE:

When removing the bumper face from bracket, it is easier to remove from the end in order.


2. REAR BUMPER BRACKET

- 1) Remove the rear bumper face from vehicle body.
- 2) Remove the corner bracket.

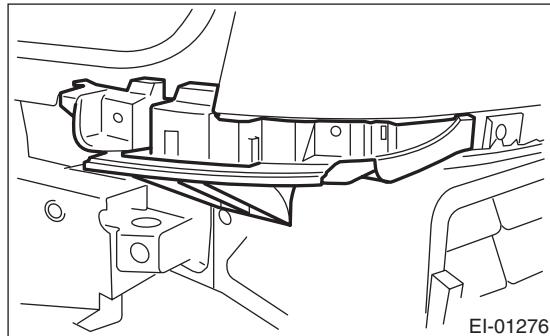

EI-01276


- 3) Remove the lower brackets from vehicle body.

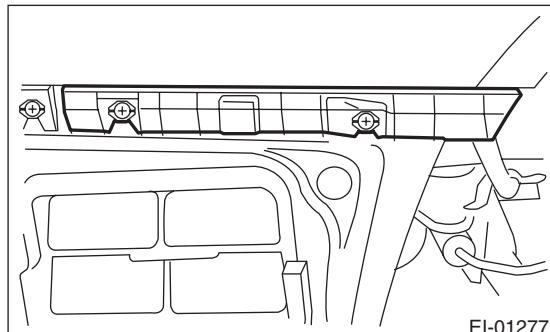

EI-01277

3. REAR BUMPER BEAM ASSEMBLY

- 1) Remove the rear bumper face.
- 2) Remove the energy absorber foam.
- 3) Remove the nuts, and remove the bumper beam assembly from vehicle body.

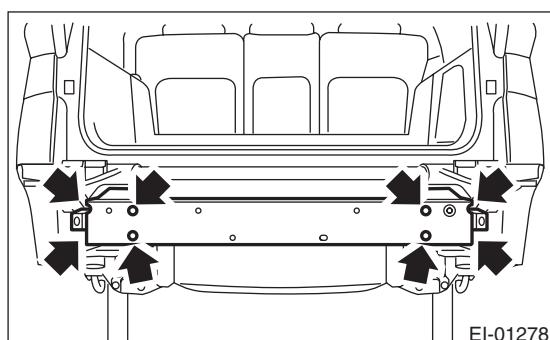

EI-01278

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Refer to “COMPONENT” of “General Description”.

<Ref. to EI-6, MUD GUARD, COMPONENT, General Description.>

C: REPAIR

Refer to front bumper repair. <Ref. to EI-23, REPAIR, Front Bumper.>