



## 25. Rear Gate Garnish

### A: REMOVAL

- 1) Remove the hexagon cap nut (A).

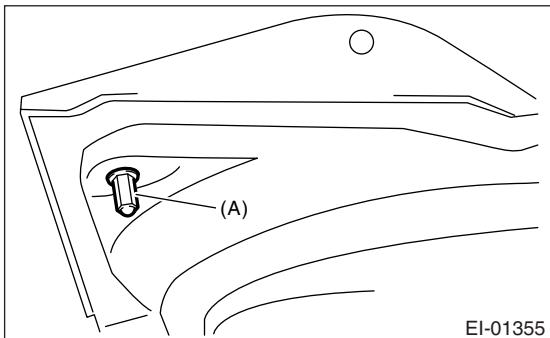

- 2) Remove the rear gate garnish.

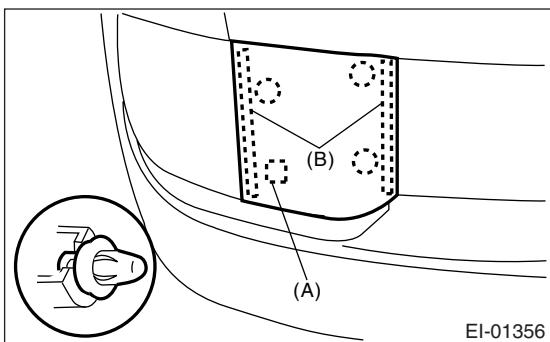

(A) Hexagon cap nut

(B) Double-sided tape

### B: INSTALLATION

Use new double-sided tapes, and install in the reverse order of removal.

NOTE:

Refer to the installing procedure of side garnish.

***Tightening torque:***

**4.5 N·m (0.46 kgf·m, 3.32ft-lb)**