



9. Roof Spoiler

A: REMOVAL

- 1) Remove the rear gate upper trim. <Ref. to EI-51, REMOVAL, Rear Gate Trim.>
- 2) Disconnect the connector of high-mounted stop light and the washer hose of rear washer.
- 3) Remove the nuts.

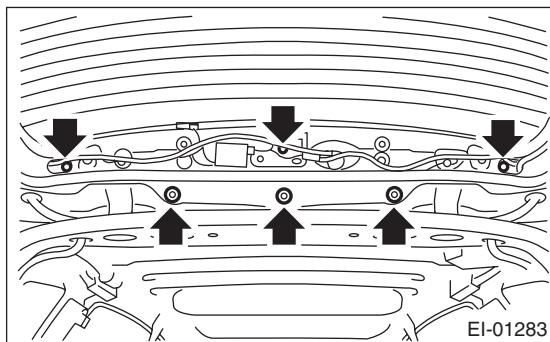

- 4) Remove the clips, and remove the roof spoiler.

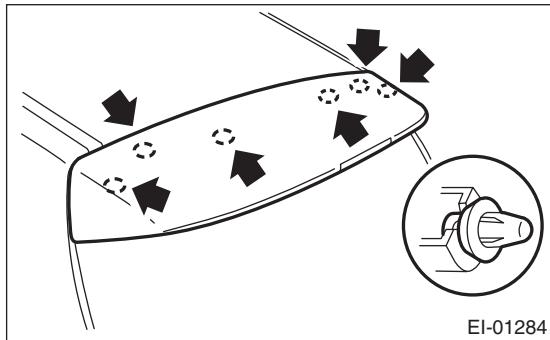

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

4.5 N·m (0.46 kgf·m, 3.32 ft-lb)