


8. Outer Mirror Assembly


A: REMOVAL

- 1) Remove the mirror gusset cover.

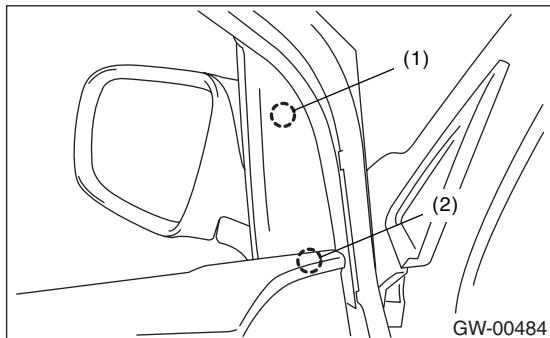

(1) Clip
(2) Hook

- 2) Remove the door trim. <Ref. to EI-35, REMOVAL, Door Trim.>
- 3) Disconnect the mirror connector.
- 4) Remove the screws to remove outer mirror assembly.

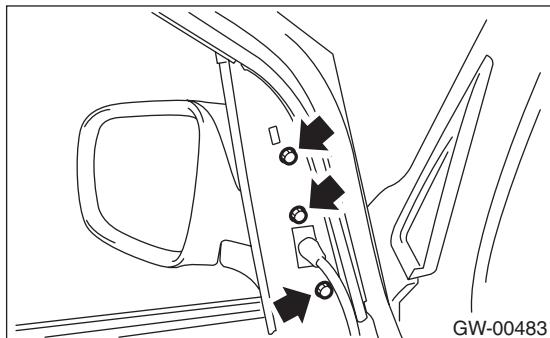


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Check that the rearview mirror moves properly when the battery voltage is applied to terminals.

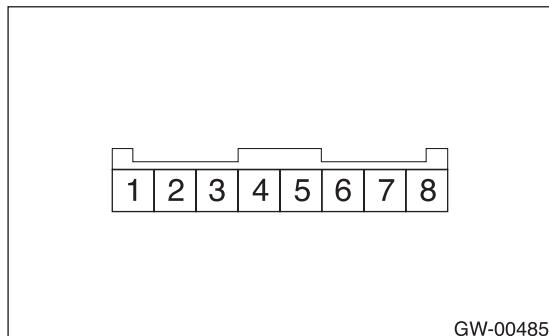

Mirror movement	Terminal No.
OFF	—
UP	5 (+) and 6 (-)
DOWN	6 (+) or 5 (-)
LEFT	8 (+) and 7 (-)
RIGHT	7 (+) or 8 (-)

Replace the outer mirror assembly if defective.