

Actuator


HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

21. Actuator

A: REMOVAL


1. MODE DOOR ACTUATOR

Disconnect the connector, remove the screw, and then remove the mode door actuator from the heater and cooling unit.

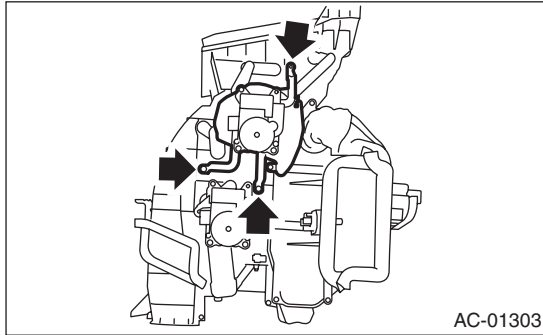

2. FRESH/RECIRC DOOR ACTUATOR


Disconnect the connector, remove the screw, and then remove the intake door actuator from the blower motor unit.

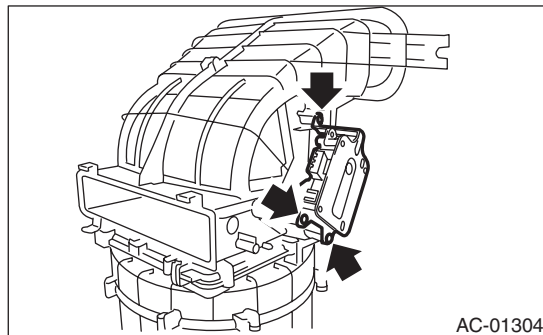


3. AIR MIX DOOR ACTUATOR (AUTO A/C MODEL)

Disconnect the connector, remove the screw, and then remove the air mix door actuator from the heater and cooling unit.

- Driver's side

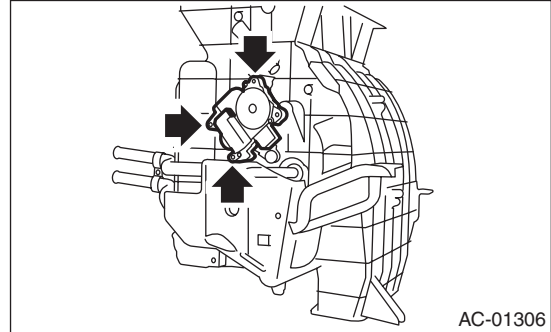

- Passenger's side

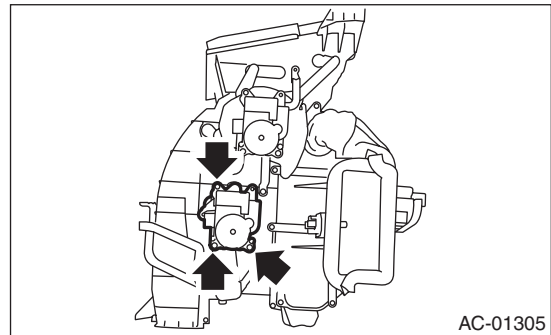

B: INSTALLATION

Install in the reverse order of removal.