


### 8. Blower Motor

#### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the glove box lower cover. <Ref. to EI-37, REMOVAL, Glove Box.>
- 3) Disconnect the connector of the blower motor.
- 4) Loosen the screw to remove the blower motor.

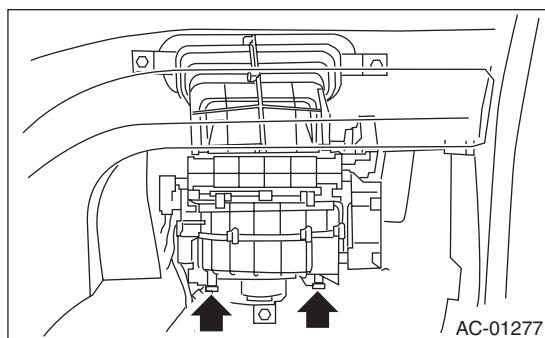

#### B: INSTALLATION

Install in the reverse order of removal.

#### C: INSPECTION

Connect the battery positive (+) terminal to terminal No. 2 of the blower motor connector, and the negative (-) terminal to terminal No. 1. Check the blower motor for smooth rotation.

