


## 10. Blower Resistor (Dual A/C Model)

### A: REMOVAL


- 1) Remove the quarter trim. <Ref. to EI-45, REMOVAL, Rear Quarter Trim.>
- 2) Disconnect the blower resistor connector.
- 3) Remove the lock (A) and rotate to the right, and remove the blower resistor.

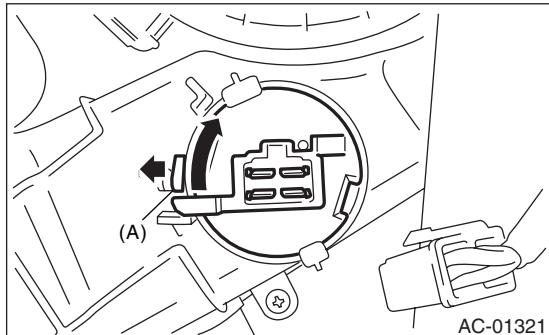

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

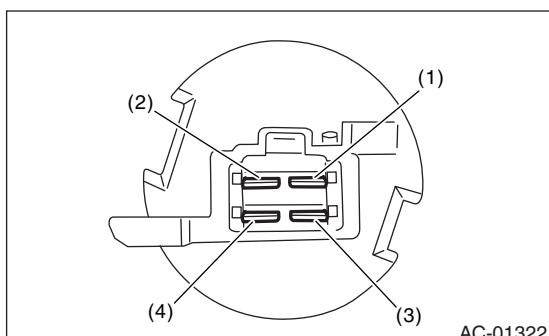

Measure the blower resistor resistance.

Terminal No.	Standard
1 and 3	Approximately 0.42Ω
1 and 2	Approximately 1.42 Ω
4 and 1	Approximately 3.2 Ω

If NG, replace the blower resistor.