


## 27.Heater Vent Duct

### A: REMOVAL

#### 1. INSTRUMENT

- 1) Remove the instrument panel. <Ref. to EI-36, REMOVAL, Instrument Panel Lower Cover.>
- 2) Remove the screws and detach the center vent duct (A).
- 3) Remove the screws and detach the side vent duct (B).
- 4) Remove the screws and detach the side defroster duct (C).

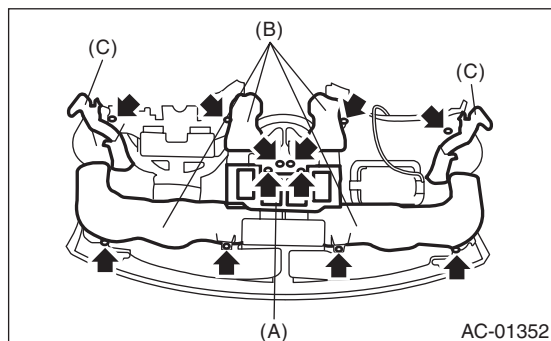

#### 2. ROOF DUCT

Remove the roof trim. <Ref. to EI-50, REMOVAL, Roof Trim.>

#### NOTE:

The roof duct is one piece with the roof trim. If it requires replacement, replace the roof trim.

### B: INSTALLATION

Install in the reverse order of removal.