


Relay and Fuse

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

19. Relay and Fuse


A: LOCATION

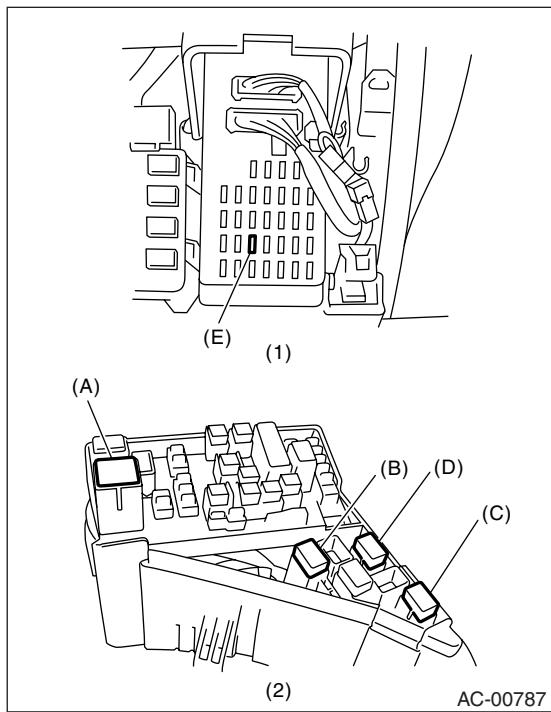

(1) Joint box
(2) Main fuse box

Main fan relay 1	(A)
Main fan relay 2	(B)
Sub fan relay	(C)
A/C relay	(D)
A/C Fuse	(E)

B: INSPECTION

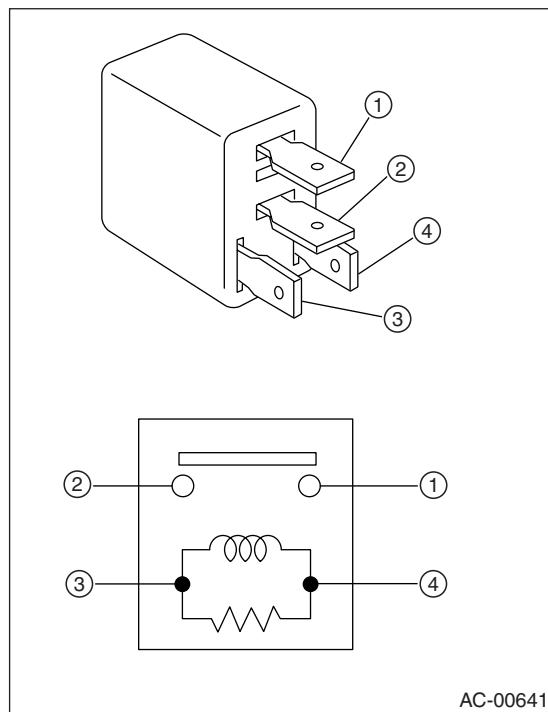

(3) — (4): Continuity exists
(1) — (2): Continuity does not exist

While applying battery voltage to the terminal between (3) and (4), check continuity between (1) and (2).

If no continuity exists, replace the relay with a new one.