

## 6. Fuel Gauge

### A: SPECIFICATION

Since the meter case assembly cannot be disassembled, do not remove or inspect the fuel gauge as alone. (Do not remove the cover on the back side.)