

9. Read Current Data

A: OPERATION

- 1) On the «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
 - 2) On the «System Selection Menu» display screen, select the {Integ. Unit mode} and press the [YES] key.
 - 3) On the «Integ. unit mode failure diag» display screen, select the {Current Data Display & Save} and press the [YES] key.
 - 4) On the «Data Display Menu» screen, select the {12 Data Display} and press the [YES] key.
 - 5) Using the scroll key, scroll the display screen up or down until the desired data is shown.
- <Ref. to LAN(diag)-13, DISPLAY OF ANALOG DATA, OPERATION, Subaru Select Monitor.> <Ref. to LAN(diag)-14, DISPLAY OF ON/OFF DATA, OPERATION, Subaru Select Monitor.> <Ref. to LAN(diag)-18, CONFIRMATION OF CURRENT SETTING, OPERATION, Subaru Select Monitor.>