


24. License Plate Light Assembly

A: REMOVAL

- 1) Remove the rear gate garnish. <Ref. to EI-52, REMOVAL, Rear Gate Garnish.>
- 2) Disengage the clips, and disconnect the connectors, and then detach the license lamp assembly.

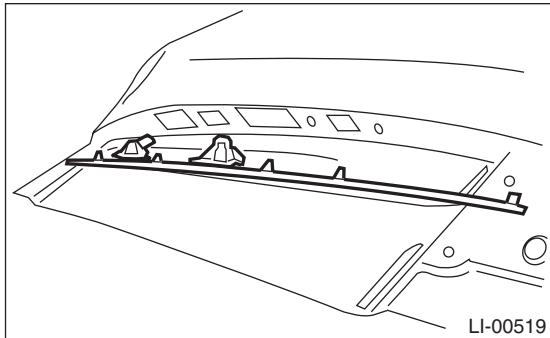

B: INSTALLATION

Install in the reverse order of removal.