
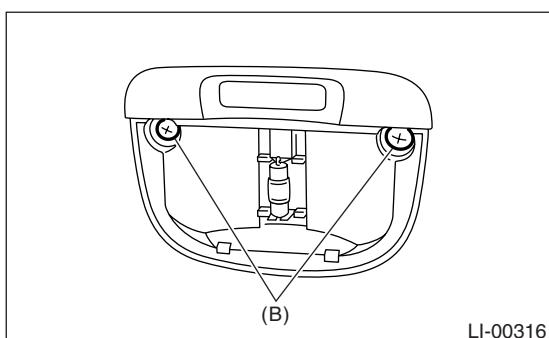


## 28. Room Light

### A: REMOVAL

#### 1. MODEL WITHOUT REAR ENTERTAINMENT SYSTEM

- 1) Disconnect the ground cable from battery.
- 2) Remove the lens (A) and mounting screws (B).

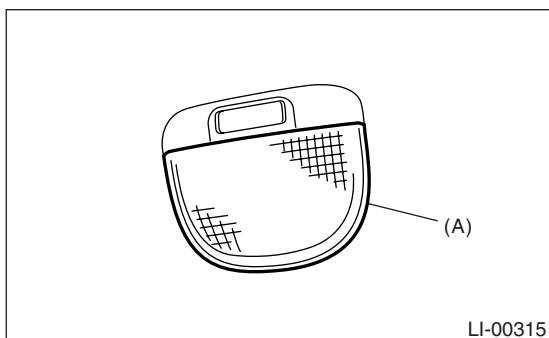

- 3) Disconnect the harness connector and remove the room light.

#### 2. MODEL WITH REAR ENTERTAINMENT SYSTEM

The room light bulb is integrated into the rear entertainment system as a single unit; therefore, refer to Rear Entertainment System for the removal procedure. *<Ref. to ET-28, REMOVAL, Rear Entertainment.>*

### B: INSTALLATION

Install in the reverse order of removal.


### C: INSPECTION

#### 1. ROOM LIGHT BULB

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. *<Ref. to LI-2, SPECIFICATION, General Description.>*
- 3) If NG, replace the bulb with a new one.

#### 2. ROOM LIGHT SWITCH

Measure the resistance between room light switch terminals.

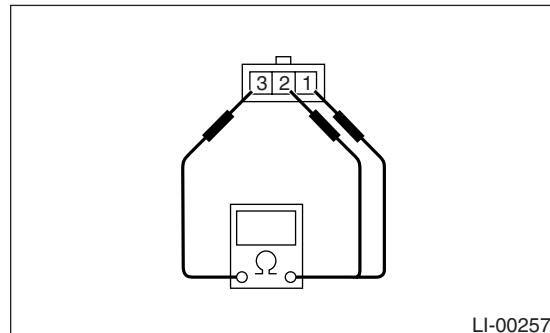

| Switch position | Terminal No. | Standard     |
|-----------------|--------------|--------------|
| OFF             | —            | 1 MΩ or more |
| ON              | 1 and 3      | 1.5±0.5 Ω    |
| DOOR            | 2 and 3      | 1.5±0.5 Ω    |