

10. Clear Memory Mode

A: OPERATION

Clear the memory in the following steps after the malfunction is repaired.

For details to clear DTC, refer to Airbag System (Diagnosis) Subaru Select Monitor. <Ref. to AB(diag)-31, Subaru Select Monitor.>