

## **Read Diagnostic Trouble Code (DTC)**

OCCUPANT DETECTION SYSTEM (DIAGNOSTICS)

---

### **8. Read Diagnostic Trouble Code (DTC)**

#### **A: OPERATION**

For details about reading of DTCs, refer to Airbag System (Diagnosis) Subaru Select Monitor. <Ref. to AB(diag)-31, Subaru Select Monitor.>