


# General Description

## SEAT BELT SYSTEM

### 1. General Description

#### A: COMPONENT

##### 1. FRONT SEAT BELT

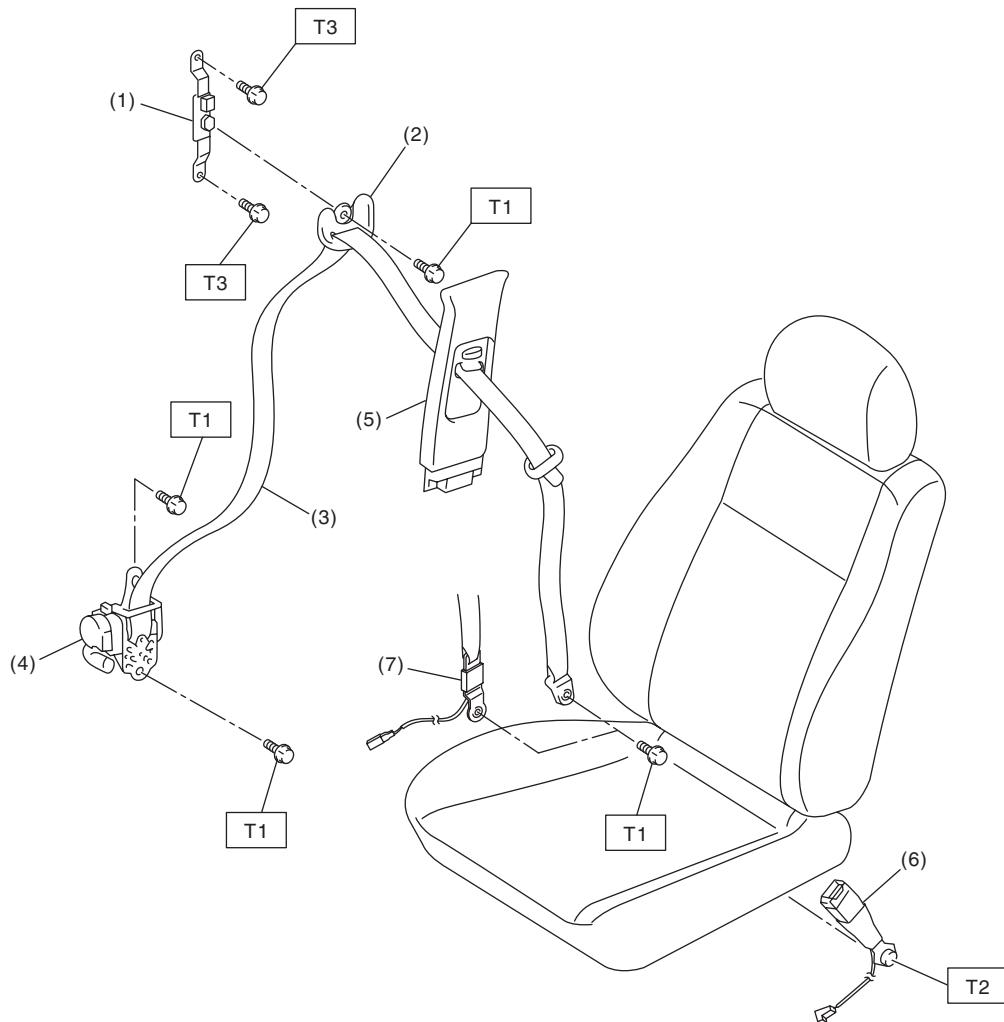

SB-00303

- (1) Adjustable anchor ASSY
- (2) Shoulder anchor
- (3) Outer seat belt ASSY
- (4) Seat belt retractor

- (5) Center pillar upper trim
- (6) Inner seat belt ASSY
- (7) Belt tension sensor (passenger's side only)


#### **Tightening torque: N·m (kgf·m, ft·lb)**

**T1: 30 (3.1, 22)**

**T2: 38 (3.9, 28)**

**T3: 53 (5.4, 39)**

## 2. SECOND SEAT BELT

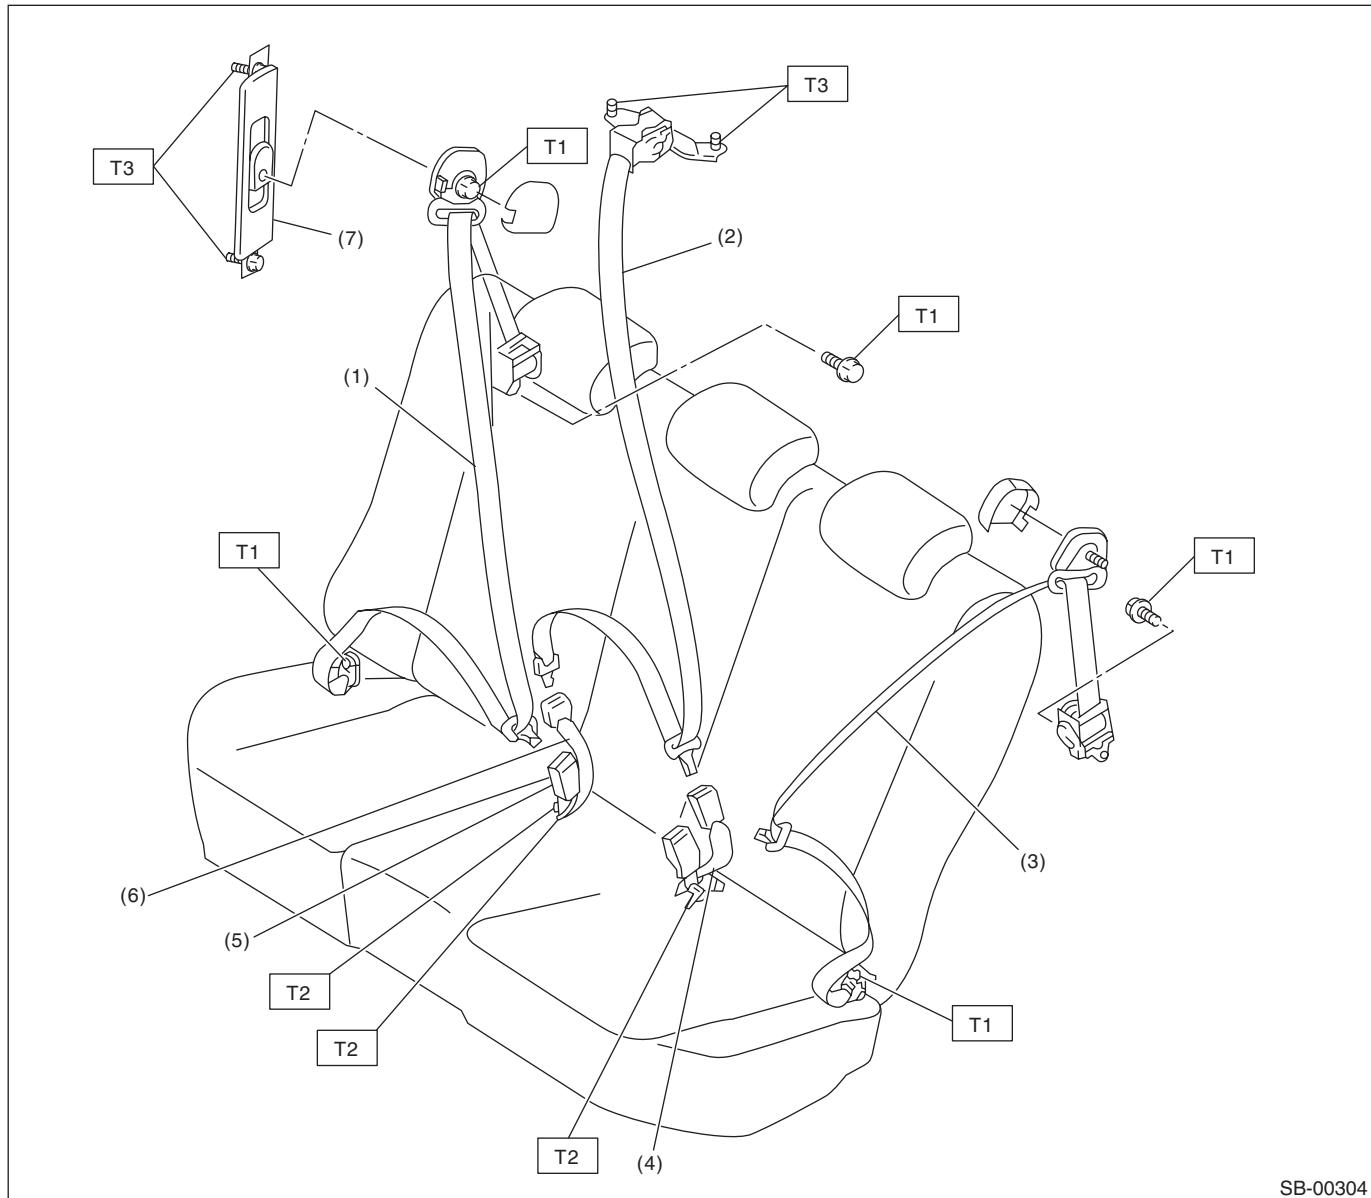

- (1) Outer seat belt RH ASSY
- (2) Shoulder seat belt center ASSY
- (3) Outer seat belt LH ASSY
- (4) Inner seat belt LH ASSY

- (5) Inner seat belt RH ASSY
- (6) Shoulder seat belt center buckle ASSY
- (7) Adjustable anchor ASSY


**Tightening torque: N·m (kgf·m, ft·lb)**

**T1: 30 (3.1, 22)**  
**T2: 38 (3.9, 28)**  
**T3: 53 (5.4, 39)**

# General Description

## SEAT BELT SYSTEM

### 3. THIRD SEAT BELT

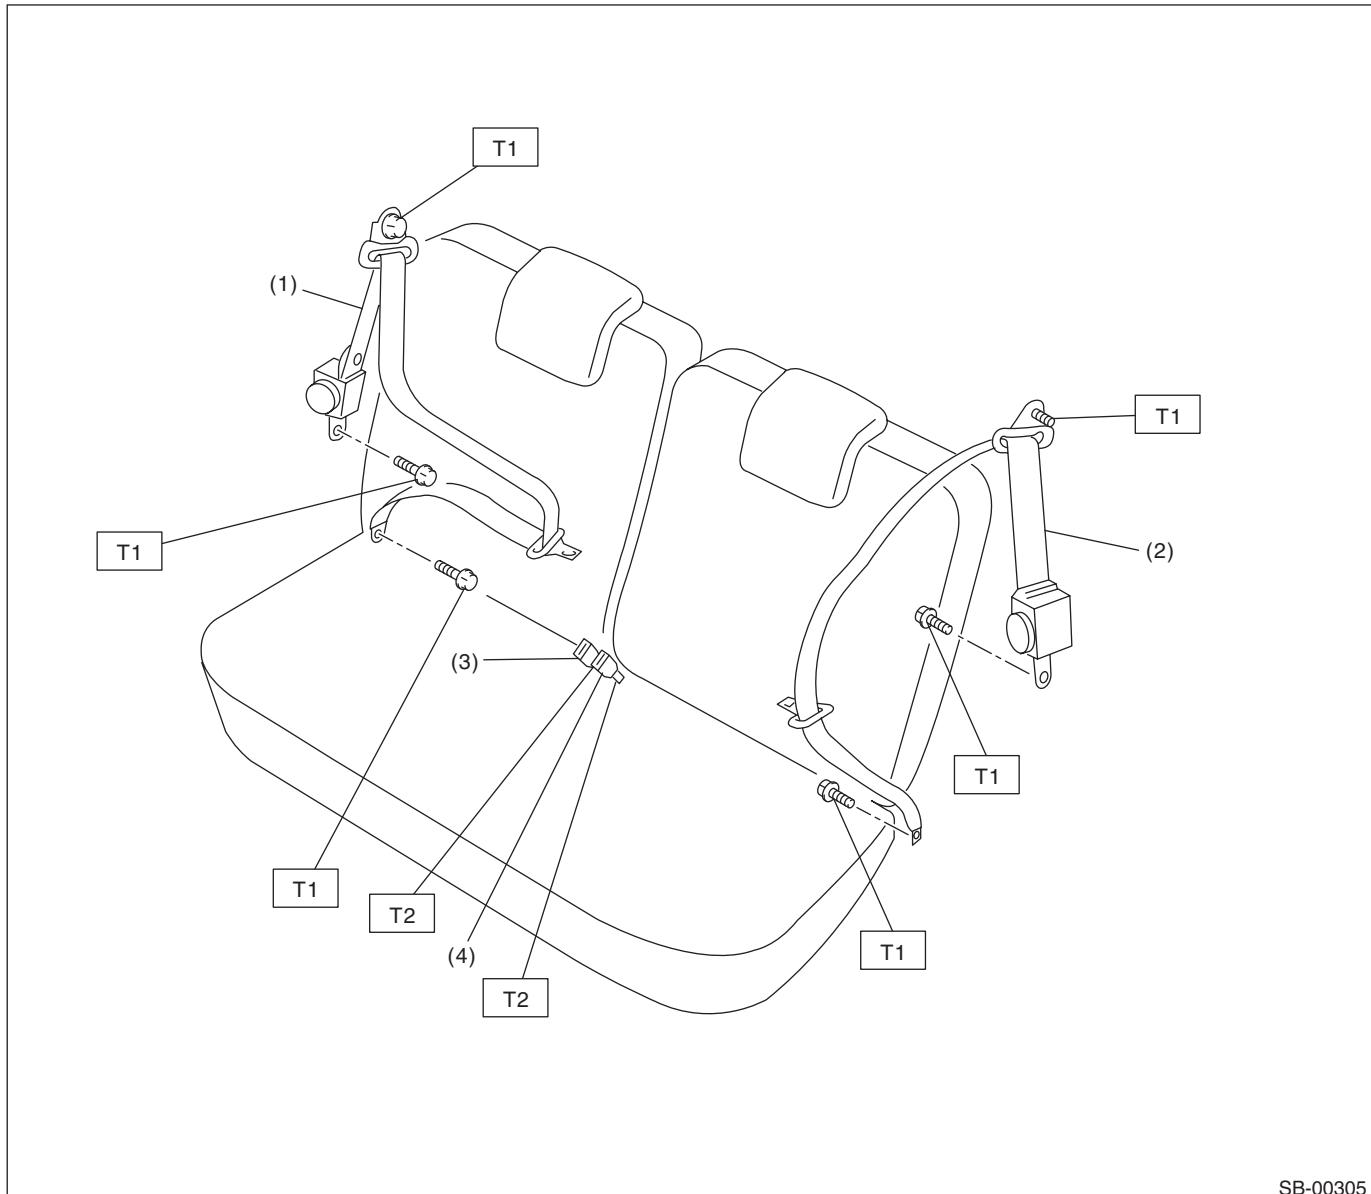

SB-00305

(1) Outer seat belt RH ASSY  
(2) Outer seat belt LH ASSY  
(3) Inner seat belt RH ASSY

(4) Inner seat belt LH ASSY

***Tightening torque: N·m (kgf·m, ft-lb)***

***T1: 30 (3.1, 22)***

***T2: 38 (3.9, 28)***

## B: CAUTION

- Before starting the work, turn the ignition switch to OFF, disconnect the battery ground cable and wait for 20 seconds or more.
- The pretensioner system has a backup power source. The pretensioner might deploy if you do not wait for 20 seconds or more before starting work.
- Do not drop or apply any impact to the pretensioner.
- If oil, grease or water gets on the pretensioner, wipe it off immediately with a dry cloth.
- Do not expose the pretensioner to high temperature or flame.
- Do not allow current to flow through or voltage to reach the pretensioner. Do not use a circuit tester to check resistance of the pretensioner.
- Do not disassemble or attempt to repair the pretensioner. If it is dented, cracked or deformed, replace it with a new one.
- Do not use the airbag or pretensioner parts from other vehicles. Always replace parts with new parts.
- When handling a seat belt with deployed pretensioner, wear gloves and goggles. Wash your hands afterwards.
- Do not reuse a seat belt with deployed pretensioner.
- If material from the airbag enters the eyes or contacts skin during deployment, wash it away with clean water, and then consult a doctor.

## C: PREPARATION TOOL

### 1. GENERAL TOOL

TOOL NAME	REMARKS
TORX® T50	Used for removing and installing the inner seat belt assembly.