


7. Third Seat Belt

A: REMOVAL


1. OUTER SEAT BELT RH ASSEMBLY AND LH ASSEMBLY

- 1) Remove the third-row seats. <Ref. to SE-17, REMOVAL, Third-row Seats.>
- 2) Remove the rear quarter trim. <Ref. to EI-45, REMOVAL, Rear Quarter Trim.>
- 3) Remove the bolts, and then detach the outer seat belt assembly.

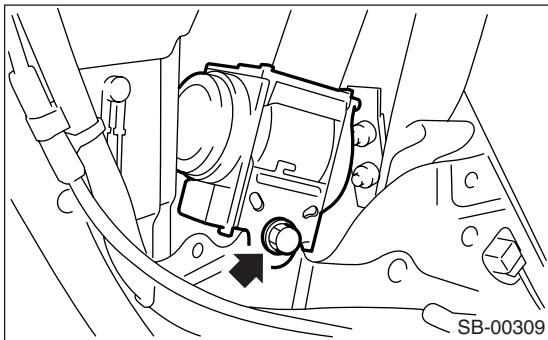

2. INNER SEAT BELT RH ASSEMBLY AND LH ASSEMBLY

- 1) Remove the third-row seats. <Ref. to SE-17, REMOVAL, Third-row Seats.>
- 2) Remove the bolt, and then detach the inner seat belt assembly.

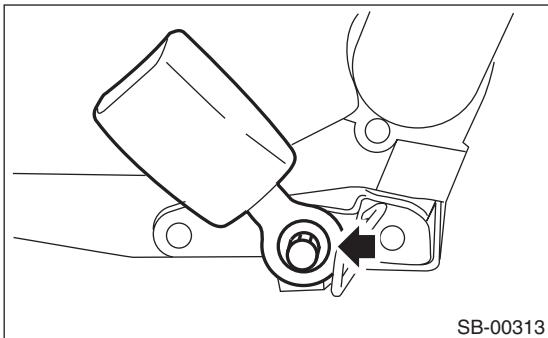

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:

When installing, be careful of the routing of the seatbelt, and make sure that the belt is not twisted.

C: INSPECTION

Check for the following, and replace with new parts if necessary.

- Seat belt is slackened, bent or worn. Seat belt is abnormally wound or extended.
- Inner belt is deformed or damaged.
- Seat belt buckle cannot be engaged properly.