


5. Seat Heater System

A: REMOVAL

1. SEAT HEATER UNIT

- 1) Remove the front seats. <Ref. to SE-7, REMOVAL, Front Seat.>
- 2) Remove the backrest cover of front seat and seat cushion cover. <Ref. to SE-7, DISASSEMBLY, Front Seat.>
- 3) Remove the hog rings, and then remove the seat heater unit.

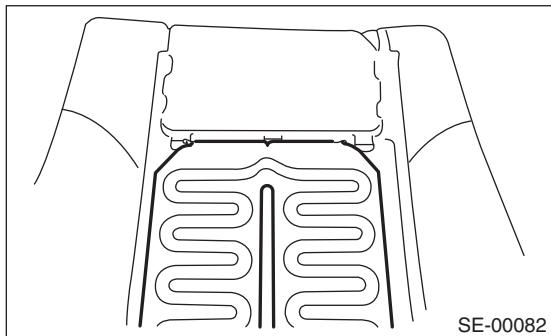

2. SEAT HEATER SWITCH

The seat heater switch is built into the control panel. <Ref. to AC-31, REMOVAL, Control Panel.>

B: INSTALLATION

Install in the reverse order of removal.

Seat Heater System

SEATS
