

23. Body Integrated Unit

A: REMOVAL

NOTE:


- When replacing the body integrated unit, check the current setting and note it. *<Ref. to LAN(diag)-18, CONFIRMATION OF CURRENT SETTING, OPERATION, Subaru Select Monitor.>*
- When replacing the body integrated unit, all immobilizer keys also must be replaced and registered again.

- 1) Disconnect the ground cable from battery.
- 2) Remove the instrument panel lower cover. *<Ref. to EI-36, REMOVAL, Instrument Panel Lower Cover.>*
- 3) Disconnect the connector of body integrated unit.

CAUTION:

- Be careful to keep water and other foreign materials away from body integrated unit.
- Do not attach or register the immobilizer related unit which is already registered to another vehicle, for the purpose of diagnosis or function check.

- 4) Remove two mounting nuts for body integrated unit bracket, and remove the bracket.

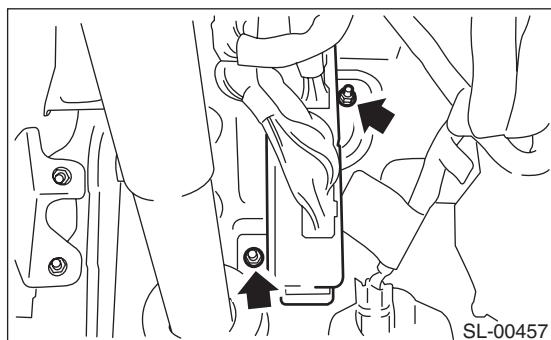

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

- When the same body integrated unit is reinstalled in the same vehicle, it is not necessary to register the immobilizer again.
- Make sure that there are no differences from the contents of the current settings after installation. *<Ref. to LAN(diag)-18, CONFIRMATION OF CURRENT SETTING, OPERATION, Subaru Select Monitor.>*