


## 7. Front Door Latch and Door Lock Actuator Assembly

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Raise the rear door glass to the top position.
- 3) Remove the front door trim. <Ref. to EI-35, REMOVAL, Door Trim.>
- 4) Remove the cable from the front inner remote. <Ref. to SL-34, REMOVAL, Front Inner Remote.>
- 5) Remove the sealing cover. <Ref. to EB-18, REMOVAL, Front Sealing Cover.>
- 6) Remove the door sash. <Ref. to GW-10, REMOVAL, Front Regulator and Motor Assembly.>
- 7) Remove the connection rod of the key cylinder lever. (Driver's side only)
- 8) Remove the three screws and one bolt.

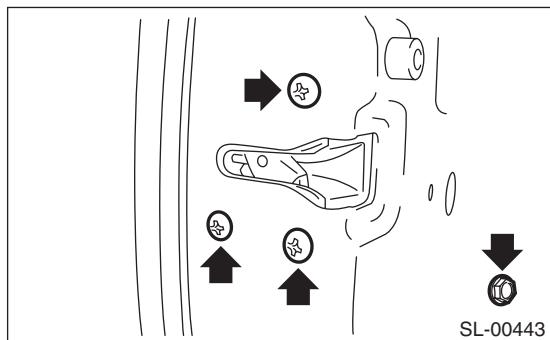

- 9) Remove the front door latch and actuator assembly, and disconnect the connector.

### B: INSTALLATION

Install in the reverse order of removal.

#### NOTE:

Make sure lock and unlock works correctly after installation.

### C: INSPECTION

- 1) Check the rod and cable for deformation. When it is deformed, straighten it because failure operations may occur. When it is unrepairable, replace the front door latch and actuator assembly.
- 2) Check the lever, rod and cable for smooth operation.