

## 25. Immobilizer Control Unit

### A: NOTE

The control of immobilizer system is carried out in body integrated unit.

### B: REMOVAL

<Ref. to SL-52, REMOVAL, Body Integrated Unit.>

### C: INSTALLATION

Install in the reverse order of removal.