


## 13. Rear Gate Release Switch

### A: REMOVAL

- 1) Remove the rear gate trim. <Ref. to EI-51, REMOVAL, Rear Gate Trim.>
- 2) Remove the rear gate garnish. <Ref. to EI-52, REMOVAL, Rear Gate Garnish.>
- 3) Disconnect the harness connector of the rear gate release switch.
- 4) Hold the rear gate release switch hook, and remove the rear gate release switch.

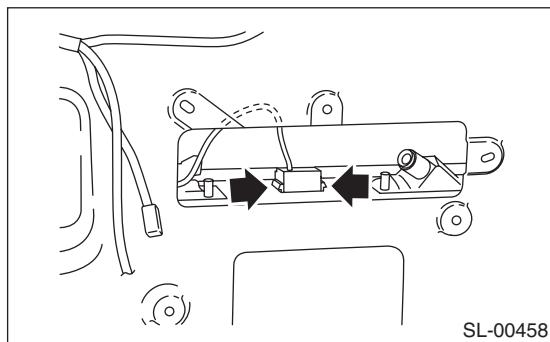

### B: INSTALLATION

Install in the reverse order of removal.

#### NOTE:

Make sure the rear gate latch assembly works after installation.

### C: INSPECTION

- 1) Disconnect the harness connector of the rear gate release switch.
- 2) Inspect the continuity between the rear gate release switch connector terminals.

Switch	Terminals	Standard
Open	No.1 and No. 2	Less than 1 $\Omega$
Close		1 M $\Omega$ or more

If NG, replace the rear gate release switch.