


# Sunroof Switch

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)


## 6. Sunroof Switch

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the spot map light lens (A) and sunroof switch mounting screws (B).

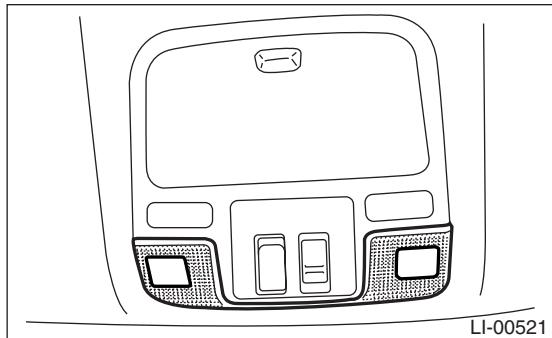

LI-00521

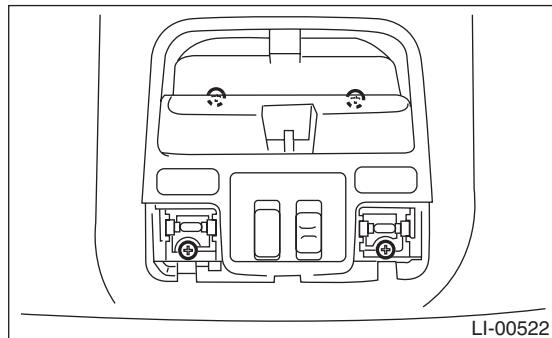

LI-00522

- 3) Disconnect the harness connector, and then remove the sunroof switch.

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

Measure the sunroof switch resistance.

Switch position	Terminal No.	Standard	Connector No.
Open	1 and 3	Less than 1 Ω	R128
Close	3 and 4	Less than 1 Ω	
Tilt up	1 and 3	Less than 1 Ω	R187
Tilt down	3 and 4	Less than 1 Ω	