



7. Sunshade

A: REMOVAL

- 1) Remove the glass lid. <Ref. to SR-5, REMOVAL, Glass Lid.>
- 2) Loosen the TORX® bolt to remove the front sunshade bracket.

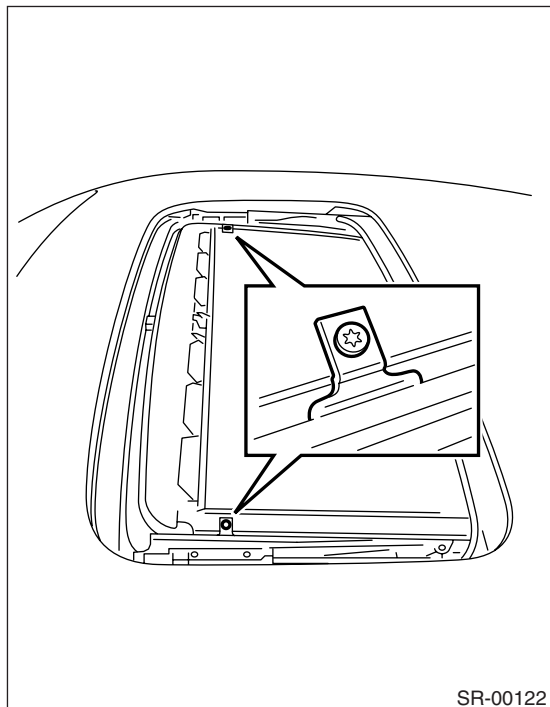

- 3) Pull the sunshade until the rear sunshade bracket comes into the sight, then loosen the TORX® bolts to remove the sunshade.

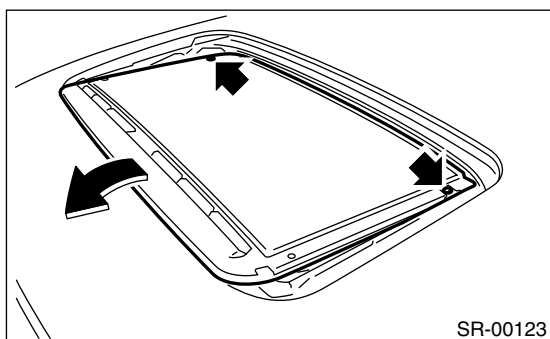


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1. CHECK FOR MOVING LOAD OF SUNSHADE

- 1) Attach a spring balance to sunshade edge using a cloth.

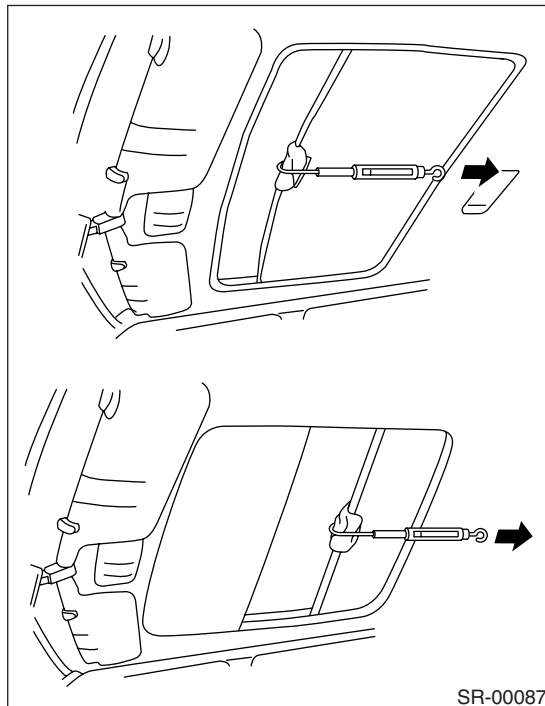

- 2) Pull the spring balance to measure moving load of the sunshade.

Moving load of sunshade:

Specification

$18.0 \pm 5.0 \text{ N}$ ($1.8 \pm 0.5 \text{ kgf}$, $13 \pm 3.7 \text{ lbf}$)

NOTE:

Moving load is larger at the beginning of pulling a spring balance, so take a spring balance reading while sunshade sliding smoothly.

- 3) If moving load exceeds specifications, check the glass lid, sunshade and frame assembly for improper installation.

Sunshade

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)
