


9. Front Washer Nozzle

A: REMOVAL

- 1) Remove the front hood insulator. <Ref. to EB-13, FRONT HOOD INSULATOR, REMOVAL, Front Hood.>
- 2) Hold the claw (A) of the washer nozzle towards the direction of the arrow, and remove the washer nozzle.

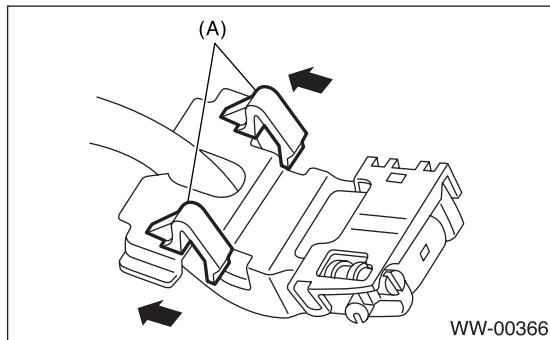

- 3) Remove the washer hose from the washer nozzle.

B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Adjust the washer nozzle position. <Ref. to WW-17, ADJUSTMENT, Front Washer Nozzle.>

C: INSPECTION

- Make sure the nozzle and hose are not clogged.
- Make sure the hose is not bent.

D: ADJUSTMENT


CAUTION:

Do not move the spray nozzle area directly to adjust. Doing so will damage the slit and cause improper spray.

- 1) Turn the wiper switch to OFF position.
- 2) While the vehicle is at a standstill, adjust the washer injection position as shown in the figure.


Spray position:

**A: 250 mm (9.84 in)
B: 433 mm (17.05 in)**

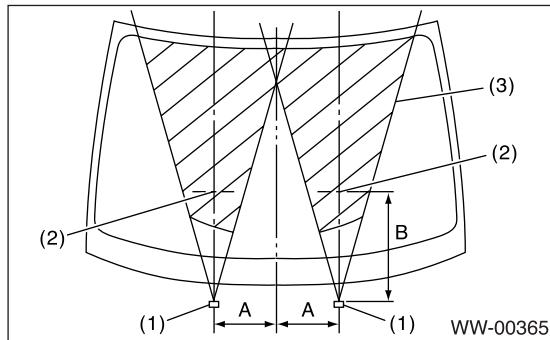

(1) Nozzle
(2) Spray center aiming position
(3) Spray area (shaded area)

- 3) Spray angle should be adjusted by rotating adjusting dial (A) with a flat tip screwdriver.

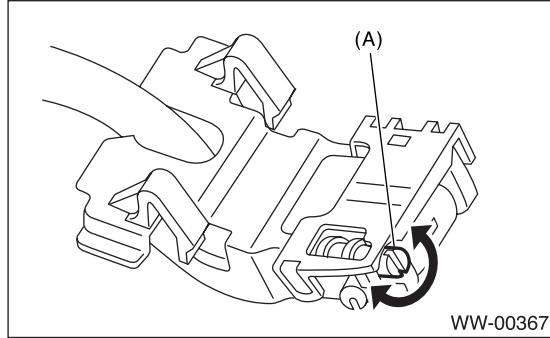

NOTE:

Adjusting dial will return to the original spray angle with 1 rotation.