


## 12. Rear Washer

### A: REMOVAL

- 1) Detach the roof spoiler. <Ref. to EI-31, REMOV-AL, Roof Spoiler.>
- 2) Remove the washer hose from washer nozzle.
- 3) Push the claw of the nozzle from the reverse side of roof spoiler with a flat tip screwdriver or equivalent, and remove the washer nozzle.

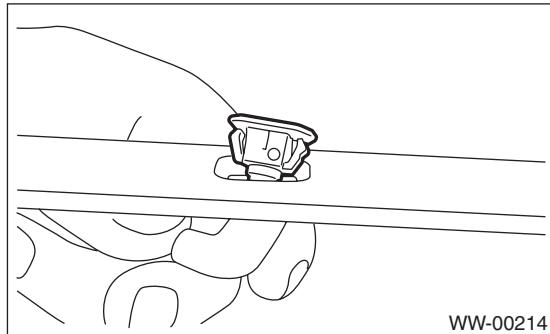

### B: INSTALLATION


Install in the reverse order of removal.

### C: INSPECTION

- Make sure the nozzle and hose are not clogged.
- Make sure the hose is not bent.
- While the vehicle is at a standstill, make sure that the washer injection position is as shown in the figure.

#### NOTE:

Washer injection position can not be adjusted.

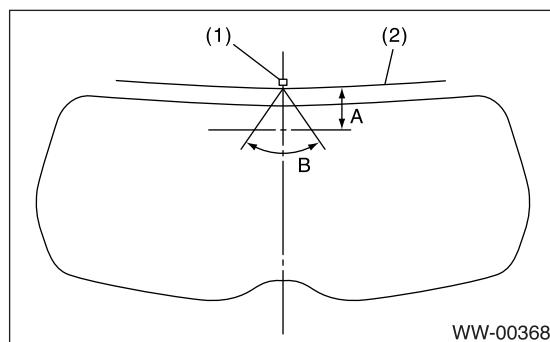

- (1) Nozzle
- (2) Upper edge of the rear gate glass
- (A) 72 mm (2.83 in)
- (B) 70°