

2. Wiper and Washer System

A: WIRING DIAGRAM

1. WIPER AND WASHER (FRONT)

<Ref. to WI-105, WIRING DIAGRAM, Front Wiper and Washer System.>

2. WIPER AND WASHER (REAR)

<Ref. to WI-106, WIRING DIAGRAM, Rear Wiper and Washer System.>

B: INSPECTION

Symptom	Repair order
Wiper and washers do not operate.	<ol style="list-style-type: none"> 1. Wiper fuse (Front: F/B No. 30, Rear: F/B No. 23) 2. Combination switch 3. Wiper motor assembly 4. Wiring harness 5. Wiper relay unit 6. Body integrated unit (rear wiper only)
Wipers do not operate in LO or HI.	<ol style="list-style-type: none"> 1. Combination switch 2. Wiper motor assembly 3. Wiring harness 4. Wiper relay unit
Wipers do not operate in INT.	<ol style="list-style-type: none"> 1. Combination switch 2. Wiper motor assembly 3. Wiring harness 4. Body integrated unit (rear wiper only)
Washer motor does not operate.	<ol style="list-style-type: none"> 1. Washer switch 2. Washer motor 3. Wiring harness
Wipers do not operate when washer switch is ON.	<ol style="list-style-type: none"> 1. Wiper motor assembly 2. Wiring harness
Washer fluid spray does not operate properly.	<ol style="list-style-type: none"> 1. Washer motor 2. Washer hose and nozzle