


Electrical Component Location

BRAKE VACUUM CONTROL (BVC) (DIAGNOSTICS)

4. Electrical Component Location

A: LOCATION

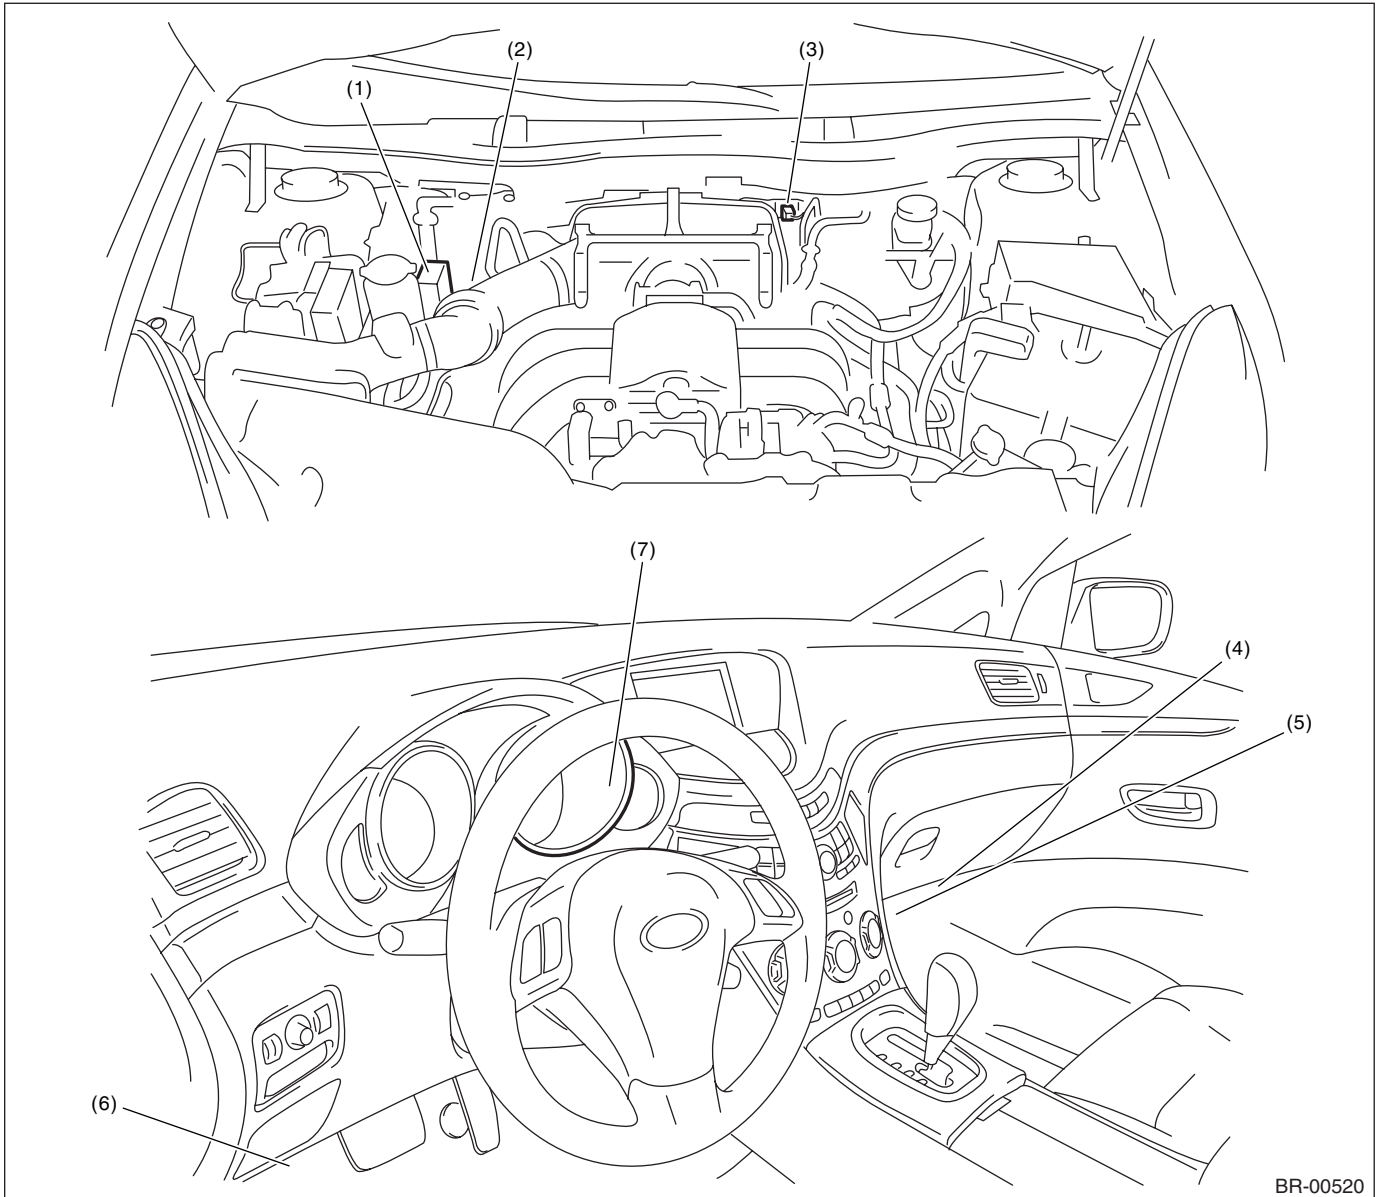


BR-00520


- | | | |
|-----------------------------|---------------------------------|-------------------------|
| (1) Brake vacuum pump relay | (4) Test mode connector | (6) Data link connector |
| (2) Brake vacuum pump | (5) Engine control module (ECM) | (7) Odo/trip meter |
| (3) Brake vacuum sensor | | |

Electrical Component Location


BRAKE VACUUM CONTROL (BVC) (DIAGNOSTICS)

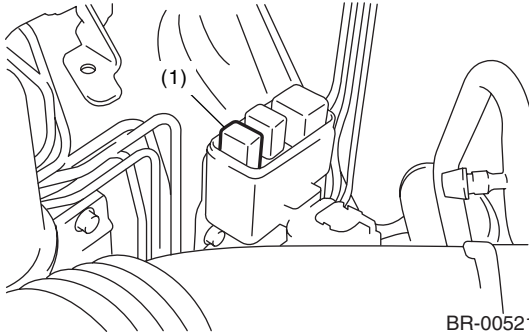


BR-00521

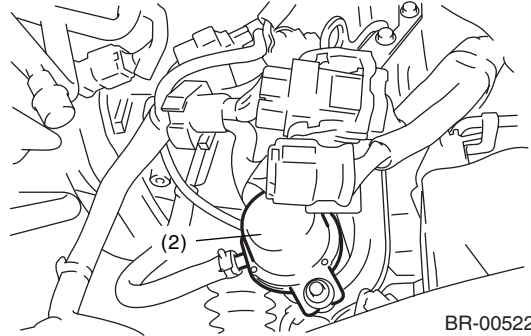


BR-00522

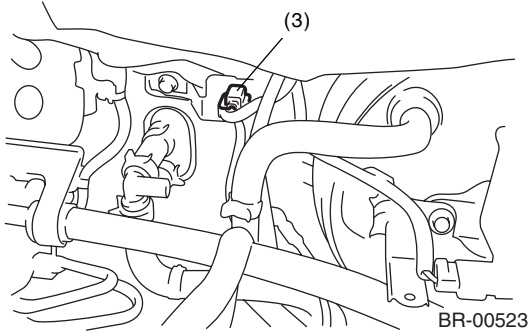


BR-00523

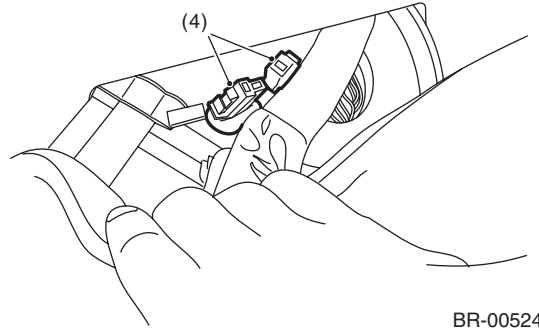


BR-00524

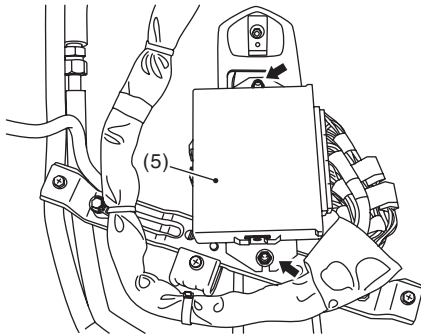

BR-00525

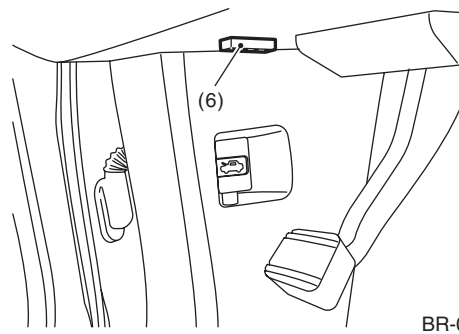

BR-00526

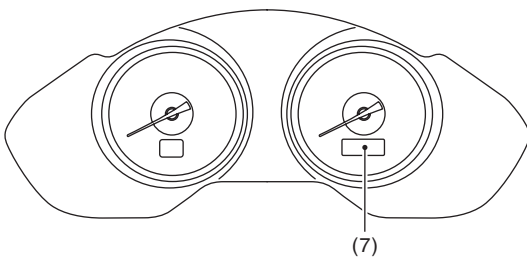

BR-00527

SUBARU.